



CLI Reference Guide

Product Model: **DGS-3700 Series**

Layer 2 Managed Gigabit Ethernet Switch

Release 2.00



Information in this document is subject to change without notice.

© 2010 D-Link Corporation. All rights reserved.

Reproduction in any manner whatsoever without the written permission of D-Link Corporation is strictly forbidden.

Trademarks used in this text: D-Link and the D-LINK logo are trademarks of D-Link Corporation; Microsoft and Windows are registered trademarks of Microsoft Corporation.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. D-Link Corporation disclaims any proprietary interest in trademarks and trade names other than its own.

March 2011 P/N 651370012005G

Table of Contents

Introduction Section	5
Using the Command Line Interface (CLI)	5
Accessing the Switch via the Serial Port	5
Setting the Switch's IP Address	7
Command Syntax Symbols.....	11
Interface and Hardware Section.....	13
Cable Diagnostic Commands	13
DDM Commands	15
Local Loopback Commands.....	21
Fundamentals Section.....	23
Basic Commands.....	23
Debug Commands.....	37
Password Recovery Commands	48
Power Saving Commands	51
Switch Utility Commands	53
Technical Support Commands.....	65
Management Section.....	67
Command History Commands	67
D-Link Single IP Management Commands.....	70
DNS Relay Commands	80
Modify Banner and Prompt Commands.....	84
IPv6 Neighbor Discovery Commands.....	87
LLDP Commands.....	91
Network Monitoring Commands	110
Safeguard Engine Commands	127
sFlow Commands.....	129
SNMP Commands	137
Switch Port Commands.....	160
Time and SNTP Commands	165
Layer 2 Features Section	171
BPDU Attack Protection Commands	171
Ethernet Ring Protection Switching (ERPS) Commands.....	175
Filter (DHCP Server/NetBIOS) Commands.....	183
Forwarding Database Commands	188
IGMP Multicast VLAN Commands.....	194
IGMP Snooping Commands	202
IPMC Commands.....	218
Layer 2 Protocol Tunneling (L2PT) Commands.....	219
Link Aggregation Commands	221
Limited IP Multicast Address Commands.....	226
MAC Notification Commands	232
MLD Multicast VLAN Commands.....	235
MLD Snooping Commands	243
Multiple Spanning Tree Protocol (MSTP) Commands	258
Packet Storm Commands	269
Port Mirroring Commands	274
Port Security Commands.....	277
Q-in-Q Commands	283
Rspan Commands.....	289
Static MAC-Based VLAN Commands.....	293
Static Subnet VLAN Commands.....	295
Traffic Segmentation Commands.....	298
VLAN Commands	300
VLAN Counter Commands.....	313
Voice VLAN Commands.....	316
Layer 3 Features Section	323
ARP Commands.....	323
Basic IP Commands	327

Loop-back Detection Commands	334
Out-of-Band Management Commands	338
Routing Table Commands	340
Quality of Service (QoS) Section	344
QoS Commands	344
Simple RED Commands	355
Access Control List (ACL) Section.....	363
Access Control List (ACL) Commands	363
Security Section.....	386
802.1X and Guest VLAN Commands.....	386
Access Authentication Control Commands.....	404
IP-MAC-Port Binding (IMPB) Commands.....	424
MAC-based Access Control Commands.....	442
Compound Authentication Commands	454
SSH Commands	460
SSL Commands.....	467
Web-based Access Control Commands.....	472
Network Application Section	481
DHCP Local Relay Commands.....	481
DHCP Relay Commands.....	484
DHCP Server Commands.....	498
Object Access Method (OAM) Section.....	511
CFM EXTENSION (ITU-T Y.1731).....	511
Connectivity Fault Management Commands	517
Ethernet OAM Commands.....	535
Monitoring Section.....	548
External Alarm Commands	548
Appendix Section	550
Appendix A	550
Mitigating ARP Spoofing Attacks Using Packet Content ACL.....	550
Appendix B	556
Password Recovery Procedure	556

INTRODUCTION SECTION

Table of Contents

Next Section

USING THE COMMAND LINE INTERFACE (CLI)

Back to Section Header

The Switch can be managed through the Switch's serial port, Telnet, or the Web-based management agent. The Command Line Interface (CLI) can be used to configure and manage the Switch via the serial port or Telnet interfaces.

This manual provides a reference for all of the commands contained in the CLI. Configuration and management of the Switch via the Web-based management agent is discussed in the Web UI Reference Guide.

This manual provides a reference for all of the commands contained in the CLI for the DGS-3700-12 and DGS-3700-12G. Examples present in this manual may refer to either member of this series and may show different port counts, but are universal to this series of switches, unless otherwise stated. Configuration and management of the Switch via the Web-based management agent is discussed in the User Guide.



NOTE: For the remainder of this manual, the DGS-3700-12, DGS-3700-12G, switches will be referred to as simply the Switch or the DGS-3700 Series.

ACCESSING THE SWITCH VIA THE SERIAL PORT

The Switch's serial port's default settings are as follows:

- **115200 baud**
- **no parity**
- **8 data bits**
- **1 stop bit**

A computer running a terminal emulation program capable of emulating a VT-100 terminal and a serial port configured as above is then connected to the Switch's serial port via an RS-232 DB-9 cable.

With the serial port properly connected to a management computer, the following screen should be visible. If this screen does not appear, try pressing Ctrl+r to refresh the console screen.

DGS-3700-12G Gigabit Ethernet Switch
Command Line Interface

Firmware: Build 2.00.B023
Copyright(C) 2009 D-Link Corporation. All rights reserved.

UserName:

There is no initial username or password. Just press the **Enter** key twice to display the CLI input cursor – **DGS-3700-12:5#**. This is the command line where all commands are input.

SETTING THE SWITCH'S IP ADDRESS

Each Switch must be assigned its own IP Address, which is used for communication with an SNMP network manager or other TCP/IP application (for example BOOTP, TFTP). The Switch's default IP address is 10.90.90.90. Users can change the default Switch IP address to meet the specification of your networking address scheme.

The Switch is also assigned a unique MAC address by the factory. This MAC address cannot be changed, and can be found on the initial boot console screen – shown below.

```
Boot Procedure V1.00.B002
-----
Power On Self Test ..... 100 %

MAC Address   : 00-01-02-03-04-00
H/W Version   : A1

Please Wait, Loading V2.00.B023 Runtime Image ..... 100 %

UART init ..... 100 %
Device Discovery ..... 100 %
Configuration init ..... \_
```

The Switch's MAC address can also be found in the Web management program on the Switch Information (Basic Settings) window on the Configuration menu.

The IP address for the Switch must be set before it can be managed with the Web-based manager. The Switch IP address can be automatically set using BOOTP or DHCP protocols, in which case the actual address assigned to the Switch must be known.

The IP address may be set using the Command Line Interface (CLI) over the console serial port as follows:

1. Starting at the command line prompt, enter the commands `config ipif System ipaddress xxx.xxx.xxx.xxx/yyy.yyy.yyy.yyy`. Where the x's represent the IP address to be assigned to the IP interface named System and the y's represent the corresponding subnet mask.
2. Alternatively, users can enter `config ipif System ipaddress xxx.xxx.xxx.xxx/z`. Where the x's represent the IP address to be assigned to the IP interface named System and the z represents the corresponding number of subnets in CIDR notation.

The IP interface named **System** on the Switch can be assigned an IP address and subnet mask which can then be used to connect a management station to the Switch's Telnet or Web-based management agent.

```
DGS-3700-12:5#config ipif System ipaddress 10.24.73.21/255.0.0.0
Command: config ipif System ipaddress 10.73.21.21/8

Success.

DGS-3700-12:5#
```

In the above example, the Switch was assigned an IP address of 10.24.73.21 with a subnet mask of 255.0.0.0. The system message **Success** indicates that the command was executed successfully. The Switch can now be configured and managed via Telnet, SNMP MIB browser and the CLI or via the Web-based management agent using the above IP address to connect to the Switch.

There are a number of helpful features included in the CLI. Entering the **?** command will display a list of all of the top-level commands.

```
?
cable_diag ports
cfm linktrace
cfm loopback
clear
clear address_binding dhcp_snoop binding_entry ports
clear arptable
clear attack_log
clear cfm pkt_cnt
clear counters
clear ethernet_oam ports
clear fdb
clear historical_counters ports
clear igmp_snooping data_driven_group
clear igmp_snooping statistic counter
clear log
clear mac_based_access_control auth_mac
clear mld_snooping data_driven_group
clear mld_snooping statistic counter
clear port_security_entry
clear vlan_counter statistics
CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All
```

When users enter a command without its required parameters, the CLI will prompt users with a **Next possible completions:** message.

```
DGS-3700-12:5#config account
Command: config account
Next possible completions:
<username>

DGS-3700-12:5#
```

In this case, the command **config account** was entered with the parameter **<username>**. The CLI will then prompt users to enter the **<username>** with the message, **Next possible completions:**. Every command in the CLI has this feature, and complex commands have several layers of parameter prompting.

In addition, after typing any given command plus one space, users can see all of the next possible sub-commands, in sequential order, by repeatedly pressing the **Tab** key.

To re-enter the previous command at the command prompt, press the up arrow cursor key. The previous command will appear at the command prompt.

```
DGS-3700-12:5#config account
Command: config account
Next possible completions:
<username>

DGS-3700-12:5#config account
Command: config account
Next possible completions:
<username>

DGS-3700-12:5#
```

In the above example, the command **config account** was entered without the required parameter **<username>**, the CLI returned the **Next possible completions: <username>** prompt. The up arrow cursor control key was pressed to re-enter the previous command (**config account**) at the command prompt. Now the appropriate username can be entered and the **config account** command re-executed.

All commands in the CLI function in this way. In addition, the syntax of the help prompts are the same as presented in this manual – angle brackets **< >** indicate a numerical value or character string, braces **{ }** indicate optional parameters or a choice of parameters, and brackets **[]** indicate required parameters.

If a command is entered that is unrecognized by the CLI, the top-level commands will be displayed under the **Available commands:** prompt.

```
DGS-3700-12:5#the
Available commands:
..                ?                cable_diag        cfm
clear             config                create            delete
disable          download              enable            login
logout           ping                 ping6             reboot
reconfig         reset                 save              show
upload

DGS-3700-12G:5#
```

The top-level commands consist of commands such as **show** or **config**. Most of these commands require one or more parameters to narrow the top-level command. This is equivalent to **show what?** or **config what?** Where the **what?** is the next parameter.

For example, if users enter the **show** command with no additional parameters, the CLI will then display all of the possible next parameters.

COMMAND SYNTAX SYMBOLS

The following symbols are used to describe how command entries are made and values and arguments are specified in this manual. The online help contained in the CLI and available through the console interface uses the same syntax.



Note: All commands are case-sensitive. Be sure to disable Caps Lock or any other unwanted function that changes text case.

<ANGLE BRACKETS>	
Purpose	Encloses a variable or value that must be specified.
Syntax	config ipif <ipif_name 12> [{ipaddress <network_address> vlan <vlan_name 32> state [enable disable]} bootp dhcp ipv6 [ipv6address <ipv6networkaddr> state [enable disable]] ipv4 state [enable disable] dhcpv6_client [enable disable]
Description	In the above syntax example, users must supply an IP interface name in the <ipif_name 12> space, a VLAN name in the <vlan_name 32> space, and the network address in the <network_address> space. Do not type the angle brackets.
Example Command	config ipif Engineering ipaddress 10.24.22.5/255.0.0.0 vlan Design state enable

[SQUARE BRACKETS]	
Purpose	Encloses a required value or set of required arguments. One value or argument can be specified.
Syntax	create vlan_counter [vlan <vlan_name> vlanid <vidlist>] {ports [<portlist> all]} [all_frame broadcast multicast unicast] [packet byte]
Description	In the above syntax example, users must specify either an admin or a user level account to be created. Do not type the square brackets.
Example Command	create vlan_counter vlanid 1 unicast packet

VERTICAL BAR	
Purpose	Separates two or more mutually exclusive items in a list, one of which must be entered.
Syntax	create account [admin operator user] <username 15>
Description	In the above syntax example, users must specify either admin , or user . Do not type the backslash.
Example Command	create account admin Tommy

{BRACES}	
Purpose	Encloses an optional value or set of optional arguments.
Syntax	reset {[config system]} {force_agree}
Description	In the above syntax example, users have the option to specify config or system . It is not necessary to specify either optional value, however the effect of the system reset is dependent on which, if any, value is specified. Therefore, with this example there are three possible outcomes of performing a system reset. See the following chapter, Basic Commands for more details about the reset command.
Example	reset config

{BRACES}	
command	

PARENTHESES ()	
Purpose	Indicates at least one or more of the values or arguments in the preceding syntax enclosed by braces must be specified.
Syntax	config dhcp_relay {hops <value 1-16> time <sec 0-65535>}(1)
Description	Users have the option to specify hops or time or both of them. The "(1)" following the set of braces indicates at least one argument or value within the braces must be specified. DO NOT TYPE THE PARENTHESES.
Example command	config dhcp_relay time 60

LINE EDITING KEY USAGE	
Delete	Deletes the character under the cursor and then shifts the remaining characters in the line to the left.
Backspace	Deletes the character to the left of the cursor and then shifts the remaining characters in the line to the left.
Left Arrow	Moves the cursor to the left.
Right Arrow	Moves the cursor to the right.
Up Arrow	Repeats the previously entered command. Each time the up arrow is pressed, the command previous to that displayed appears. This way it is possible to review the command history for the current session. Use the down arrow to progress sequentially forward through the command history list.
Down Arrow	The down arrow will display the next command in the command history entered in the current session. This displays each command sequentially as it was entered. Use the up arrow to review previous commands.
Tab	Shifts the cursor to the next field to the left.
CTRL+k	Deletes all the characters on the right of the cursor.

MULTIPLE PAGE DISPLAY CONTROL KEYS	
Space	Displays the next page.
CTRL+c	Stops the display of remaining pages when multiple pages are to be displayed.
ESC	Stops the display of remaining pages when multiple pages are to be displayed.
n	Displays the next page.
p	Displays the previous page.
q	Stops the display of remaining pages when multiple pages are to be displayed.
r	Refreshes the pages currently displayed.
a	Displays the remaining pages without pausing between pages.
Enter	Displays the next line or table entry.

INTERFACE AND HARDWARE SECTION

Table of Contents

Next Section

Previous Section

CABLE DIAGNOSTIC COMMANDS

Back to Section Header

The Cable Diagnostic commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
cable_diag ports	[<portlist> all]

Each command is listed, in detail, in the following sections.

cable diag ports	
Purpose	This command is used to diagnose the copper cable. If there is an error on the cable, it can determine the type of error and the position where the error occurred.
Syntax	cable_diag ports [<portlist> all]
Description	<p>When a port is in link up status, the diagnostic will obtain the distance of the cable. Since the status is link-up, the cable will not have any problem. Since this diagnostic is for copper cable, the port with fiber cable will be skipped from the diagnostic.</p> <p>If the link is up, the abnormal results won't be shown and the cable length item indicates the length of the cable.</p> <p>If the link is down the reason may be that its partner has powered off or the port is disabled, the abnormal results won't be shown and the cable length item shows the length of the cable.</p> <p>If the link is down and there is some error in the cable, the abnormal results will be shown, but the cable length item won't be shown.</p>
Parameters	<p><i>all</i> – Indicate all ports will be displayed.</p> <p><i><portlist></i> – Specifies a port or range of ports to be displayed.</p>
Restrictions	None.

Example usage:

To do the cable diagnostic on ports 1-7 on the Switch:

DGS-3700-12:5#cable_diag ports 1-7

Command: cable_diag ports 1-7

Perform Cable Diagnostics ...

Port	Type	Link Status	Test Result	Cable Length (M)
1	GE	Link Down	No Cable	-
2	GE	Link Down	No Cable	-
3	GE	Link Up	OK	55
4	GE	Link Down	No Cable	-
5	GE	Link Down	No Cable	-
6	GE	Link Down	No Cable	-
7	GE	Link Up	OK	5

DGS-3700-12:5#

DDM COMMANDS

Back to Section Header

The Digital Diagnostic Monitoring (DDM) module allows real time access to the SFP module operating parameters. The DDM commands allow users to set warning and alarm thresholds on the operating parameters. Once any of the operating parameters rise above the high threshold or fall below the low threshold, the abnormal or dangerous conditions will be logged or processed accordingly to user's configuration.

The following monitoring operating parameters can be accessed.

- Internally measure the transceiver temperature in degree Celsius.
- Internally measure the transceiver supply voltage in volts.
- Measures Tx bias current in mA.
- Measures Tx output power in mW.
- Measures Rx received optical power in mW.

The DDM (Digital Diagnostic Monitoring) commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
config ddm log	[enable disable]
config ddm trap	[enable disable]
config ddm ports	[<portlist> all] [[temperature_threshold voltage_threshold bias_current_threshold tx_power_threshold rx_power_threshold] {high_alarm <float> low_alarm <float> high_warning <float> low_warning <float>} (1) {state [enable disable] shutdown [alarm warning none]} (1)]
show ddm	
show ddm ports	{<portlist>} [status configuration]

Each command is listed, in detail, in the following sections.

config ddm log	
Purpose	To enable or disable log action when the SFP exceed its DDM threshold.
Syntax	config ddm log [enable disable]
Description	This command is used to configure the DDM log action when encountering an exceeding alarm or warning threshold event.
Parameters	<i>log</i> - Specify whether or not to send a log when the operating parameter exceeds the corresponding threshold. <i>enable</i> - Enable the parameter selected. <i>disable</i> - Disable the parameter selected.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the DDM log state to enable:

```
DGS-3700-12:5#config ddm log enable
Command: config ddm log enable

Success.

DGS-3700-12:5#
```

config ddm trap

Purpose	To enable or disable trap action when the SFP exceed its DDM threshold.
Syntax	config ddm trap [enable disable]
Description	This command is used to configure the DDM trap action when encountering an exceeding alarm or warning threshold event.
Parameters	<i>trap</i> - Specify whether or not to send a trap when the operating parameter exceeds the corresponding threshold. <i>enable</i> - Enable the parameter selected. <i>disable</i> - Disable the parameter selected.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the DDM trap state to enable:

```
DGS-3700-12:5#config ddm trap enable
Command: config ddm trap enable

Success.

DGS-3700-12:5#
```

config ddm ports

Purpose	To configure a DDM threshold or action.
Syntax	config ddm ports [<portlist> all] [[temperature_threshold voltage_threshold bias_current_threshold tx_power_threshold rx_power_threshold] {high_alarm <float> low_alarm <float> high_warning <float> low_warning <float>} (1) {state [enable disable] shutdown [alarm warning none]} (1)
Description	This command is used to configure a DDM threshold or action.
Parameters	<i><portlist></i> - Specify a range of ports to be configured. <i>all</i> - Specify to configure all ports. <i>temperature_threshold</i> - Specify the temperature thresholds of the specified ports. <i>voltage_threshold</i> - Specify the voltage thresholds of the specified ports. <i>bias_current_threshold</i> - Specify the bias current thresholds of the specified ports. <i>tx_power_threshold</i> - Specify the output power thresholds of the specified ports. <i>rx_power_threshold</i> - Specify the received power thresholds of the specified ports. <i>high_alarm</i> - Specify high threshold for alarm. For the temperature threshold: when the operating parameter rises above this value, action associated with alarm is taken. The range of this parameter is -128 to 127.996 Celsius degrees. For the voltage threshold: when the operating parameter rises above this value, action associated with alarm is taken. The range of this parameter is 0 to 6.55 voltages. For the bias current threshold: when the operating parameter rises above this value, action associated with alarm is taken. The range of this parameter is 0 to 131 mA. For the output power threshold: when the operating parameter rises above this value, action associated with alarm is taken. The range of this parameter is 0 to

config ddm ports

6.5535 mW. For the received power threshold: when the operating parameter rises above this value, action associated with alarm is taken. The range of this parameter is 0 to 6.5535 mW.

low_alarm - Specify low threshold for alarm. For the temperature threshold: when the operating parameter falls below this value, action associated with alarm is taken. The range of this parameter is -128 to 127.996 Celsius degrees. For the voltage threshold: when the operating parameter falls below this value, action associated with alarm is taken. The range of this parameter is 0 to 6.55 voltages. For the bias current threshold: when the operating parameter falls below this value, action associated with alarm is taken. The range of this parameter is 0 to 131 mA. For the output power threshold: when the operating parameter falls below this value, action associated with alarm is taken. The range of this parameter is 0 to 6.5535 mW. For the received power threshold: when the operating parameter falls below this value, action associated with alarm is taken. The range of this parameter is 0 to 6.5535 mW.

high_warning - Specify high threshold for warning. For the temperature threshold: when the operating parameter rises above this value, action associated with warning is taken. The range of this parameter is -128 to 127.996 Celsius degrees. For the voltage threshold: when the operating parameter rises above this value, action associated with warning is taken. The range of this parameter is 0 to 6.55 voltages. For the bias current threshold: when the operating parameter rises above this value, action associated with warning is taken. The range of this parameter is 0 to 131 mA. For the output power threshold: when the operating parameter rises above this value, action associated with warning is taken. The range of this parameter is 0 to 6.5535 mW. For the received power threshold: when the operating parameter rises above this value, action associated with warning is taken. The range of this parameter is 0 to 6.5535 mW.

low_warning - Specify low threshold for warning. For the temperature threshold: when the operating parameter falls below this value, action associated with warning is taken. The range of this parameter is -128 to 127.996 Celsius degrees. For the voltage threshold: when the operating parameter falls below this value, action associated with warning is taken. The range of this parameter is 0 to 6.55 voltages. For the bias current threshold: when the operating parameter falls below this value, action associated with warning is taken. The range of this parameter is 0 to 131 mA. For the output power threshold: when the operating parameter falls below this value, action associated with warning is taken. The range of this parameter is 0 to 6.5535 mW. For the received power threshold: when the operating parameter falls below this value, action associated with warning is taken. The range of this parameter is 0 to 6.5535 mW.

state - Specify the DDM state and/or DDM shutdown action when encountering an exceeding alarm or warning threshold event.

enable - Enable the DDM state.

disable - Disable the DDM state. If the DDM state is disabled, no DDM action will take effect.

shutdown - Specify whether or not to shut down the port on which the operating parameter exceeds the corresponding alarm or warning threshold. Note that the port being shut down cannot recover to normal operation automatically. Use the config ports x state enable command to recover the port.

alarm - Specify whether or not to shut down the port, on which the operating parameter exceeds the corresponding alarm threshold.

warning - Specify whether or not to shut down the port, on which the operating

config ddm ports	
	parameter exceeds the corresponding warning threshold. <i>none</i> - Specify whether or not to shut down the port regardless if the operating parameter exceeds the corresponding alarm or warning threshold.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure port 9's temperature threshold:

```
DGS-3700-12:5#config ddm ports 9 temperature_threshold high_alarm 84.9555 low_alarm -10
high_warning 70 low_warning 2.2525
Command: config ddm ports 9 temperature_threshold high_alarm 84.9555 low_alarm -10
high_warning 70 low_warning 2.2525

According to the DDM precision definition, closest value 84.9531 and 2.25 are chosen

Success.

DGS-3700-12:5#
```

To configure port 9's voltage threshold:

```
DGS-3700-12:5#config ddm ports 9 voltage_threshold high_alarm 4.25 low_alarm 2.5
high_warning 3.5 low_warning 3
Command: config ddm ports 9 voltage_threshold high_alarm 4.25 low_alarm 2.5
high_warning 3.5 low_warning 3

Success.

DGS-3700-12:5#
```

To configure port 9's bias current threshold:

```
DGS-3700-12:5#config ddm ports 9 bias_current_threshold high_alarm 7.25 low_alarm 0.004
high_warning 0.5 low_warning 0.008
Command: config ddm ports 25 bias_current_threshold high_alarm 7.25 low_alarm 0.004
high_warning 0.5 low_warning 0.008

Success.

DGS-3700-12:5#
```

To configure port 9's transmit power threshold:

```
DGS-3700-12:5#config ddm ports 9 tx_power_threshold high_alarm 0.625 low_alarm 0.006
high_warning 0.55 low_warning 0.008
Command: config ddm ports 9 tx_power_threshold high_alarm 0.625 low_alarm 0.006
high_warning 0.55 low_warning 0.008

Success.

DGS-3700-12:5#
```

To configure port 9's received power threshold:

```
DGS-3700-12:5#config ddm ports 9 rx_power_threshold high_alarm 4.55 low_alarm 0.01
high_warning 3.5 low_warning 0.03
Command: config ddm ports 9 rx_power_threshold high_alarm 4.55 low_alarm 0.01
high_warning 3.5 low_warning 0.03

Success.

DGS-3700-12:5#
```

To configure the port 9 actions associated with alarm:

```
DGS-3700-12:5#config ddm ports 9 state enable shutdown alarm
Command: config ddm ports 9 state enable shutdown alarm

Success.

DGS-3700-12:5#
```

show ddm

Purpose	To display the DDM global state.
Syntax	show ddm
Description	This command is used to display the DDM global state.
Parameters	None
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To display the DDM global state:

```
DGS-3700-12:5#show ddm
Command: show ddm

DDM Log           :Enabled
DDM Trap          :Disabled

Success.

DGS-3700-12:5#
```

show ddm ports

Purpose	To display DDM status or configuration.
Syntax	show ddm ports {<portlist>} [status configuration]
Description	This command is used to display DDM status or configuration. The configuration parameter displays the current configurations of the SFP modules. There are two types of threshold, the administrative configuration and the operation configuration threshold. For the SFP port, when a particular threshold was configured by user, it will be shown on this command with a tag indicating that it is a threshold that the user configured, else it will be the threshold read from the SFP module that is being inserted.
Parameters	<i><portlist></i> - Specify a range of ports to be displayed. <i>status</i> - Specify to display the current operating DDM parameters values of the SFP module of the specified port <i>configuration</i> - Specify to display the current configurations of the digital diagnostics monitoring function.

show ddm ports

Restrictions	None.
---------------------	-------

Example usage:

To display the DDM status for ports 8 to 12:

```
DGS-3700-12:5#show ddm ports 8-12
Command: show ddm ports 8-12

  Port      Temperature      Voltage      Bias Current      TX Power      RX Power
  (in Celsius)      (V)          (mA)          (mW)          (mW)
-----
   8         -              -            -              -            -
   9         -              -            -              -            -
  10         -              -            -              -            -
  11         -              -            -              -            -
  12         -              -            -              -            -

DGS-3700-12:5##
```

LOCAL LOOPBACK COMMANDS

Back to Section Header

The local loop-back commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
config local_loopback	ports [<portlist> all] [mac phy {medium_type [copper fiber]}] [internal external] [enable disable]
show local_loopback	ports {<portlist>}

Each command is listed, in detail, in the following sections.

config local_loopback	
Purpose	Config local loop-back is used to start or stop the internal loop-back tests on selected ports. It is also used to set or recover the external loop-back mode.
Syntax	config local_loopback ports [<portlist> all] [mac phy {medium_type [copper fiber]}] [internal external] [enable disable]
Description	When internal loop-back mode is enabled, the device starts to send test packets to the port, and keeps monitoring the packets received. When internal loop-back mode is disabled, the loop-back test is terminated and the result is displayed. A port can only operate in one loop-back mode at a time. When external an loop-back mode is enabled, the MAC/PHY is set to external loop-back mode. When external loop-back mode is disabled, the MAC/PHY reverts to normal operation.
Parameters	<i>ports</i> [<portlist> all] – The port(s) to be set. <i>[mac phy]</i> – Select the layer on which the loop-back is performed. <i>medium_type</i> – Specify the medium on which the loop-back test is taken for combo ports. If it's not specified, by default, the loop-back test will be performed on copper medium. <i>[internal external]</i> – The local loop-back mode. <i>[enable disable]</i> – Select enable or disable to: enable: for internal loop-back, start loop-back test; for external loop-back, set port(s) to external loop-back mode. disable: for internal loop-back, stop loop-back test; for external loop-back, recover port(s) from external loop-back mode.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable internal loop-back in the PHY layer on fiber port 9:

```
DGS-3700-12:5#config local_loopback ports 9 phy medium_type fiber internal enable
Command: config local_loopback ports 9 phy medium_type fiber internal enable

Success.

DGS-3700-12:5#
```

show local_loopback	
Purpose	Used to display local loop-back configurations on the Switch.

show local_loopback

Syntax	show local_loopback ports {<portlist>}
Description	This command is used to display local loop-back configurations on the Switch.
Parameters	<i>ports</i> [<i><portlist></i> <i>all</i>] – The port(s) to be set.
Restrictions	None.

Example usage:

To show loop-back configuration:

```
DGS-3700-12:5#show local_loopback ports 1-9
Command: show local_loopback ports 1-9

  Port          Loopback Mode
  -----
  1             None
  2             None
  3             None
  4             None
  5             None
  6             None
  7             None
  8             None
  9             Internal PHY Fiber

DGS-3700-12:5#
```

FUNDAMENTALS SECTION

Table of Contents

Next Section

Previous Section

BASIC COMMANDS

Back to Section Header

The basic switch commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
create account	[admin operator user] <username 15>
config account	<username> {encrypt [plain_text sha_1] <password>}
show account	
delete account	[<username>]
enable password encryption	
disable password encryption	
show session	
show switch	
show device_status	
show environment	
config temperature	[trap log] state [enable disable]
config temperature threshold	{high <temperature> low <temperature>}
show serial_port	
config serial_port	{ baud_rate [9600 19200 38400 115200] auto_logout [never 2_minutes 5_minutes 10_minutes 15_minutes] }
enable clipaging	
disable clipaging	
enable telnet	<tcp_port_number 1-65535>
disable telnet	
enable web	<tcp_port_number 1-65535>
disable web	
save	{[config <config_id 1-2> log all]}
reboot	{force_agree}
reset	{[config system]} {force_agree}
login	
logout	
clear	
config terminal width	[default <value 80-200>]

Each command is listed, in detail, in the following sections.

create account

Purpose	Used to create user accounts.
----------------	-------------------------------

create account	
Syntax	create account [admin operator user] <username 15>
Description	This command is used to create user accounts that consist of a username of 1 to 15 characters and a password of 0 to 15 characters. Up to 8 user accounts can be created.
Parameters	[admin operator user] <username 15>
Restrictions	Only Administrator-level users can issue this command. Usernames can be between 1 and 15 characters. Passwords can be between 0 and 15 characters.

Example usage:

To create an administrator-level user account with the username “dlink”.

```
DGS-3700-12:5#create account admin dlink
Command: create account admin dlink

Enter a case-sensitive new password:****
Enter the new password again for confirmation:****
Success.

DGS-3700-12:5#
```



NOTICE: In case of lost passwords or password corruption, please refer to the [“Password Recovery Command List”](#) section in this manual, and the [“Password Recovery Procedure”](#) will guide you through the steps necessary to resolve this issue.

config account	
Purpose	Used to change the password of user existing accounts.
Syntax	config account <username> {encrypt [plain_text sha_1] <password>}
Description	When the password information is not specified in the command, the system will prompt the user to input the password interactively. For this case, the user can only input the plain text password. If the password is present in the command, the user can select to input the password in the plain text form or in the encrypted form. The encryption algorithm is based on SHA-1.
Parameters	<i><username></i> – Name of the account. The account must already be defined. <i>plain_text</i> – Select to specify the password in plain text form. <i>sha_1</i> – Select to specify the password in the SHA-1 encrypted form. <i>password</i> – The password for the user account. The length for of password in plain-text form and in encrypted form are different. For the plain-text form, passwords must have a minimum of 0 character and can have a maximum of 15 characters. For the encrypted form password, the length is fixed to 35 bytes long. The password is case-sensitive.
Restrictions	Only Administrator-level users can issue this command. Usernames can be between 1 and 15 characters. Passwords can be between 0 and 15 characters.

Example usage:

To configure the user password of “dlink” account:

```
DGS-3700-12:5#config account dlink
Command: config account dlink

Enter a old password:****
Enter a case-sensitive new password:****
Enter the new password again for confirmation:****
Success.

DGS-3700-12:5#
```

show account

Purpose	Used to display user accounts.
Syntax	show account
Description	This command is used to display all user accounts created on the Switch.
Parameters	None.
Restrictions	Only Administrator-level users can issue this command.

Example usage:
To display the accounts that have been created:

```
DGS-3700-12:5#show account
Command: show account

Current Accounts:
Username          Access Level
-----          -
dlink             Admin

Total Entries: 1

DGS-3700-12:5#
```

delete account

Purpose	Used to delete an existing user account.
Syntax	delete account <username>
Description	This command is used to delete an existing account.
Parameters	<username> – Name of the user who will be deleted.
Restrictions	Only Administrator-level users can issue this command.

Example usage:
To delete the user account “System”:

```
DGS-3700-12:5#delete account System
Command: delete account System

Success.

DGS-3700-12:5#
```

enable password encryption

Purpose	Used to enable password encryption.
Syntax	enable password encryption

enable password encryption

Description	<p>The user account configuration information will be stored in the configuration file, and can be applied to the system later.</p> <p>If the password encryption is enabled, the password will be in encrypted form when it is stored in the configuration file.</p> <p>When password encryption is disabled, if the user specifies the password in plain text form, the password will be in plain text form. However, if the user specifies the password in encrypted form, or if the password has been converted to encrypted form by the last enable password encryption command, the password will still be in the encrypted form. It can not be reverted to the plain text.</p>
Parameters	None.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To enable password encryption:

```
DGS-3700-12:5#enable password encryption
Command: enable password encryption

Success.

DGS-3700-12:5#
```

disable password encryption

Purpose	Used to disable password encryption.
Syntax	disable password encryption
Description	<p>The user account configuration information will be stored in the configuration file, and can be applied to the system later.</p> <p>If the password encryption is enabled, the password will be in encrypted form when it is stored in the configuration file.</p> <p>When password encryption is disabled, if the user specifies the password in plain text form, the password will be in plain text form. However, if the user specifies the password in encrypted form, or if the password has been converted to encrypted form by the last enable password encryption command, the password will still be in the encrypted form. It can not be reverted to the plain text.</p>
Parameters	None.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To disable password encryption:

```
DGS-3700-12:5#disable password encryption
Command: disable password encryption

Success.

DGS-3700-12:5#
```

show session

Purpose	Used to display a list of currently logged-in users.
Syntax	show session

show session

Description	This command is used to display a list of all the users that are logged-in at the time the command is issued.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To display a list of current logged-in users:

```
DGS-3700-12:5#show session
Command: show session

ID      Live Time          From                Level   Name
---      -
 8      00:00:16.250      Serial Port         5      Anonymous

Total Entries: 1

CTRL+C  ESC  q  Quit  SPACE  n  Next Page  p  Previous Page  r  Refresh
```

show switch

Purpose	Used to display general information about the Switch.
Syntax	show switch
Description	This command is used to display information about the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To display the Switch's information:

DGS-3700-12:5#show switch

Command: show switch

```

Device Type           : DGS-3700-12G Gigabit Ethernet Switch
MAC Address           : 00-21-91-AF-3C-B0
IP Address             : 10.73.60.100 (Manual)
VLAN Name              : default
Subnet Mask            : 255.0.0.0
Default Gateway        : 0.0.0.0
Boot PROM Version     : Build 1.00.B002
Firmware Version       : Build 2.00.B023
Hardware Version       : A1
Serial Number          : P4HU19A000009
System Name            :
System Location        :
System Uptime          : 0 days, 0 hours, 0 minutes, 35 seconds
System Contact         :
Spanning Tree          : Disabled
GVRP                   : Disabled
IGMP Snooping          : Disabled
MLD Snooping           : Disabled
Telnet                 : Enabled (TCP 23)
Web                    : Enabled (TCP 80)
SNMP                   : Disabled
SSL Status             : Disabled
    
```

CTRL+C **ESC** **q** Quit **SPACE** **n** Next Page **ENTER** Next Entry **a** All

show device_status

Purpose	Used to display the current Switch power, temperature and fan status.
Syntax	show device_status
Description	This command is used to display status of both the Switch's internal and external power, temperature, and fan status.
Parameters	None.
Restrictions	None.

Example usage:

To display the Switch status:

DGS-3700-12G:5#show device_status

Command: show device_status

```

Internal Power       : Active
External Power       : Fail
Right Fan            : OK
    
```

DGS-3700-12G:5#

show environment

Purpose	To display the device's hardware status.
Syntax	show environment
Description	This command is used to display the device's internal or external power and internal temperature status.
Parameters	None.

show environment

Restrictions	None.
---------------------	-------

Example usage:

To display the standalone device environment:

```
DGS-3700-12G:5#show environment
```

```
Command: show environment
```

```
Internal Power      : Active
External Power     : Fail
Right Fan 1       : Speed 0
Right Fan 2       : Speed 0
Right Fan 3       : Speed 0
Current Temperature(Celsius) : 41
Fan High Temperature Threshold(Celsius) : 59
Fan Low Temperature Threshold(Celsius) : 56
High Warning Temperature Threshold(Celsius) : 79
Low Warning Temperature Threshold(Celsius) : 11
```

```
CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh
```

config temperature

Purpose	To configure the warning temperature trap or log state.
----------------	---

Syntax	config temperature [trap log] state [enable disable]
---------------	---

Description	This command is used to configure the warning temperature trap or log state.
--------------------	--

Parameters	<p><i>trap</i> - Specify to configure the warning temperature trap.</p> <p><i>log</i> - Specify to configure the warning temperature log.</p> <p><i>state</i> - Enable or disable either the trap or log state for a warning temperature event. The default state is enabled.</p> <p><i>enable</i> - Enable either the trap or log state for a warning temperature event.</p> <p><i>disable</i> - Disable either the trap or log state for a warning temperature event.</p>
-------------------	---

Restrictions	Only Administrator and Operator-level users can issue this command.
---------------------	---

Example usage:

To enable the warming temperature trap state:

```
DGS-3700-12G:5#config temperature trap state enable
```

```
Command: config temperature trap state enable
```

```
Success.
```

```
DGS-3700-12G:5#
```

To enable the warming temperature log state:

```
DGS-3700-12G:5#config temperature log state enable
Command: config temperature log state enable

Success.

DGS-3700-12G:5#
```

config temperature threshold

Purpose	To configure the warning temperature high threshold or low threshold.
Syntax	config temperature threshold {high <temperature> low <temperature>}
Description	This command is used to configure the warning temperature high threshold or low threshold. When temperature is above the high threshold or below the low threshold, SW will send alarm traps.
Parameters	<i>high</i> - Specify the high threshold value. The high threshold must bigger than the low threshold.. <i>low</i> - Specify the low threshold value.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To configure a warming temperature threshold high of 80:

```
DGS-3700-12G:5#config temperature threshold high 80
Command: config temperature threshold high 80

Success.

DGS-3700-12G:5#
```

show serial_port

Purpose	Used to display the current console port settings.
Syntax	show serial_port
Description	This command is used to display the current console port settings.
Parameters	None.
Restrictions	None.

Example usage:
To display the serial port settings:

```
DGS-3700-12:5#show serial_port
Command: show serial_port

Baud Rate      : 115200
Data Bits      : 8
Parity Bits     : None
Stop Bits      : 1
Auto-Logout    : 10 mins

DGS-3700-12:5#
```

config serial_port

Purpose	Used to configure the serial bit rate that will be used to communicate with the management host and the auto logout time for idle connections.
----------------	--

config serial_port	
Syntax	config serial_port {baud_rate [9600 19200 38400 115200] auto_logout [never 2_minutes 5_minutes 10_minutes 15_minutes]}
Description	This command is used to configure the serial bit rate that will be used to communicate with the management host and the auto logout time for idle connections.
Parameters	<p><i>baud_rate [9600 19200 38400 115200]</i> – The serial bit rate that will be used to communicate with the management host. There are four options: 9600, 19200, 38400, 115200. Factory default setting is 115200.</p> <p><i>never</i> – No time limit on the length of time the console can be open with no user input.</p> <p><i>2_minutes</i> – The console will log out the current user if there is no user input for 2 minutes.</p> <p><i>5_minutes</i> – The console will log out the current user if there is no user input for 5 minutes.</p> <p><i>10_minutes</i> – The console will log out the current user if there is no user input for 10 minutes.</p> <p><i>15_minutes</i> – The console will log out the current user if there is no user input for 15 minutes.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To configure baud rate:

```
DGS-3700-12:5#config serial_port baud_rate 115200
Command: config serial_port baud_rate 115200

Success.

DGS-3700-12:5#
```



NOTE: If a user configures the serial port's baud rate, the baud rate will take effect and save immediately. Baud rate settings will not change even if the user resets or reboots the Switch. The Baud rate will only change when the user configures it again. The serial port's baud rate setting is not stored in the Switch's configuration file. Resetting the Switch will not restore the baud rate to the default setting.

enable clipaging	
Purpose	Used to pause the scrolling of the console screen when a command displays more than one page.
Syntax	enable clipaging
Description	This command is used when issuing a command which causes the console screen to rapidly scroll through several pages. This command will cause the console to pause at the end of each page. The default setting is enabled.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To enable pausing of the screen display when the show command output reaches the end of the page:

```
DGS-3700-12:5#enable clipaging
Command: enable clipaging

Success.

DGS-3700-12:5#
```

disable clipaging

Purpose	Used to disable the pausing of the console screen scrolling at the end of each page when a command displays more than one screen of information.
Syntax	disable clipaging
Description	This command is used to disable the pausing of the console screen at the end of each page when a command would display more than one screen of information.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable pausing of the screen display when show command output reaches the end of the page:

```
DGS-3700-12:5#disable clipaging
Command: disable clipaging

Success.

DGS-3700-12:5#
```

enable telnet

Purpose	Used to enable communication with and management of the Switch using the Telnet protocol.
Syntax	enable telnet <tcp_port_number 1-65535>
Description	This command is used to enable the Telnet protocol on the Switch. The user can specify the TCP or UDP port number the Switch will use to listen for Telnet requests.
Parameters	<tcp_port_number 1-65535> – The TCP port number. TCP ports are numbered between 1 and 65535. The “well-known” TCP port for the Telnet protocol is 23.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable Telnet and configure port number:

```
DGS-3700-12:5#enable telnet 23
Command: enable telnet 23

Success.

DGS-3700-12:5#
```

disable telnet

Purpose	Used to disable the Telnet protocol on the Switch.
Syntax	disable telnet
Description	This command is used to disable the Telnet protocol on the Switch.

disable telnet

Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable the Telnet protocol on the Switch:

```
DGS-3700-12:5#disable telnet
Command: disable telnet

Success.

DGS-3700-12:5#
```

enable web

Purpose	Used to enable the HTTP-based management software on the Switch.
Syntax	enable web <tcp_port_number 1-65535>
Description	This command is used to enable the Web-based management software on the Switch. The user can specify the TCP port number the Switch will use to listen for Telnet requests.
Parameters	<tcp_port_number 1-65535> – The TCP port number. TCP ports are numbered between 1 and 65535. The “well-known” port for the Web-based management software is 80.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable HTTP and configure port number:

```
DGS-3700-12:5#enable web 80
Command: enable web 80

Success.

DGS-3700-12:5#
```

disable web

Purpose	Used to disable the HTTP-based management software on the Switch.
Syntax	disable web
Description	This command disables the Web-based management software on the Switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable HTTP:

```
DGS-3700-12:5#disable web
Command: disable web

Success.

DGS-3700-12:5#
```

save	
Purpose	Used to save changes in the Switch's configuration to non-volatile RAM.
Syntax	save {[config < config_id 1-2> log all]}
Description	This command is used to enter the current switch configuration into non-volatile RAM. The saved switch configuration will be loaded into the Switch's memory each time the Switch is restarted.
Parameters	<i>config</i> < <i>config_id</i> 1-2> – Specify to save current settings to configuration file 1 or 2. <i>log</i> – Specify to save current Switch log to NV-RAM. <i>all</i> – Specify to save all configuration settings and logs. If nothing is specified after “save”, the Switch will save all current configuration to the boot-up configuration.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To save the Switch's current configuration to non-volatile RAM:

```
DGS-3700-12:5#save
Command: save

Saving all configurations to NV-RAM... Done.

DGS-3700-12:5#
```

reboot	
Purpose	Used to restart the Switch.
Syntax	reboot { force_agree }
Description	This command is used to restart the Switch.
Parameters	<i>force_agree</i> – When <i>force_agree</i> is specified, the reboot command will be executed immediately without further confirmation.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To restart the Switch:

```
DGS-3700-12:5#reboot
Command: reboot
Are you sure you want to proceed with the system reboot? (y|n)y
Please wait, the switch is rebooting...
```

reset	
Purpose	Used to reset the Switch to the factory default settings.
Syntax	reset {[config system] } { force_agree }
Description	This command is used to restore the Switch's configuration to the default settings assigned from the factory.
Parameters	<i>config</i> – If the keyword ‘config’ is specified, all of the factory default settings are restored on the Switch including the IP address, user accounts, and the switch history log. The Switch will not save or reboot. <i>system</i> – If the keyword ‘system’ is specified all of the factory default settings are restored on the Switch. The Switch will save and reboot after the settings are changed to default. Rebooting will clear all entries in the Forwarding Data Base. <i>force_agree</i> – When <i>force_agree</i> is specified, the reset command will be executed

reset	
	<p>immediately without further confirmation.</p> <p>If no parameter is specified, the Switch's current IP address, banner, user accounts, and the switch history log are not changed. All other parameters are restored to the factory default settings. The Switch will not save or reboot.</p> <div style="display: flex; align-items: center;">  <p>NOTE: The serial port baud rate will not be changed by the reset command. It will not be restored to the factory default setting.</p> </div>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To restore all of the Switch's parameters to their default values:

```
DGS-3700-12:5#reset config
Command: reset config

Are you sure you want to proceed with system reset?(y/n)y

Success.

DGS-3700-12:5#
```

login	
Purpose	Used to log in a user to the Switch's console.
Syntax	login
Description	This command is used to initiate the login procedure. The user will be prompted for a Username and Password.
Parameters	None.
Restrictions	None.

Example usage:

To initiate the login procedure:

```
DGS-3700-12:5#login
Command: login

UserName:
```

logout	
Purpose	Used to log out a user from the Switch's console.
Syntax	logout
Description	This command terminates the current user's session on the Switch's console.
Parameters	None.
Restrictions	None.

Example usage:

To terminate the current user's console session:

```
DGS-3700-12:5#logout
```

clear	
Purpose	Used to clear the screen.
Syntax	clear
Description	This command is used to clear the terminal screen.
Parameters	None.
Restrictions	None.

Example usage:

To clear the screen:

```
DGS-3700-12:5#clear
Command: clear
```

config terminal width	
Purpose	To configure the terminal width.
Syntax	config terminal width
Description	This command is used to configure the terminal width.
Parameters	<i>default</i> - Specify the default terminal width value. <value 80-200> - Specify a terminal width value between 80 and 200 characters.
Restrictions	None.

Example usage:

To configure the terminal width:

```
DGS-3700-12:5#config terminal width 90
Command: config terminal width 90

Success.

DGS-3700-12:5#
```

DEBUG COMMANDS

Back to Section Header

The Switch Debug commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
debug address_binding	[event dhcp all]
no debug address_binding	
debug buffer	[utilization dump clear upload_toTFTP <ipaddr> <path_filename 64>]
debug config state	[enable disable]
debug error_log	[dump clear upload_toTFTP <ipaddr> <path_filename 64>]
debug output	[[module <module_list>] [buffer console] all [buffer console]]
debug show status	{module <module_list>}
debug stp clear counter	{ports [<portlist> all]}
debug stp config ports	[<portlist> all] [event bpdu state_machine all] state [disable brief detail]}
debug stp show counter	{ports [<portlist> all]}
debug stp show flag	{ports <portlist>}
debug stp show information	
debug stp state	[disable enable]
debug dhcpv6_relay state	[enable disable]
debug dhcpv6_relay output	[buffer console]
debug dhcpv6_relay packet	{all receiving sending} state [enable disable]
debug dhcpv6_relay hop_count state	[enable disable]
debug dhcpv6_client	[[output{buffer console}][[packet{all state [enable disable] receiving state [enable disable] sendingstate [enable disable]}]state [enable disable]
debug show error_reboot state	

Each command is listed, in detail, in the following sections.

debug address_binding	
Purpose	To open IP-MAC binding debug events or DHCP.
Syntax	debug address_binding [event dhcp all]
Description	This command is used to open IP-MAC binding debug events or DHCP.
Parameters	<i>event</i> - Displays the debug messages when an IMPB module receives ARP/IP packets. <i>dhcp</i> - Displays the debug messages when an IMPB module receives the DHCP packets. <i>all</i> - Displays all debug messages.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To open IP-MAC binding debug for event and DHCP:

```
DGS-3700-12:5#debug address_binding all
Command: debug address_binding all

Success.

DGS-3700-12:5#
```

no debug address_binding

Purpose	To close IP-MAC binding debug events and DHCP.
Syntax	no debug address_binding
Description	This command is used to close IP-MAC binding debug events and DHCP.
Parameters	None.
Restrictions	Only Administrator-level users can issue this command.

Example usage:
To close IP-MAC binding debug for event and DHCP:

```
DGS-3700-12:5#no debug address_binding
Command: no debug address_binding

Success.

DGS-3700-12:5#
```

debug buffer

Purpose	To display the debug buffer's state or dump and clear or upload the debug buffer to TFTP server.
Syntax	debug buffer [utilization dump clear upload_toTFTP <ipaddr> <path_filename 64>]
Description	Display the debug buffer's state or dump and clear or upload the debug buffer to TFTP server. The "buffer" here refers to the module debug message stored in RAM.
Parameters	<p><i>utilization</i> - Display the debug buffer's state.</p> <p><i>dump</i> - Display the debug message in the debug buffer.</p> <p><i>clear</i> - Clear the debug buffer.</p> <p><i>upload_toTFTP</i> - Specify to upload to a TFTP server.</p> <p><ipaddr> - Specify the IPv4 address of the TFTP server.</p> <p><path_filename 64> - Specify the path name specifies the DOS path name on the TFTP server. It can be a relative path name or an absolute path name.</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:
To display the debug buffer's state:

```
DGS-3700-12:5#debug buffer utilization
Command: debug buffer utilization

Allocate from      : System memory
Total size        : 2MB
Utilization rate  : 30%

DGS-3700-12:5#
```

To clear the debug buffer:

```
DGS-3700-12:5#debug buffer clear
Command: debug buffer clear

Success.

DGS-3700-12:5#
```

To upload the messages stored in the debug buffer to a TFTP server:

```
DGS-3700-12:5#debug buffer upload_toTFTP 10.0.0.90 debugcontent.txt
Command: debug buffer upload_toTFTP 10.0.0.90 debugcontent.txt

Connecting to server..... Done.
Upload debug file ..... Done.

DGS-3700-12:5#
```

debug config state

Purpose	To set the debug state.
Syntax	debug config state [enable disable]
Description	This command is used to set the debug state.
Parameters	<i>enable</i> - Enable the debug state. <i>disable</i> - Disable the debug state.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To enable the debug state:

```
DGS-3700-12:5#debug config state enable
Command: debug config state enable

Success.

DGS-3700-12:5#
```

debug error_log

Purpose	To dump, clear, or upload the software error log to a TFTP server.
Syntax	debug error_log [dump clear upload_toTFTP <ipaddr> <path_filename 64>]
Description	This command is used to dump, clear, or upload the software error log to a TFTP server.
Parameters	<i>dump</i> - Display the debug message of the debug log. <i>clear</i> - Clear the debug log.

debug error_log

	<i>upload_toTFTP</i> - Upload the debug log to a TFTP server specified by IP address. <path_filename 64> - The pathname specifies the DOS pathname on the TFTP server. It can be a relative pathname or an absolute pathname.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To clear the error log:

```
DGS-3700-12:5#debug error_log clear
Command: debug error_log clear

Success.

DGS-3700-12:5#
```

To upload the error log to a TFTP server:

```
DGS-3700-12:5#debug error_log upload_toTFTP 10.0.0.90 debug-log.txt
Command: debug error_log upload_toTFTP 10.0.0.90 debug-log.txt

Connecting to server..... Done.
Upload error file ..... Done.

DGS-3700-12:5#
```

debug output

Purpose	To set a specified module's debug message output to debug buffer or local console.
Syntax	debug output [[module <module_list>] [buffer console] all [buffer console]]
Description	This command is used to set a specified module's debug message output to debug buffer or local console. If the user uses the command in a Telnet session, the error message also is output to the local console..
Parameters	<i>module</i> <module_list> - Specify the module list. <i>all</i> - Specify to control the output method of all modules. <i>buffer</i> - Specify to direct the debug message of the module output to the debug buffer. This is the default. <i>console</i> - Specify to direct the debug message of the module output to the local console.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To set all module debug message outputs to the local console:

```
DGS-3700-12:5#debug output all console
Command: debug output all console

Success.

DGS-3700-12:5#
```

debug show status

Purpose	To display the debug handler state and the specified module's debug status.
----------------	---

debug show status	
Syntax	debug show status {module <module_list>}
Description	This command is used to display the debug handler state and the specified module's debug status. If the input module list is empty, the states of all registered modules which support the debug module will be displayed.
Parameters	<i>module <module_list></i> - Specify the module list.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To show the specified module's debug state such as MSTP:

```
DGS-3700-12:5#debug show status module MSTP
Command: debug show status module MSTP

Debug Global State : Enabled
MSTP                : Disabled

DGS-3700-12:5#
```

To show the debug state:

```
DGS-3700-12G:5#debug show status
Command: debug show status

Debug Global State : Enabled

MSTP                : Disabled
IMPB                : Disabled
ERPS                : Disabled

DGS-3700-12G:5#
```

debug stp clear counter	
Purpose	To clear the STP counters.
Syntax	debug stp clear counter {ports [<portlist> all]}
Description	This command is used to clear the STP counters.
Parameters	<i>ports <portlist> all</i> - Specify the port range.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To clear all STP counters on the switch:

```
DGS-3700-12:5#debug stp clear counter
Command: debug stp clear counter

Success.

DGS-3700-12:5#
```

debug stp config ports	
Purpose	To configure the per-port STP debug level.
Syntax	debug stp config ports [<portlist> all] [event bpdu state_machine all] state [disable brief detail]}

debug stp config ports	
Description	This command is used to configure the per-port STP debug level.
Parameters	<p><i><portlist></i> - Specify the STP port range to debug.</p> <p><i>all</i> - Specify to debug all ports on the switch.</p> <p><i>event</i> - Debug the external operation and event processing.</p> <p><i>bpdu</i> - Debug the BPDU's that have been received and transmitted.</p> <p><i>state_machine</i> - Debug the state change of the STP state machine.</p> <p><i>all</i> - Specify to debug all three of the parameters above.</p> <p><i>state</i> - See below:</p> <p style="padding-left: 20px;"><i>disable</i> - Disables the debug mechanism.</p> <p style="padding-left: 20px;"><i>brief</i> - Sets the debug level to brief.</p> <p style="padding-left: 20px;"><i>detail</i> - Sets the debug level to detail.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the per-port STP debug level:

```
DGS-3700-12:5#debug stp config ports all all state brief
Command: debug stp config ports all all state brief

Success.

DGS-3700-12:5#
```

debug stp show counter	
Purpose	To display the STP counters.
Syntax	debug stp show counter {ports [<i><portlist></i> <i>all</i>]}
Description	This command is used to display the STP counters.
Parameters	<p><i>ports <portlist> all</i> - Specify the STP ports for display.</p> <p><i>all</i> - Specify to display all port counters.</p> <p>If no parameter is specified, display the global counters</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To display the STP counters for port 9:

```
DGS-3700-12:5#debug stp show counter ports 9
Command: debug stp show counter ports 9

STP Counters
-----
Port 9
Receive          :          Transmit          :
Total STP Packets      :0          Total STP Packets      :0
Configuration BPDU    :0          Configuration BPDU    :0
TCN BPDU            :0          TCN BPDU              :0
RSTP TC-Flag         :0          RSTP TC-Flag         :0
RST BPDU            :0          RST BPDU             :0
Discarded:
Total Discard BPDU    :0
Global STP Disable    :0
Port STP Disabled     :0
Invalid packet format :0
Invalid Protocol      :0
Config BPDU length    :0
TCN BPDU length       :0
RST BPDU length       :0
Invalid Type          :0
Invalid timers        :0

CTRL+C  ESC  q  Quit  SPACE  n  Next Page  p  Previous Page  r  Refresh
```

debug stp show flag

Purpose	To display the per-port STP debug level.
Syntax	debug stp show flag {ports <portlist>}
Description	This command is used to display the per-port STP debug level.
Parameters	<i>ports <portlist></i> - Specify the STP ports to display. If no parameter is specified, all ports on the switch will be displayed.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To display the per-port STP debug level for ports 1 to 3:

```
DGS-3700-12:5#debug stp show flag ports 1-3
Command: debug stp show flag ports 1-3

Global State:Disabled

Port_index      event flag      bpdu flag      state machine flag
-----
1               brief          brief          brief
2               brief          brief          brief
3               brief          brief          brief

Success.

DGS-3700-12:5#
```

debug stp show information

Purpose	To display STP bug information.
Syntax	debug stp show information

debug stp show information

Description	This command is used to display STP debug information.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To display STP bug information:

```
DGS-3700-12:5#debug stp show information
Command: debug stp show information

Spanning Tree debug information:
-----
Port status in hardware table:
Instance 0:
Port 1 :-      Port 2 :-      Port 3 :-      Port 4 :-      Port 5 :-      Port 6 :-      Po
rt 7 :-      Port 8 :-      Port 9 :-      Port 10:-      Port 11:-      Port 12:-
-----
Root Priority and Times:
Instance 0:
Designated Root Bridge : 59863/5A-FF-39-F6-3B-38
External Root Cost      : 465303671
Regional Root Bridge    : 57299/FB-DB-71-FF-5F-BA
Internal Root Cost      : -403276225
Designated Bridge       : 58939/69-B7-1E-FB-5E-1F
Designated Port         : 21995
Message Age             : 29175
Max Age                 : 22950
Forward Delay           : 39295
Hello Time              : 59827
CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh
```

debug stp state

Purpose	To configure the STP debug state.
Syntax	debug stp state [disable enable]
Description	This command is used to configure the STP debug state.
Parameters	<i>enable</i> - Enable the STP debug state. <i>disable</i> - Disable the STP debug state.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable the STP debug state:

```
DGS-3700-12:5#debug stp state enable
Command: debug stp state enable

Success.

DGS-3700-12:5#
```

To disable the STP debug state:

```
DGS-3700-12:5#debug stp state disable
Command: debug stp state disable

Success.

DGS-3700-12:5#
```

debug dhcpv6_relay state

Purpose	This command is used to enable or disable DHCPv6 relay debug functions.
Syntax	debug dhcpv6_relay state [enable disable]
Description	Use this command to enable or disable DHCPv6 relay Debug function.
Parameters	<i>state</i> - See below: <i>enable</i> - Enable the DHCPv6 relay debug function <i>disable</i> - Disable the DHCPv6 relay debug function
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To enabled DHCPv6 relay debug function:

```
DGS-3700-12:5#debug dhcpv6_relay state enable
Command: debug dhcpv6_relay state enable

Success.

DGS-3700-12:5#
```

debug dhcpv6_relay output

Purpose	This command is used to set the debug message to output to the buffer or the console.
Syntax	debug dhcpv6_relay output [buffer console]
Description	This command is used to set the debug message to output to the buffer or the console.
Parameters	<i>output</i> - See below: <i>buffer</i> - Let the debug message output to buffer. <i>console</i> - Let the debug message output to console.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To set debug information state output to console:

```
DGS-3700-12:5#debug dhcpv6_relay output console
Command: debug dhcpv6_relay output console

Success.

DGS-3700-12:5#
```

debug dhcpv6_relay packet

Purpose	This command is used to enable or disable debug information flag for DHCPv6 relay packet, including packet receiving and sending.
Syntax	debug dhcpv6_relay packet {all receiving sending} state [enable disable]
Description	Enabled or disabled debug information flag for DHCPv6 relay packet, including packet receiving and sending.

debug dhcpv6_relay packet

Parameters	<i>all</i> - Set packet receiving and sending debug flags. <i>receiving</i> - Set packet receiving debug flag. <i>sending</i> - Set packet sending debug flag. <i>enable</i> - Enable the designated flags. <i>disable</i> - Disable the designated flags.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enabled DHCPv6 relay packet sending debug:

```
DGS-3700-12:5#debug dhcpv6_relay packet sending state enable
Command: debug dhcpv6_relay packet sending state enable

Success.

DGS-3700-12:5#
```

debug dhcpv6_relay hop_count state

Purpose	This command is used to configure the DHCPv6 relay hop count of the switch.
Syntax	debug dhcpv6_relay hop_count state [enable disable]
Description	The command configures the DHCPv6 relay hop_count of the switch.
Parameters	<i>state</i> – Species to enable or disable the DHCPv6 relay hop count option.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable the DHCPv6 Relay hop count debugging.

```
DGS-3700-12G:5#debug dhcpv6_relay hop_count state enable
Command: debug dhcpv6_relay hop_count state enable

Success.

DGS-3700-12G:5#
```

debug dhcpv6_client

Purpose	This command is used to configure the DHCPv6 client debugging state
Syntax	debug dhcpv6_client [[output{buffer console}]][[packet{all state [enable disable]] receiving state [enable disable]] sendingstate [enable disable]}state [enable disable]
Description	This command is used to configure the DHCPv6 client debugging state
Parameters	<i>output</i> – Specifies the output location of the debug message. <i>buffer</i> – Let the debug message output to buffer. <i>console</i> – Let the debug message output to console. <i>packet</i> – Specifies the packet sending and receiving behavior. <i>all state</i> – Set packet receiving and sending debug flags. <i>receiving state</i> – Set packet receiving debug flag. <i>sending state</i> – Set packet sending debug flag. <i>state</i> – Specifies to enable or disable the designated flags.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable the DHCPv6 client debugging state.

```
DGS-3700-12G:5#debug dhcpv6_client state enable
Command: debug dhcpv6_client state enable

Success.

DGS-3700-12G:5#
```

debug show error_reboot state

Purpose	Use the command to show the error reboot status.
Syntax	debug show error_reboot state
Description	Show the error reboot status.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To show the error reboot status.

```
DGS-3700-12G:5# debug show error_reboot state
Command: debug show error_reboot state

Error Reboot: Enabled

DGS-3700-12G:5#
```

PASSWORD RECOVERY COMMANDS

Back to Section Header

The switch password recovery commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
reset config	{force_agree}
reboot	{force_agree}
reset account	
reset password	{<username>}
show account	

Each command is listed, in detail, in the following sections.



NOTE: All Password recovery commands can be executed in password recovery mode. If you wish to enter the Switch into password recovery mode, simply press “^” after the system has booted up successfully and loaded the runtime image to 100%.

```

Boot Procedure                                     V1.00.B002
-----
Power On Self Test.....100%
MAC Address : 00-80-C2-11-22-00
H/W Version : A1
Please wait, loading V2.00.B023 Runtime image.....100%

Password Recovery Mode
>_
    
```

reset config	
Purpose	Used to reset the configuration .
Syntax	reset config { force_agree }
Description	This command is used to reset the configuration parameters. The configuration is reset but not saved.
Parameters	<i>force_agree</i> : if this parameter is specified, there will not be the prompt message to ask for user’s confirmation.
Restrictions	None.

Example usage:

To reset the configuration:

```

>reset config
Command: reset config

Are you sure want to reset current configuration?(y/n) y
Success.
    
```

reboot	
Purpose	Used to exit Reset Configuration Mode and restart the switch.

reboot	
Syntax	reboot { force_agree }
Description	This command is used to exit the Reset Configuration Mode and restarts the switch. And it pops out a confirmation message to save the current setting.
Parameters	<i>force_agree</i> – If this parameter is specified, there will not be the prompt message to ask for user's confirmation.
Restrictions	None.

Example usage:
To reboot:

```
>reboot
Command: reboot

Save current setting before system restart?(y/n)y

Please wait, the switch is rebooting...
```

reset account	
Purpose	Used to delete the created account.
Syntax	reset account
Description	This command is used to delete all of the created user accounts. The banner messages for password recover mode is: Password Recovery Mode
Parameters	None.
Restrictions	This command is only available in password recovery mode.

Example usage:
To reset or delete an account:

```
>reset account
Command: reset account

Success
```

reset password	
Purpose	Used to reset the password for user account
Syntax	reset password {<username>}
Description	This command is used to reset the password of the specified user to empty. If username is not specified, password of all users will be reset.
Parameters	None.
Restrictions	This command is only available in password recovery mode.

Example usage:
To reset the password:

```
>reset password
Command: reset password

Success
```

show account	
Purpose	Used to show the created account.
Syntax	show account
Description	This command is used to display all already created accounts.
Parameters	None.
Restrictions	None.

Example usage:

To view the created account:

```
>show account
Command: show account

Current Accounts:
Username          Password          Access Level
-----          -
admin             (Empty)          Admin
user1             (Empty)          user

Total Entries : 2
```

POWER SAVING COMMANDS

Back to Section Header

The Switch Power Saving commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
config power_saving	state [enable disable]
show power_saving	

Each command is listed, in detail, in the following sections.

config power_saving	
Purpose	To set the global state of power saving.
Syntax	config power_saving state [enable disable]
Description	<p>This command is used to configure the power saving for the system. By default, the power saving mode is enabled. The power saving function applies to the ports with copper media.</p> <p>The power is saved by the following mechanisms. When the port has no link partner, the port automatically turns off and wakes up once a second to send a single link pulse. When the port is turned off, a simple receive energy-detect circuit is continuously monitoring energy on the cable. At the moment when energy is detected, the port turns on fully per IEEE specification requirements. The power saving function is performed while no link is detected and it will not effect the port capabilities while it is link up.</p>
Parameters	<p><i>state</i> - Configure the power saving state to enable or disable.</p> <p><i>enable</i> - Enable the power saving feature.</p> <p><i>disable</i> - Disable the power saving feature.</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To configure power saving:

DGS-3700-12:5# config power_saving state enable
Command: config power_saving state enable
Success
DGS-3700-12:5#

show power_saving	
Purpose	To display power saving information.
Syntax	show power_saving
Description	This command is used to display power saving information.
Parameters	None.
Restrictions	None.

Example usage:

To display power saving information:

```
DGS-3700-12:5#show power_saving
```

```
Command: show power_saving
```

```
Power Saving State: Enabled
```

```
DGS-3700-12:5#
```

SWITCH UTILITY COMMANDS

Back to Section Header

The switch utility commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
download	[firmware_fromTFTP [<ipaddr> <ipv6addr>] src_file <path_filename 64> {image_id <int 1-2>} cfg_fromTFTP [<ipaddr> <ipv6addr>] src_file <path_filename 64> {[<config_id 1-2> increment]}]
config firmware image_id	<int 1-2> [delete boot_up]
show firmware information	
show config	[[effective modified current_config config_in_nvrn <config_id 1-2>] { [include exclude begin] <filter_string 80> {<filter_string 80> {<filter_string 80>} } { [include exclude begin] <filter_string 80> {<filter_string 80> {<filter_string 80>} } } { [include exclude begin] <filter_string 80> {<filter_string 80> {<filter_string 80>} } }]]
upload	[cfg_toTFTP [<ipaddr> <ipv6addr>] dest_file <path_filename 64> { <config_id 1-2> } { [include exclude begin] <filter_string 80> {<filter_string 80> {<filter_string 80>} } { [include exclude begin] <filter_string 80> {<filter_string 80> {<filter_string 80>} } } { [include exclude begin] <filter_string 80> {<filter_string 80> {<filter_string 80>} } } } log_toTFTP [<ipaddr> <ipv6addr>] dest_file <path_filename 64> attack_log_toTFTP [<ipaddr> <ipv6addr>] dest_file <path_filename 64>]
enable autoconfig	
disable autoconfig	
show autoconfig	
config configuration	<config_id 1-2> [boot_up delete active]
ping	<ipaddr> {times <value 1-255>} {timeout <sec 1-99>}
ping6	<ipv6addr> {times <value 1-255> size <value 1-6000> timeout <value 1-10>}
tracert	<ipaddr> {ttl <value 1-60>} {port <value 30000-64900>} {timeout <sec 1-65535>} {probe <value 1-9>}
tracert6	<ipv6addr> {ttl <value 1-60> port <value 30000-64900> timeout <sec 1-65535> probe <value 1-9>}
telnet	<ipaddr> {tcp_port <value 0-65535>}

Each command is listed, in detail, in the following sections.

download	
Purpose	Used to download and install new firmware or a Switch configuration file from a TFTP server.
Syntax	download [firmware_fromTFTP [<ipaddr> <ipv6addr>] src_file <path_filename 64> {image_id <int 1-2>} cfg_fromTFTP [<ipaddr> <ipv6addr>] src_file <path_filename 64> {[<config_id 1-2> increment]}]
Description	This command is used to download a new firmware or a Switch configuration file from a TFTP server.

download	
Parameters	<p><i>firmware_fromTFTP</i> - Download and install new firmware on the switch from a TFTP server.</p> <p><i>cfg_fromTFTP</i> - Download and install new configuration file on the switch from a TFTP server.</p> <p><<i>ipaddr</i>> - Specify the IP address of the TFTP server.</p> <p><<i>ipv6addr</i>> - Specify the IPv6 address of the TFTP server.</p> <p><i>src_file</i> - Specify the source file path name on the TFTP Server.</p> <p><i>image_id</i> – Specifies the firmware image ID. If image ID is not specified, it refers to the boot_up image.</p> <p><i>config_id</i> – Specifies the configuration file ID. If <i>cfg_id</i> is not specified, it refers to the boot_up configuration file.</p> <p><i>increment</i> – If increment is specified, then the existing configuration will not be cleared before applying of the new configuration. If it is not specified, then the existing configuration will be cleared before applying of the new configuration.</p>
Restrictions	The TFTP server must be on the same IP subnet as the Switch. Only Administrator-level users can issue this command.

Example usage:

To download firmware from TFTP:

```
DGS-3700-12:5# download firmware_fromTFTP 10.54.71.1 src_file px.had
Command: download firmware_fromTFTP 10.54.71.1 src_file px.had

Connecting to server..... Done.
Download firmware..... Done. Do not power off!
Please wait, programming flash..... Done.

DGS-3700-12:5#
```

config firmware image_id	
Purpose	This command is used to configure or remove the firmware.
Syntax	config firmware image_id <int 1-2> [delete boot_up]
Description	This command is used to configure or remove the firmware.
Parameters	<p><i>image_id</i> – Specifies the firmware image ID used.</p> <p><i>delete</i> – Specifies to remove the selected firmware.</p> <p><i>boot_up</i> – Specifies to use the selected firmware as the boot-up firmware.</p>
Restrictions	

Example usage:

To configure firmware image ID number 1 to be the boot-up firmware.

```
DGS-3700-12G:5#config firmware image_id 1 boot_up
Command: config firmware image_id 1 boot_up

Success.

DGS-3700-12G:5#
```

show firmware information	
Purpose	Used to display the firmware section information.

show firmware information

Syntax	show firmware information
Description	This command is used to display the firmware section information.
Parameters	None.
Restrictions	None.

Example usage:

To display the current firmware information on the Switch:

```
DGS-3700-12:5#show firmware information
Command: show firmware information

Image ID      : 1(Boot up firmware)
Version       : 2.00.B023
Size          : 2562816 Bytes
Update Time   : 2000/01/01 00:13:55
From          : 10.73.21.1(Console)
User          : Anonymous

Image ID: 2
Version       : (Empty)
Size          :
Update Time   :
From          :
```

DGS-3700-12:5#

show config

Purpose	Used to display the current or saved version of the configuration settings of the switch.
Syntax	show config [[effective modified current_config config_in_nvram < config_id 1-2>] {[include exclude begin] < filter_string 80> {< filter_string 80> {< filter_string 80> } } { [include exclude begin] < filter_string 80> {< filter_string 80> {< filter_string 80> } } { [include exclude begin] < filter_string 80> {< filter_string 80> {< filter_string 80> } } } } information]
Description	<p>Display the content of the current configuration, the configuration to be used in next boot, or the configuration file specified by the command.</p> <p>The output stream of the configuration data can be filtered by the expression specified at the end of the command. The expression can contain up to three multiple filter evaluations. A filter evaluation begins with a filter type (include, exclude, and begin), followed by up to three filter strings (ex: “stp”). A filter string is enclosed by symbol “ ”.</p> <p>The following describes the meaning of the each filter type:</p> <ul style="list-style-type: none"> <i>include</i>: includes lines that contain the specified filter string. <i>exclude</i>: excludes lines that contain the specified filter string <i>begin</i>: The first line that contains the specified filter string will be the first line of the output. <p>The relationship of multiple filter strings following the same filter type is OR. That is, one line is qualified if one of specified filter strings is matched.</p> <p>If more than one filter evaluation is specified; the output of filtered by the former evaluation will be used as the input of the latter evaluation.</p> <p>For example, if the following expression is specified, Include “stp” exclude “port”</p> <p>The result of the above example is all lines that include the “stp” string but exclude the “port” string.</p>

show config	
Parameters	<p><i>effective</i> - Show only commands which affects the behavior of the device. For example, if STP is disabled, then for STP configuration, only “STP is disabled” is displayed. All other lower level setting regarding STP is not displayed. The lower level setting will only be displayed when the higher level setting is enabled. Note: This parameter is only for the current configuration.</p> <p><i>modified</i> - Show only the commands which are not from the ‘reset’ default setting. For example, when a device is reset and SNMP and WEB are enabled then only the following commands are shown : enable snmp enable web Note: This parameter is only for the current configuration.</p> <p><i>current_config</i> - Specifies the current configuration. <i>config_id</i> - Specifies the configuration file ID. <i>filter_string</i> - A filter string is enclosed by symbol ". Thus, the filter string itself cannot contain the “character. The filter string is case sensitive. <i>information</i> - Displays the configuration file information.</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To view the current configuration settings:

```
DGS-3700-12:5#show config current_config
Command: show config current_config

#-----
#
#           DGS-3700-12G Gigabit Ethernet Switch
#           Configuration
#
#           Firmware: Build 2.00.B023
#           Copyright(C) 2008 D-Link Corporation. All rights reserved.
#-----

# STACK

config temperature threshold high 79
config temperature threshold low 11
config temperature trap low state enable
config temperature log state enable

# BASIC

# ACCOUNT LIST
# ACCOUNT END

CTRL+C  ESC  q  Quit  SPACE  n  Next Page  ENTER  Next Entry  a  All
```

upload	
Purpose	Used to upload the current switch settings or the switch history log to a TFTP.

upload	
Syntax	<pre>upload [cfg_toTFTP [<ipaddr> <ipv6addr>] dest_file <path_filename 64> { <config_id 1-2> } { [include exclude begin] <filter_string 80> {<filter_string 80> {<filter_string 80> } } { [include exclude begin] <filter_string 80> {<filter_string 80> {<filter_string 80> } } { [include exclude begin] <filter_string 80> {<filter_string 80> {<filter_string 80> } } } } log_toTFTP [<ipaddr> <ipv6addr>] dest_file <path_filename 64> attack_log_toTFTP [<ipaddr> <ipv6addr>] dest_file <path_filename 64>]</pre>
Description	This command is used to upload either the Switch's current settings or the Switch's history log to a TFTP server.
Parameters	<p><i>cfg_toTFTP</i> - Used to upload a configuration file from a device to a TFTP server. This command is required to be supported when the file system is not supported on a device's Flash EPROM.</p> <p><i><ipaddr></i> - Specify the IP address of the TFTP server.</p> <p><i><ipv6addr></i> - Specify the IPv6 address of the TFTP server.</p> <p><i>config_id</i> - Specifies the configuration file ID. If configuration ID is not specified, it refers to the current configuration file.</p> <p><i>dest_file</i> - Specify the pathname specifies the DOS pathname on the TFTP server. It can be a relative pathname or an absolute pathname.</p> <p><i><path_filename 64></i> - Specify the location of the switch configuration file on the TFTP server. This file will be replaced by the uploaded file from the switch. The maximum length is 64 characters.</p> <p><i>include</i> - Includes lines that contain the specified filter string.</p> <p><i>exclude</i> - Excludes lines that contain the specified filter string.</p> <p><i>begin</i> - The first line that contains the specified filter string will be the first line of the output.</p> <p><i><filter_string 80></i> - Specify a filter string is a case-sensitive octet string enclosed by the double quotation marks, "". Thus, the filter string itself cannot contain the quotation marks.</p> <p><i>log_toTFTP</i> - Used to upload a log file from the device to a TFTP server. This command is required to be supported when the file system is not supported on the device's Flash EPROM.</p> <p><i>attack_log_toTFTP</i> - Used to upload the attack log on a unit.</p>
Restrictions	The TFTP server must be on the same IP subnet as the Switch. Only Administrator and Operator-level users can issue this command.

Example usage:

To upload a configuration file to a TFTP server:

```
DGS-3700-12G:5#upload cfg_toTFTP 10.48.74.121 dest_file c:\cfg\DGS-3700\3700.cfg 2
Command: upload cfg_toTFTP 10.48.74.121 dest_file c:\cfg\DGS-3700\3700.cfg 2

Connecting to server... Done.
Upload Configuration... Done.

DGS-3700-12:5#
```

enable autoconfig	
Purpose	Used to activate the autoconfiguration function for the Switch. This will load a previously saved configuration file for current use.
Syntax	enable autoconfig

enable autoconfig	
Description	When autoconfig is enabled on the Switch, the DHCP reply will contain a configuration file and path name. It will then request the file from the TFTP server specified in the reply. When autoconfig is enabled, the ipif settings will automatically become DHCP client.
Parameters	None.
Restrictions	When autoconfig is enabled, the Switch becomes a DHCP client automatically (same as: config ipif System dhcp). The DHCP server must have the TFTP server IP address and configuration file name, and be configured to deliver this information in the data field of the DHCP reply packet. The TFTP server must be running and have the requested configuration file in its base directory when the request is received from the Switch. Consult the DHCP server and TFTP server software instructions for information on loading a configuration file. If the Switch is unable to complete the autoconfiguration process the previously saved local configuration file present in Switch memory will be loaded. Only Administrator and Operator-level users can issue this command.



NOTE: Dual-purpose (DHCP/TFTP) server utility software may require entry of the configuration file name and path within the user interface. Alternatively, the DHCP software may require creating a separate ext file with the configuration file name and path in a specific directory on the server. Consult the documentation for the DHCP server software if users are unsure.

Example usage:

To enable autoconfiguration on the Switch:

```
DGS-3700-12:5#enable autoconfig
Command: enable autoconfig

Success.

DGS-3700-12:5#
```

When autoconfig is enabled and the Switch is rebooted, the normal login screen will appear for a few moments while the autoconfig request (i.e. download configuration) is initiated. The console will then display the configuration parameters as they are loaded from the configuration file specified in the DHCP or TFTP server. This is exactly the same as using a **download configuration** command. After the entire Switch configuration is loaded, the Switch will automatically “logout” the server. The configuration settings will be saved automatically and become the active configuration.

Upon booting up the autoconfig process is initiated, the console screen will appear similar to the example below. The configuration settings will be loaded in normal order.

```

DGS-3700-12 Gigabit Ethernet Switch
Command Line Interface

Firmware: Build 2.00.B023
Copyright(C) 2010 D-Link Corporation. All rights reserved.

DGS-3700-12:5#
DGS-3700-12:5#
DGS-3700-12:5# download cfg_fromTFTP 10.41.44.44 src_file c:\cfg\setting.txt
Command: download cfg_fromTFTP 10.41.44.44 src_file c:\cfg\setting.txt

Connecting to server..... Done.
Download configuration..... Done.
    
```

The very end of the autoconfig process including the logout appears like this:

```

DGS-3700-12:5#disable dhcpv6_relay
Command: disable dhcpv6_relay

Success.

DGS-3700-12:5#
DGS-3700-12:5##-----
DGS-3700-12:5##                End of configuration file for DGS-3700-12
Saving configurations and logs to NV-RAM..... Done.

*****
* Logout *
*****
    
```



NOTE: With autoconfig enabled, the Switch ipif settings now define the Switch as a DHCP client. Use the **show switch** command to display the new IP settings status.

disable autoconfig	
Purpose	Use this to deactivate autoconfiguration from DHCP.
Syntax	disable autoconfig
Description	This command is used to instruct the Switch not to accept autoconfiguration instruction from the DHCP server. This does not change the IP settings of the Switch. The ipif settings will continue as DHCP client until changed with the config ipif command.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To stop the autoconfiguration function:

```
DGS-3700-12:5#disable autoconfig
Command: disable autoconfig

Success.

DGS-3700-12:5#
```

show autoconfig

Purpose	Used to display the current autoconfig status of the Switch.
Syntax	show autoconfig
Description	This command will list the current status of the autoconfiguration function.
Parameters	None.
Restrictions	None.

Example usage:
To display autoconfig:

```
DGS-3700-12:5#show autoconfig
Command: show autoconfig
Autoconfig State: Disabled.

Success.

DGS-3700-12:5#
```

config configuration

Purpose	Used to configure specific firmware as a boot up image.
Syntax	config configuration <config_id 1-2> [boot_up delete active]
Description	This command is used to configure a specific boot up image.
Parameters	<i>config_id</i> - Specifies the configuration file ID. <i>boot_up</i> - Specifies it as a boot up file. <i>active</i> - Specifies to apply the configuration. <i>delete</i> - Specifies to delete the configuration.
Restrictions	You must have Administrator-level privileges.

Example usage:
To configure the specific configuration file as boot up:

```
DGS-3700-12:5#config configuration 1 boot_up
Command: config configuration 1 boot_up

Success

DGS-3700-12:5#
```

ping

Purpose	Used to test the connectivity between network devices.
Syntax	ping <ipaddr> {times <value 1-255>} {timeout <sec 1-99>}
Description	This command is used to send Internet Control Message Protocol (ICMP) echo messages to a remote IP address. The remote IP address will then “echo” or return the message. This is used to confirm connectivity between the Switch and the remote device.

ping	
Parameters	<p><i><ipaddr></i> - Specifies the IP address of the host.</p> <p><i>times <value 1-255></i> - The number of individual ICMP echo messages to be sent. A value of 0 will send an infinite ICMP echo messages. The maximum value is 255. The default is 0.</p> <p><i>timeout <sec 1-99></i> - Defines the time-out period while waiting for a response from the remote device. A value of 1 to 99 seconds can be specified. The default is 1 second.</p>
Restrictions	None.

Example usage:

To ping the IP address 10.48.74.121 four times:

```
DGS-3700-12:5#ping 10.48.74.121 times 4
Command: ping 10.48.74.121

Reply from 10.48.74.121, time<10ms
Reply from 10.48.74.121, time<10ms
Reply from 10.48.74.121, time<10ms
Reply from 10.48.74.121, time<10ms

Ping statistics for 10.48.74.121
Packets: Sent =4, Received =4, Lost =0

DGS-3700-12:5#
```

ping6	
Purpose	To test the connectivity between IPv6 network devices.
Syntax	ping6 <ipv6addr> {times <value 1-255> size <value 1-6000> timeout<value 1-10>}
Description	This command is used to send Internet Control Message Protocol (ICMPv6) echo messages to a remote IP address. The remote IPv6 address will then “echo” or return the message. This is used to confirm connectivity between the Switch and the remote device.
Parameters	<p><i>< ipv6addr ></i> – Specifies the IPv6 address of the host.</p> <p><i>times <value 1-255></i> – The number of individual ICMPv6 echo messages to be sent. A value of 0 will send an infinite ICMP echo messages. The maximum value is 255. The default is 0.</p> <p><i>size <value 1-6000></i> – Use this parameter to set the datagram size of the packet, or in essence, the number of bytes in each ping packet. Users may set a size between 1 and 6000 bytes with a default setting of 100 bytes.</p> <p><i>timeout <value 1-10></i> – Select a timeout period between 1 and 10 seconds for this Ping message to reach its destination. If the packet fails to find the IPv6 address in this specified time, the Ping packet will be dropped.</p>
Restrictions	None.

Example usage:

To ping the IPv6 address 1001::3702 four times:

```
DGS-3700-12:5#ping6 1001::3702 times 4
Command: ping6 1001::3702 times 4

Reply from 1001::3702, bytes=100 time<10 ms
Ping Statistics for 1001::3702
Packets: Sent =4, Received =4, Lost =0
```

DGS-3700-12:5#

traceroute

Purpose	To trace the routed path between the switch and a destination end station.
Syntax	traceroute <ipaddr> {ttl <value 1-60>} {port <value 30000-64900>} {timeout <sec 1-65535>} {probe <value 1-9>}
Description	This command is used to trace a route between the switch and a given host on the network.
Parameters	<p><i><ipaddr></i> - Specify the IP address of the destination end station.</p> <p><i>ttl</i> - Specify the time to live value of the trace route request. This is the maximum number of routers that a trace route packet can pass while seeking the network path between two devices. The range for the TTL is 1 to 60 hops.</p> <p><i>port</i> - Specify the port number. The value range is from 30000 to 64900 .</p> <p><i>timeout</i> - Specify the timeout period while waiting for a response from the remote device. A value of 1 to 65535 seconds can be specified. The default is 5 seconds .</p> <p><i>probe</i> - Specify the number of probes. The range is from 1 to 9 . If unspecified, the default value is 1.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To trace the routed path between the switch and 10.48.74.121:

```
DGS-3700-12:5#traceroute 10.48.74.121 probe 3
Command: traceroute 10.48.74.121 probe 3
```

```
1 <10 ms. 10.12.73.254
2 <10 ms. 10.19.68.1
3 <10 ms. 10.48.74.121
```

```
Trace complete.
DGS-3700-12:5#
```

traceroute6

Purpose	This command is used to trace the IPv6 routed path between the switch and a destination end station.
Syntax	traceroute6 <ipv6addr> {ttl <value 1-60> port <value 30000-64900> timeout <sec 1-65535> probe <value 1-9>}
Description	The traceroute6 command allows you to trace an IPv6 route between the switch and a give host on the network.
Parameters	<p><i><ipv6addr></i> - Specify the IP address of the destination end station.</p> <p><i>ttl</i> - Specify the time to live value of the trace route request. This is the maximum number of routers that a trace route packet can pass while seeking the network path between two devices. The range for the TTL is 1 to 60 hops.</p>

traceroute6	
	<p><i>port</i> - Specify the port number. The value range is from 30000 to 64900 .</p> <p><i>timeout</i> - Specify the timeout period while waiting for a response from the remote device. A value of 1 to 65535 seconds can be specified. The default is 5 seconds .</p> <p><i>probe</i> - Specify the number of probes. The range is from 1 to 9 . If unspecified, the default value is 1.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

Trace the IPv6 routed path between the switch and 3000::1:

```
DGS-3700-12:5#traceroute6 3000::1 probe 3
Command: traceroute6 3000::1 probe 3

1  <10 ms.    1345:142::11
2  <10 ms.    2011:14::100
3  <10 ms.    3000::1

Trace complete.
DGS-3700-12:5#
```

Trace the IPv6 routed path between the switch and 1210:100::11 with port 40000:

```
DGS-3700-12:5#traceroute6 1210:100::11 port 40000
Command: traceroute6 1210:100::11 port 40000

1  <10 ms.    3100::25
2  <10 ms.    4130::100
3  <10 ms.    1210:100::11

Trace complete.
DGS-3700-12:5#
```

telnet	
Purpose	To login a Telnet server.
Syntax	telnet <ipaddr> {tcp_port <value 0-65535>}
Description	To login a Telnet server.
Parameters	<p><i><ipaddr></i> - Specify the IP address of the Telnet server.</p> <p><i>tcp_port</i> - Specify the Telnet server port number to be connected to. If not specified, the default port is 23.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To Telnet to a switch by specifying the IP address:

DGS-3700-12:5#telnet 10.1.1.1

Command: telnet 10.1.1.1

DES-3810-28 Fast Ethernet Switch
Command Line Interface

Firmware: Build 1.00.B039

Copyright(C) 2009 D-Link Corporation. All rights reserved.

UserName:

TECHNICAL SUPPORT COMMANDS

Back to Section Header

The Switch technical support commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
show tech_support	
upload tech_support_toTFTP	<ipaddr> <path_filename 64>

Each command is listed, in detail, in the following sections.

show tech_support	
Purpose	To display technical support information.
Syntax	show tech_support
Description	This command is used to display technical support information. It is especially useful for technical support personnel that need to view the overall device operation information
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.



NOTE: The Switch may become unaccessible when dumping the tech support data.



NOTE: The management session may time out if the dumping tech support data takes longer than the configured session timeout period. It's strongly recommended to set the serial port time out to never and to disable the auto disconnection of the console session.

Example usage:

To display technical support information:



upload tech_support_toTFTP	
Purpose	To upload technical support information to a TFTP server.
Syntax	upload tech_support_toTFTP <ipaddr> <path_filename 64>
Description	This command is used to upload technical support information to a TFTP server. This command can be interrupted by Ctrl – C or ESC when it is executing.
Parameters	<ipaddr> - Specify the IPv4 address of the TFTP server. <path_filename 64> - Specify the file name of the technical support information file sent to the TFTP server. The maximum size of the file name is 64 characters.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To upload technical support information:

```
DGS-3700-12:5#upload tech_support_toTFTP 10.0.0.66 tech_support.txt
Command: upload tech_support_toTFTP 10.0.0.66 tech_support.txt

Connecting to server..... Done.
Upload techsupport file..... Done.

Success.

DGS-3700-12:5#
```

MANAGEMENT SECTION

Table of Contents

Next Section

Previous Section

COMMAND HISTORY COMMANDS

Back to Section Header

The switch history commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
?	
config command_history	<value 1-40>
show command_history	

Each command is listed, in detail, in the following sections.

?	
Purpose	Used to display all commands in the Command Line Interface (CLI).
Syntax	? {<command>}
Description	This command will display all of the commands available through the Command Line Interface (CLI).
Parameters	{<command>} – Entering the question mark with an appropriate command will list all the corresponding parameters for the specified command, along with a brief description of the commands function and similar commands having the same words in the command.
Restrictions	None.

Example usage:

To display all of the commands in the CLI:

```
DGS-3700-12:5#?
Command: ?
..
?
cable_diag ports
cfm linktrace
cfm loopback
clear
clear address_binding dhcp_snoop binding_entry ports
clear arptable
clear attack_log
clear cfm pkt_cnt
clear counters
clear ethernet_oam ports
clear fdb
clear historical_counters ports
clear igmp_snooping data_driven_group
clear igmp_snooping statistic counter
clear log
clear mac_based_access_control auth_mac
clear mld_snooping data_driven_group
clear mld_snooping statistic counter
clear port_security_entry
clear vlan_counter statistics

CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All
```

To display the parameters for a specific command:

```
DGS-3700-12:5#? config stp
Command: ? config stp

Command: config stp
Usage: {maxage <value 6-40>|maxhops <value 1-20> |hellotime <value 1-2>| forwarddelay
<value 4-30>|txholdcount <value 1-10>|fbpdu [enable|disable]|nni_bpdu_addr [dot1d |
dot1ad]}
Description: Used to update the STP Global Configuration.
config stp instance_id
config stp mst_config_id
config stp mst_ports
config stp ports
config stp priority
config stp version

DGS-3700-12:5#
```

config command_history

Purpose	Used to configure the command history.
Syntax	config command_history <value 1-40>
Description	This command is used to configure number of the executed command to be recorded in CLI.
Parameters	<value 1-40> – The number of previously executed commands maintained in the buffer. Up to 40 of the latest executed commands may be viewed.
Restrictions	None.

Example usage:

To configure the command history:

```
DGS-3700-12:5#config command_history 20
Command: config command_history 20

Success.

DGS-3700-12:5#
```

show command_history

Purpose	Used to display the command history.
Syntax	show command_history
Description	This command is used to display currently used command history.
Parameters	None.
Restrictions	None.

Example usage:

To display the command history:

```
DGS-3700-12:5#show command_history
Command: show command_history

config command_history 20
? config stp
?

DGS-3700-12:5#
```

D-LINK SINGLE IP MANAGEMENT COMMANDS

Back to Section Header

Simply put, D-Link Single IP Management is a concept that will stack switches together over Ethernet instead of using stacking ports or modules.

Switches using D-Link Single IP Management (labeled here as SIM) must conform to the following rules:

- SIM is an optional feature on the Switch and can easily be enabled or disabled.
- SIM grouping has no effect on the normal operation of the Switch in the user's network.

There are three classifications for switches using SIM.

- 1) **Commander Switch(CS)**, which is the master switch of the group,
- 2) **Member Switch(MS)**, which is a switch that is recognized by the CS as a member of a SIM group, and a
- 3) **Candidate Switch(CaS)**, which is a switch that has a physical link to the SIM group but has not been recognized by the CS as a member of the SIM group.

A SIM group can only have one Commander Switch(CS). All switches in a particular SIM group must be in the same IP subnet (broadcast domain). Members of a SIM group cannot cross a router. A SIM group accepts one Commander Switch (numbered 0) and up to 32 switches (numbered 0-31). There is no limit to the number of SIM groups in the same IP subnet (broadcast domain), however a single switch can only belong to one group. If multiple VLANs are configured, the SIM group will only utilize the default VLAN on any switch. SIM allows intermediate devices that do not support SIM. This enables the user to manage a switch that are more than one hop away from the CS.

The SIM group is a group of switches that are managed as a single entity. The DGS-3700 Series may take on three different roles:

- **Commander Switch(CS)** – This is a switch that has been manually configured as the controlling device for a group, and takes on the following characteristics:
 - It has an IP Address.
 - It is not a Commander Switch or Member Switch of another Single IP group.
 - It is connected to the Member Switches through its management VLAN.
- **Member Switch(MS)** – This is a switch that has joined a single IP group and is accessible from the CS, and it takes on the following characteristics:
 - It is not a CS or MS of another IP group.
 - It is connected to the CS through the CS management VLAN.
- **Candidate Switch(CaS)** – This is a switch that is ready to join a SIM group but is not yet a member of the SIM group. The Candidate Switch may join the SIM group through an automatic function of the DGS-3700 Series, or by manually configuring it to be a MS of a SIM group. A switch configured as a CaS is not a member of a SIM group and will take on the following characteristics:
 - It is not a CS or MS of another Single IP group.
 - It is connected to the CS through the CS management VLAN.

The following rules also apply to the above roles:

1. Each device begins in the Commander state.
2. CS's must change their role to CaS and then to MS, to become a MS of a SIM group. Thus the CS cannot directly be converted to a MS.
3. The user can manually configure a CS to become a CaS.
4. A MS can become a CaS by:
5. Being configured as a CaS through the CS.
6. If report packets from the CS to the MS time out.

7. The user can manually configure a CaS to become a CS
8. The CaS can be configured through the CS to become a MS.

After configuring one switch to operate as the CS of a SIM group, additional DGS-3700 Series switches may join the group by either an automatic method or by manually configuring the Switch to be a MS. The CS will then serve as the in band entry point for access to the MS. The CS's IP address will become the path to all MS's of the group and the CS's Administrator's password, and/or authentication will control access to all MS's of the SIM group.

With SIM enabled, the applications in the CS will redirect the packet instead of executing the packets. The applications will decode the packet from the administrator, modify some data, then send it to the MS. After execution, the CS may receive a response packet from the MS, which it will encode and send back to the administrator.

When a CS becomes a MS, it automatically becomes a member of the first SNMP community (include read/write and read only) to which the CS belongs. However if a MS has its own IP address, it can belong to SNMP communities to which other switches in the group, including the CS, do not belong.

The Upgrade to v1.6

To better improve SIM management, the DGS-3700 Series has been upgraded to version 1.6 in this release. Many improvements have been made, including:

The Commander Switch (CS) now has the capability to automatically rediscover member switches that have left the SIM group, either through a reboot or web malfunction. This feature is accomplished through the use of Discover packets and Maintain packets that previously set SIM members will emit after a reboot. Once a MS has had its MAC address and password saved to the CS's database, if a reboot occurs in the MS, the CS will keep this MS information in its database and when a MS has been rediscovered, it will add the MS back into the SIM tree automatically. No configuration will be necessary to rediscover these switches. There are some instances where pre-saved MS switches cannot be rediscovered. For example, if the Switch is still powered down, if it has become the member of another group, or if it has been configured to be a Commander Switch, the rediscovery process cannot occur.

This version will support multiple switch upload and downloads for firmware, configuration files and log files, as follows:

- Firmware – The switch now supports multiple MS firmware downloads from a TFTP server.
- Configuration Files – This switch now supports multiple downloading and uploading of configuration files both to (for configuration restoration) and from (for configuration backup) MS's, using a TFTP server.
- Log – The switch now supports uploading multiple MS log files to a TFTP server.



NOTE: For more details regarding improvements made in SIMv1.6, please refer to the White Paper located on the D-Link website.

The SIM commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
enable sim	
disable sim	
show sim	{[candidates { <candidate_id 1-100> } members{ <member_id 1-32> } group {commander_mac <macaddr> } neighbor]}
reconfig	[member_id <value 1-32> exit]
config sim_group	[add <candidate_id 1-100> {<password>} delete <member_id 1-32>]
config sim	[[commander { group_name <groupname 64>} candidate] dp_interval <sec 30-90>

COMMAND	PARAMETERS
	hold_time <sec 100-255>]
download sim_ms	[firmware_from_tftp configuration_from_tftp] <ipaddr> <path_filename> { [members <mclist 1-32> all] }
upload sim_ms	[configuration_to_tftp log_to_tftp] <ipaddr> <path_filename> { [members <mclist> all] }

Each command is listed, in detail, in the following sections.

enable sim	
Purpose	Used to enable Single IP Management (SIM) on the Switch
Syntax	enable sim
Description	This command will enable SIM globally on the Switch. SIM features and functions will not function properly unless this function is enabled.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable SIM on the Switch:

DGS-3700-12:5#enable sim Command: enable sim Success. DGS-3700-12:5#

disable sim	
Purpose	Used to disable Single IP Management (SIM) on the Switch
Syntax	disable sim
Description	This command will disable SIM globally on the Switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable SIM on the Switch:

DGS-3700-12:5#disable sim Command: disable sim Success. DGS-3700-12:5#

show sim	
Purpose	Used to view the current information regarding the SIM group on the Switch.
Syntax	show sim { [candidates { <candidate_id 1-100> } members { <member_id 1-32> } group { commander_mac <macaddr> } neighbor] }
Description	This command will display the current information regarding the SIM group on the Switch, including the following:

show sim	
	<p><i>SIM Version</i> – Displays the current Single IP Management version on the Switch.</p> <p><i>Firmware Version</i> – Displays the current Firmware version on the Switch.</p> <p><i>Device Name</i> – Displays the user-defined device name on the Switch.</p> <p><i>MAC Address</i> – Displays the MAC Address of the Switch.</p> <p><i>Capabilities</i> – Displays the type of switch, be it Layer 2 (L2) or Layer 3 (L3).</p> <p><i>Platform</i> – Switch Description including name and model number.</p> <p><i>SIM State</i> – Displays the current Single IP Management State of the Switch, whether it be enabled or disabled.</p> <p><i>Role State</i> – Displays the current role the Switch is taking, including Commander, Member or Candidate. A Stand-alone switch will always have the commander role.</p> <p><i>Discovery Interval</i> – Time in seconds the Switch will send discovery packets out over the network.</p> <p><i>Hold time</i> – Displays the time in seconds the Switch will hold discovery results before dropping it or utilizing it.</p>
Parameters	<p><i>candidates <candidate_id 1-100></i> – Entering this parameter will display information concerning candidates of the SIM group. To view a specific candidate, include that candidate's ID number, listed from 1 to 100.</p> <p><i>members <member_id 1-32></i> – Entering this parameter will display information concerning members of the SIM group. To view a specific member, include that member's id number, listed from 1 to 32.</p> <p><i>group {commander_mac <macaddr>}</i> – Entering this parameter will display information concerning the SIM group. To view a specific group, include the commander's MAC address of the group.</p> <p><i>neighbor</i> – Entering this parameter will display neighboring devices of the Switch. A SIM neighbor is defined as a switch that is physically connected to the Switch but is not part of the SIM group. This screen will produce the following results: Port – Displays the physical port number of the commander switch where the uplink to the neighbor switch is located. MAC Address – Displays the MAC Address of the neighbor switch. Role – Displays the role(CS, CaS, MS) of the neighbor switch.</p>
Restrictions	None.

Example usage:

To show the SIM information in detail:

```

DGS-3700-12:5#show sim
Command: show sim

SIM Version       : VER-1.61
Firmware Version  : 2.00.B023
Device Name       :
MAC Address       : 00-01-02-03-04-00
Capabilities      : L2
Platform          : DGS-3700-12 L2 Switch
SIM State         : Enabled
Role State        : Candidate
Discovery Interval : 30 sec
Hold Time         : 100 sec

DGS-3700-12:5#
    
```

To show the candidate information in summary, if the candidate ID is specified:

```
DGS-3700-12:5#show sim candidates
Command: show sim candidates

ID   MAC Address                Platform /
    -----                -----
    1   00-01-02-03-04-00        DGS-3700-12 L2 Switch   40       2.00.B023   The Man
    2   00-55-55-00-55-00        DGS-3700-12 L2 Switch   140      2.00.B023   default

Total Entries: 2

DGS-3700-12:5#
```

To show the member information in summary:

```
DGS-3700-12:5#show sim members
Command: show sim members

ID   MAC Address                Platform /
    -----                -----
    1   00-01-02-03-04-00        DGS-3700-12 L2 Switch   40       2.00.B023   The Man
    2   00-55-55-00-55-00        DGS-3700-12 L2 Switch   140      2.00.B023   default master

Total Entries: 2

DGS-3700-12:5#
```

To show other groups information in summary, if group is specified:

```
DGS-3700-12:5#show sim group
Command: show sim group

SIM Group Name : default

ID   MAC Address                Platform /
    -----                -----
*1   00-01-02-03-04-00        DGS-3700-12 L2 Switch   40       2.00.B023   Trinity
 2   00-55-55-00-55-00

SIM Group Name : SIM2

ID   MAC Address                Platform /
    -----                -----
*1   00-01-02-03-04-01        DGS-3700-12 L2 Switch   40       2.00.B023   Neo
 2   00-55-55-00-55-01

DGS-3700-12:5#
```

Example usage:

 To view SIM neighbors:

```
DGS-3700-12:5# show sim neighbor
Command: show sim neighbor

Neighbor Info Table

Port      MAC Address          Role
-----  -
1         00-35-26-00-11-99  Commander
1         00-35-26-00-11-91  Member
3         00-35-26-00-11-90  Candidate

Total Entries: 3

DGS-3700-12:5#
```

reconfig

Purpose	Used to connect to a member switch, through the commander switch, using Telnet.
Syntax	reconfig [member_id <value 1-32> exit]
Description	This command is used to reconnect to a member switch using Telnet.
Parameters	<i>member_id</i> <value 1-32> – Select the ID number of the member switch to configure. <i>exit</i> – This command is used to exit from managing the member switch and will return to managing the commander switch.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To connect to the MS, with member ID 2, through the CS, using the command line interface:

```
DGS-3700-12:5#reconfig member_id 2
Command: reconfig member_id 2

DGS-3700-12:5#
Login:
```

config sim_group

Purpose	Used to add candidates and delete members from the SIM group.
Syntax	config sim_group [add <candidate_id 1-100> {<password>} delete <member_id 1-32>]
Description	This command is used to add candidates and delete members from the SIM group by ID number.
Parameters	<i>add</i> <candidate_id> <password> – Use this parameter to change a candidate switch (CaS) to a member switch (MS) of a SIM group. The CaS may be defined by its ID number and a password (if necessary). <i>delete</i> <member_id 1-32> – Use this parameter to delete a member switch of a SIM group. The member switch should be defined by ID number.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To add a member:

```
DGS-3700-12:5#config sim_group add 2
```

```
Command: config sim_group add 2
```

```
Please wait for ACK!!!
```

```
SIM Config Success !!!
```

```
Success.
```

```
DGS-3700-12:5#
```

To delete a member:

```
DGS-3700-12:5# config sim_group delete 1
```

```
Command: config sim_group delete 1
```

```
Please wait for ACK!!!
```

```
SIM Config Success!!!
```

```
DGS-3700-12:5#
```

config sim

Purpose	Used to configure role parameters for the SIM protocol on the Switch.
Syntax	config sim [[commander { <i>group_name</i> <groupname 64>}][candidate]] dp_interval <sec 30-90> hold_time <sec 100-255>]
Description	This command is used to configure parameters of switches of the SIM.
Parameters	<p><i>commander</i> – Use this parameter to configure the commander switch (CS) for the following parameters:</p> <p><i>group_name</i> <groupname 64> – Used to update the name of the group. Enter an alphanumeric string of up to 64 characters to rename the SIM group.</p> <p><i>dp_interval</i> <30-90> – The user may set the discovery protocol interval, in seconds that the Switch will send out discovery packets. Returning information to the CS will include information about other switches connected to it. (Ex. MS, CaS). The user may set the <i>dp_interval</i> from 30 to 90 seconds.</p> <p><i>hold time</i> <sec 100-300> – Using this parameter, the user may set the time, in seconds, the CS will hold information sent to it from other switches, utilizing the discovery interval protocol. The user may set the hold time from 100 to 300 seconds.</p> <p><i>candidate</i> – Used to change the role of a CS (commander) to a CaS (candidate).</p> <p><i>dp_interval</i> <30-90> – The user may set the discovery protocol interval, in seconds that the Switch will send out discovery packets. Returning information to the CS will include information about other switches connected to it. (Ex. MS, CaS). The user may set the <i>dp_interval</i> from 30 to 90 seconds.</p> <p><i>hold time</i> <100-255> – Using this parameter, the user may set the time, in seconds, the Switch will hold information sent to it from other switches, utilizing the discovery interval protocol. The user may set the hold time from 100 to 255 seconds.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To change the time interval of the discovery protocol:

```
DGS-3700-12:5#config sim dp_interval 30
Command: config sim dp_interval 30

Success.

DGS-3700-12:5#
```

To change the hold time of the discovery protocol:

```
DGS-3700-12:5#config sim hold_time 120
Command: config sim hold_time 120

Success.

DGS-3700-12:5#
```

To transfer the CS (commander) to be a CaS (candidate):

```
DGS-3700-12:5#config sim candidate
Command: config sim candidate

Success.

DGS-3700-12:5#
```

To transfer the Switch to be a CS:

```
DGS-3700-12:5#config sim commander
Command: config sim commander

Success.

DGS-3700-12:5#
```

To update the name of a group:

```
DGS-3700-12:5#config sim commander group_name Trinity
Command: config sim commander group_name Trinity

Success.

DGS-3700-12:5#
```

download sim_ms

Purpose	Used to download firmware or configuration file to an indicated device.
Syntax	download sim_ms [firmware_from_tftp configuration_from_tftp] <ipaddr> <path_filename> {[members <mclist 1-32> all]}
Description	This command will download a firmware file or configuration file to a specified device from a TFTP server.
Parameters	<p><i>firmware_from_tftp</i> – Specify this parameter to download firmware to members of a SIM group.</p> <p><i>configuration_from_tftp</i> – Specify this parameter to download a switch configuration to members of a SIM group.</p> <p><ipaddr> – Enter the IP address of the TFTP server.</p> <p><path_filename> – Enter the path and the filename of the firmware or switch on the</p>

download sim_ms

	<p>TFTP server.</p> <p><i>members</i> – Enter this parameter to specify the members to which the user prefers to download firmware or switch configuration files. The user may specify a member or members by adding one of the following:</p> <p><<i>mslist</i>> – Enter a value, or values to specify which members of the SIM group will receive the firmware or switch configuration.</p> <p><i>all</i> – Add this parameter to specify all members of the SIM group will receive the firmware or switch configuration.</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To download firmware:

```
DGS-3700-12:5#download sim_ms firmware_from_tftp 10.53.13.94 c:/dgs3700.had members all
Command: download sim_ms firmware_from_tftp 10.53.13.94 c:/dgs3700.had members all
```

This device is updating firmware. Please wait several minutes...

Download Status :

ID	MAC Address	Result
1	00-01-02-03-04-00	Success
2	00-07-06-05-04-03	Success
3	00-07-06-05-04-04	Success

DGS-3700-12:5#

To download configuration files:

```
DGS-3700-12:5#download sim_ms configuration_from_tftp 10.53.13.94 c:/dgs3700.txt
members all
Command: download sim_ms firmware_from_tftp 10.53.13.94 c:/dgs3700.txt members all
```

This device is updating configuration. Please wait several minutes...

Download Status :

ID	MAC Address	Result
1	00-01-02-03-04-00	Success
2	00-07-06-05-04-03	Success
3	00-07-06-05-04-04	Success

DGS-3700-12:5#

upload sim_ms

Purpose	User to upload a configuration file to a TFTP server from a specified member of a SIM group.
Syntax	upload sim_ms [configuration_to_tftp log_to_tftp] <ipaddr> <path_filename> [[members <mslist> all]]
Description	This command will upload a configuration file to a TFTP server from a specified member of a SIM group.

upload sim_ms	
Parameters	<p><i>configuration_from_tftp</i> – Specify this parameter to upload a switch configuration to members of a SIM group.</p> <p><i>log_to_tftp</i> – Specify this parameter to upload a switch log to a member of the SIM group.</p> <p><i><ipaddr></i> – Enter the IP address of the TFTP server to which to upload a configuration file.</p> <p><i><path_filename></i> – Enter a user-defined path and file name on the TFTP server to which to upload configuration files.</p> <p><i>members</i> – Enter this parameter to specify the members to which the user prefers to upload the switch configuration or log files. The user may specify a member or members by adding one of the following:</p> <p><i><mslist></i> – Enter a value, or values to specify which members of the SIM group will upload the switch configuration or log.</p> <p><i>all</i> – Add this parameter to specify all members of the SIM group will upload the switch configuration or log.</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To upload configuration files to a TFTP server:

```
DGS-3700-12:5#upload sim_ms configuration_to_tftp 10.22.33.99 c:/configuration.txt
members 1
Command: upload sim_ms configuration_to_tftp 10.22.33.99 c:/configuration.txt members 1

Success.

DGS-3700-12:5#
```

DNS RELAY COMMANDS

Back to Section Header

The DNS Relay commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
config dnsr	[[primary secondary] nameserver <ipaddr> [add delete] static <domain_name 32> <ipaddr>]
enable dnsr	{[cache static]}
disable dnsr	{[cache static]}
show dnsr	{static}

Each command is listed, in detail, in the following sections.

config dnsr	
Purpose	To add or delete a static entry into the switch's DNS resolution table.
Syntax	config dnsr [[primary secondary] nameserver <ipaddr> [add delete] static <domain_name 32> <ipaddr>]
Description	Use this command to add or delete a static entry into the switch's DNS resolution table.
Parameters	<p><i>primary</i> - Specify to indicate that the IP address below is the address of the primary DNS server.</p> <p><i>secondary</i> - Specify to indicate that the IP address below is the address of the secondary DNS server.</p> <p><i>nameserver</i> - Specify the IP address of the DNS nameserver.</p> <p><i>add</i> - Specify to add the DNS relay function.</p> <p><i>delete</i> - Specify to delete the DNS relay function.</p> <p><i>static</i> - Specify the domain name of the entry.</p> <p><ipaddr> - Specify the IP address of the entry.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To set IP address 10.24.22.5 as the primary DNS server:

```
DGS-3700-12:5#config dnsr primary nameserver 10.24.22.5
Command: config dnsr primary nameserver 10.24.22.5

Success.

DGS-3700-12:5#
```

To add the entry "dns1" with IP address 10.24.22.5 to the DNS static table:

```
DGS-3700-12:5#config dnsr add static dns1 10.24.22.5
Command: config dnsr add static dns1 10.24.22.5

Success.

DGS-3700-12:5#
```

To delete the entry “dns1” with IP address 10.24.22.5 from the DNS static table:

```
DGS-3700-12:5#config dnsr delete static dns1 10.24.22.5
Command: config dnsr delete static dns1 10.24.22.5

Success.

DGS-3700-12:5#
```

enable dnsr

Purpose	To enable DNS relay.
Syntax	enable dnsr {[cache static]}
Description	Use this command to enable DNS relay.
Parameters	<i>cache</i> - Specify to enable the cache lookup for the DNS relay on the switch. <i>static</i> - Specify to enable the static table lookup for the DNS relay on the switch.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable DNS relay:

```
DGS-3700-12:5#enable dnsr
Command: enable dnsr

Success.

DGS-3700-12:5#
```

To enable cache lookup for DNS relay:

```
DGS-3700-12:5#enable dnsr cache
Command: enable dnsr cache

Success.

DGS-3700-12:5#
```

To enable static table lookup for DNS relay:

```
DGS-3700-12:5#enable dnsr static
Command: enable dnsr static

Success.

DGS-3700-12:5#
```

disable dnsr

Purpose	To disable DNS relay on the switch.
----------------	-------------------------------------

disable dnsr	
Syntax	disable dnsr {[cache static]}
Description	This command is used to disable DNS relay on the switch.
Parameters	<i>cache</i> - Specify to disable the cache lookup for the DNS relay on the switch. <i>static</i> - Specify to disable the static table lookup for the DNS relay on the switch.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable the status of DNS relay:

```
DGS-3700-12:5#disable dnsr
Command: disable dnsr

Success.

DGS-3700-12:5#
```

To disable cache lookup for DNS relay:

```
DGS-3700-12:5#disable dnsr cache
Command: disable dnsr cache

Success.

DGS-3700-12:5#
```

To disable static table lookup for DNS relay:

```
DGS-3700-12:5#disable dnsr static
Command: disable dnsr static

Success.

DGS-3700-12:5#
```

show dnsr	
Purpose	To display the current DNS relay status.
Syntax	show dnsr {static}
Description	This command is used to display the current DNS relay configuration and static entries.
Parameters	<i>static</i> - Specify to display the static entries in the DNS relay table. If this parameter is omitted, the entire DNS relay table will be displayed.
Restrictions	None.

Example usage:

To display the DNS relay status:

```
DGS-3700-12:5#show dnsr
```

```
Command: show dnsr
```

```
DNSR Status           : Disabled  
Primary Name Server   : 0.0.0.0  
Secondary Name Server : 0.0.0.0  
DNSR Cache Status     : Disabled  
DNSR Static Table Status : Disabled
```

```
DNS Relay Static Table
```

Domain Name	IP Address
-----	-----
www.123.com.tw	10.12.12.123

```
Total Entries: 1
```

```
DGS-3700-12:5#
```

MODIFY BANNER AND PROMPT COMMANDS

Back to Section Header

Administrator level users can modify the login banner (greeting message) and command prompt by using the commands described below.

COMMAND	PARAMETERS
config command_prompt	[<string 16> username default]
config greeting_message	{default}
show greeting_message	

The modify Banner and Prompt commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

config command prompt	
Purpose	Used to configure the command prompt.
Syntax	config command_prompt [<string 16> username default]
Description	This command is for users to change the command prompt.
Parameters	<p><i>string 16</i> – The command prompt can be changed by entering a new name of no more than 16 characters.</p> <p><i>username</i> – The command prompt will be changed to the login username.</p> <p><i>default</i> – The command prompt will reset to factory default command prompt.</p>
Restrictions	<p>Only Administrator and Operator-level users can issue this command. Other restrictions include:</p> <ul style="list-style-type: none"> If the “reset” command is executed, the modified command prompt will remain modified. However, the “reset config/reset system” command will reset the command prompt to the original factory banner.

Example usage:

To modify the command prompt to “AtYourService”:

```
DGS-3700-12:5#config command_prompt AtYourService
Command: config command_prompt AtYourService

Success.

AtYourService:5#
```

config greeting_message	
Purpose	Used to configure the login banner (greeting message).
Syntax	config greeting_message {default}
Description	This command is used to modify the login banner (greeting message).
Parameters	<p><i>default</i> – If the user enters <i>default</i> to the modify banner command, then the banner will be reset to the original factory banner.</p> <p>To open the Banner Editor, click <i>enter</i> after typing the config greeting_message command. Type the information to be displayed on the banner by using the commands described on the Banner Editor:</p> <p>Quit without save: Ctrl+C</p> <p>Save and quit: Ctrl+W</p>

config greeting_message	
	Move cursor: Left/Right/Up/Down Delete line: Ctrl+D Erase all settings: Ctrl+X Reload original settings: Ctrl+L
Restrictions	Only Administrator and Operator-level users can issue this command. Other restrictions include: <ul style="list-style-type: none"> • If the “reset” command is executed, the modified banner will remain modified. However, the “reset config/reset system” command will reset the modified banner to the original factory banner. • The capacity of the banner is 24*80. 24 Lines and 80 characters per line. • Ctrl+W will only save the modified banner in the DRAM. Users need to type the “save” command to save it into FLASH. • Only valid in threshold level.

Example usage:

To modify the banner:

```

DGS-3700-12:5#config greeting_message
Command: config greeting_message

Greeting Messages Editor
=====
                DGS-3700-12G Gigabit Ethernet Switch
                Command Line Interface

                Firmware: Build 2.00.B023
                Copyright(C) 2009 D-Link Corporation. All rights reserved.
=====

<Function Key>          <Control Key>
Ctrl+C      Quit without save    left/right/
Ctrl+W      Save and quit        up/down      Move cursor
                                   Ctrl+D       Delete line
                                   Ctrl+X       Erase all setting
                                   Ctrl+L       Reload original setting
=====
    
```

show greeting_message	
Purpose	Used to view the currently configured greeting message configured on the Switch.
Syntax	show greeting_message
Description	This command is used to view the currently configured greeting message on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To view the currently configured greeting message:

```
DGS-3700-12:5#show greeting_message
```

```
Command: show greeting_message
```

```
=====
                DGS-3700-12G Gigabit Ethernet Switch
                Command Line Interface

                Firmware: Build 2.00.B023
                Copyright(C) 2009 D-Link Corporation. All rights reserved.
=====
```

```
DGS-3700-12:5#
```

IPv6 NEIGHBOR DISCOVERY COMMANDS

Back to Section Header

The following commands are used to detect IPv6 neighbors on the switch and to keep a running database about these neighbor devices. The IPv6 Neighbor Detection commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
create ipv6 neighbor_cache ipif	<ipif_name 12> <ipv6addr> <macaddr>
delete ipv6 neighbor_cache ipif	[<ipif_name 12> all] [<ipv6addr> static dynamic all]
show ipv6 neighbor_cache ipif	[<ipif_name 12> all] [ipv6address <ipv6addr> static dynamic all]
config ipv6 nd ns ipif	<ipif_name 12> retrans_time <uint 0-4294967295>
show ipv6 nd	{ipif <ipif_name 12>}

Each command is listed, in detail, in the following sections.

create ipv6 neighbor_cache ipif	
Purpose	This command is used to make a static entry into the NDP table.
Syntax	create ipv6 neighbor_cache ipif <ipif_name 12> <ipv6addr> <macaddr>
Description	This command is used to add a static IPv6 neighbor to an existing IPv6 interface previously created on the switch.
Parameters	<p><ipif_name 12> – Enter the IPv6 interface name previously created using the overstriking create ipif command.</p> <p><ipv6addr> – Enter the IPv6 address of the neighbor device to be added as an IPv6 neighbor of the IP interface previously entered in this command.</p> <p><macaddr> – Enter the MAC address of the neighbor device to be added as an IPv6 neighbor of the IP interface previously entered in this command.</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To create a static IPv6 neighbor:

```
DGS-3700-12:5#create ipv6 neighbor_cache ipif System 3FFC::1 00:01:02:03:04:05
Command: create ipv6 neighbor_cache ipif System 3FFC::1 00-01-02-03-04-05

Success.

DGS-3700-12:5#
```

delete ipv6 neighbor_cache ipif	
Purpose	Used to delete entries from the NDP table.
Syntax	delete ipv6 neighbor_cache ipif [<ipif_name 12> all] [<ipv6addr> static dynamic all]
Description	This command is used to remove a static IPv6 neighbor from an existing IPv6 interface previously created on the switch.
Parameters	<p><ipif_name 12> – Enter the IPv6 interface name previously created using the create ipif commands.</p> <p>all – Enter this parameter to denote all IPv6 interfaces created on the switch.</p> <p><ipv6addr> – Enter the IPv6 address of the neighbor device to be removed from</p>

delete ipv6 neighbor_cache ipif

	<p>being an IPv6 neighbor of the IP interface previously entered in this command.</p> <p><i>static</i> – Enter this command to remove all statically configured neighbor devices from being an IPv6 neighbor of the IP interface previously entered.</p> <p><i>dynamic</i> – Enter this command to remove all dynamic neighbor devices from being an IPv6 neighbor of the IP interface previously entered.</p> <p><i>all</i> – Enter this parameter to remove all IPv6 neighbors of the switch.</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To delete a static IPv6 neighbor:

```
DGS-3700-12:5#delete ipv6 neighbor_cache ipif System 3FFC::1
Command: delete ipv6 neighbor_cache ipif System 3FFC::1
Success.

DGS-3700-12:5#
```

show ipv6 neighbor_cache ipif

Purpose	Used to display the NDP table.
Syntax	show ipv6 neighbor_cache ipif [<i><ipif_name 12></i> <i>all</i>] [<i>ipv6address <ipv6addr></i> <i>static</i> <i>dynamic</i> <i>all</i>]
Description	Users can display a specific entry, all static entries, all dynamic entries, or all entries.
Parameters	<p><i><ipif_name 12></i> – Enter the IP interface for which to view IPv6 neighbors. This will display all IPv6 neighbors of this interface.</p> <p><i>all</i> – Enter this parameter to denote all IPv6 interfaces created on the switch.</p> <p><i>ipv6address <ipv6addr></i> – Enter the IPv6 address of the neighbor by which to view this information.</p> <p><i>static</i> – Enter this parameter to view all statically entered IPv6 neighbors of the switch.</p> <p><i>dynamic</i> – Enter this command to view all dynamic neighbor devices which are IPv6 neighbors of the IP interface previously entered.</p> <p><i>all</i> – Enter this parameter to view all configured neighbor devices which are IPv6 neighbors of the IP interface previously entered.</p>
Restrictions	None.

Example usage:

To display the IPv6 neighbors of a configured IP interface.

```
DGS-3700-12:5#show ipv6 neighbor_cache ipif System all
Command: show ipv6 neighbor_cache ipif System all

Neighbor                               Link Layer Address Interface    State
-----                               -
FE80::216:36FF:FEB5:48DF              00-16-36-B5-48-DF System      S
FE80::230:65FF:FE98:BFAC              00-30-65-98-BF-AC System      S
FE80::280:C8FF:FE25:9050              00-80-C8-25-90-50 System      S
FE80::2D0:BAFF:FEF4:3282              00-D0-BA-F4-32-82 System      S

Total Entries: 4

State:
(I) means Incomplete state. (R) means Reachable state.
(S) means Stale state.      (D) means Delay state.
(P) means Probe state.     (T) means Static state.

DGS-3700-12:5#
```

config ipv6 nd ns ipif

Purpose	Used to configure the NS retransmit time of a specified interface.
Syntax	config ipv6 nd ns ipif <ipif_name 12> retrans_time <uint 0-4294967295>
Description	This command will configure the parameters for Neighbor Solicitation messages sent from the switch. These messages are used to detect IPv6 neighbors on the switch.
Parameters	<ipif_name 12> - Specify the name of the interface. retrans_time - Specify the neighbor solicitation's retransmit timer in milliseconds.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To configure the retrans time of a configured IP interface:

```
DGS-3700-12:5#config ipv6 nd ns ipif System retrans_time 1000000
Command: config ipv6 nd ns ipif System retrans_time 1000000

Success.

DGS-3700-12:5#
```

show ipv6 nd

Purpose	Used to display the Neighbor Discover configurations.
Syntax	show ipv6 nd {ipif <ipif_name 12>}
Description	This command is used to show information regarding the IPv6 Neighbor Detection function of the switch. Users may specify an IP interface for which to view this information.
Parameters	<ipif_name 12> - Enter the IP interface of the IPv6 interface for which to view this information. Omitting this parameter will display all information regarding neighbor detection currently set on the switch.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To display the neighbor detection parameters for IPv6:

```
DGS-3700-12:5#show ipv6 nd
```

```
Command: show ipv6 nd
```

```
Interface Name           : System
```

```
NS Retransmit Time      : 1000000 (ms)
```

```
DGS-3700-12:5#
```

LLDP COMMANDS

Back to Section Header

The LLDP commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
enable lldp	
disable lldp	
config lldp	[message_tx_interval <sec 5-32768> message_tx_hold_multiplier <int 2-10> tx_delay <sec 1-8192> reint_delay <sec 1-10>]
show lldp	
config lldp forward_message	[enable disable]
config lldp notification_interval	<sec 5-3600>
config lldp ports	[<portlist> all] [notification [enable disable] admin_status [tx_only rx_only tx_and_rx disable] mgt_addr [ipv4 <ipaddr> ipv6 <ipv6addr>] [enable disable] basic_tlvs [{all} {port_description system_name system_description system_capabilities}] [enable disable] dot1_tlv_pvid [enable disable] dot1_tlv_protocol_vid [vlan [all <vlan_name 32>] vlanid <vidlist>] [enable disable] dot1_tlv_vlan_name [vlan [all <vlan_name 32>] vlanid <vidlist>] [enable disable] dot1_tlv_protocol_identity [all {eapol lacp gvrp stp }] [enable disable] dot3_tlvs [{all} {mac_phy_configuration_status link_aggregation maximum_frame_size}] [enable disable]]
show lldp ports	{<portlist>}
config lldp_med fast_start repeat_count	<value 1-10>
config lldp_med log state	[enable disable]
config lldp_med notification topo_change ports	[<portlist> all] state [enable disable]
config lldp_med ports	[<portlist> all] med_transmit_capabilities [all {capabilities network_policy inventory}] state [enable disable]
show lldp_med ports	{<portlist>}
show lldp_med	
show lldp_med local_ports	{<portlist>}
show lldp_med remote_ports	{<portlist>}
show lldp local_ports	{<portlist>} {mode [brief normal detailed]}
show lldp mgt_addr	{[ipv4 <ipaddr> ipv6 <ipv6addr>]}
show lldp remote_ports	{<portlist>} {mode [brief normal detailed]}
show lldp statistics	
show lldp statistics ports	{<portlist>}

Each command is listed, in detail, in the following sections.

enable lldp

Purpose

Used to enable LLDP operation on the Switch.

enable lldp	
Syntax	enable lldp
Description	This is a global control for the LLDP function. When this function is enabled, the switch can start to transmit LLDP packets and receive and process the LLDP packets. The specific function of each port will depend on the per port LLDP settings. For the advertisement of LLDP packets, the switch announces the information to its neighbor through ports. For the receiving of LLDP packets, the switch will learn the information from the LLDP packets advertised from the neighbor in the neighbor table. The default state for LLDP is disabled.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To enable LLDP:

DGS-3700-12:5#enable lldp Command: enable lldp Success. DGS-3700-12:5#

disable lldp	
Purpose	To disable LLDP.
Syntax	disable lldp
Description	Use this command to disable LLDP. The switch will stop the sending and receiving of LLDP advertisement packets.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To disable LLDP:

DGS-3700-12:5#disable lldp Command: disable lldp Success. DGS-3700-12:5#

config lldp	
Purpose	To configure LLDP timer values.
Syntax	config lldp [message_tx_interval <sec 5-32768> message_tx_hold_multiplier <int 2-10> tx_delay <sec 1-8192> reint_delay <sec 1-10>]
Description	Use this command to configure LLDP timer values. The message TX interval controls how often active ports retransmit advertisements to their neighbors. The message TX hold multiplier is a multiplier on the msgTxInterval that is used to compute the TTL value of tx TTL in an LLDPDU. The TTL will be carried in the LLDPDU packet. The lifetime will be the minimum of 65535 and (message_tx_interval * message_tx_hold_multiplier). On the partner switch, when the time-to-live for a given advertisement expires, the advertised data is deleted from the neighbor

config lldp	
	switch's MIB. The TX delay is used to change the minimum time (delay-interval) any LLDP port will delay advertising successive LLDP advertisements due to a change in LLDP MIB content. The TX delay defines the minimum interval between sending of LLDP messages due to constany change of MIB content. A re-enabled LLDP port will wait for the reinit delay after the last disable command before reinitializing.
Parameters	<p><i>message_tx_interval</i> - Specify the interval between consecutive transmissions of LLDP advertisements on any given port. The range is from 5 to 32768 seconds. The default setting is 30 seconds.</p> <p><i>message_tx_hold_multiplier</i> - Specify the range is from 2 to 10. The default setting is 4.</p> <p><i>tx_delay</i> - Specify the range is from 1 to 8192 seconds. The default setting is 2 seconds.</p> <p>Note: <i>tx_delay</i> should be less than or equal to $0.25 * \text{msgTxInterval}$.</p> <p><i>reint_delay</i> - Specify the range is from 1 to 10 seconds. The default setting is 2 seconds.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To change the packet transmission interval:

```
DGS-3700-12:5#config lldp message_tx_interval 30
Command: config lldp message_tx_interval 30

Success.

DGS-3700-12:5#
```

To change the multiplier value:

```
DGS-3700-12:5#config lldp message_tx_hold_multiplier 3
Command: config lldp message_tx_hold_multiplier 3

Success.

DGS-3700-12:5#
```

To configure the delay-interval interval:

```
DGS-3700-12:5#config lldp tx_delay 8
Command: config lldp tx_delay 8

Success.

DGS-3700-12:5#
```

To change the re-initialization delay interval to five seconds:

```
DGS-3700-12:5#config lldp reinit_delay 5
```

```
Command: config lldp reinit_delay 5
```

```
Success.
```

```
DGS-3700-12:5#
```

show lldp

Purpose	To display LLDP.
Syntax	show lldp
Description	Use this command to display LLDP.
Parameters	None.
Restrictions	None.

Example usage:

To display LLDP:

```
DGS-3700-12:5#show lldp
```

```
Command: show lldp
```

LLDP System Information

```
Chassis ID Subtype      : MAC Address
Chassis ID              : 00-01-02-03-04-00
System Name             :
System Description      : Gigabit Ethernet Switch
System Capabilities     : Repeater, Bridge
```

LLDP Configurations

```
LLDP State              : Enabled
LLDP Forward Status     : Disabled
Message TX Interval     : 30
Message TX Hold Multiplier : 4
ReInit Delay            : 2
TX Delay                : 2
Notification Interval   : 5
```

```
DGS-3700-12:5#
```

config lldp forward_message

Purpose	To configure LLDP forwarding messages.
Syntax	config lldp forward_message [enable disable]
Description	Use this command to configure LLDP forwarding messages. When LLDP is disabled and LLDP forward message is enabled, the received LLDPDU packet will be forwarded. The default state is disabled.
Parameters	<i>enable</i> - Enable LLDP forwarding messages. <i>disable</i> - Disable LLDP forwarding messages.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable LLDP forwarding messages:

```
DGS-3700-12:5#config lldp forward_message enable
```

```
Command: config lldp forward_message enable
```

```
Success.
```

```
DGS-3700-12:5#
```

config lldp notification_interval

Purpose	To configure the timer of notification interval for sending notification to configured SNMP trap receiver(s).
Syntax	config lldp notification_interval <5-3600>
Description	Use this command to configure LLDP timer values. This will globally change the interval between successive LLDP change notifications generated by the switch.
Parameters	<5-3600> - Specify the notification interval range is from 5 to 3600 seconds. The default setting is 5 seconds.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To change the notification interval to 10 seconds:

```
DGS-3700-12:5#config lldp notification_interval 10
```

```
Command: config lldp notification_interval 10
```

```
Success.
```

```
DGS-3700-12:5#
```

config lldp ports

Purpose	To configure LLDP options by port.
Syntax	config lldp ports [<portlist> all] [notification [enable disable] admin_status [tx_only rx_only tx_and_rx disable] mgt_addr [ipv4 <ipaddr> ipv6 <ipv6addr>] [enable disable] basic_tlvs [{all} {port_description system_name system_description system_capabilities}] [enable disable] dot1_tlv_pvid [enable disable] dot1_tlv_protocol_vid [vlan [all <vlan_name 32>] vlanid <vidlist>] [enable disable] dot1_tlv_vlan_name [vlan <vlan_name 32>] vlanid <vidlist>] [enable disable] dot1_tlv_protocol_identity [all {eapol lacp gvrp stp }] [enable disable] dot3_tlvs [{all} {mac_phy_configuration_status link_aggregation maximum_frame_size}] [enable disable]]
Description	<p>Use this command to configure LLDP options by port. Enable or disable each port for sending change notification to configured SNMP trap receiver(s) if an LLDP data change is detected in an advertisement received on the port from an LLDP neighbor. The definition of change includes new available information, information timeout, information update. And the changed type includes any data update /insert/remove.</p> <p>The admin status options enable to control which ports participate in LLDP traffic and whether the participating ports allow LLDP traffic in only one direction or in both directions.</p> <p>The config management address command specifies whether system's IP address needs to be advertised from the specified port. For layer 3 devices, each managed address can be individually specified. The management addresses that are added in</p>

config lldp ports	
	<p>the list will be advertised in the LLDP from the specified interface, associated with each management address. The interface for that management address will be also advertised in the if-index form.</p> <p>An active LLDP port on the switch always includes the mandatory data in its outbound advertisements. And there are four optional data that can be configured for an individual port or group of ports to include one or more of these data types from outbound LLDP advertisements. The mandatory data type include four basic types of information (end of LLDPDU TLV, chassis ID TLV, port ID TLV, and Time to Live TLV). The mandatory type cannot be disabled. There are also four data types which can be optionally selected. They are <code>port_description</code>, <code>system_name</code>, <code>system_description</code>, and <code>system_capability</code>.</p> <p>Configure an individual port or group of ports to include one or more of IEEE 802.1 Organizationally port vlan ID TLV data types from outbound LLDP advertisements.</p> <p>Configure an individual port or group of ports to include one or more of IEEE 802.1 Organizationally port and protocol VLAN ID TLV data types from outbound LLDP advertisements.</p> <p>Configure an individual port or group of ports to include one or more of IEEE 802.1 Organizationally VLAN name TLV data types from outbound LLDP advertisements.</p> <p>Configure an individual port or group of ports to include one or more of IEEE 802.1 Organizationally protocol identity TLV data types from outbound LLDP advertisements. This TLV optional data type indicates whether the corresponding Local System's Protocol Identity instance will be transmitted on the port. The Protocol Identity TLV provides a way for stations to advertise protocols that are important to the operation of the network. Spanning Tree Protocol, the Link Aggregation Control Protocol, and numerous vendor proprietary variations are responsible for maintaining the topology and connectivity of the network. If EAPOL, GVRP, STP (including MSTP), and LACP protocol identity are enabled on this port and it is enabled to be advertised, then this protocol identity will be advertised.</p>
Parameters	<p><i><portlist></i> - Specify a range of ports to be configured.</p> <p><i>all</i> - Specify to set all the ports on the system.</p> <p><i>notification</i> - Enables or disables the SNMP trap notification of LLDP data changes detected on advertisements received from neighbor devices. The default notification state is disabled.</p> <p><i>enable</i> - Enable the SNMP trap notification of LLDP data changes detected on advertisements received from neighbor devices.</p> <p><i>disable</i> - Disable the SNMP trap notification of LLDP data changes detected on advertisements received from neighbor devices.</p> <p><i>admin_status</i> - Select the desired administrative per port state. The default per port state is <code>tx_and_rx</code>.</p> <p><i>tx_only</i> - Configure the specified port(s) to transmit LLDP packets, but block inbound LLDP packets from neighbor devices.</p> <p><i>rx_only</i> - Configure the specified port(s) to receive LLDP packets from neighbors, but block outbound packets to neighbors.</p> <p><i>tx_and_rx</i> - Configure the specified port(s) to both transmit and receive LLDP packets.</p> <p><i>disable</i> - Disable LLDP packet transmit and receive on the specified port(s).</p> <p><i>mgt_addr</i> - The port types specified for advertising indicated management address instance.</p>

config lldp ports

ipv4 - Specify the IP address of IPv4.

ipv6 - Specify the IP address of IPv6.

enable - Enable port(s) specified for advertising indicated management address instance.

disable - Disable port(s) specified for advertising indicated management address instance.

basic_tlvs - Configure an individual port or group of ports to include one or more of optional TLV data types from outbound LLDP advertisements.

all - Configure all four TLV data types listed below.

port_description - This TLV optional data type indicates that LLDP agent should transmit "Port Description TLV" on the port. The default state is disabled.

system_name - This TLV optional data type includes indicates that LLDP agent should transmit "System Name TLV." The default state is disabled.

system_description - This TLV optional data type includes indicates that LLDP agent should transmit "System Description TLV." The default state is disabled.

system_capabilities - This TLV optional data type includes indicates that LLDP agent should transmit "System Capabilities TLV." The system capability will indicate whether the device provides repeater, bridge, or router function, and whether the provided functions are currently enabled. The default state is disabled.

enable - Enable configuration of an individual port or group of ports to include one or more of optional TLV data types from outbound LLDP advertisements.

disable - Disable configuration of an individual port or group of ports to include one or more of optional TLV data types from outbound LLDP advertisements.

dot1_tlv_pvid - This TLV optional data type determines whether the IEEE 802.1 organizationally defined port VLAN ID TLV transmission is allowed on a given LLDP transmission capable port. The default state is disabled.

enable - Enable port VLAN ID TLV transmission on a given LLDP transmission capable port.

disable - Disable port VLAN ID TLV transmission on a given LLDP transmission capable port.

dot_tlv_protocol_vid - This TLV optional data type determines whether the IEEE 802.1 organizationally defined port and protocol VLAN ID TLV transmission is allowed on a given LLDP transmission capable port. The default state is disabled.

vlan - Specify a VLAN to be transmitted.

all - Specify that all VLAN names will be transmitted.

<vlan_name 32> - Specify a VLAN name to be transmitted.

vlanid - Specify a VLAN ID list to be transmitted.

enable - Enable configuration of an individual port or group of ports to include one or more of IEEE 802.1 Organizationally port and protocol VLAN ID TLV data types from outbound LLDP advertisements.

disable - Disable configuration of an individual port or group of ports to include one or more of IEEE 802.1 Organizationally port and protocol VLAN ID TLV data types from outbound LLDP advertisements.

dot1_tlv_vlan_name - This TLV optional data type indicates whether the corresponding Local System's VLAN name instance will be transmitted on the port. If a port is associated with multiple VLANs, those enabled VLAN ID will be advertised. The default state is disabled.

vlan - Specify a VLAN to be transmitted.

all - Specify that all VLAN names will be transmitted.

config lldp ports

<vlan_name 32> - Specify a VLAN name to be transmitted.

vlanid - Specify a VLAN ID list to be transmitted.

enable - Enable configuration of an individual port or group of ports to include one or more of IEEE 802.1 Organizationally VLAN name TLV data types from outbound LLDP advertisements.

disable - Disable configuration of an individual port or group of ports to include one or more of IEEE 802.1 Organizationally VLAN name TLV data types from outbound LLDP advertisements.

dot1_tlv_protocol_identity - This TLV optional data type indicates whether the corresponding Local System's Protocol Identity instance will be transmitted on the port. The Protocol Identity TLV provides a way for stations to advertise protocols that are important to the operation of the network, such as Spanning Tree Protocol, the Link Aggregation Control Protocol, and numerous vendor proprietary variations which are responsible for maintaining the topology and connectivity of the network. If EAPOL, GVRP, STP (including MSTP), and LACP protocol identity are enabled on this port and enabled to be advertised, then the protocol identity will be advertised. The default state is disabled.

all - Advertise all of the protocols lists below.

eapol - Advertise EAPOL.

lACP - Advertise LACP.

gvrp - Advertise GVRP.

stp - Advertise STP.

enable - Enable configuration an individual port or group of ports to include one or more of IEEE 802.1 Organizationally protocol identity TLV data types from outbound LLDP advertisements.

disable - Disable configuration an individual port or group of ports to include one or more of IEEE 802.1 Organizationally protocol identity TLV data types from outbound LLDP advertisements.

dot3_tlvs - An individual port or group of ports to include one or more of IEEE 802.3 Organizationally Specific TLV data types from outbound LLDP advertisements.

all - Configure all of the TLV optional data types below.

mac_phy_configuration_status - This TLV optional data type indicates that LLDP agent should transmit "MAC/PHY configuration/status TLV." This type indicates it is possible for two ends of an IEEE 802.3 link to be configured with different duplex and/or speed settings and still establish some limited network connectivity. More precisely, the information includes whether the port support the auto-negotiation function, whether the function is enabled, the auto-negotiated advertised capability, and the operational MAU type. The default state is disabled.

link_aggregation - This TLV optional data type indicates that LLDP agent should transmit "Link Aggregation TLV." This type indicates the current link aggregation status of IEEE 802.3 MACs. More precisely, the information should include whether the port is capable of doing link aggregation, whether the port is aggregated in a aggregated link, and the aggregated port ID. The default state is disabled .

maximum_frame_size - This TLV optional data type indicates that LLDP agent should transmit "Maximum-frame-size TLV." The default state is disabled.

enable - Enable the configuration of an individual port or group of ports to include one or more of IEEE 802.3 Organizationally Specific TLV data types from outbound LLDP advertisements.

disable - Disable the configuration of an individual port or group of ports to include

config lldp ports	
	one or more of IEEE 802.3 Organizationally Specific TLV data types from outbound LLDP advertisements.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To change the SNMP notification state of ports 1 to 5 to enable:

```
DGS-3700-12:5#config lldp ports 1-5 notification enable
Command: config lldp ports 1-5 notification enable

Success.

DGS-3700-12:5#
```

To configure the mode of ports 1 to 5 to transmit and receive:

```
DGS-3700-12:5#config lldp ports 1-5 admin_status tx_and_rx
Command: config lldp ports 1-5 admin_status tx_and_rx

Success.

DGS-3700-12:5#
```

To enable ports 1 to 5 to manage address entries:

```
DGS-3700-12:5#config lldp ports 1-5 mgt_addr ipv4 192.168.254.10 enable
Command: config lldp ports 1-5 mgt_addr ipv4 192.168.254.10 enable

Success.

DGS-3700-12:5#
```

To include the system name TLV from the outbound LLDP advertisements for all ports:

```
DGS-3700-12:5#config lldp ports all basic_tlvs system_name enable
Command: config lldp ports all basic_tlvs system_name enable

Success.

DGS-3700-12:5#
```

To include the dot1_tlv_pvid TLV from the outbound LLDP advertisements for all ports:

```
DGS-3700-12:5#config lldp ports all dot1_tlv_pvid enable
Command: config lldp ports all dot1_tlv_pvid enable

Success.

DGS-3700-12:5#
```

To include the port and protocol VLAN ID TLV from the outbound LLDP advertisements for all ports:

```
DGS-3700-12:5#config lldp ports all dot1_tlv_protocol_vid vlanid 1-3 enable
Command: config lldp ports all dot1_tlv_protocol_vid vlanid 1-3 enable

Success.

DGS-3700-12:5#
```

To include the VLAN name TLV from the outbound LLDP advertisements for all ports:

```
DGS-3700-12:5#config lldp ports all dot1_tlv_vlan_name vlanid 1-3 enable
Command: config lldp ports all dot1_tlv_vlan_name vlanid 1-3 enable

Success.

DGS-3700-12:5#
```

To include the protocol identity TLV from the outbound LLDP advertisements for all ports:

```
DGS-3700-12:5#config lldp ports all dot1_tlv_protocol_identity all enable
Command: config lldp ports all dot1_tlv_protocol_identity all enable

Success.

DGS-3700-12:5#
```

To include the MAC/PHY configuration/status TLV from the outbound LLDP advertisements for all ports:

```
DGS-3700-12:5#config lldp ports all dot3_tlvs mac_phy_configuration_status enable
Command: config lldp ports all dot3_tlvs mac_phy_configuration_status enable

Success.

DGS-3700-12:5#
```

show lldp ports

Purpose	To display LLDP per port configuration for advertisement options.
Syntax	show lldp ports {<portlist>}
Description	Use this command to display LLDP per port configuration for advertisement options.
Parameters	<portlist> - Specify the ports to be displayed. When a port list is not specified, information for all ports will be displayed.
Restrictions	None.

Example usage:

To display LLDP TLV option port 1:

DGS-3700-12:5#show lldp ports 1

Command: show lldp ports 1

```

Port ID                : 1
-----
Admin Status           : TX_and_RX
Notification Status    : Disabled
Advertised TLVs Option :
  Port Description     Disabled
  System Name          Disabled
  System Description   Disabled
  System Capabilities  Disabled
  Enabled Management Address
    (None)
  Port VLAN ID         Disabled
  Enabled Port_and_Protocol_VLAN_ID
    (None)
  Enabled VLAN Name    (None)
  Enabled Protocol Identity
    (None)
  MAC/PHY Configuration/Status Disabled
  Link Aggregation     Disabled
  Maximum Frame Size   Disabled
    
```

DGS-3700-12:5#

config lldp_med fast_start repeat_count

Purpose	To configure the LLDP-MED fast start repeat count.
Syntax	config lldp_med fast_start repeat_count <value 1-10>
Description	Use this command to configure the fast start repeat count. When an LLDP-MED Capabilities TLV is detected for an MSAP identifier not associated with an existing LLDP remote system MIB, the application layer shall start the fast start mechanism and set the 'medFastStart' timer to 'medFastStartRepeatCount' times 1. The default value is 4.
Parameters	<value 1-10> - Specify a fast start repeat count value between 1 and 10. The default value is 4.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure a LLDP-MED fast start repeat count of 5:

DGS-3700-12:5#config lldp_med fast_start repeat_count 5

Command: config lldp_med fast_start repeat_count 5

Success.

DGS-3700-12:5#

config lldp_med log state

Purpose	To configure the log state of LLDP-MED events.
Syntax	config lldp_med log state [enable disable]
Description	Use this command to configure the log state of LLDP-MED events.
Parameters	<i>enable</i> - Enable the log state for LLDP-MED events.

config lldp_med log state

disable - Disable the log state for LLDP-MED events. The default is disabled.

Restrictions Only Administrator and Operator-level users can issue this command.

Example usage:

To enable the log state of LLDP-MED events:

```
DGS-3700-12:5#config lldp_med log state enable
```

```
Command: config lldp_med log state enable
```

```
Success.
```

```
DGS-3700-12:5#
```

config lldp_med notification topo_change ports

Purpose To enable or disable topology change notification.

Syntax **config lldp_med notification topo_change ports** [<portlist> | all] state [enable | disable]

Description Use this command to enable or disable each port for sending topology change notification to configured SNMP trap receiver(s) if an endpoint device is removed or moved to another port. The default state is disabled.

Parameters
 <portlist> - Specify a range of ports to be configured.
 all - Specify to set all ports in the system.
 state – See below.
 enable - Enable the SNMP trap notification of topology change detected.
 disable - Disable the SNMP trap notification of topology change detected. The default notification state is disabled.

Restrictions Only Administrator and Operator-level users can issue this command.

Example usage:

To enable topology change notification on ports 1 to 2:

```
DGS-3700-12:5#config lldp_med notification topo_change ports 1-2 state enable
```

```
Command: config lldp_med notification topo_change ports 1-2 state enable
```

```
Success.
```

```
DGS-3700-12:5#
```

config lldp_med ports

Purpose To enable or disable transmitting LLDP-MED TLVs.

Syntax **config lldp_med ports** [<portlist> | all] med_transmit_capabilities [all | {capabilities | network_policy | inventory}] state [enable | disable]

Description Use this command to enable or disable transmitting LLDP-MED TLVs. It effectively disables LLDP-MED on a per-port basis by disabling transmission of TLV capabilities. In this case, the remote table's objects in the LLDP-MED MIB corresponding to the respective port will not be populated.

Parameters
 <portlist> - Specify a range of ports to be configured.
 all - Specify to set all ports in the system.
 med_transmit_capabilities - Select to send the LLDP-MED TLV capabilities specified.

config lldp_med ports

all - Select to send capabilities, network policy, and inventory.
capabilities - Specify that the LLDP agent should transmit “LLDP-MED capabilities TLV.”

If a user wants to transmit LLDP-MED PDU, this TLV type should be enabled. Otherwise, this port cannot transmit LLDP-MED PDU.

network_policy - Specify that the LLDP agent should transmit “LLDP-MED network policy TLV.”

inventory - Specify that the LLDP agent should transmit “LLDP-MED inventory TLV.”

state - See below.
enable - Enable the transmitting of LLDP-MED TLVs.
disable - Disable the transmitting of LLDP-MED TLVs.

Restrictions Only Administrator and Operator-level users can issue this command.

Example usage:

To enable transmitting of all capabilities on ports 1 to 2:

```
DGS-3700-12:5#config lldp_med ports 1-2 med_transmit_capabilities all state enable
Command: config lldp_med ports 1-2 med_transmit_capabilities all state enable
```

Success.

```
DGS-3700-12:5#
```

show lldp_med ports

Purpose	To display LLDP-MED per port configuration for advertisement options.
Syntax	show lldp_med ports {<portlist>}
Description	Use this command to display LLDP-MED per port configuration for advertisement options.
Parameters	<portlist> - Specify a range of ports to be displayed. When a port list is not specified, information for all ports will be displayed.
Restrictions	None.

Example usage:

To display LLDP-MED configuration information for port 1:

```
DGS-3700-12:5#show lldp_med ports 1
Command: show lldp_med ports 1
```

```
Port ID : 1
```

```
-----
Topology Change Notification Status      : Enabled
LLDP-MED Capabilities TLV                : Enabled
LLDP-MED Network Policy TLV             : Enabled
LLDP-MED Inventory TLV                  : Enabled
```

```
DGS-3700-12:5#
```

show lldp_med

Purpose	To display the switch’s general LLDP-MED configuration status.
----------------	--

show lldp_med

Syntax	show lldp_med
Description	Use this command to display the switch's general LLDP-MED configuration status.
Parameters	None.
Restrictions	None.

Example usage:

To display the switch's general LLDP-MED configuration status:

```
DGS-3700-12:5#show lldp_med
Command: show lldp_med

LLDP-MED System Information:
  Device Class           : Network Connectivity Device
  Hardware Revision      : A1
  Firmware Revision      : 1.00B002
  Software Revision      : 2.00B017
  Serial Number          : 12345678
  Manufacturer Name      : D-Link
  Model Name              : DGS-3700-12 Gigabit Ethernet Swi
  Asset ID                :

LLDP-MED Configuration
  Fast Start Repeat Count : 4
LLDP-MED Log State:Disabled

Success.

DGS-3700-12:5#
```

show lldp_med local_ports

Purpose	To display the per-port LLDP-MED information currently available for populating outbound LLD-MED advertisements.
Syntax	show lldp_med local_ports {<portlist>}
Description	Use this command to display the per-port LLDP-MED information currently available for populating outbound LLD-MED advertisements.
Parameters	<portlist> - Specify a range of ports to be displayed. When a port list is not specified, information for all ports will be displayed.
Restrictions	None.

Example usage:

To display LLDP-MED information currently available for populating outbound LLD-MED advertisements for port 1:

DGS-3700-12:5#show lldp_med local_ports 1

Command: show lldp_med local_ports 1

Port ID : 1

LLDP-MED Capabilities Support:

```

Capabilities                :Support
Network Policy              :Support
Location Identification     :Not Support
Extended Power Via MDI PSE :Not Support
Extended Power Via MDI PD  :Not Support
Inventory                   :Support
    
```

Network Policy:

```

Application Type : Voice
VLAN ID          : 100
Priority         : 7
DSCP             : 0
Unknown         : False
Tagged          : True
    
```

DGS-3700-12:5#

show lldp_med remote_ports

Purpose	To display LLDP-MED information learned from neighbors.
Syntax	show lldp_med remote_ports {<portlist>}
Description	Use this command to display LLDP-MED information learned from neighbors.
Parameters	<portlist> - Specify a range of ports to be displayed. When a port list is not specified, information for all ports will be displayed.
Restrictions	None.

Example usage:

To display remote entry information:

DGS-3700-12:5#show lldp_med remote_ports 1

Command: show lldp_med remote_ports 1

Port ID : 1

Remote Entities Count : 1

Entity 1

Chassis ID Subtype	:	MAC Address
Chassis ID	:	00-01-02-03-04-00
Port ID Subtype	:	Net Address
Port ID	:	172.18.10.11

LLDP-MED capabilities:

LLDP-MED Device Class: Endpoint Device Class III

LLDP-MED Capabilities Support:

Capabilities	:	Support
Network Policy	:	Support
Location Identification	:	Support
Extended Power Via MDI	:	Support
Inventory	:	Support

LLDP-MED Capabilities Enabled:

Capabilities	:	Enabled
Network Policy	:	Enabled
Location Identification	:	Enabled
Extended Power Via MDI	:	Enabled
Inventory	:	Enabled

Network Policy:

Application Type : Voice

VLAN ID	:	
Priority	:	
DSCP	:	
Unknown	:	True
Tagged	:	

Application Type : Softphone Voice

VLAN ID	:	200
Priority	:	7
DSCP	:	5
Unknown	:	False
Tagged	:	True

Location Identification:

Location Subtype: CoordinateBased	
Location Information	:
Location Subtype: CivicAddress	
Location Information	:

Extended Power Via MDI

Power Device Type: PD Device

Power Priority	:	High
Power Source	:	From PSE
Power Request	:	8 Watts

Inventory Management:

Hardware Revision	:	
Firmware Revision	:	
Software Revision	:	
Serial Number	:	
Manufacturer Name	:	

Model Name	:
Asset ID	:
DGS-3700-12:5#	

show lldp local_ports

Purpose	To display the per-port information currently available for populating outbound LLDP advertisements.
Syntax	show lldp local_ports {<portlist>} {mode [brief normal detailed]}
Description	Use this command to display the per-port information currently available for populating outbound LLDP advertisements.
Parameters	<p><portlist> - Specify the ports to be displayed. When a port list is not specified, information for all ports will be displayed.</p> <p>mode - See below:</p> <p> <i>brief</i> - Specify to display the information in brief mode.</p> <p> <i>normal</i> - Specify to display the information in normal mode. This is the default display mode.</p> <p> <i>detailed</i> - Specify to display the information in detailed mode.</p>
Restrictions	None.

Example usage:

To display LLDP local port information for port 1:

<pre>DGS-3700-12:5#show lldp local_ports 1 Command: show lldp local_ports 1 Port ID : 1 ----- Port ID Subtype : MAC Address Port ID : 00-01-02-03-04-80 Port Description : D-Link DGS-3700-12 R2.00.B023 Po rt 1 on Unit 1 Port PVID : 1 Management Address Count : 1 PPVID Entries Count : 0 VLAN Name Entries Count : 1 Protocol Identity Entries Count : 0 MAC/PHY Configuration/Status : (See Detail) Link Aggregation : (See Detail) Maximum Frame Size : 1536 DGS-3700-12:5#</pre>	
--	--

show lldp mgt_addr

Purpose	To display the LLDP management address.
Syntax	show lldp mgt_addr {[ipv4 <ipaddr> ipv6 <ipv6addr>]}
Description	Use this command to display the LLDP management address.
Parameters	<p><i>ipv4</i> - Specify the IPv4 address of the LLDP management address entry.</p> <p><i>ipv6</i> - Specify the IPv6 address of the LLDP management address entry.</p>
Restrictions	None.

Example usage:

To display the LLDP management address:

```
DGS-3700-12:5#show lldp mgt_addr
Command: show lldp mgt_addr
```

```
Address 1 :
```

```
-----
Subtype           : IPv4
Address           : 10.19.72.38
IF Type          : IfIndex
OID              : 1.3.6.1.4.1.171.10.102.1.2
Advertising Ports :
Total Entries : 1
```

```
DGS-3700-12:5#
```

show lldp remote_ports

Purpose	To display the information learned from neighbors.
Syntax	show lldp remote_ports {<portlist>} {mode [brief normal detailed]}
Description	Use this command to display the information learned from the neighbor parameters.
Parameters	<p><i><portlist></i> - Specify the ports to be displayed. When a port list is not specified, information for all ports will be displayed.</p> <p><i>mode</i> - See below:</p> <ul style="list-style-type: none"> <i>brief</i> - Specify to display the information in brief mode. <i>normal</i> - Specify to display the information in normal mode. This is the default display mode. <i>detailed</i> - Specify to display the information in detailed mode.
Restrictions	None.

Example usage:

To display LLDP information for remote ports 1 and 2:

```
DGS-3700-12:5#show lldp remote_ports 1-2
Command: show lldp remote_ports 1-2
```

```
Remote Entities Count : 0
```

```
DGS-3700-12:5#
```

show lldp statistics

Purpose	To display the system LLDP statistics information.
Syntax	show lldp statistics
Description	Use this command to display an overview of neighbor detection activity on the switch.
Parameters	None.
Restrictions	None.

Example usage:

To display LLDP statistics:

```
DGS-3700-12:5#show lldp statistics
```

```
Command: show lldp statistics
```

```
Last Change Time      : 3648
Number of Table Insert : 0
Number of Table Delete : 0
Number of Table Drop   : 0
Number of Table Ageout : 0
```

```
DGS-3700-12:5#
```

show lldp statistics ports

Purpose	To display LLDP statistic information for individual ports.
Syntax	show lldp statistics ports {<portlist>}
Description	Use this command to display LLDP statistic information for individual ports.
Parameters	<portlist> - Specify the ports to be displayed. When a port list is not specified, information for all ports will be displayed.
Restrictions	None.

Example usage:

To display LLDP statistic information for port 1:

```
DGS-3700-12:5#show lldp statistics ports 1
```

```
Command: show lldp statistics ports 1
```

```
Port ID : 1
```

```
-----
LLDPStatsTXPortFramesTotal      : 0
LLDPStatsRXPortFramesDiscardTotal : 0
LLDPStatsRXPortFramesErrors     : 0
LLDPStatsRXPortFramesTotal      : 0
LLDPStatsRXPortTLVsDiscardedTotal : 0
LLDPStatsRXPortTLVsUnrecognizedTotal : 0
LLDPStatsRXPortAgeoutsTotal     : 0
```

```
DGS-3700-12:5#
```

NETWORK MONITORING COMMANDS

Back to Section Header

The network monitoring commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
show packet ports	<portlist>
show error ports	<portlist>
show utilization	[cpu ports {<portlist>}]
show utilization dram	
show utilization flash	
clear counters	{ports <portlist>}
show historical_counter	[packet error] [ports <portlist>] [15_minute {slot <index 1-5>} 1_day {slot <index 1-2>}]
show historical_utilization	[cpu memory] [15_minute {slot <index 1-5>} 1_day {slot <index 1-2>}]
clear historical_counters ports	[<portlist> all]
clear log	
show log	{index <value_list>}
enable syslog	
disable syslog	
show syslog	
create syslog host	<index 1-4> ipaddress [<ipaddr> <ipv6addr>] { severity [emergency alert critical error warning notice informational debug <level 0-7>] facility [local0 local1 local2 local3 local4 local5 local6 local7] udp_port <udp_port_number> state [enable disable] }
config syslog host	[<index> all] { severity [emergency alert critical error warning notice informational debug <level 0-7>] facility [local0 local1 local2 local3 local4 local5 local6 local7] udp_port <udp_port_number> ipaddress [<ipaddr> <ipv6addr>] state [enable disable] }
delete syslog host	[<index 1-4> all]
show syslog host	{<index 1-4>}
config log_save_timing	[time_interval <min 1-65535> on_demand log_trigger]
show log_save_timing	
show attack_log	{index <value_list>}
clear attack_log	
upload attack_log_toTFTP	[<ipaddr> <ipv6addr>] <path_filename 64>
config system_severity	[trap log all] [emergency alert critical error warning notice information debug <level 0-7>]
show system_severity	

Each command is listed, in detail, in the following sections.

show packet ports	
Purpose	Used to display statistics about the packets sent and received by the Switch.
Syntax	show packet ports <portlist>
Description	This command is used to display statistics about packets sent and received by ports specified in the <portlist>.
Parameters	<portlist> – Specifies a port or range of ports to be displayed.
Restrictions	None.

Example usage:

To display the packets analysis for port 2:

```
DGS-3700-12:5#show packet port 2
Command: show packet port 2

Port Number : 2
=====
Frame Size/Type      Frame Counts      Frames/sec
-----
64                   0                 0
65-127               0                 0
128-255              0                 0
256-511              0                 0
512-1023             0                 0
1024-1518            0                 0
Unicast RX           0                 0
Multicast RX         0                 0
Broadcast RX         0                 0

Frame Type           Total              Total/sec
-----
RX Bytes             0                 0
RX Frames            0                 0
TX Bytes             0                 0
TX Frames            0                 0

DGS-3700-12:5#
```

show error ports	
Purpose	Used to display the error statistics for a range of ports.
Syntax	show error ports <portlist>
Description	This command will display all of the packet error statistics collected and logged by the Switch for a given port list.
Parameters	<portlist> – Specifies a port or range of ports to be displayed.
Restrictions	None.

Example usage:

To display the errors of the port 3:

DGS-3700-12:5#show error ports 3

Command: show error ports 3

Port Number : 3

	RX Frames -----		TX Frames -----
CRC Error	0	Excessive Deferral	0
Undersize	0	CRC Error	0
Oversize	0	Late Collision	0
Fragment	0	Excessive Collision	0
Jabber	0	Single Collision	0
Drop Pkts	0	Collision	0
Symbol Error	0		

DGS-3700-12:5#

show utilization

Purpose	Used to display real-time port and CPU utilization statistics.
Syntax	show utilization [cpu ports]
Description	This command will display the real-time port and CPU utilization statistics for the Switch.
Parameters	<i>cpu</i> – Entering this parameter will display the current cpu utilization of the Switch. <i>ports</i> – Entering this parameter will display the current port utilization of the Switch.
Restrictions	None.

Example usage:

To display the port utilization statistics:

DGS-3700-12:5#show utilization ports

Command: show utilization ports

Port	TX/sec	RX/sec	Util
----	-----	-----	----
1	0	0	0
2	0	0	0
3	31	0	1
4	0	0	0
5	0	0	0
6	0	0	0
7	2	32	1
8	0	0	0
9	0	0	0
10	0	0	0
11	0	0	0
12	0	0	0

DGS-3700-12:5#

To display the current CPU utilization:

```
DGS-3700-12:5#show utilization cpu
Command: show utilization cpu

CPU Utilization
-----
Five seconds -   9 %   One minute -  10 %   Five minutes -  10 %

DGS-3700-12:5#
```

show utilization dram

Purpose	Used to display real-time utilization statistics for the DRAM.
Syntax	show utilization dram
Description	This command will display the real-time utilization statistics for the DRAM on the Switch.
Parameters	None.
Restrictions	None.

To display the current utilization of DRAM:

```
DGS-3700-12:5#show utilization dram
Command: show utilization dram

DRAM utilization :
  Total DRAM      : 131072   KB
  Used DRAM       : 123879   KB
  Utilization     : 94 %

CTRL+C  ESC  q  Quit  SPACE  n  Next Page  p  Previous Page  r  Refresh
```

show utilization flash

Purpose	Used to display real-time utilization statistics for the flash memory.
Syntax	show utilization flash
Description	This command will display the real-time utilization statistics for the flash memory on the Switch.
Parameters	None.
Restrictions	None.

To display the current utilization of flash:

```
DGS-3700-12:5#show utilization flash
Command: show utilization flash

FLASH Memory Utilization :
  Total FLASH     : 32768    KB
  Used FLASH      : 8688     KB
  Utilization     : 26 %

CTRL+C  ESC  q  Quit  SPACE  n  Next Page  p  Previous Page  r  Refresh
```

clear counters

Purpose	Used to clear the Switch's statistics counters.
Syntax	clear counters {ports <portlist>}
Description	This command will clear the counters used by the Switch to compile statistics.

clear counters

Parameters	<i><portlist></i> – Specifies a port or range of ports to be displayed.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To clear the counters:

```
DGS-3700-12:5#clear counters ports 2-9
Command: clear counters ports 2-9

Success.

DGS-3700-12:5#
```

show historical_counter

Purpose	Used to display statistics about the packets sent and received by the switch.
Syntax	show historical_counter [packet error] [ports <i><portlist></i>] [15_minute { slot <i><index 1-5></i> } 1_day { slot <i><index 1-2></i> }]
Description	This command is used to display statistics about the packets sent and received by the switch. For 15 minute counters, five historical statistic entries are supported. Users can select which entry to show. For statistics based on a day, only two historical statistic entries are supported.
Parameters	<i>packet</i> – Displays valid packets. <i>error</i> – Displays error packets. <i>portlist</i> – Specifies a range of ports to be shown. <i>15_minute</i> – Specifies to display 15-minute based statistics count. If there is no option specified, all 15 minutes time slots will be displayed. <i>1_day</i> – Specifies to display daily based statistics count. If there is no option specified, all 1-day time slots will be displayed. <i>slot</i> – Specifies the slot number to display.
Restrictions	None.

Example usage:

To show the statistic count of packets for current 15_minute slots:

```
DGS-3700-12:5#show historical_counter packet ports 1 15_minute slot 1
```

```
Command: show historical_counter packet ports 1 15_minute slot 1
```

```
Port 1 15-Minute Slot 1 :
```

```
Starttime : 7 Jan 2009 20:13:32
```

```
Endtime : 7 Jan 2009 19:58:32
```

Frame Size/Type	Frame Count
-----	-----
Pkts TX	0
Bytes TX	0
Pkts RX	0
Bytes RX	0
64 RX	0
65-127 RX	0
128-255 RX	0
256-511 RX	0
512-1023 RX	0
1024-1518 RX	0
Unicast RX	0
Multicast RX	0
Broadcast RX	0

```
CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh
```

show historical_utilization

Purpose	Used to display the utilization of the cpu and the memory.
Syntax	show historical_utilization [cpu memory] [15_minute { slot <index 1-5> } 1_day { slot <index 1-2> }]
Description	This command is used to show the historical utilization of the cpu and the memory. For 15 minutes cpu or memory utilization, five historical statistic entries are supported. Users can select which entry to show. For statistics based on a day, only two historical statistic entries are supported.
Parameters	<i>cpu</i> – Displays the utilization of cpu. <i>memory</i> – Displays the utilization of memory. <i>15_minute</i> – Displays the 15 min based statistics count. If there is no option specified, all 15 minutes time slots will be displayed. <i>1_day</i> – Specifies to display daily based statistics count. If there is no option specified, all 1-day time slots will be displayed. <i>slot</i> – Specify the slot number to display.
Restrictions	None.

Example usage:

To show the cpu utilization of the five most recent 15 minute statistic count:

```
DGS-3700-12:5#show historical_utilization cpu 15_minute
Command: show historical_utilization cpu 15_minute

CPU Utilization
-----
15-Minute Slot 1 (7 Jan 2009 20:25:01 - 7 Jan 2009 20:10:01) : 10 %
15-Minute Slot 2 (7 Jan 2009 20:10:01 - 7 Jan 2009 19:55:01) : 10 %
15-Minute Slot 3 (7 Jan 2009 19:54:59 - 7 Jan 2009 19:39:59) : 11 %
15-Minute Slot 4 (7 Jan 2009 19:39:59 - 7 Jan 2009 19:24:59) : 0 %
15-Minute Slot 5 (7 Jan 2009 19:24:59 - 7 Jan 2009 19:09:59) : 0 %

CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh
```

To show the cpu utilization of the two most recent 1 day statistic count:

```
DGS-3700-12:5#show historical_utilization cpu 1_day
Command: show historical_utilization cpu 1_day

CPU Utilization
-----
1-Day Slot 1 (7 Jan 2009 20:27:51 - 6 Jan 2009 20:27:51) : 10 %
1-Day Slot 2 (6 Jan 2009 20:27:51 - 5 Jan 2009 20:27:51) : 0 %

CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh
```

To show the cpu utilization of the current 1 day statistic count:

```
DGS-3700-12:5# show historical_utilization memory 1_day slot 1
show historical_utilization memory 1_day slot 1

Memory Utilization

Starttime : 7 Jan 2009 20:29:47
Endtime   : 6 Jan 2009 20:29:47
-----
1-Day Slot 1 : 93 %

CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh
```

clear historical_counters ports

Purpose	Used to clear port historical counter statistics.
Syntax	clear historical_counters ports [<portlist> all]
Description	This command is used to delete port counter statistics.
Parameters	<portlist> – Specifies a port or range of ports to be cleared. all – All ports will be cleared.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To clear the historical counter for all ports:

```
DGS-3700-12:5#clear historical_counters ports all
Command: clear historical_counters ports all

Success.

DGS-3700-12:5#
```

clear log

Purpose	Used to clear the Switch's history log.
Syntax	clear log
Description	This command is used to clear the Switch's history log.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To clear the log information:

```
DGS-3700-12:5#clear log
Command: clear log

Success.

DGS-3700-12:5#
```

show log

Purpose	Used to display the switch history log.
Syntax	show log {index <value_list>}
Description	This command is used to display the contents of the Switch's history log.
Parameters	<i>index <value_list></i> – This parameter specifies the range of log index to show. For example, show log index 1-5 will display the history log from 1 to 5. If no parameter is specified, all history log entries will be displayed.
Restrictions	None.

Example usage:
To display the switch history log:

```
DGS-3700-12:5#show log index 1-5
Command: show log index 1-5

Index Date          Time          Log Text
-----
5      2000-01-03 18:53:06 Logout through Console (Username: Anonymous)
4      2000-01-03 18:47:22 Successful login through Console (Username: Anonymous)
3      2000-01-03 18:47:18 Port 3 link up, 1000Mbps FULL duplex
2      2000-01-03 18:47:18 Port 7 link up, 100Mbps FULL duplex
1      2000-01-03 18:47:18 System started up

DGS-3700-12:5#
```



NOTE: For detailed information regarding Log entries that will appear in this window, please refer to Appendix C at the back of the *DGS-3700-12 Layer 2 Gigabit Ethernet Managed Switch User Manual*.

enable syslog	
Purpose	Used to enable the system log to be sent to up to 4 remote hosts.
Syntax	enable syslog
Description	This command is used to enable the system log to be sent to up to 4 remote hosts.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To the Syslog function on the Switch:

```
DGS-3700-12:5#enable syslog
Command: enable syslog

Success.

DGS-3700-12:5#
```

disable Syslog	
Purpose	Used to disable the system log to be sent to up to 4 remote hosts.
Syntax	disable Syslog
Description	This command is used to disable the system log to be sent to up to 4 remote hosts.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable the syslog function on the Switch:

```
DGS-3700-12:5#disable syslog
Command: disable syslog

Success.

DGS-3700-12:5#
```

show syslog	
Purpose	Used to display the syslog protocol status as enabled or disabled.
Syntax	show syslog
Description	This command is used to display the syslog status as enabled or disabled.
Parameters	None.
Restrictions	None.

Example usage:

To display the current status of the syslog function:

```
DGS-3700-12:5#show syslog
Command: show syslog

Syslog Global State: Enabled

DGS-3700-12:5#
```

create syslog host

Purpose	Used to create a new syslog host.																																																		
Syntax	create syslog host <index 1-4> ipaddress [<ipaddr> <ipv6addr>] { severity [emergency alert critical error warning notice informational debug <level 0-7>] facility [local0 local1 local2 local3 local4 local5 local6 local7] udp_port <udp_port_number> state [enable disable] }																																																		
Description	This command is used to create a new syslog host.																																																		
Parameters	<p><index 1-4> – Specifies that the command will be applied to an index of hosts. There are four available indexes, numbered 1 through 4.</p> <p><i>ipaddress</i> <ipaddr> – Specifies the IP address of the remote host where syslog messages will be sent.</p> <p><ipv6addr> - Specifies the IPv6 address of the remote host where syslog messages will be sent.</p> <p><i>severity</i> – Severity level indicator. These are described in the following: Bold font indicates that the corresponding severity level is currently supported on the Switch.</p> <table border="1"> <thead> <tr> <th>Numerical Code</th> <th>Severity</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Emergency: system is unusable</td> </tr> <tr> <td>1</td> <td>Alert: action must be taken immediately</td> </tr> <tr> <td>2</td> <td>Critical: critical conditions</td> </tr> <tr> <td>3</td> <td>Error: error conditions</td> </tr> <tr> <td>4</td> <td>Warning: warning conditions</td> </tr> <tr> <td>5</td> <td>Notice: normal but significant condition</td> </tr> <tr> <td>6</td> <td>Informational: informational messages</td> </tr> <tr> <td>7</td> <td>Debug: debug-level messages</td> </tr> </tbody> </table> <table border="1"> <thead> <tr> <th>Numerical Code</th> <th>Facility</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>kernel messages</td> </tr> <tr> <td>1</td> <td>user-level messages</td> </tr> <tr> <td>2</td> <td>mail system</td> </tr> <tr> <td>3</td> <td>system daemons</td> </tr> <tr> <td>4</td> <td>security/authorization messages</td> </tr> <tr> <td>5</td> <td>messages generated internally by syslog</td> </tr> <tr> <td>6</td> <td>line printer subsystem</td> </tr> <tr> <td>7</td> <td>network news subsystem</td> </tr> <tr> <td>8</td> <td>UUCP subsystem</td> </tr> <tr> <td>9</td> <td>clock daemon</td> </tr> <tr> <td>10</td> <td>security/authorization messages</td> </tr> <tr> <td>11</td> <td>FTP daemon</td> </tr> <tr> <td>12</td> <td>NTP subsystem</td> </tr> <tr> <td>13</td> <td>log audit</td> </tr> <tr> <td>14</td> <td>log alert</td> </tr> </tbody> </table>	Numerical Code	Severity	0	Emergency: system is unusable	1	Alert: action must be taken immediately	2	Critical: critical conditions	3	Error: error conditions	4	Warning: warning conditions	5	Notice: normal but significant condition	6	Informational: informational messages	7	Debug: debug-level messages	Numerical Code	Facility	0	kernel messages	1	user-level messages	2	mail system	3	system daemons	4	security/authorization messages	5	messages generated internally by syslog	6	line printer subsystem	7	network news subsystem	8	UUCP subsystem	9	clock daemon	10	security/authorization messages	11	FTP daemon	12	NTP subsystem	13	log audit	14	log alert
Numerical Code	Severity																																																		
0	Emergency: system is unusable																																																		
1	Alert: action must be taken immediately																																																		
2	Critical: critical conditions																																																		
3	Error: error conditions																																																		
4	Warning: warning conditions																																																		
5	Notice: normal but significant condition																																																		
6	Informational: informational messages																																																		
7	Debug: debug-level messages																																																		
Numerical Code	Facility																																																		
0	kernel messages																																																		
1	user-level messages																																																		
2	mail system																																																		
3	system daemons																																																		
4	security/authorization messages																																																		
5	messages generated internally by syslog																																																		
6	line printer subsystem																																																		
7	network news subsystem																																																		
8	UUCP subsystem																																																		
9	clock daemon																																																		
10	security/authorization messages																																																		
11	FTP daemon																																																		
12	NTP subsystem																																																		
13	log audit																																																		
14	log alert																																																		

create syslog host	
	15 clock daemon
	16 local use 0 (local0)
	17 local use 1 (local1)
	18 local use 2 (local2)
	19 local use 3 (local3)
	20 local use 4 (local4)
	21 local use 5 (local5)
	22 local use 6 (local6)
	23 local use 7 (local7)
	<p><i>local0</i> – Specifies that local use 0 messages will be sent to the remote host. This corresponds to number 16 from the list above.</p> <p><i>local1</i> – Specifies that local use 1 messages will be sent to the remote host. This corresponds to number 17 from the list above.</p> <p><i>local2</i> – Specifies that local use 2 messages will be sent to the remote host. This corresponds to number 18 from the list above.</p> <p><i>local3</i> – Specifies that local use 3 messages will be sent to the remote host. This corresponds to number 19 from the list above.</p> <p><i>local4</i> – Specifies that local use 4 messages will be sent to the remote host. This corresponds to number 20 from the list above.</p> <p><i>local5</i> – Specifies that local use 5 messages will be sent to the remote host. This corresponds to number 21 from the list above.</p> <p><i>local6</i> – Specifies that local use 6 messages will be sent to the remote host. This corresponds to number 22 from the list above.</p> <p><i>local7</i> – Specifies that local use 7 messages will be sent to the remote host. This corresponds to number 23 from the list above.</p> <p><i>udp_port</i> <<i>udp_port_number</i>> – Specifies the UDP port number that the syslog protocol will use to send messages to the remote host.</p> <p><i>state</i> [<i>enable</i> <i>disable</i>] – Allows the sending of syslog messages to the remote host, specified above, to be enabled and disabled.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create a Syslog host:

```
DGS-3700-12:5#create syslog host 1 ipaddress 1.1.1.1 severity debug facility local0
Command: create syslog host 1 ipaddress 1.1.1.1 severity debug facility local0

Success.

DGS-3700-12:5#
```

config syslog host	
Purpose	This command is used to configure the syslog host configurations.
Syntax	config syslog host [< <i>index</i> > <i>all</i>] { severity [<i>emergency</i> <i>alert</i> <i>critical</i> <i>error</i> <i>warning</i> <i>notice</i> <i>informational</i> <i>debug</i> < <i>level 0-7</i> >] facility [<i>local0</i> <i>local1</i> <i>local2</i> <i>local3</i> <i>local4</i> <i>local5</i> <i>local6</i> <i>local7</i>] <i>udp_port</i> < <i>udp_port_number</i> > <i>ipaddress</i> [< <i>ipaddr</i> > < <i>ipv6addr</i> >] <i>state</i> [<i>enable</i> <i>disable</i>]}

Description	The config syslog command configures the syslog host configurations. The user can choose and report a specific level of messages to a specific host. When the user chooses a specific level for a specific host, messages which are at that severity level or higher will be reported to the specified host.
Parameters	<p><i>host</i> - The host index or all hosts.</p> <p><i>severity</i> - See below:</p> <ul style="list-style-type: none"> emergency Severity level 0 alert Severity level 1 critical Severity level 2 error Severity level 3 warning Severity level 4 notice Severity level 5 informational Severity level 6 debug Severity level 7 <p><i>facility</i> - Some of the operating system daemons and processes have been assigned Facility values. Processes and daemons that have not been explicitly assigned a Facility may use any of the "local use" facilities or they may use the "user-level" Facility. Those Facilities that have been designated are shown below. This facility setting will be put in the syslog packet when it is sent to a specific syslog server.</p> <ul style="list-style-type: none"> local0 user-defined Facility local1 user-defined Facility local2 user-defined Facility local3 user-defined Facility local4 user-defined Facility local5 user-defined Facility local6 user-defined Facility local7 user-defined Facility <p><i>udp_port</i> - The UDP port number.</p> <p><i>ipaddr</i> - Specify IP address for the host.</p> <p><i>ipv6addr</i> - Specify IPv6 address for the host.</p> <p><i>state</i> - The syslog protocol is used for the transmission of event notification messages across networks to a host. The option enables or disables the host to receive such messages.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To configure a Syslog host:

```
DGS-3700-12:5#config syslog host 1 severity debug
Command: config syslog host 1 severity debug

Success.

DGS-3700-12:5#
```

Example usage:
To configure a syslog host for all hosts:

```
DGS-3700-12:5#config syslog host all severity debug
Command: config syslog host all severity debug

Success.

DGS-3700-12:5#
```

delete syslog host

Purpose	Used to remove a syslog host that has been previously configured, from the Switch.
Syntax	delete syslog host [<index 1-4> all]
Description	This command is used to remove a syslog host that has been previously configured from the Switch.
Parameters	<index 1-4> – Specifies that the command will be applied to an index of hosts. There are four available indexes, numbered 1 through 4. all – Specifies that the command will be applied to all hosts.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete a previously configured syslog host:

```
DGS-3700-12:5#delete syslog host 4
Command: delete syslog host 4

Success.

DGS-3700-12:5#
```

show syslog host

Purpose	Used to display the syslog hosts currently configured on the Switch.
Syntax	show syslog host {<index 1-4>}
Description	This command is used to display the syslog hosts that are currently configured on the Switch.
Parameters	<index 1-4> – Specifies that the command will be applied to an index of hosts. There are four available indexes, numbered 1 through 4.
Restrictions	None.

Example usage:

To show Syslog host information:

```
DGS-3700-12G:5#show syslog host
```

```
Command: show syslog host
```

```
Syslog Global State: Disabled
```

```
Host 4
```

```
IP Address      : 10.73.60.123
Severity       : Emergency(0)
Facility       : Local0
UDP port      : 514
Status        : Disabled
```

```
Total Entries : 1
```

```
DGS-3700-12G:5#
```

config log_save_timing

Purpose	Used to configure the method to save log.
Syntax	config log_save_timing [time_interval <min 1-65535> on_demand log_trigger]
Description	This command is used to set the method to save log.
Parameters	<i>time_interval</i> – save log to flash every xxx minutes. (if no log happen in this period, don't save) <i>on_demand</i> – save log to flash whenever user type "save log" or "save all" This is also the default. <i>log_trigger</i> – save log to flash whenever log arrives
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure log_save_timing:

```
DGS-3700-12:5#config log_save_timing on_demand
```

```
Command: config log_save_timing on_demand
```

```
Success.
```

```
DGS-3700-12:5#
```

show log_save_timing

Purpose	Used to show the timing method to save log.
Syntax	show log_save_timing
Description	This command is used to show method to save log.
Parameters	None.
Restrictions	None.

Example usage:

To show log_save_timing:

```
DGS-3700-12:5#show log_save_timing
Command: show log_save_timing

Saving Log Method: On_demand

DGS-3700-12:5#
```

show attack_log

Purpose	Used to show dangerous log messages.
Syntax	show attack_log {index <value_list>}
Description	This command is used to show content of dangerous log messages.
Parameters	<i>value_list</i> X-Y – The show log command will display the dangerous log messages between the log number of X and Y. For example, show dangerous log index 1-5 will display the dangerous log messages from 1 to 5. If no parameter specified, all dangerous log entries will be displayed.
Restrictions	None.

Example usage:

To show dangerous messages on master:

```
DGS-3700-12:5#show attack_log
Command: show attack_log

Index   Time                Log Text
-----  -
2       00000 days 01:25:43 Possible spoofing attack from 000d01002301 port 6
1       00000 days 01:25:43 Possible spoofing attack from 000d01002301 port 6

DGS-3700-12:5#
```

clear attack_log

Purpose	Used to clear the switch's dangerous log.
Syntax	clear attack_log
Description	This command is used to clear the switch's dangerous log.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To clear the master's dangerous log:

```
DGS-3700-12:5#clear attack_log
Command: clear attack_log

Success.

DGS-3700-12:5#
```

upload attack_log_to TFTP

Purpose	Used to upload the switch's dangerous log.
Syntax	upload attack_log_toTFTP [<ipaddr> <ipv6addr>] dest_file <path_filename 64>]

upload attack_log_to TFTP	
Description	This command is used to upload the switch's dangerous log.
Parameters	<p><ipaddr> – The IP address of the TFTP server. The TFTP server must be on the same IP subnet as the switch.</p> <p><ipv6addr> - The IPv6 address of the TFTP server.</p> <p><path_filename 64> – Specifies the location of the file on the TFTP server. The uploaded file from the switch will replace this file.</p> <p>Dest_file – Specifies the destination file.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To upload the master's dangerous log:

```
DGS-3700-12:5#upload attack_log_toTFTP 10.90.90.1 dest_file C:\alert.txt
```

```
Command: upload attack_log_toTFTP 10.90.90.1 dest_file C:\alert.txt
```

```
Success.
```

```
DGS-3700-12:5#
```

config system_severity	
Purpose	To configure system_severity level of an alert required for log entry or trap message.
Syntax	config system_severity [trap log all] [emergency alert critical error warning notice information debug <level 0-7>]
Description	<p>This command is used to configure the system_severity levels on the Switch. When an event occurs on the Switch, a message will be sent to the SNMP agent (trap), the Switch's log or both. Events occurring on the Switch are separated into three main categories, these categories are NOT precisely the same as the parameters of the same name (see below).</p> <p>Information – Events classified as information are basic events occurring on the Switch that are not deemed as problematic, such as enabling or disabling various functions on the Switch.</p> <p>Warning – Events classified as warning are problematic events that are not critical to the overall function of the Switch but do require attention, such as unsuccessful downloads or uploads and failed logins.</p> <p>Critical – Events classified as critical are fatal exceptions occurring on the Switch, such as hardware failures or spoofing attacks.</p>
Parameters	<p>Choose one of the following to identify where severity messages are to be sent.</p> <p>trap - Configure severity level control for a trap.</p> <p>log - Configure severity level control for a log.</p> <p>all - Configure severity level control for a trap and a log.</p> <p>emergency - Severity level = emergency.</p> <p>alert - Severity level = alert.</p> <p>critical - Severity level = critical.</p> <p>error - Severity level = error.</p> <p>warning - Severity level = warning.</p> <p>notice - Severity level = notice.</p> <p>information - Severity level = information.</p> <p>debug - Severity level = debug.</p> <p><level 0-7> - Specify the severity level between 0 and 7.</p>

config system_severity

Restrictions	Only Administrator and Operator-level users can issue this command.
---------------------	---

Example usage:

To configure the system severity settings:

```
DGS-3700-12:5#config system_severity trap critical
Command: config system_severity trap critical

Success.

DGS-3700-12:5#
```

show system_severity

Purpose	To display system_severity level of an alert required for log entry or trap message.
Syntax	show system_severity
Description	This command is used to display system_severity level of an alert required for log entry or trap message.
Parameters	None.
Restrictions	None.

Example usage:

To display the system severity settings for critical traps and log:

```
DGS-3700-12:5#show system_severity
Command: show system_severity

System Severity Trap : information
System Severity Log : information

DGS-3700-12:5#
```

SAFEGUARD ENGINE COMMANDS

Back to Section Header

Periodically, malicious hosts on the network will attack the Switch by utilizing packet flooding (ARP Storm) or other methods. These attacks may increase the CPU utilization beyond its capability. To alleviate this problem, the Safeguard Engine function was added to the Switch's software.

The Safeguard Engine can help the overall operability of the Switch by minimizing the workload of the Switch while the attack is ongoing, thus making it capable to forward essential packets over its network in a limited bandwidth. When the Switch receives too many packets to process it will enter Exhausted mode.

When in this mode, the Switch will perform the following task to minimize the CPU usage:

- a. It will limit bandwidth of the receiving ARP packets, broadcast packets.

IP packets may also be limited by the Switch by configuring only certain IP addresses to be accepted. This method can be accomplished through the CPU Interface Filtering mechanism explained in the previous section. Once the user configures these acceptable IP addresses, other packets containing different IP addresses will be dropped by the Switch, thus limiting the bandwidth of IP packets. To keep the process moving fast, be sure not to add many conditions on which to accept these acceptable IP addresses and their packets, this limiting the CPU utilization.

The Safeguard Engine commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
config safeguard_engine	{ state [enable disable] utilization { rising <value 20-100> falling <value 20-100> } trap_log [enable disable] mode [strict fuzzy] }
show safeguard_engine	

Each command is listed, in detail, in the following sections.

config safeguard_engine	
Purpose	This command is used to configure the safeguard engine.
Syntax	config safeguard_engine { state [enable disable] utilization { rising <value 20-100> falling <value 20-100> } trap_log [enable disable] mode [strict fuzzy] }
Description	This command is use to configure the safeguard engine parameter to the effects of the ARP, broadcast and IP storm. It is used to protect CPU utilization by limiting the packet flow.
Parameters	<p><i>state [enable disable]</i> – Select the running state of the Safeguard Engine function as enable or disable.</p> <p><i>utilization</i> – Select this option to trigger the Safeguard Engine function to enable based on the following determinates:</p> <p><i>rising <value 20-100></i> – The user can set a percentage value of the rising CPU utilization which will trigger the Safeguard Engine function. Once the CPU utilization rises to this percentage, the Safeguard Engine mechanism will initiate. The default value is 30.</p> <p><i>falling <value 20-100></i> – The user can set a percentage value of the falling CPU utilization which will trigger the Safeguard Engine function to cease. Once the CPU utilization falls to this percentage, the Safeguard Engine mechanism will shut</p>

config safeguard_engine	
	<p>down. The default value is 20.</p> <p><i>trap_log [enable disable]</i> – Choose whether to enable or disable the sending of messages to the device’s SNMP agent and switch log once the Safeguard Engine has been activated by a high CPU utilization rate. The default value is disable.</p> <p><i>mode [strict fuzzy]</i> – Used to select the type of Safeguard Engine to be activated by the Switch when the CPU utilization reaches a high rate. The default value is fuzzy.</p> <p><i>fuzzy</i> – If selected, this function will instruct the Switch to minimize the IP and ARP traffic flow to the CPU by dynamically allotting an even bandwidth to all traffic flows.</p> <p><i>strict</i> – If selected, this function will stop accepting all ARP packets not intended for the Switch, and will stop receiving all unnecessary broadcast IP packets, until the storm has subsided.</p> <p>The default value is fuzzy.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the safeguard engine for the Switch:

```
DGS-3700-12:5#config safeguard_engine state enable utilization rising 45
Command: config safeguard_engine state enable utilization rising 45

Success.

DGS-3700-12:5#
```

show safeguard_engine	
Purpose	Used to display current safeguard engine settings.
Syntax	show safeguard_engine
Description	This command is used to list the current status and currently configured type of the safeguard engine settings.
Parameters	None.
Restrictions	None.

Example usage:

To display the safeguard engine status:

```
DGS-3700-12:5#show safeguard_engine
Command: show safeguard_engine

Safeguard Engine State      : Disabled
Safeguard Engine Current Status : Normal Mode
=====
CPU Utilization Information:
Rising Threshold   : 30%
Falling Threshold  : 20%
Trap/Log State     : Enabled
Mode               : Strict

DGS-3700-12:5#
```

sFLOW COMMANDS

Back to Section Header

The sFlow commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
enable sflow	
disable sflow	
show sflow	
create sflow flow_sampler ports	[<portlist> all] analyzer_server_id <value 1-4> {rate <value 0-65535> maxheadersize <value 18-256>}
config sflow flow_sampler ports	[<portlist> all] {rate <value 0-65535> maxheadersize <value 18-256>}
delete sflow flow_sampler ports	[<portlist> all]
show sflow flow_sampler	
create sflow counter_poller	ports [<portlist> all] analyzer_server_id <value 1-4> {interval [disable <sec 20-120>]}
config sflow counter_poller	ports [<portlist> all] interval [disable <sec 20-120>]
delete sflow counter_poller	ports [<portlist> all]
show sflow counter_poller	
create sflow analyzer_server	<value 1-4> owner <name 16> {timeout [<sec 1-2000000> infinite] collectoraddress <ipaddr> collectorport <udp_port_number 1-65535> maxdatagramsize <value 300-1400>}
config sflow analyzer_server	<value 1-4> {timeout [<sec 1-2000000> infinite] collectoraddress <ipaddr> collectorport <udp_port_number 1-65535> maxdatagramsize <value 300-1400>}
delete sflow analyzer_server	<value 1-4 >
show sflow analyzer_server	

Each command is listed, in detail, in the following sections.

enable sflow	
Purpose	Used to enable the sFlow function.
Syntax	enable sflow
Description	This command is used to enable the sFlow function.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable sflow:

```
DGS-3700-12:5#enable sflow
Command: enable sflow

Success.

DGS-3700-12:5#
```

disable sflow

Purpose	Used to disable the sFlow function.
Syntax	disable sflow
Description	This command is used to disable the sFlow function.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To disable sflow:

```
DGS-3700-12:5#disable sflow
Command: disable sflow

Success.

DGS-3700-12:5#
```

show sflow

Purpose	Used to display the sFlow function.
Syntax	show sflow
Description	This command is used to display the sFlow function settings on the Switch.
Parameters	None.
Restrictions	None.

Example usage:
To display sflow:

```
DGS-3700-12:5#show sflow
Command: show sflow

sFlow Version   : 1.00
sFlow Address   : 10.24.73.21
sFlow State     : Disabled

DGS-3700-12:5#
```

create sflow flow_sampler ports

Purpose	Used to create the sflow flow_sampler.
Syntax	create sflow flow_sampler ports [<portlist> all] analyzer_server_id <value 1-4> {rate <value 0-65535> maxheadersize <value 18-256>}
Description	This command is used to create the sFlow flow_sampler. By configuring the sampling function for a port, a sample packet received by this port will be encapsulated and forwarded to the analyzer server at the specified interval.
Parameters	<i>ports</i> – Specifies the list of ports to be configured. <i>analyzer_server_id</i> – The analyzer_server_id specifies the ID of a server analyzer

create sflow flow_sampler ports

	<p>where the packet will be forwarded.</p> <p><i>rate</i> – The sampling rate for packet sampling. The configured rate value multiplied by 256 is the actual rate. For example, if the rate is 20, the actual rate 5120. One packet will be sampled from about 5120 packets. If set to 0, the sampler is disabled. If the rate is not specified, its default value is 0.</p> <p><i>maxheadersize</i> – The maximum number of leading bytes in the packet which has been sampled that will be encapsulated and forwarded to the server. If not specified, the default value is 128.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create sflow flow_sampler:

```
DGS-3700-12:5#create sflow flow_sampler ports all analyzer_server_id 1 rate 10
maxheadersize 100
Command: create sflow flow_sampler ports all analyzer_server_id 1 rate 10 maxheadersize
100

Success.

DGS-3700-12:5#
```

config sflow flow_sampler

Purpose	Used to configure the sflow flow_sampler parameters.
Syntax	config sflow flow_sampler ports [<portlist> all] { rate <value 0-65535> maxheadersize <value 18-256>}
Description	This command is used to configure the sflow flow sampler parameters. If the user wants the change the analyzer server ID, the user needs to delete the flow sampler and create a new one.
Parameters	<p><i>ports</i> – Specifies the list of ports to be configured.</p> <p><i>rate</i> – The sampling rate for packet sampling. The configured rate value multiplied by 256 is the actual rate. For example, if the rate is 20, the actual rate is 5120. One packet will be sampled from about 5120 packets. If set to 0, the sampler is disabled. If the rate is not specified, its default value is 0.</p> <p><i>maxheadersize</i> – The maximum number of leading bytes in the packet which has been sampled that will be encapsulated and forwarded to the server. If not specified, the default value is 128.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure sflow flow_sampler:

```
DGS-3700-12:5#config sflow flow_sampler ports all rate 10 maxheadersize 100
Command: config sflow flow_sampler ports all rate 10 maxheadersize 100

Success.

DGS-3700-12:5#
```

delete sflow flow_sampler

Purpose	Used to delete the sflow flow_sampler.
----------------	--

delete sflow flow_sampler

Syntax	delete sflow flow_sampler ports [<portlist> all]
Description	This command is used to delete the sflow flow sampler that has been configured for the specified port.
Parameters	<i>ports</i> – Specifies the list of ports to be configured.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete all the sflow flow_sampler:

<pre>DGS-3700-12:5#delete sflow flow_sampler ports all Command: delete sflow flow_sampler ports all Success. DGS-3700-12:5#</pre>

show sflow flow_sampler

Purpose	Used to show the sflow flow_sampler information of ports which have been created.
Syntax	show sflow flow_sampler
Description	This command is used to show the sFlow flow_sampler which has been configured for ports. The actual value rate is 256 times the displayed rate value. There are two types of rates. ConfigRate is configed by the user. In order to limit the number of packets sent to the CPU when the rate of traffic to the CPU is high, the sampling rate will be decreased. This is specified as the active rate.
Parameters	None.
Restrictions	None.

Example usage:

To show the sflow flow_sampler:

<pre>DGS-3700-12:5#show sflow flow_sampler Command: show sflow flow_sampler Port Analyzer Server ID Configured Rate Active Rate Max Header Size ---- - 1 1 20 80 140 2 2 10 40 100 Total Entries: 2 DGS-3700-12:5#</pre>

create sflow counter_poller

Purpose	Used to create the sflow counter_poller.
Syntax	create sflow counter_poller ports [<portlist> all] analyzer_server_id < value 1-4> {interval [disable <sec 20-120>]}
Description	This command is used to create the sflow counter_poller. With the poller function, the statistic counter information with respect to a port will be forwarded to the server at the configured interval. These counters are RFC 2233 counters.
Parameters	<i>ports</i> – Specifies the list of ports to be configured. <i>analyzer_server_id</i> – The analyzer_server_id is the id of a analyzer_server.

create sflow counter_poller

	<i>interval</i> – The maximum number of seconds between successive statistic counters information. If set to disable, the counter-poller is disabled. If interval is not specified, its default value is disable.
Restrictions	Only Administrators and Operator-level users can issue this command.

Example usage:

To create the sflow counter_poller:

```
DGS-3700-12:5#create sflow counter_poller ports 1 analyzer_server_id 2 interval 40
Command: create sflow counter_poller ports 1 analyzer_server_id 2 interval 40

Success.

DGS-3700-12:5#
```

config sflow counter_poller

Purpose	Used to configure the sflow counter_poller parameters.
Syntax	config sflow counter_poller ports [<portlist> all] interval [disable <sec 20-120>]
Description	This command is used to config the sflow counter_poller parameters. If the user wants the change the analyzer_server_id, he needs to delete the counter_poller and create a new one.
Parameters	<i>ports</i> – Specifies the list of ports to be configured. <i>interval</i> – The maximum number of seconds between successive statistic counter information. If set to disable, the counter-poller is disabled. If an interval is not specified, its default value is disable.
Restrictions	Only Administrators and Operator-level users can issue this command.

Example usage:

To configure the sflow counter_poller:

```
DGS-3700-12:5#config sflow counter_poller ports 1 interval 40
Command: config sflow counter_poller ports 1 interval 40

Success.

DGS-3700-12:5#
```

delete sflow counter_poller

Purpose	Used to delete the sflow counter_poller.
Syntax	delete sflow counter_poller ports [<portlist> all]
Description	This command is used to delete the sflow counter poller from the specified port .
Parameters	<i>ports</i> – Specifies the list of ports to be configured.
Restrictions	Only Administrators and Operator-level users can issue this command.

Example usage:

To delete the sflow counter_poller:

```
DGS-3700-12:5#delete sflow counter_poller ports 1
Command: delete sflow counter_poller ports 1

Success.

DGS-3700-12:5#
```

show sflow counter_poller

Purpose	Used to show the sflow counter_poller information of ports which have been created.
Syntax	show sflow counter_poller
Description	This command is used to show the sflow counter pollers which have been configured for port.
Parameters	None.
Restrictions	None.

Example usage:
To show the sflow counter_poller:

```
DGS-3700-12:5#show sflow counter_poller
Command: show sflow counter_poller

Port      Analyzer Server ID      Polling Interval (secs)
----      -
1         1                        25
2         3                        30

Total Entries: 2

DGS-3700-12:5#
```

create sflow analyzer_server

Purpose	Used to create the analyzer_server.
Syntax	create sflow analyzer_server < value 1-4 > owner<name 16> { timeout [<sec 1-2000000> infinite] collectoraddress <ipaddr> collectorport <udp_port_number 1-65535> maxdatagramsize < value 300-1400> }
Description	This command creates the analyzer server. You can specify more than one analyzer server with the same IP address but with different UDP port numbers. You can have up to four unique combinations of IP addresses and UDP port numbers.
Parameters	<p><i>owner</i> – The entity making use of this sflow analyzer_server. When owner is set or modified, the timeout value will become 400 automatically.</p> <p><i>timeout</i> – The length of time before the server is timed out. When the analyzer_server times out, all of the flow_samplers and counter_pollers associated with this analyzer_server will be deleted. “infinite” indicates that analyzer_server never times out. If not specified, its default value is 400.</p> <p><i>collectoraddress</i> – The IP address of the analyzer_server. If not specified, the address will be 0.0.0.0 which means that the entry will be inactive.</p> <p><i>collectorport</i> – The destination UDP port for sending the sFlow datagrams. If not specified, the default value is 6364.</p> <p><i>maxdatagramsize</i> – The maximum number of data bytes that can be packed in a single sample datagram. If not specified, the default value is 1400.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create the sflow analyzer_server:

```
DGS-3700-12:5#create sflow analyzer_server 1 owner monitor
Command: create sflow analyzer_server 1 owner monitor

Success.

DGS-3700-12:5#
```

config sflow analyzer_server

Purpose	Used to configure the analyzer_server information .
Syntax	config sflow analyzer_server < value 1-4 > { timeout [<sec 1-2000000> infinte] collectoraddress <ipaddr> collectorport <udp_port_number 1-65535> maxdatagramsize < value 300-1400> }
Description	This command is used to configure the receiver information. You can specify more than one collector with the same IP address if the UDP port numbers are unique.
Parameters	<p><i>timeout</i> – The length of time before the server is timed out. When the analyzer_server times out, all of the flow_samplers and counter_pollers associated with this analyzer_server will be deleted. “infinite” indicates that analyzer_server never times out. If not specified, its default value is 400.</p> <p><i>collectoraddress</i> – The IP address of the analyzer_server. If not specified, the address will be 0.0.0.0 which means that the entry will be inactive.</p> <p><i>collectorport</i> – The destination UDP port for sending the sFlow datagrams. If not specified, the default value is 6364.</p> <p><i>maxdatagramsize</i> – The maximum number of data bytes that can be packed in a single sample datagram. If not specified, the default value is 1400.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the sflow analyzer_server:

```
DGS-3700-12:5#config sflow analyzer_server 2 collectoraddress 10.90.90.9
Command: config sflow analyzer_server 2 collectoraddress 10.90.90.9

Success.

DGS-3700-12:5#
```

delete sflow analyzer_server

Purpose	Used to delete the analyzer_server.
Syntax	delete sflow analyzer_server < value 1-4 >
Description	This command is used to delete the analyzer server.
Parameters	<i>value</i> – analyzer_server ID.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete the sflow analyzer_server:

```
DGS-3700-12:5#delete sflow analyzer_server 2
Command: delete sflow analyzer_server 2

Success.

DGS-3700-12:5#
```

show sflow analyzer_server

Purpose	Used to show the sflow analyzer_server information.
Syntax	show sflow analyzer_server
Description	This command is used to show the sflow analyzer server information. The Timeout field specifies the time configured by user. The current countdown times is the current time remaining before the server timesout.
Parameters	None.
Restrictions	None.

Example usage:
 To show the sflow analyzer_server:

```
DGS-3700-12:5#show sflow analyzer_server
Command: show sflow analyzer_server

sFlow Analyzer_server Information
-----
Server ID           : 1
Owner               : monitor
Timeout             : 400
Current Countdown Time: 400
Collector Address   : 10.90.90.1
Collector Port      : 6343
Max Datagram Size   : 1400

Total Entries: 1

DGS-3700-12:5#
```

SNMP COMMANDS

Back to Section Header

The Switch supports the Simple Network Management Protocol (SNMP) versions 1, 2c, and 3. Users can specify which version of the SNMP users want to use to monitor and control the Switch. The three versions of SNMP vary in the level of security provided between the management station and the network device. The following table lists the security features of the three SNMP versions:

SNMP Version	Authentication Method	Description
v1	Community String	Community String is used for authentication – NoAuthNoPriv
v2c	Community String	Community String is used for authentication – NoAuthNoPriv
v3	Username	Username is used for authentication – NoAuthNoPriv, AuthNoPriv or AuthPriv
v3	MD5 or SHA	Authentication is based on the HMAC-MD5 or HMAC-SHA algorithms – AuthNoPriv
v3	MD5 DES or SHA DES	Authentication is based on the HMAC-MD5 or HMAC-SHA algorithms – AuthPriv. DES 56-bit encryption is added based on the CBC-DES (DES-56) standard

The network management commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
enable snmp	
disable snmp	
create snmp user	<user_name 32> <groupname 32> {encrypted [by_password auth [md5 <auth_password 8-16 > sha <auth_password 8-20>] priv [none des <priv_password 8-16>] by_key auth [md5 <auth_key 32-32> sha <auth_key 40-40>] priv [none des <priv_key 32-32>]]}
delete snmp user	<user_name 32>
show snmp user	
create snmp view	<view_name 32> <oid> view_type [included excluded]
delete snmp view	<view_name 32> [all oid]
show snmp view	{<view_name 32>}
create snmp community	<community_string 32> view <view_name 32> [read_only read_write]
delete snmp community	<community_string 32>
show snmp community	{<community_string 32>}
config snmp engineID	<snmp_engineID 10-64>
show snmp engineID	
create snmp group	<groupname 32> [v1 v2c v3 [noauth_nopriv auth_nopriv auth_priv]] {read_view <view_name 32> write_view <view_name 32> notify_view <view_name 32>}
delete snmp group	<groupname 32>
show snmp groups	
create snmp host	[host <ipaddr> v6host <ipv6addr>] [v1 v2c v3 [noauth_nopriv

COMMAND	PARAMETERS
	auth_nopriv auth_priv]] <auth_string 32>
delete snmp host	<ipaddr>
delete snmp v6host	<ipv6addr>
show snmp host	{<ipaddr>}
show snmp v6host	{<ipv6addr>}
create trusted_host	[<ipaddr> <ipv6addr> network <network_address> ipv6_prefix <ipv6networkaddr>] {snmp telnet ssh http https ping}
config trusted_host	[<ipaddr> <ipv6addr> network <network_address> ipv6_prefix <ipv6networkaddr>] [add delete] [{snmp telnet ssh http https ping} all]
delete trusted_host	[ipaddr <ipaddr> ipv6addr<ipv6addr> network <network_address> ipv6_prefix <ipv6networkaddr> all]
show trusted_host	
enable snmp traps	
enable snmp authenticate_traps	
show snmp traps	
disable snmp traps	
disable snmp authenticate_traps	
config snmp system_contact	<sw_contact>
config snmp system_location	<sw_location>
config snmp system_name	<sw_name>
enable snmp linkchange_traps	
disable snmp linkchange_traps	
config snmp linkchange_traps ports	[all <portlist>] [enable disable]
config snmp coldstart_traps	[enable disable]
config snmp warmstart_traps	[enable disable]
config rmon trap	{rising_alarm [enable disable] falling_alarm [enable disable]}
show rmon	

Each command is listed, in detail, in the following sections.

enable snmp	
Purpose	To enable the SNMP interface access function.
Syntax	enable snmp
Description	This command is used to enable the SNMP function. When SNMP function is disabled, the network manager will not be able the access SNMP MIB objects. The device will not send traps or notification to network manager either.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To enable SNMP:

```
DGS-3700-12:5#enable snmp
Command: enable snmp

Success.

DGS-3700-12:5#
```

disable snmp

Purpose	To disable the SNMP interface access function.
Syntax	disable snmp
Description	This command is used to disable the SNMP function. When SNMP function is disabled, the network manager will not be able the access SNMP MIB objects. The device will not send traps or notification to network manager either.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable SNMP:

```
DGS-3700-12:5#disable snmp
Command: disable snmp

Success.

DGS-3700-12:5#
```

create snmp user

Purpose	Used to create a new SNMP user and adds the user to an SNMP group that is also created by this command.
Syntax	create snmp user <user_name 32> <groupname 32> {encrypted [by_password auth [md5 <auth_password 8-16> sha <auth_password 8-20>] priv [none des <priv_password 8-16>] by_key auth [md5 <auth_key 32-32> sha <auth_key 40-40>] priv [none des <priv_key 32-32>]]}
Description	This command is used to create a new SNMP user and adds the user to an SNMP group that is also created by this command. SNMP ensures: Message integrity – Ensures that packets have not been tampered with during transit. Authentication – Determines if an SNMP message is from a valid source. Encryption – Scrambles the contents of messages to prevent it from being viewed by an unauthorized source.
Parameters	<user_name 32> – An alphanumeric name of up to 32 characters that will identify the new SNMP user. <groupname 32> – An alphanumeric name of up to 32 characters that will identify the SNMP group the new SNMP user will be associated with. encrypted – Allows the user to choose a type of authorization for authentication using SNMP. The user may choose: by_password – Requires the SNMP user to enter a password for authentication and privacy. The password is defined by specifying the auth_password below. This method is recommended.

create snmp user

by_key – Requires the SNMP user to enter a encryption key for authentication and privacy. The key is defined by specifying the key in hex form below. This method is not recommended.

auth – The user may also choose the type of authentication algorithms used to authenticate the snmp user.

The choices are:

md5 – Specifies that the HMAC-MD5-96 authentication level will be used. md5 may be utilized by entering one of the following:

<*auth_password 8-16*> - An alphanumeric string of between 8 and 16 characters that will be used to authorize the agent to receive packets for the host.

<*auth_key 32-32*> - Enter an alphanumeric string of exactly 32 characters, in hex form, to define the key that will be used to authorize the agent to receive packets for the host.

sha – Specifies that the HMAC-SHA-96 authentication level will be used.

<*auth_password 8-20*> - An alphanumeric string of between 8 and 20 characters that will be used to authorize the agent to receive packets for the host.

<*auth_key 40-40*> - Enter an alphanumeric string of exactly 40 characters, in hex form, to define the key that will be used to authorize the agent to receive packets for the host.

priv – Adding the priv (privacy) parameter will allow for encryption in addition to the authentication algorithm for higher security. The user may choose:

des – Adding this parameter will allow for a 56-bit encryption to be added using the DES-56 standard using:

<*priv_password 8-16*> - An alphanumeric string of between 8 and 16 characters that will be used to encrypt the contents of messages the host sends to the agent.

<*priv_key 32-32*> - Enter an alphanumeric key string of exactly 32 characters, in hex form, that will be used to encrypt the contents of messages the host sends to the agent.

none – Adding this parameter will add no encryption.

Restrictions

Only Administrator-level users can issue this command.

Example usage:

To create an SNMP user on the Switch:

```
DGS-3700-12:5#create snmp user dlink default encrypted by_password auth md5 canadian
priv none
Command: create snmp user dlink default encrypted by_password auth md5 canadian priv
none

Success.

DGS-3700-12:5#
```

delete snmp user

Purpose	Used to remove an SNMP user from an SNMP group and also to delete the associated SNMP group.
Syntax	delete snmp user <user_name 32>
Description	This command is used to remove an SNMP user from its SNMP group and then deletes the associated SNMP group.

delete snmp user

Parameters	<user_name 32> – An alphanumeric string of up to 32 characters that identifies the SNMP user that will be deleted.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To delete a previously entered SNMP user on the Switch:

```
DGS-3700-12:5#delete snmp user dlink
Command: delete snmp user dlink

Success.

DGS-3700-12:5#
```

show snmp user

Purpose	Used to display information about each SNMP username in the SNMP group username table.
Syntax	show snmp user
Description	This command is used to display information about each SNMP username in the SNMP group username table.
Parameters	None.
Restrictions	None.

Example usage:

To display the SNMP users currently configured on the Switch:

```
DGS-3700-12:5#show snmp user
Command: show snmp user

Username      Group Name      VerAuthPriv
-----      -
initial      initial        V3 NoneNone
Total Entries: 1

DGS-3700-12:5#
```

create snmp view

Purpose	Used to assign views to community strings to limit which MIB objects and SNMP manager can access.
Syntax	create snmp view <view_name 32> <oid> view_type [included excluded]
Description	This command is used to assign views to community strings to limit which MIB objects an SNMP manager can access.
Parameters	<view_name 32> – An alphanumeric string of up to 32 characters that identifies the SNMP view that will be created. <oid> – The object ID that identifies an object tree (MIB tree) that will be included or excluded from access by an SNMP manager. view type – Sets the view type to be: included – Include this object in the list of objects that an SNMP manager can access. excluded – Exclude this object from the list of objects that an SNMP manager can access.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To create an SNMP view:

```
DGS-3700-12:5#create snmp view dlinkview 1.3.6 view_type included
Command: create snmp view dlinkview 1.3.6 view_type included

Success.

DGS-3700-12:5#
```

delete snmp view

Purpose	Used to remove an SNMP view entry previously created on the Switch.
Syntax	delete snmp view <view_name 32> [all <oid>]
Description	This command is used to remove an SNMP view previously created on the Switch.
Parameters	<p><view_name 32> – An alphanumeric string of up to 32 characters that identifies the SNMP view to be deleted.</p> <p>all – Specifies that all of the SNMP views on the Switch will be deleted.</p> <p><oid> – The object ID that identifies an object tree (MIB tree) that will be deleted from the Switch.</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To delete a previously configured SNMP view from the Switch:

```
DGS-3700-12:5#delete snmp view dlinkview all
Command: delete snmp view dlinkview all

Success.

DGS-3700-12:5#
```

show snmp view

Purpose	Used to display an SNMP view previously created on the Switch.
Syntax	show snmp view {<view_name 32>}
Description	This command is used to display an SNMP view previously created on the Switch.
Parameters	<view_name 32> – An alphanumeric string of up to 32 characters that identifies the SNMP view that will be displayed.
Restrictions	None.

Example usage:

To display SNMP view configuration:

DGS-3700-12:5#show snmp view

Command: show snmp view

Vacm View Table Settings

View Name	Subtree	View Type
restricted	1.3.6.1.2.1.1	Included
restricted	1.3.6.1.2.1.11	Included
restricted	1.3.6.1.6.3.10.2.1	Included
restricted	1.3.6.1.6.3.11.2.1	Included
restricted	1.3.6.1.6.3.15.1.1	Included
CommunityView	1	Included
CommunityView	1.3.6.1.6.3	Excluded
CommunityView	1.3.6.1.6.3.1	Included

Total Entries: 8

DGS-3700-12:5#

create snmp community

Purpose	Used to create an SNMP community string to define the relationship between the SNMP manager and an agent. The community string acts like a password to permit access to the agent on the Switch. One or more of the following characteristics can be associated with the community string: An Access List of IP addresses of SNMP managers that are permitted to use the community string to gain access to the Switch's SNMP agent. An MIB view that defines the subset of all MIB objects that will be accessible to the SNMP community. <i>read_write</i> or <i>read_only</i> level permission for the MIB objects accessible to the SNMP community.
Syntax	create snmp community <community_string 32> view <view_name 32> [read_only read_write]
Description	This command is used to create an SNMP community string and to assign access-limiting characteristics to this community string.
Parameters	<i><community_string 32></i> – An alphanumeric string of up to 32 characters that is used to identify members of an SNMP community. This string is used like a password to give remote SNMP managers access to MIB objects in the Switch's SNMP agent. <i>view <view_name 32></i> – An alphanumeric string of up to 32 characters that is used to identify the group of MIB objects that a remote SNMP manager is allowed to access on the Switch. <i>read_only</i> – Specifies that SNMP community members using the community string created with this command can only read the contents of the MIBs on the Switch. <i>read_write</i> – Specifies that SNMP community members using the community string created with this command can read from and write to the contents of the MIBs on the Switch.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To create the SNMP community string “dlink”:

```
DGS-3700-12:5#create snmp community dlink view ReadView read_write
Command: create snmp community dlink view ReadView read_write

Success.

DGS-3700-12:5#
```

delete snmp community

Purpose	Used to remove a specific SNMP community string from the Switch.
Syntax	delete snmp community <community_string 32>
Description	This command is used to remove a previously defined SNMP community string from the Switch.
Parameters	<community_string 32> – An alphanumeric string of up to 32 characters that is used to identify members of an SNMP community. This string is used like a password to give remote SNMP managers access to MIB objects in the Switch’s SNMP agent.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To delete the SNMP community string “dlink”:

```
DGS-3700-12:5#delete snmp community dlink
Command: delete snmp community dlink

Success.

DGS-3700-12:5#
```

show snmp community

Purpose	Used to display SNMP community strings configured on the Switch.
Syntax	show snmp community {<community_string 32>}
Description	This command is used to display SNMP community strings that are configured on the Switch.
Parameters	<community_string 32> – An alphanumeric string of up to 32 characters that is used to identify members of an SNMP community. This string is used like a password to give remote SNMP managers access to MIB objects in the Switch’s SNMP agent.
Restrictions	None.

Example usage:

To display the currently entered SNMP community strings:

```
DGS-3700-12:5#show snmp community
Command: show snmp community

SNMP Community Table
Community Name   View Name       Access Right
-----
dlink            ReadView        read_write
private          CommunityView   read_write
public           CommunityView   read_only

Total Entries: 3

DGS-3700-12:5#
```

config snmp engineID

Purpose	Used to configure a name for the SNMP engine on the Switch.
Syntax	config snmp engineID <snmp_engineID 10-64>
Description	This command is used to configure a name for the SNMP engine on the Switch.
Parameters	<snmp_engineID> – An alphanumeric string that will be used to identify the SNMP engine on the Switch.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To give the SNMP agent on the Switch the name “0035636666”:

```
DGS-3700-12:5#config snmp engineID 0035636666
Command: config snmp engineID 0035636666

Success.

DGS-3700-12:5#
```

show snmp engineID

Purpose	Used to display the identification of the SNMP engine on the Switch.
Syntax	show snmp engineID
Description	This command is used to display the identification of the SNMP engine on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To display the current name of the SNMP engine on the Switch:

```
DGS-3700-12:5#show snmp engineID
Command: show snmp engineID

SNMP Engine ID : 800000ab03000102030400

DGS-3700-12:5#
```

create snmp group

Purpose	Used to create a new SNMP group, or a table that maps SNMP users to SNMP views.
Syntax	create snmp group <groupname 32> [v1 v2c v3 [noauth_nopriv auth_nopriv auth_priv]] [read_view <view_name 32> write_view <view_name 32>

create snmp group	
	notify_view <view_name 32>}
Description	This command is used to create a new SNMP group, or a table that maps SNMP users to SNMP views.
Parameters	<p><i><groupname 32></i> – An alphanumeric name of up to 32 characters that will identify the SNMP group the new SNMP user will be associated with.</p> <p><i>v1</i> – Specifies that SNMP version 1 will be used. The Simple Network Management Protocol (SNMP), version 1, is a network management protocol that provides a means to monitor and control network devices.</p> <p><i>v2c</i> – Specifies that SNMP version 2c will be used. The SNMP v2c supports both centralized and distributed network management strategies. It includes improvements in the Structure of Management Information (SMI) and adds some security features.</p> <p><i>v3</i> – Specifies that the SNMP version 3 will be used. SNMP v3 provides secure access to devices through a combination of authentication and encrypting packets over the network. SNMP v3 adds:</p> <p>Message integrity – Ensures that packets have not been tampered with during transit.</p> <p>Authentication – Determines if an SNMP message is from a valid source.</p> <p>Encryption – Scrambles the contents of messages to prevent it being viewed by an unauthorized source.</p> <p><i>noauth_nopriv</i> – Specifies that there will be no authorization and no encryption of packets sent between the Switch and a remote SNMP manager.</p> <p><i>auth_nopriv</i> – Specifies that authorization will be required, but there will be no encryption of packets sent between the Switch and a remote SNMP manager.</p> <p><i>auth_priv</i> – Specifies that authorization will be required, and that packets sent between the Switch and a remote SNMP manger will be encrypted.</p> <p><i>read_view</i> – Specifies that the SNMP group being created can request SNMP messages.</p> <p><i>write_view</i> – Specifies that the SNMP group being created has write privileges.</p> <p><i>notify_view</i> – Specifies that the SNMP group being created can receive SNMP trap messages generated by the Switch’s SNMP agent.</p> <p><i><view_name 32></i> – An alphanumeric string of up to 32 characters that is used to identify the group of MIB objects that a remote SNMP manager is allowed to access on the Switch.</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To create an SNMP group named “sg1”:

```
DGS-3700-12:5#create snmp group sg1 v3 noauth_nopriv read_view v1 write_view v1
notify_view v1
Command: create snmp group sg1 v3 noauth_nopriv read_view v1 write_view v1 notify_view
v1

Success.

DGS-3700-12:5#
```

delete snmp group	
Purpose	Used to remove an SNMP group from the Switch.
Syntax	delete snmp group <groupname 32>

delete snmp group	
Description	This command is used to remove an SNMP group from the Switch.
Parameters	<groupname 32> – An alphanumeric name of up to 32 characters that will identify the SNMP group the new SNMP user will be associated with.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To delete the SNMP group named “sg1”.

```
DGS-3700-12:5#delete snmp group sg1
Command: delete snmp group sg1

Success.

DGS-3700-12:5#
```

show snmp groups	
Purpose	Used to display the group-names of SNMP groups currently configured on the Switch. The security model, level, and status of each group are also displayed.
Syntax	show snmp groups
Description	This command is used to display the group-names of SNMP groups currently configured on the Switch. The security model, level, and status of each group are also displayed.
Parameters	None.
Restrictions	None.

Example usage:

To display the currently configured SNMP groups on the Switch:

```
DGS-3700-12:5#show snmp groups
Command: show snmp groups
Vacm Access Table Settings

Group Name      : Group3
ReadView Name   : ReadView
WriteView Name  : WriteView
Notify View Name : NotifyView
Security Model  : SNMPv3
Security Level  : NoAuthNoPriv

Group Name      : Group4
ReadView Name   : ReadView
WriteView Name  : WriteView
Notify View Name : NotifyView
Security Model  : SNMPv3
Security Level  : authNoPriv

Group Name      : Group5
ReadView Name   : ReadView
WriteView Name  : WriteView
Notify View Name : NotifyView
Security Model  : SNMPv3
Security Level  : authNoPriv

Group Name      : initial
ReadView Name   : restricted
WriteView Name  :
Notify View Name : restricted
Security Model  : SNMPv3
Security Level  : NoAuthNoPriv

Group Name      : ReadGroup
ReadView Name   : CommunityView
WriteView Name  :
Notify View Name : CommunityView
Security Model  : SNMPv1
Security Level  : NoAuthNoPriv

Total Entries: 5

DGS-3700-12:5#
```

create snmp host

Purpose	Used to create a recipient of SNMP traps generated by the Switch's SNMP agent.
Syntax	create snmp [host <ipaddr> v6host <ipv6addr>] [v1 v2c v3 [noauth_nopriv auth_nopriv auth_priv] <auth_string 32>]
Description	This command is used to create a recipient of SNMP traps generated by the Switch's SNMP agent.
Parameters	<p><ipaddr> – The IP address of the remote management station that will serve as the SNMP host for the Switch.</p> <p>v6host – Specifies the v6host IP address to which the trap packet will be sent.</p> <p>v1 – Specifies that SNMP version 1 will be used. The Simple Network Management Protocol (SNMP), version 1, is a network management protocol that provides a means to monitor and control network devices.</p> <p>v2c – Specifies that SNMP version 2c will be used. The SNMP v2c supports both</p>

create snmp host

	<p>centralized and distributed network management strategies. It includes improvements in the Structure of Management Information (SMI) and adds some security features.</p> <p>v3 – Specifies that the SNMP version 3 will be used. SNMP v3 provides secure access to devices through a combination of authentication and encrypting packets over the network. SNMP v3 adds:</p> <p>Message integrity – ensures that packets have not been tampered with during transit.</p> <p>Authentication – determines if an SNMP message is from a valid source.</p> <p>Encryption – scrambles the contents of messages to prevent it being viewed by an unauthorized source.</p> <p>noauth_nopriv – Specifies that there will be no authorization and no encryption of packets sent between the Switch and a remote SNMP manager.</p> <p>auth_nopriv – Specifies that authorization will be required, but there will be no encryption of packets sent between the Switch and a remote SNMP manager.</p> <p>auth_priv – Specifies that authorization will be required, and that packets sent between the Switch and a remote SNMP manger will be encrypted.</p> <p><auth_string 32> – An alphanumeric string used to authorize a remote SNMP manager to access the Switch’s SNMP agent.</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To create an SNMP host to receive SNMP messages:

```
DGS-3700-12:5#create snmp host 10.48.74.100 v3 auth_priv public
Command: create snmp host 10.48.74.100 v3 auth_priv public

Success.

DGS-3700-12:5#
```

delete snmp host

Purpose	Used to remove a recipient of SNMP traps generated by the Switch’s SNMP agent.
Syntax	delete snmp host <ipaddr>
Description	This command is used to delete a recipient of SNMP traps generated by the Switch’s SNMP agent.
Parameters	<ipaddr> – The IP address of a remote SNMP manager.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To delete an SNMP host entry:

```
DGS-3700-12:5#delete snmp host 10.48.74.100
Command: delete snmp host 10.48.74.100

Success.

DGS-3700-12:5#
```

show snmp host

Purpose	Used to display the recipient of SNMP traps generated by the Switch’s SNMP agent.
----------------	---

show snmp host	
Syntax	show snmp host {<ipaddr>}
Description	This command is used to display the IP addresses and configuration information of remote SNMP managers that are designated as recipients of SNMP traps that are generated by the Switch's SNMP agent.
Parameters	<ipaddr> – The IP address of a remote SNMP manager that will receive SNMP traps generated by the Switch's SNMP agent.
Restrictions	None.

Example usage:

To display the currently configured SNMP hosts on the Switch:

```
DGS-3700-12:5#show snmp host
Command: show snmp host

SNMP Host Table
Host IP Address  SNMP Version  Community Name/SNMPv3 User Name
-----
10.48.76.23     V2c           private
10.48.74.100   V3            authpriv      public

Total Entries: 2

DGS-3700-12:5#
```

show snmp v6host	
Purpose	Used to display the recipient of SNMP traps generated by the Switch's SNMP agent.
Syntax	show snmp v6host {<ipv6addr>}
Description	This command is used to display the IP addresses and configuration information of remote SNMP managers that are designated as recipients of SNMP traps generated by the Switch's SNMP agent.
Parameters	<ipv6addr> – The IPv6 address of a remote SNMP manager that will receive SNMP traps generated by the Switch's SNMP agent.
Restrictions	None.

Example usage:

To display the currently configured SNMP hosts on the Switch:

```
DGS-3700-12:5#show snmp v6host
Command: show snmp v6host

SNMP Host Table
-----
Host IPv6 Address : ::C084:1
SNMP Version      : V1
Community Name/SNMPv3 User Name : 2

Total Entries: 1

DGS-3700-12:5#
```

create trusted_host	
Purpose	Used to create the trusted host.

create trusted_host	
Syntax	create trusted_host [<ipaddr> <ipv6addr> network <network_address> ipv6_prefix <ipv6networkaddr>] {snmp telnet ssh http https ping}
Description	This command is used to create the trusted host. The Switch allows users to specify up to four IP addresses that are allowed to manage the Switch via in-band SNMP or TELNET based management software. These IP addresses must be members of the Management VLAN. If no IP addresses are specified, then there is nothing to prevent any IP address from accessing the Switch, provided the user knows the Username and Password.
Parameters	<p><ipaddr> - Specify the IP address of the trusted host.</p> <p><ipv6addr> - Specify the IPv6 address of the trusted host.</p> <p>network - Specify the network address of the trusted network. The form of network address is xxx.xxx.xxx.xxx/y.</p> <p>ipv6_prefix - Specify the IPv6 network address of the trusted network.</p> <p>snmp - Specify the trusted host for SNMP.</p> <p>telnet - Specify the trusted host for Telnet.</p> <p>ssh - Specify the trusted host for SSH.</p> <p>http - Specify the trusted host for HTTP.</p> <p>https - Specify the trusted host for HTTPSs.</p> <p>ping - Specify the trusted host for Ping.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create the trusted host:

```
DGS-3700-12:5#create trusted_host 10.62.32.1
```

```
Command: create trusted_host 10.62.32.1
```

```
Success.
```

config trusted_host	
Purpose	To configure the access interfaces for the trusted host.
Syntax	config trusted_host [<ipaddr> <ipv6addr> network <network_address> ipv6_prefix <ipv6networkaddr>] [add delete] [{snmp telnet ssh http https ping} all]
Description	This command is used to configure the access interfaces for the trusted host.
Parameters	<p><ipaddr> - Specify the IP address of the trusted host.</p> <p><ipv6addr> - Specify the IPv6 address of the trusted host.</p> <p>network - Specify the network address of the trusted network. The form of network address is xxx.xxx.xxx.xxx/y.</p> <p>ipv6_prefix - Specify the IPv6 network address of the trusted network.</p> <p>add - Add interfaces for a trusted host.</p> <p>delete - Delete interfaces for a trusted host.</p> <p>snmp - Specify the trusted host for SNMP.</p> <p>telnet - Specify the trusted host for Telnet.</p> <p>ssh - Specify the trusted host for SSH.</p> <p>http - Specify the trusted host for HTTP.</p> <p>https - Specify the trusted host for HTTPSs.</p> <p>ping - Specify the trusted host for Ping.</p> <p>all - Specify the trusted host for all applications.</p>

config trusted_host

Restrictions	Only Administrator and Operator-level users can issue this command.
---------------------	---

Example usage:

To configure the trusted host:

```
DGS-3700-12:5#config trusted_host 10.48.74.121 add ssh telnet
Command: config trusted_host 10.48.74.121 add ssh telnet
```

Success.

```
DGS-3700-12:5#
```

delete trusted_host

Purpose	To delete a trusted host entry.
Syntax	delete trusted_host [ipaddr <ipaddr> ipv6address <ipv6addr> network <network_address> ipv6_prefix <ipv6networkaddr> all]
Description	This command is used to delete a trusted host entry.
Parameters	<i>ipaddr</i> - Specify the IP address of the trusted host <i>ipv6address</i> - Specify the IPv6 address of the trusted host. <i>network</i> - Specify the network address of the trusted network. <i>ipv6_prefix</i> - Specify the IPv6 network address of the trusted network. <i>all</i> - Specify that all trusted hosts will be deleted.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete a trusted host:

```
DGS-3700-12:5#delete trusted_host ipaddr 10.48.74.121
Command: delete trusted_host ipaddr 10.48.74.121
```

Success.

```
DGS-3700-12:5#
```

show trusted_host

Purpose	Used to display a list of trusted hosts entered on the Switch.
Syntax	show trusted_host
Description	This command is used to display a list of trusted hosts entered on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To display the list of trust hosts:

```
DGS-3700-12:5#show trusted_host
Command: show trusted_host

Management Stations

IP Address                               Access Interface
-----
10.62.32.1/32                             SNMP Telnet SSH HTTP HTTPs Ping
10.62.0.0/16                               SNMP Telnet SSH HTTP HTTPs Ping

Total Entries: 2
```

delete trusted_host

Purpose	Used to delete a trusted host entry made using the create trusted_host command above..
Syntax	delete trusted_host [ipaddr <ipaddr> ipv6addr<ipv6addr> network <network_address> ipv6_prefix <ipv6networkaddr> all]
Description	The delete trusted_host command is used to delete a trusted host entry made using the create trusted_host command above.
Parameters	<i>ipaddr</i> - The IP address of the trusted host. <i>ipv6addr</i> - The IPv6 address of the trusted host. <i>network</i> - The network address of the trusted network. <i>ipv6_prefix</i> - The IPv6 subnet prefix address of the trusted network <i>all</i> - All trusted hosts will be deleted.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To delete the trusted host:

```
DGS-3700-12:5# delete trusted_host 10.48.74.121
Command: delete trusted_host 10.48.74.121

Success.

DGS-3700-12:5#
```

enable snmp traps

Purpose	Used to enable SNMP trap support.
Syntax	enable snmp traps
Description	This command is used to enable SNMP trap support on the Switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To enable SNMP trap support on the Switch:

```
DGS-3700-12:5#enable snmp traps
```

```
Command: enable snmp traps
```

```
Success.
```

```
DGS-3700-12:5#
```

enable snmp authenticate_traps

Purpose	Used to enable SNMP authentication trap support.
Syntax	enable snmp authenticate_traps
Description	This command is used to enable SNMP authentication trap support on the Switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To turn on SNMP authentication trap support:

```
DGS-3700-12:5#enable snmp authenticate_traps
```

```
Command: enable snmp authenticate_traps
```

```
Success.
```

```
DGS-3700-12:5#
```

show snmp traps

Purpose	Used to show SNMP trap support on the Switch.
Syntax	show snmp traps
Description	This command is used to view the SNMP trap support status currently configured on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To view the current SNMP trap support:

```
DGS-3700-12G:5#show snmp traps
```

```
Command: show snmp traps
```

```
SNMP Traps           : Enabled
```

```
Authenticate Trap    : Enabled
```

```
Linkchange Traps     : Enabled
```

```
Coldstart Traps      : Enabled
```

```
Warmstart Traps      : Enabled
```

```
DGS-3700-12G:5#
```

disable snmp traps

Purpose	Used to disable SNMP trap support on the Switch.
Syntax	disable snmp traps
Description	This command is used to disable SNMP trap support on the Switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To prevent SNMP traps from being sent from the Switch:

```
DGS-3700-12:5#disable snmp traps
Command: disable snmp traps

Success.

DGS-3700-12:5#
```

disable snmp authenticate_traps

Purpose	Used to disable SNMP authentication trap support.
Syntax	disable snmp authenticate_traps
Description	This command is used to disable SNMP authentication support on the Switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable the SNMP authentication trap support:

```
DGS-3700-12:5#disable snmp authenticate_traps
Command: disable snmp authenticate_traps

Success.

DGS-3700-12:5#
```

config snmp system_contact

Purpose	Used to enter the name of a contact person who is responsible for the Switch.
Syntax	config snmp system_contact <sw_contact>
Description	This command is used to enter the name and/or other information to identify a contact person who is responsible for the Switch. A maximum of 255 character can be used.
Parameters	<sw_contact> – A maximum of 255 characters is allowed. A null string is accepted if there is no contact.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the Switch contact to “MIS Department II”:

```
DGS-3700-12:5#config snmp system_contact MIS Department II
Command: config snmp system_contact MIS Department II

Success.

DGS-3700-12:5#
```

config snmp system_location

Purpose	Used to enter a description of the location of the Switch.
Syntax	config snmp system_location <sw_location>
Description	This command is used to enter a description of the location of the Switch. A maximum

config snmp system_location	
	of 255 characters can be used.
Parameters	<sw_location> – A maximum of 255 characters is allowed. A null string is accepted if there is no location desired.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the Switch location for “HQ 5F”:

```
DGS-3700-12:5#config snmp system_location HQ 5F
Command: config snmp system_location HQ 5F

Success.

DGS-3700-12:5#
```

config snmp system_name	
Purpose	Used to configure the SNMP system name for the switch.
Syntax	config snmp system_name <sw_name>
Description	This command is used to configure the SNMP system name for the switch.
Parameters	<sw_name> – A maximum of 255 characters is allowed. A null string is accepted if no name is desired.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the Switch name for “DGS-3700-12 Switch”:

```
DGS-3700-12:5#config snmp system_name DGS-3700-12 Switch
Command: config snmp system_name DGS-3700-12 Switch

Success.

DGS-3700-12:5#
```

enable snmp linkchange_traps	
Purpose	To enable SNMP linkchange trap support.
Syntax	enable snmp linkchange_traps
Description	This command is used to enable SNMP linkchange trap support.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable SNMP linkchange trap support:

```
DGS-3700-12:5#enable snmp linkchange_traps
Command: enable snmp linkchange_traps

Success.

DGS-3700-12:5#
```

disable snmp linkchange_traps	
Purpose	To disable SNMP linkchange trap support.
Syntax	disable snmp linkchange_traps
Description	This command is used to disable SNMP linkchange trap support.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable SNMP linkchange trap support:

DGS-3700-12:5# disable snmp linkchange_traps Command: disable snmp linkchange_traps
 Success.
DGS-3700-12:5#

config snmp linkchange_traps ports	
Purpose	To configure the sending of linkchange traps and per port control for sending of change traps.
Syntax	config snmp linkchange_traps ports [all <portlist>] [enable disable]
Description	This command is used to configure the sending of linkchange traps and per port control for sending of change traps.
Parameters	<i>all</i> - Specify all ports. <i><portlist></i> - Specify a port range. <i>enable</i> - Enable sending of the link change trap for this port <i>disable</i> - Disable sending of the link change trap for this port.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable SNMP linkchange traps for ports 1 to 4:

DGS-3700-12:5# config snmp linkchange_traps ports 1-4 enable Command: config snmp linkchange_traps ports 1-4 enable
 Success.
DGS-3700-12:5#

config snmp coldstart_traps	
Purpose	To configure the trap state for coldstart events.
Syntax	config snmp coldstart_traps [enable disable]
Description	This command is used to configure the trap state for coldstart events.
Parameters	<i>enable</i> - Enable traps for coldstart events. The default state is enabled. <i>disable</i> - Disable traps for coldstart events.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable traps for coldstart events:

```
DGS-3700-12:5#config snmp coldstart_traps enable
Command: config snmp coldstart_traps enable

Success.

DGS-3700-12:5#
```

config snmp warmstart_traps

Purpose	To configure the trap state for warmstart events.
Syntax	config snmp warmstart_traps [enable disable]
Description	This command is used to configure the trap state for warmstart events.
Parameters	<i>enable</i> - Enable traps for warmstart events. The default state is enabled. <i>disable</i> - Disable traps for warmstart events.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To enable traps for warmstart events:

```
DGS-3700-12:5#config snmp warmstart_traps enable
Command: config snmp warmstart_traps enable

Success.

DGS-3700-12:5#
```

config rmon trap

Purpose	To configure the trap state for RMON events.
Syntax	config rmon trap {rising_alarm [enable disable] falling_alarm [enable disable]}
Description	This command is used to configure the trap state for RMON events.
Parameters	<i>rising alarm</i> - Specify the trap state for rising alarm. The default state is enabled. <i>falling alarm</i> - Specify the trap state for falling alarm. The default state is enabled.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To disable the trap state for RMON:

```
DGS-3700-12:5#config rmon trap rising_alarm disable
Command: config rmon trap rising_alarm disable

Success.

DGS-3700-12:5#
```

show rmon

Purpose	To display RMON related settings.
Syntax	show rmon
Description	This command is used to display RMON related settings.
Parameters	None.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To display current RMON settings:

```
DGS-3700-12:5#show rmon
Command: show rmon

RMON Rising Alarm Trap   : Enabled
RMON Falling Alarm Trap  : Enabled

DGS-3700-12:5#
```

SWITCH PORT COMMANDS

Back to Section Header

The switch port commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
config ports	[<portlist> all] {medium_type [fiber copper]} {speed [auto 10_half 10_full 100_half 100_full 1000_full {[master slave]}]} flow_control [enable disable] learning [enable disable] state [enable disable] mdix [auto normal cross] [description <desc 1-32> clear_description]
show ports	{<portlist>} { [description err_disabled auto_negotiation media_type details] }
enable jumbo_frame	
disable jumbo_frame	
show jumbo_frame	

Each command is listed, in detail, in the following sections.

config ports	
Purpose	Used to configure the Switch's port settings.
Syntax	config ports [<portlist> all] { medium_type [fiber copper]} { speed [auto 10_half 10_full 100_half 100_full 1000_full {[master slave]}]} flow_control [enable disable] learning [enable disable] state ([enable disable] mdix [auto normal cross] [description <desc 1-32> clear_description])
Description	This command allows for the configuration of the Switch's Ethernet ports. Only the ports listed in the <portlist> will be affected.
Parameters	<p><i>all</i> – Configure all ports on the Switch.</p> <p><i><portlist></i> – Specifies a port or range of ports to be configured.</p> <p><i>speed</i> – Allows the user to adjust the speed for a port or range of ports. The user has a choice of the following:</p> <p><i>auto</i> – Enables auto-negotiation for the specified range of ports.</p> <p><i>[10 100 1000]</i> – Configures the speed in Mbps for the specified range of ports. Gigabit ports are statically set to 1000 and cannot be set to slower speeds. When setting port speed to 1000_full, user should specify master or slave mode for 1000-based TX interface, and leave the 1000_full without any master or slave setting for other interfaces.</p> <p><i>[half full]</i> – Configures the specified range of ports as either full-duplex or half-duplex.</p> <p><i>flow_control [enable disable]</i> – Enable or disable flow control for the specified ports.</p> <p><i>learning [enable disable]</i> – Enables or disables the MAC address learning on the specified range of ports.</p> <p><i>medium_type</i> – Specifies the medium type while the configured ports are combo ports. It's an optional parameter for configuring medium type combo ports. For no combo ports, user does not need to specify medium_type in the commands.</p> <p><i>state [enable disable]</i> – Enables or disables the specified range of ports.</p> <p><i>description</i> – Enter an alphanumeric string of no more than 32 characters to describe</p>

config ports	
	<p>a selected port interface.</p> <p><i>clear description</i> – To clear the description.</p> <p><i>config ports mdix</i> - MDIX mode can be specified as auto, normal, and cross. If set to normal state, the port is in MDIX mode and can be connected to PC NIC using a straight cable. If set to cross state, the port is in mdi mode, and can be connected to a port (in mdix mode) on another switch thru a straight cable.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.



NOTE: Gigabit Ethernet Fiber ports only can be set to 1000M/100M, Full, or auto.

Example usage:

To configure the speed of ports 1-3 to be 10 Mbps, full duplex , learning enabled, state enabled and flow control enabled:

```
DGS-3700-12:5#config ports 1-3 speed 10_full learning enable state enable flow_control enable
Command: config ports 1-3 speed 10_full learning enable state enable flow_control enable

Success.

DGS-3700-12:5#
```

config ports auto_negotiation	
Purpose	Used to configure the switch port auto negotiation settings
Syntax	config ports [<portlist> all] auto_negotiation [restart remote_fault_advertised [disable offline link_fault auto_negotiation_error]]
Description	The config ports command changes switch port settings. Support of this command is project depend. The remote_fault_advertised configuration option is only valid for fiber module.
Parameters	<p><i>portlist</i> - Specified a range of ports to be configured. (UnitID:port number). For set all ports in the system , you may use “all” parameter.</p> <p><i>restart_an</i> - Restart the auto-negotiation process.</p> <p><i>remote_fault_advertised</i> - Disable: To disable remote fault advertisement.</p> <p>offline: A local device may indicate Offline prior to powering off, running transmitter tests, or removing the local device from the active Configuration. If set and detected offline, will advertise at the next auto-negotiation. It interacted for 1000Mbps MAUs.</p> <p>link_fault: If set and local device has detected a Link_Failure condition indicated by loss of synchronization, will advertise at the next auto-negotiation. It interacted for 1000Mbps MAUs.</p> <p>auto_negotiation_error: Resolution which precludes operation between a local device and link partner will advertise at the next auto-negotiation. It interacted for 1000Mbps MAUs.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To restart auto negotiation for ports 1-3.

```
DGS-3700-12:5# config ports 1:1-1:3 auto-negotiation restart_an
Success.
```

```
DGS-3700-12:5#
```

show ports

Purpose	Used to display the current configuration of a range of ports.
Syntax	show ports {<portlist>} { [description err_disabled media_type details] }
Description	This command is used to display the current configuration of a range of ports.
Parameters	<p><portlist> – Specifies a port or range of ports to be displayed.</p> <p>description – Adding this parameter to the show ports command indicates that a previously entered port description will be included in the display.</p> <p>err_disabled – Use this to list disabled ports including connection status and reason for being disabled.</p> <p>media_type - Displays port transceiver type.</p>
Restrictions	None.

Example usage:

To display the configuration of all ports on a standalone switch:

```
DGS-3700-12:5#show ports
Command: show ports
```

Port	State/ MDIX	Settings Speed/Duplex/FlowCtrl	Connection Speed/Duplex/FlowCtrl	Address Learning
1	Enabled	Auto/Disabled	Link Down	Enabled
2	Enabled	Auto/Disabled	Link Down	Enabled
3	Enabled	Auto/Disabled	1000M/Full/None	Enabled
4	Enabled	Auto/Disabled	Link Down	Enabled
5	Enabled	Auto/Disabled	Link Down	Enabled
6	Enabled	Auto/Disabled	Link Down	Enabled
7	Enabled	Auto/Disabled	100M/Full/None	Enabled
8	Enabled	Auto/Disabled	Link Down	Enabled
9	(C) Enabled	Auto/Disabled	Link Down	Enabled
9	(F) Enabled	Auto/Disabled	Link Down	Enabled
10	(C) Enabled	Auto/Disabled	Link Down	Enabled
10	(F) Enabled	Auto/Disabled	Link Down	Enabled
11	(C) Enabled	Auto/Disabled	Link Down	Enabled
11	(F) Enabled	Auto/Disabled	Link Down	Enabled
12	(C) Enabled	Auto/Disabled	Link Down	Enabled
12	(F) Enabled	Auto/Disabled	Link Down	Enabled

Notes:(F)indicates fiber medium and (C)indicates copper medium in a combo port

```
DGS-3700-12:5#
```

Example usage:

To display the configuration of all ports on a standalone switch, with description.

DGS-3700-12:5#show ports description

Command: show ports description

Port	State/ MDIX	Settings Speed/Duplex/FlowCtrl	Connection Speed/Duplex/FlowCtrl	Address Learning
1	Enabled	Auto/Disabled	Link Down	Enabled
	Description:			
2	Enabled	Auto/Disabled	Link Down	Enabled
	Description:			
3	Enabled	Auto/Disabled	1000M/Full/None	Enabled
	Description:			
4	Enabled	Auto/Disabled	Link Down	Enabled
	Description:			
5	Enabled	Auto/Disabled	Link Down	Enabled
	Description:			
6	Enabled	Auto/Disabled	Link Down	Enabled
	Description:			
7	Enabled	Auto/Disabled	100M/Full/None	Enabled
	Description:			
8	Enabled	Auto/Disabled	Link Down	Enabled
	Description:			

DGS-3700-12:5#



NOTE: Connection status displays the following status: Link Down, Speed/Duplex/FlowCtrl (link up), or Err-Disabled.

Example usage:

To display disabled ports including connection status and reason for being disabled on a standalone switch:

DGS-3700-12:5#show ports err_disabled

Command: show ports err_disabled

Port	Port State	Connection Status	Reason
-----	-----	-----	-----

DGS-3700-12:5#

enable jumbo_frame

Purpose	Used to enable the jumbo frame function on the Switch.
Syntax	enable jumbo_frame
Description	This command will allow ethernet frames larger than 1536 bytes to be processed by the Switch. The maximum size of the jumbo frame may not exceed 13312 Bytes.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable the jumbo frame:

```
DGS-3700-12:5#enable jumbo_frame
Command: enable jumbo_frame

The maximum size of jumbo frame is 13312 bytes.
Success.

DGS-3700-12:5#
```

disable jumbo_frame

Purpose	Used to disable the jumbo frame function on the Switch.
Syntax	disable jumbo_frame
Description	This command will disable the jumbo frame function on the Switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To disable the jumbo frame:

```
DGS-3700-12:5#disable jumbo_frame
Command: disable jumbo_frame

Success.

DGS-3700-12:5#
```

show jumbo_frame

Purpose	Used to show the status of the jumbo frame function on the Switch.
Syntax	show jumbo_frame
Description	This command will show the status of the jumbo frame function on the Switch.
Parameters	None.
Restrictions	None.

Example usage:
To show the jumbo frame status currently configured on the Switch:

```
DGS-3700-12:5#show jumbo_frame
Command: show jumbo_frame

Jumbo Frame State : Disabled
Maximum Frame Size : 1536 Bytes

DGS-3700-12:5#
```

TIME AND SNTP COMMANDS

Back to Section Header

The Simple Network Time Protocol (SNTP) (an adaptation of the Network Time Protocol (NTP)) commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
config sntp	{ primary <ipaddr> secondary <ipaddr> poll-interval <int 30-99999> }
show sntp	
enable sntp	
disable sntp	
config time	<date ddmthyyyy > <time hh:mm:ss >
config time_zone	{ operator [+ -] hour <gmt_hour 0-13> min <minute 0-59> }
config dst	[disable repeating {s_week <start_week 1-4,last> s_day <start_day sun-sat> s_mth <start_mth 1-12> s_time <start_time hh:mm> e_week <end_week 1-4,last> e-day <end_day sun-sat> e_mth <end_mth 1-12> e_time <end_time hh:mm> offset [30 60 90 120]} annual {s_date <start_date 1-31> s_mth <start_mth 1-12> s_time <start_time hh:mm> e_date <end_date 1-31> e_mth <end_mth 1-12> e_time <end_time hh:mm> offset [30 60 90 120]}]
show time	

Each command is listed, in detail, in the following sections.

config sntp	
Purpose	Used to setup SNTP service.
Syntax	config sntp {primary <ipaddr> secondary <ipaddr> poll-interval <int 30-99999>}
Description	This command is used to configure SNTP service from an SNTP server. SNTP must be enabled for this command to function (See enable sntp).
Parameters	<p><i>primary</i> – This is the primary server from which the SNTP information will be taken. <ipaddr> – The IP address of the primary server.</p> <p><i>secondary</i> – This is the secondary server the SNTP information will be taken from in the event the primary server is unavailable. <ipaddr> – The IP address for the secondary server.</p> <p><i>poll-interval <int 30-99999></i> – This is the interval between requests for updated SNTP information. The polling interval ranges from 30 to 99,999 seconds.</p>
Restrictions	Only Administrator and Operator-level users can issue this command. SNTP service must be enabled for this command to function (<i>enable sntp</i>).

Example usage:

To configure SNTP settings:

```
DGS-3700-12:5#config sntp primary 10.1.1.1 secondary 10.1.1.2 poll-interval 30
Command: config sntp primary 10.1.1.1 secondary 10.1.1.2 poll-interval 30

Success.

DGS-3700-12:5#
```

show sntp

Purpose	Used to display the SNTP information.
Syntax	show sntp
Description	This command will display SNTP settings information including the source IP address, time and poll interval.
Parameters	None.
Restrictions	None.

Example usage:
To display SNTP configuration information:

```
DGS-3700-12:5#show sntp
Command: show sntp

Current Time Source      : System Clock
SNTP                     : Disabled
SNTP Primary Server     : 10.1.1.1
SNTP Secondary Server   : 10.1.1.2
SNTP Poll Interval      : 30 sec

DGS-3700-12:5#
```

enable sntp

Purpose	To enable SNTP server support.
Syntax	enable sntp
Description	This command will enable SNTP support. SNTP service must be separately configured (see config sntp). Enabling and configuring SNTP support will override any manually configured system time settings.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command. SNTP settings must be configured for SNTP to function (config sntp).

Example usage:
To enable the SNTP function:

```
DGS-3700-12:5#enable sntp
Command: enable sntp

Success.

DGS-3700-12:5#
```

disable sntp

Purpose	To disable SNTP server support.
Syntax	disable sntp

disable sntp

Description	This command will disable SNTP support. SNTP service must be separately configured (see config sntp).
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable SNTP support:

```
DGS-3700-12:5#disable sntp
Command: disable sntp

Success.

DGS-3700-12:5#
```

config time

Purpose	Used to manually configure system time and date settings.
Syntax	config time <date ddmthyyy > <time hh:mm:ss>
Description	This command will configure the system time and date settings. These will be overridden if SNTP is configured and enabled.
Parameters	<i>date</i> – Express the date using two numerical characters for the day of the month, three alphabetical characters for the name of the month, and four numerical characters for the year. For example: 03aug2003. <i>time</i> – Express the system time using the format hh:mm:ss, that is, two numerical characters each for the hour using a 24-hour clock, the minute and second. For example: 19:42:30.
Restrictions	Only Administrator and Operator-level users can issue this command. Manually configured system time and date settings are overridden if SNTP support is enabled.

Example usage:

To manually set system time and date settings:

```
DGS-3700-12:5#config time 30jun2003 16:30:30
Command: config time 30jun2003 16:30:30

Success.

DGS-3700-12:5#
```

config time_zone

Purpose	Used to determine the time zone used in order to adjust the system clock.
Syntax	config time_zone {operator [+ -] hour <gmt_hour 0-13> min <minute 0-59>}
Description	This command will adjust system clock settings according to the time zone. Time zone settings will adjust SNTP information accordingly.
Parameters	<i>operator</i> – Choose to add (+) or subtract (-) time to adjust for time zone relative to GMT. <i>hour</i> – Select the number of hours different from GMT. <i>min</i> – Select the number of minutes difference added or subtracted to adjust the time zone.

config time_zone

Restrictions	Only Administrator and Operator-level users can issue this command.
---------------------	---

Example usage:

To configure time zone settings:

```
DGS-3700-12:5#config time_zone operator + hour 2 min 30
Command: config time_zone operator + hour 2 min 30

Success.

DGS-3700-12:5#
```

config dst

Purpose	Used to enable and configure time adjustments to allow for the use of Daylight Savings Time (DST).
Syntax	config dst [disable repeating { s_week <start_week 1-4,last> s_day <start_day sun-sat> s_mth <start_mth 1-12> s_time start_time hh:mm> e_week <end_week 1-4,last> e_day <end_day sun-sat> e_mth <end_mth 1-12> e_time <end_time hh:mm> offset [30 60 90 120]} annual { s_date start_date 1-31> s_mth <start_mth 1-12> s_time <start_time hh:mm> e_date <end_date 1-31> e_mth <end_mth 1-12> e_time <end_time hh:mm> offset [30 60 90 120]}]
Description	<p>This command is used to enable and configure DST. When enabled this will adjust the system clock to comply with any DST requirement. DST adjustment effects system time for both manually configured time and time set using SNTP service.</p> <p><i>disable</i> – Disable the DST seasonal time adjustment for the Switch.</p> <p><i>repeating</i> – Using repeating mode will enable DST seasonal time adjustment. Repeating mode requires that the DST beginning and ending date be specified using a formula. For example, specify to begin DST on Saturday during the second week of April and end DST on Sunday during the last week of October.</p> <p><i>annual</i> – Using annual mode will enable DST seasonal time adjustment. Annual mode requires that the DST beginning and ending date be specified concisely. For example, specify to begin DST on April 3 and end DST on October 14.</p> <p><i>s_week</i> – Configure the week of the month in which DST begins.</p> <p><start_week 1-4,last> – The number of the week during the month in which DST begins where 1 is the first week, 2 is the second week and so on, last is the last week of the month.</p> <p><i>e_week</i> – Configure the week of the month in which DST ends.</p>

config dst	
Parameters	<p><i><end_week 1-4,last></i> – The number of the week during the month in which DST ends where 1 is the first week, 2 is the second week and so on, last is the last week of the month.</p> <p><i>s_day</i> – Configure the day of the week in which DST begins.</p> <p><i><start_day sun-sat></i> – The day of the week in which DST begins expressed using a three character abbreviation (sun, mon, tue, wed, thu, fri, sat)</p> <p><i>e_day</i> – Configure the day of the week in which DST ends.</p> <p><i><end_day sun-sat></i> – The day of the week in which DST ends expressed using a three character abbreviation (sun, mon, tue, wed, thu, fri, sat)</p> <p><i>s_mth</i> – Configure the month in which DST begins.</p> <p><i><start_mth 1-12></i> – The month to begin DST expressed as a number.</p> <p><i>e_mth</i> – Configure the month in which DST ends.</p> <p><i><end_mth 1-12></i> – The month to end DST expressed as a number.</p> <p><i>s_time</i> – Configure the time of day to begin DST.</p> <p><i><start_time hh:mm></i> – Time is expressed using a 24-hour clock, in hours and minutes.</p>
	<p><i>e_time</i> – Configure the time of day to end DST.</p> <p><i><end_time hh:mm></i> – Time is expressed using a 24-hour clock, in hours and minutes.</p> <p><i>s_date</i> – Configure the specific date (day of the month) to begin DST.</p> <p><i><start_date 1-31></i> – The start date is expressed numerically.</p> <p><i>e_date</i> – Configure the specific date (day of the month) to begin DST.</p> <p><i><end_date 1-31></i> – The end date is expressed numerically.</p> <p><i>offset [30 60 90 120]</i> – Indicates number of minutes to add or to subtract during the summertime. The possible offset times are 30,60,90,120. The default value is 60.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure daylight savings time on the Switch:

```
DGS-3700-12:5#config dst repeating s_week 2 s_day tue s_mth 4 s_time 15:00 e_week 2
e_day wed e_mth 10 e_time 15:30 offset 30

Command: config dst repeating s_week 2 s_day tue s_mth 4 s_time 15:00 e_week 2 e_day
wed e_mth 10 e_time 15:30 offset 30

Success.

DGS-3700-12:5#
```

show time	
Purpose	Used to display the current time settings and status.
Syntax	show time
Description	This command will display system time and date configuration as well as display current system time.
Parameters	None.
Restrictions	None.

Example usage:

To show the time currently set on the Switch's System clock:

```
DGS-3700-12:5#show time
Command: show time

Current Time Source : System Clock
Boot Time      : 3 Jan 2000  22:45:36
Current Time   : 4 Jan 2000  01:56:30
Time Zone     : GMT +00:00
Daylight Saving Time : Disabled
  Offset In Minutes : 60
  Repeating      From : Apr 1st  Sun 00:00
                  To  : Oct last Sun 00:00
  Annual        From : 29 Apr 00:00
                  To  : 12 Oct 00:00

DGS-3700-12:5#
```

LAYER 2 FEATURES SECTION

Table of Contents

Next Section

Previous Section

BPDU ATTACK PROTECTION COMMANDS

Back to Section Header

The BPDU Attack Protection commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
config bpdu_protection ports	[<portlist> all] {state [enable disable] mode [drop block shutdown]}
config bpdu_protection recovery_timer	[<sec 60-1000000> infinite]
config bpdu_protection	[trap log] [none attack_detected attack_cleared both]
enable bpdu_protection	
disable bpdu_protection	
show bpdu_protection	{ports {<portlist>}}

Each command is listed, in detail, in the following sections.

config bpdu_protection ports	
Purpose	To configure port state and mode for BPDU protection.
Syntax	config bpdu_protection ports [<portlist> all] {state [enable disable] mode [drop block shutdown]}
Description	<p>The config bpdu_protection ports command is used to configure the BPDP protection function for the ports on the switch.</p> <p>In generally, there are two states in BPDU protection function. One is normal state, and another is under attack state. The under attack state have three modes: drop, block, and shutdown. A BPDU protection enabled port will enter under attack state when it receives one STP BPDU packet. And it will take action based on the configuration. Thus, BPDU protection can only be enabled on SPT-disabled port. BPDU protection has high priority than fbpdu setting configured by configure STP command in determination of BPDU handling. That is, when fbpbu is configured to forward STP BPDU but BPDU protection is enabled, then the port will not forward STP BPDU.</p> <p>BPDU protection also has high priority than BPDU tunnel port setting in determination of BPDU handling.</p> <p>That is, when a port is configured as BPDU tunnel port for STP, it will forward STP BPDU. But if the port is BPDU protection enabled. Then the port will not forward STP BPDU</p>
Parameters	<p><portlist> - Specify a range of ports to be configured.</p> <p>all - Specify to set all ports in the system.</p> <p>state - Specify the BPDU protection state. The default state is disabled.</p> <p>enable - Enable the BPDU protection state.</p> <p>disable - Disable the BPDU protection state.</p>

config bpdu_protection ports

	<p><i>mode</i> - Specify the BPDU protection mode. The default mode is shutdown.</p> <p><i>drop</i> - Specify to drop all received BPDU packets when the port enters the under attack state.</p> <p><i>block</i> - Specify to drop all packets (include BPDU and normal packets) when the port enters the under attack state.</p> <p><i>shutdown</i> - Specify to shut down the port when the port enters the under attack state.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure port state to enable and drop mode:

```
DGS-3700-12:5#config bpdu_protection ports 1 state enable mode drop
Command: config bpdu_protection ports 1 state enable mode drop

Success.
DGS-3700-12:5#
```

config bpdu_protection recovery_timer

Purpose	To configure the BPDU protection recovery timer.
Syntax	config bpdu_protection recovery_timer [<sec 60-1000000> infinite]
Description	When a port enters the under attack state, it can be disabled or blocked based on the configuration. The state can be recovered manually or by the auto recovery mechanism. This command is used to configure the auto-recovery timer. To manually recover the port, the user needs to disable and re-enable the port.
Parameters	<p><sec 60-1000000> - Specify the timer (in seconds) used by the Auto-Recovery mechanism to recover the port. The valid range is 60 to 1000000.</p> <p><infinite> - Specify the port will not be auto recovered.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the BPDU protection recovery timer to 120 seconds for the entrie switch:

```
DGS-3700-12:5#config bpdu_protection recovery_timer 120
Command: config bpdu_protection recovery_timer 120

Success.
DGS-3700-12:5#
```

config bpdu_protection

Purpose	To configure the BPDU protection trap state or log state.
Syntax	config bpdu_protection [trap log] [none attack_detected attack_cleared both]
Description	This command is used to configure the BPDU protection trap state or log state.
Parameters	<p><i>trap</i> - Specify the trap state.</p> <p><i>log</i> - Specify the log state.</p> <p><i>none</i> - Specify neither attack_detected nor attack_cleared is trapped or logged.</p> <p><i>attack_detected</i> - Specify events will be logged or trapped when the BPDU attacks is detected.</p> <p><i>attack_cleared</i> - Specify events will be logged or trapped when the BPDU attacks is</p>

config bpdu_protection

	cleared. <i>both</i> - Specify the events of <code>attack_detected</code> and <code>attack_cleared</code> shall be trapped or logged.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the BPDU protection trap state as both for the entire switch:

```
DGS-3700-12:5#config bpdu_protection trap both
Command: config bpdu_protection trap both

Success.

DGS-3700-12:5#
```

enable bpdu_protection

Purpose	To enable BPDU protection globally.
Syntax	enable bpdu_protection
Description	This command is used to enable BPDU protection globally for the entire switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable BPDU protection for the entire switch:

```
DGS-3700-12:5#enable bpdu_protection
Command: enable bpdu_protection

Success.

DGS-3700-12:5#
```

disable bpdu_protection

Purpose	To disable BPDU protection globally.
Syntax	disable bpdu_protection
Description	This command is used to disable BPDU protection globally for the entire switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable BPDU protection:

```
DGS-3700-12:5#disable bpdu_protection
Command: disable bpdu_protection

Success.

DGS-3700-12:5#
```

show bpdu_protection	
Purpose	To display BPDU protection status.
Syntax	show bpdu_protection {ports {<portlist>}}
Description	This command is used to display BPDU protection global configuration or per port configuration and current status.
Parameters	<i>ports {<portlist>}</i> - Specify a range of ports to be displayed.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To display BPDU protection information for the entire switch:

```
DGS-3700-12:5#show bpdu_protection
Command: show bpdu_protection

BPDU Protection Global Settings
-----
BPDU Protection Status          : Disabled
BPDU Protection Recover Time    : 60 seconds
BPDU Protection Trap State      : None
BPDU Protection Log State       : Both

DGS-3700-12:5#
```

To display BPDU protection status for ports 1 to 3:

```
DGS-3700-12:5#show bpdu_protection ports 1-3
Command: show bpdu_protection ports 1-3

Port  State      Mode      Status
-----
1     Disabled     Shutdown  Normal
2     Disabled     Shutdown  Normal
3     Disabled     Shutdown  Normal

DGS-3700-12:5#
```

ETHERNET RING PROTECTION SWITCHING (ERPS) COMMANDS

Back to Section Header

The Ethernet Ring Protection Switching (ERPS) commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
enable erps	
disable erps	
create erps raps_vlan	<vlanid>
delete erps raps_vlan	<vlanid>
config erps raps_vlan	<vlanid> [state [enable disable] ring_mel <value 0-7> ring_port [west [<port> virtual_channel] east [<port> virtual_channel]] rpl_port [west east none] rpl_owner [enable disable] protected_vlan [add delete] vlanid <vidlist> timer {holdoff_time < millisecond 0-10000> guard_time < millisecond 10-2000> wtr_time < min 5-12>} [add delete] sub_ring raps_vlan <vlanid> sub_ring raps_vlan <vlanid> tc_propagation state [enable disable]]
config erps log	[enable disable]
config erps trap	[enable disable]
show erps raps_vlan	<vlanid> {sub_ring}

Each command is listed, in detail, in the following sections.

enable erps	
Purpose	To enable the global ERPS function on the switch.
Syntax	enable erps
Description	<p>This command is used to enable the global ERPS function on a switch. When both the global state and the specified ring ERPS state are enabled, the specified ring will be activated.</p> <p>The global ERPS function cannot be enabled, when any ERPS ring on the device is enabled and the integrity of any ring parameter is not available. For each ring with the ring state enabled when ERPS is enabled, the following integrity will be checked:</p> <ol style="list-style-type: none"> 1. R-APS VLAN is created. 2. The Ring port is a tagged member port of the R-APS VLAN. 3. The RPL port is specified if the RPL owner is enabled. <p>The default state is disabled.</p>
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable ERPS:

```
DGS-3700-12:5#enable erps
Command: enable erps

Success.

DGS-3700-12:5#
```

disable erps

Purpose	To disable the global ERPS function on the switch.
Syntax	disable erps
Description	This command is used to disable the ERPS function on the switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To disable ERPS:

```
DGS-3700-12:5#disable erps
Command: disable erps

Success.

DGS-3700-12:5#
```

create erps raps_vlan

Purpose	To create an R-APS VLAN on the switch.
Syntax	create erps raps_vlan <vlanid>
Description	This command is used to create an R-APS VLAN on the switch. There should be only one R-APS VLAN used to transfer R-APS messages. Note that the R-APS VLAN must already have been created by the create vlan command.
Parameters	<vlanid> - Specify the VLAN which will be the R-APS VLAN.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To create an ERPS RAPS VLAN:

```
DGS-3700-12:5#create erps raps_vlan 4094
Command: create erps raps_vlan 4094

Success.

DGS-3700-12:5#
```

delete erps raps_vlan

Purpose	To delete an R-APS VLAN on the switch.
Syntax	delete erps raps_vlan <vlanid>
Description	This command is used to delete an R-APS VLAN on the switch. When an R-APS VLAN is deleted, all parameters related to this R-APS VLAN will also be deleted. This command can only be issued when the ring is not active.
Parameters	<vlanid> - Specify the VLAN which will be the R-APS VLAN.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete an R-APS VLAN:

```
DGS-3700-12:5#delete erps raps_vlan 4094
Command: delete erps raps_vlan 4094

Success.

DGS-3700-12:5#
```

config erps raps_vlan

Purpose To set the R-APS VLAN parameters.

Syntax `config erps raps_vlan <vlanid> [state [enable | disable] | ring_mel <value 0-7> | ring_port [west [<port> | virtual_channel] | east [<port> | virtual_channel]] | rpl_port [west | east | none] | rpl_owner [enable | disable] | protected_vlan [add | delete] vlanid <vidlist> | timer {holdoff_time < millisecond 0-10000> | guard_time < millisecond 10-2000> | wtr_time < min 5-12>} | [add | delete] sub_ring raps_vlan <vlanid> | sub_ring raps_vlan <vlanid> tc_propagation state [enable | disable]]`

Description This command is used to set the R-APS VLAN parameters. The **ring_mel** command is used to configure the ring MEL for an R-APS VLAN. The ring MEL is one field in the R-APS PDU. Note that if CFM (Connectivity Fault Management) and ERPS are used at the same time, R-APS PDU is one of a suite of Ethernet OAM PDU. The behavior for forwarding of R-APS PDU should follow the Ethernet OAM. If the ring MEL of R-APS PDU is not higher than the level of the MEP on the ring ports, the R-APS PDU cannot be forwarded on the ring.

The **ring_port** command is used to configure the port that participates in the ERPS ring. Restrictions apply for ports that are included in a link aggregation group. A link aggregation group can be configured as a ring port by specifying the master port of the link aggregation port. Only the master port can be specified as a ring port. If the specified link aggregation group is eliminated, the master port retains its ring port status. If the ring port configured on virtual channel, the ring which the port connects to will be considered as a sub-ring.

Note that the ring ports cannot be modified when the ring is enabled.

The **rpl** command is used to configure the RPL port and the RPL owner.

RPL port - Specifies one of the R-APS VLAN ring ports as the RPL port. To remove an RPL port from an R-APS VLAN, use the **none** designation for **rpl_port**.

RPL owner - Specifies the node as the RPL owner. Note that the RPL port and RPL owner cannot be modified when the ring is enabled, and the virtual channel cannot be configured as RPL. For example, if a ring port is configured on the virtual channel and the ring port is configured as an RPL port, an error message will be display and the configuration will fail.

The **protected_vlan** command is used to configure the VLANs that are protected by the ERPS function.

The R-APS VLAN cannot be the protected VLAN. The protected VLAN can be one that has already been created, or it can be used for a VLAN that has not yet been created.

The **timer** commands are used to configure the protocol timers:

config erps raps_vlan	
	<p>Holdoff timer - Hold-off timer is used to filter out intermittent link faults when link failure occurs. This timer is used during the protection switching process when link failure occurs. When a ring node detects a link's failure, it will start the hold off timer. It will report the link failure event (R-APS BPDU with SF flag) after the link failure is confirmed within this period of time.</p> <p>Guard timer - Guard timer is used to prevent ring nodes from receiving outdated R-APS messages. This timer is used during the protection switching process when link failure recovers. When the link node detects that the link failure is recovered, it will report the link failure recovery event (R-APS PDU with NR flag) and start the guard timer before the guard timer expires. All received R-APS messages are ignored by this ring node, except in the case where a burst of three R-APS event messages that indicates the topology of a sub-ring has changed and the node needs to flush the FDB received on the node. Therefore, the blocking state of the recovered link will not be recovered within this period of time. This time should be greater than the maximum expected forwarding delay for which one R-APS message circles around the ring.</p> <p>WTR timer - WTR timer is used to prevent frequent operation of the protection switch due to an intermittent defect. This timer is used during the protection switching process when a link failure recovers. This timer is only used by the RPL owner. When the RPL owner in protection state receives R-APS PDU with an NR flag, it will start the WTR timer. The RPL owner will block the original unblocked RPL port and start to send R-APS PDU with an RB flag after the link recovery is confirmed within this period of time.</p>
Parameters	<p><i><vlanid></i> - The VLAN ID associated with the R-APS VLAN.</p> <p><i>state</i> – specify the ring state.</p> <p style="padding-left: 20px;"><i>enable</i> – enable the specified ring.</p> <p style="padding-left: 20px;"><i>disable</i> – disable the specified ring.</p> <p><i>ring_mel</i> - Specify the ring MEL of the R-APS function. The default ring MEL is 1.</p> <p><i><value 0-7></i> - Specify a value between 0 and 7.</p> <p><i>ring_port</i> - Specify a port participating in the ERPS ring.</p> <p><i>west</i> - Specify the port as the west ring port.</p> <p><i>virtual_channel</i> - Specifies the port as west port on virtual channel.</p> <p><i>east</i> - Specify the port as the east ring port.</p> <p><i>virtual_channel</i> - Specifies the port as east port on virtual channel.</p> <p><i>rpl_port</i> - By default, the node has no RPL port.</p> <p style="padding-left: 20px;"><i>west</i> - Specify the west ring port as the RPL port.</p> <p style="padding-left: 20px;"><i>east</i> - Specify the east ring port as the RPL port.</p> <p style="padding-left: 20px;"><i>none</i> - No RPL port on this node.</p> <p><i>rpl_owner</i> - By default, the RPS owner is disabled.</p> <p style="padding-left: 20px;"><i>enable</i> - Specify the device as an RPL owner node.</p> <p style="padding-left: 20px;"><i>disable</i> - This node is not an RPL owner.</p> <p><i>protected_vlan</i> - Specify VLANs that are protected by the ERPS function. The R-APS VLAN cannot be the protected VLAN. The protected VLAN can be one that has already been created, or it can be used for a VLAN that has not yet been created.</p> <p style="padding-left: 20px;"><i>add</i> - Add VLANs to the protected VLAN group</p> <p style="padding-left: 20px;"><i>delete</i> - Delete VLANs from the protected VLAN group.</p> <p><i>vlanid</i> - Specify a VLAN ID list.</p> <p><i>timer</i> - Configure the ERPS timers for a specific R-APS VLAN.</p> <p><i>holdoff_time</i> - Specify the holdoff time of the R-APS function. The default hold off time is 0 milliseconds.</p>

config erps raps_vlan	
	<p><i>guard_time</i> - Specify the guard time of the R-APS function. The default guard time is 500 milliseconds.</p> <p><i>wtr_time</i> - Specify the WTR time of the R-APS function. The range is from 5 to 12 minutes. The default WTR time is 5 minutes.</p> <p><i>add</i> - Connect the sub-ring to another ring.</p> <p><i>delete</i> - Disconnect the sub-ring from the connected ring.</p> <p><i>tc_propagation_state</i> – Specifies the state of topology change propagation.</p> <p><i>enable</i> – Enables the topology change propagation.</p> <p><i>disable</i> – Disables the topology change propagation.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable the R-APS

```
DGS-3700-12:5# config erps raps_vlan 4094 state enable
Command: config erps raps_vlan 4094 state enable
```

Success.

```
DGS-3700-12:5#
```

To set the R-APS west ring port parameter to 5:

```
DGS-3700-12:5#config erps raps_vlan 4094 ring_port west 5
Command: config erps raps_vlan 4094 ring_port west 5
```

Success.

```
DGS-3700-12:5#
```

To set the R-APS east ring port parameter to 7:

```
DGS-3700-12:5#config erps raps_vlan 4094 ring_port east 7
Command: config erps raps_vlan 4094 ring_port east 7
```

Success.

```
DGS-3700-12:5#
```

To set the R-APS RPL parameter:

```
DGS-3700-12:5#config erps raps_vlan 4094 rpl_port west
Command: config erps raps_vlan 4094 rpl_port west
```

Success.

```
DGS-3700-12:5#config erps raps_vlan 4094 rpl_owner enable
Command: config erps raps_vlan 4094 rpl_owner enable
```

Success.

```
DGS-3700-12:5#
```

To set the R-APS protected VLAN parameter:

```
DGS-3700-12:5#config erps raps_vlan 4094 protected_vlan add vlanid 10-20
Command: config erps raps_vlan 4094 protected_vlan add vlanid 10-20

Success.

DGS-3700-12:5#
```

To set the R-APS timer parameter:

```
DGS-3700-12:5#config erps raps_vlan 4094 timer holdoff_time 100 guard_time 1000
wtr_time 10
Command: config erps raps_vlan 4094 timer holdoff_time 100 guard_time 1000 wtr_time 10

Success.

DGS-3700-12:5#
```

To configure a sub-ring connected to another ring.

```
DGS-3700-12:5#config erps raps_vlan 4094 add sub_ring raps_vlan 4093
Command: config erps raps_vlan 4094 add sub_ring raps_vlan 4093

Success.

DGS-3700-12:5#
```

To configure the state of topology change propagation.

```
DGS-3700-12:5#config erps raps_vlan 4094 sub_ring raps_vlan 4093 tc_propagation state
enable
Command: config erps raps_vlan 4094 sub_ring raps_vlan 4093 tc_propagation state enable

Success.

DGS-3700-12:5#
```

config erps log

Purpose	To configure the ERPS log state.
Syntax	config erps log [enable disable]
Description	This command is used to configure the ERPS log state.
Parameters	<i>enable</i> - Enable the log state. The default value is disabled. <i>disable</i> - Ddisable the log state.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To set the log state:

```
DGS-3700-12:5#config erps log enable
Command: config erps log enable

Success.

DGS-3700-12:5#
```

To set the trap state:

```
DGS-3700-12:5#config erps trap enable
Command: config erps trap enable

Success.

DGS-3700-12:5#
```

show erps

Purpose	To display ERPS information.
Syntax	show erps {raps_vlan <vlanid> {sub_ring}}
Description	This command is used to display ERPS configuration and operation information. The port state of the ring port may be as "Forwarding", "Blocking", "Signal Fail". "Forwarding" indicates that traffic is able to be forwarded. "Blocking" indicates that traffic is blocked by ERPS and a signal failure is not detected on the port. "Signal Fail" indicates that a signal failure is detected on the port and traffic is blocked by ERPS.
Parameters	<i>vlanid</i> - Specifies the R-APS VLAN. <i>sub_ring</i> - Display sub-ring configuration information.
Restrictions	None.

Example usage:

To display ERPS information:

DGS-3700-12:5# show erps

Command: show erps

ERPS Information

Global Status : Enabled
 Log Status : Disabled
 Trap Status : Disabled

 R-APS VLAN : 4092
 ERPS Status : Enabled
 West Port : 5 (Blocking)
 East Port : 7 (Forwarding)
 RPL Port : West Port
 Owner : Enabled (Active)
 Protected VLANs : 100-300, 4094
 Ring MEL : 2
 Holdoff Time : 0 milliseconds
 Guard Time : 500 milliseconds
 WTR Time : 5 minutes
 Current Ring State : Idle

 R-APS VLAN : 4094
 ERPS Status : Enabled
 West Port : Virtual Channel
 East Port : 12 (Forwarding)
 RPL Port : None
 Owner : Disabled
 Protected VLANs : 250-300
 Ring MEL : 2
 Holdoff Time : 0 milliseconds
 Guard Time : 500 milliseconds
 WTR Time : 5 minutes
 Current Ring State : Idle

 Total Ring: 2

DGS-3700-12:5# show erps raps_vlan 4092 sub_ring

Command: show erps raps_vlan 4092 sub_ring

R-APS VLAN: 4092

Sub-Ring R-APS VLAN	TC Propagation State
-----	-----
4094	Enable
-----	-----

 4094 Enable

 Total Sub-Ring Connected: 1

Success.

FILTER (DHCP SERVER/NETBIOS) COMMANDS

Back to Section Header

DHCP Server Screening Settings

This function allows you not only to restrict all DHCP Server packets but also to receive any specified DHCP server packets by any specified DHCP client, it is useful when one or more than one DHCP servers are present on the network and both provide DHCP services to different distinct groups of clients. Enabling the DHCP filter for the first time will create both an access profile and deny rule per port, following this other access rules can be created. These rules are used to block all DHCP server packets. Similarly, the addition of a permit DHCP entry will create one permit rule in the access profile at the first time the DHCP client MAC address is the client MAC address, and the Source IP address is the same as the DHCP server's IP address (UDP port number 67). These rules are used to permit the DHCP server packets with specific fields, which the user configures.

When the DHCP Server filter function is enabled, all DHCP Server packets will be filtered from a specific port. Also, you are allowed to create entries for specific port-based Server IP address and Client MAC address binding entries. Be aware that the DHCP Server filter function must be enabled first. Once all settings are complete, all DHCP Server packets will be filtered from a specific port except those that meet the Server IP Address and Client MAC Address binding.

NetBIOS Filtering Setting

When the NetBIOS filter is enabled, all NetBIOS packets will be filtered from the specified port. Enabling the NetBIOS filter will create one access profile and create three access rules per port (UDP port numbers 137 and 138 and TCP port number 139).

For Extensive NetBIOS Filter, when it is enabled, all NetBIOS packets over 802.3 frames will be filtered from the specified port. This command is used to configure the state of the NetBIOS filter. Enabling the Extensive NetBIOS filter will create one access profile and create one access rule per port (DSAP (Destination Service Access Point) =F0, and SASP (Source Service Access Point) =F0).

The DHCP Server/NetBIOS Filter commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
config filter dhcp_server	[add permit server_ip <ipaddr> {client_mac <macaddr>} ports [<portlist> all] delete permit server_ip <ipaddr> {client_mac <macaddr>} ports [<portlist> all] ports [<portlist> all] state [enable disable] illegal_server_log_suppress_duration [1min 5min 30min] trap_log [enable disable]]
show filter dhcp_server	
config filter netbios	[<portlist> all] state [enable disable]
show filter netbios	
config filter extensive_netbios	[<portlist> all] state [enable disable]
show filter extensive_netbios	

Each command is listed, in detail, in the following sections.

config filter dhcp_server	
Purpose	DHCP server packets except those that have been server IP/client MAC bound will be filtered. This command is used to configure the state of the function for filtering of DHCP server packet and to add/delete the DHCP server/client binding entry.
Syntax	config filter dhcp_server [add permit server_ip <ipaddr> {client_mac <macaddr>} ports [<portlist> all] delete permit server_ip <ipaddr> {client_mac <macaddr>} ports [<portlist> all] ports [<portlist> all] state [enable disable] illegal_server_log_suppress_duration [1min 5min 30min] trap_log [enable disable]]
Description	This command has two purposes: to filter all DHCP server packets on the specified port(s) and to allow some DHCP server packets to be forwarded if they are on the pre-defined server IP address/client MAC address binding list. Thus the DHCP server can be restricted to service a specified DHCP client. This is useful when there are two or more DHCP servers present on a network.
Parameters	<p><i>add permit server_ip</i> - Specify the IP address of the DHCP server</p> <p><i>client_mac</i> - Specify the MAC address of the DHCP client.</p> <p><i>ports</i> - See Below: <portlist> - Specify the range of ports to be configured. <i>all</i> - Specify to configure all ports.</p> <p><i>delete permit server_ip</i> - Delete permit server IP address.</p> <p><i>state</i> - See Below: <i>enable</i> - Enable the state. <i>disable</i> - Disable the state.</p> <p><i>illegal_server_log_suppress_duration</i> - See Below: <i>1min</i> - Specify an illegal server log suppression duration of 1 minute. <i>5min</i> - Specify an illegal server log suppression duration of 5 minutes. <i>30min</i> - Specify an illegal server log suppression duration of 30 minutes.</p> <p><i>trap_log</i> - See Below: <i>enable</i> - Enable the trap log feature. <i>disable</i> - Disable the trap log feature.</p>
Restrictions	<p>Only Administrator-level users can issue this command.</p> <p>Enabling the DHCP filter will create one access profile and create one deny rule per port (UDP port 67).</p> <p>Addition of a DHCP filter permit entry will create one access profile and create one permit rule (DA = client MAC address, SA = source IP address and UDP port 67).</p>

Example usage:

To add an entry from the DHCP server/client filter list in the switch's database:

```
DGS-3700-12:5#config filter dhcp_server add permit server_ip 10.1.1.1 client_mac 00-00-00-00-00-01 port 1-12
Command: config filter dhcp_server add permit server_ip 10.1.1.1 client_mac 00-00-00-00-00-01 port 1-12

Success

DGS-3700-12:5#
```

To configure the DHCP filter state:

```
DGS-3700-12:5#config filter dhcp_server ports 1-10 state enable
Command: config filter dhcp_server ports 1-10 state enable

Success

DGS-3700-12:5#
```

show filter dhcp_server

Purpose	Used to display current DHCP server/client filter list created on the switch.
Syntax	show filter dhcp_server
Description	This command is used to display DHCP server/client filter list created on the switch.
Parameters	None.
Restrictions	Only Administrator users can issue this command.

Example usage:

To display the DHCP server filter list created on the switch:

```
DGS-3700-12G:5#show filter dhcp_server
Command: show filter dhcp_server

Enabled Ports:

Trap & Log State: Disabled

Illegal Server Log Suppress Duration:5 minutes
Filter DHCP Server/Client Table
Server IP Address Client MAC Address Port
-----
10.255.255.254 00-00-00-00-00-01 1-12

Total Entries: 1

DGS-3700-12:5#
```

config filter netbios

Purpose	Used to configure the switch to filter NetBIOS packets from specified ports.
Syntax	config filter netbios [<portlist> all] state [enable disable]
Description	This command will configure the switch to filter NetBIOS packets from the specified ports.
Parameters	<i>[<portlist>/all]</i> – The list of port numbers to which the NetBIOS filter will be applied. <i>state [enable/disable]</i> – Used to enable/disable the NetBIOS filter on the switch.
Restrictions	Only Administrator-level users can issue this command. Enabling the NetBIOS filter will create one access profile and three deny rules per port (UDP port number 137 and 138, and TCP port 139).

Example usage:

To configure the NetBIOS state:

```
DGS-3700-12:5#config filter netbios 1-10 state enable
Command: config filter netbios 1-10 state enable

Success.

DGS-3700-12:5#
```

show filter netbios

Purpose	Used to display the switch settings to filter NetBIOS packets from specified ports.
Syntax	show filter netbios
Description	This command will display the switch settings to filter NetBIOS packets from the specified ports.
Parameters	None.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To display the extensive NetBIOS filter status:

```
DGS-3700-12:5#show filter netbios
Command: show filter netbios

Enabled Ports: 1-3

DGS-3700-12:5#
```

config filter extensive_netbios

Purpose	Used to configure the switch to filter 802.3 frame NetBIOS packets from specified ports.
Syntax	config filter extensive_netbios [<portlist> all] state [enable disable]
Description	This command will configure the switch to filter 802.3 frame NetBIOS packets from the specified ports.
Parameters	<i>[<portlist> all]</i> – The list of port numbers to which the NetBIOS filter will be applied. <i>state [enable disable]</i> – Used to enable/disable the NetBIOS filter on the switch.
Restrictions	Only Administrator-level users can issue this command. Enabling the NetBIOS filter will create one access profile and one deny rules per port (DSAP=F0, SASP=F0).

Example usage:

To configure the extensive NetBIOS state:

```
DGS-3700-12:5#config filter extensive_netbios 1-10 state enable
Command: config filter extensive_netbios 1-10 state enable

Success.

DGS-3700-12:5#
```

show filter extensive_netbios

Purpose	Used to display the switch settings to filter NetBIOS packets from specified ports.
Syntax	show filter extensive_netbios
Description	This command will display the switch settings to filter NetBIOS packets from the

show filter extensive_netbios

specified ports.

Parameters

None.

Restrictions

Only Administrator-level users can issue this command.

Example usage:

To display the extensive NetBIOS filter status:

```
DGS-3700-12:5#show filter extensive_netbios
Command: show filter extensive_netbios

Enabled Ports: 1-3

DGS-3700-12:5#
```

FORWARDING DATABASE COMMANDS

Back to Section Header

The layer 2 forwarding database commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
create fdb	<vlan_name 32> <macaddr> [port <port> drop]
create multicast_fdb	<vlan_name 32> <macaddr>
config multicast_fdb	<vlan_name 32> <macaddr> [add delete] <portlist>
config fdb aging_time	<sec 10-1000000>
delete fdb	<vlan_name 32> <macaddr>
clear fdb	[vlan <vlan_name 32> port <port> all]
show multicast_fdb	{vlan <vlan_name 32> mac_address <macaddr>}
show fdb	{port <port> vlan <vlan_name 32> mac_address <macaddr> static aging_time security}
config multicast vlan_filtering_mode	[vlanid <vidlist> vlan <vlan_name 32> all] [forward_all_groups forward_unregistered_groups filter_unregistered_groups]
show multicast vlan_filtering_mode	{[vlanid <vidlist> vlan <vlan_name 32>]}

Each command is listed, in detail, in the following sections.

create fdb	
Purpose	Used to create a static entry to the unicast MAC address forwarding table (database).
Syntax	create fdb <vlan_name 32> <macaddr> [port <port> drop]
Description	This command will make an entry into the Switch's unicast MAC address forwarding database.
Parameters	<p><vlan_name 32> – The name of the VLAN on which the MAC address resides.</p> <p><macaddr> – The MAC address that will be added to the forwarding table.</p> <p>port <port> – The port number corresponding to the MAC destination address. The Switch will always forward traffic to the specified device through this port.</p> <p>drop – Specifies that all the ports specified will drop the packet of the previously configured MAC.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create a unicast MAC FDB entry:

```
DGS-3700-12:5#create fdb default 00-00-00-00-01-02 port 5
Command: create fdb default 00-00-00-00-01-02 port 5

Success.

DGS-3700-12:5#
```

create multicast_fdb	
Purpose	Used to create a static entry to the multicast MAC address forwarding table (database)

create multicast_fdb	
Syntax	create multicast_fdb <vlan_name 32> <macaddr>
Description	This command will make an entry into the Switch's multicast MAC address forwarding database.
Parameters	<vlan_name 32> – The name of the VLAN on which the MAC address resides. <macaddr> – The MAC address that will be added to the forwarding table.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create multicast MAC forwarding:

```
DGS-3700-12:5#create multicast_fdb default 01-00-00-00-00-01
Command: create multicast_fdb default 01-00-00-00-00-01

Success.

DGS-3700-12:5#
```

config multicast_fdb	
Purpose	Used to configure the Switch's multicast MAC address forwarding database.
Syntax	config multicast_fdb <vlan_name 32> <macaddr> [add delete] <portlist>
Description	This command configures the multicast MAC address forwarding table.
Parameters	<vlan_name 32> – The name of the VLAN on which the MAC address resides. <macaddr> – The MAC address that is present in the forwarding database table. [add delete] – add will add ports to the forwarding table. delete will remove ports from the multicast forwarding table. <portlist> – Specifies a port or range of ports to be configured.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To add multicast MAC forwarding:

```
DGS-3700-12:5#config multicast_fdb default 01-00-00-00-00-01 add 1-5
Command: config multicast_fdb default 01-00-00-00-00-01 add 1-5

Success.

DGS-3700-12:5#
```

config fdb aging_time	
Purpose	Used to set the aging time of the forwarding database.
Syntax	config fdb aging_time <sec 10-1000000>
Description	This command affects the learning process of the Switch. Dynamic forwarding table entries, which are made up of the source MAC addresses and their associated port numbers, are deleted from the table if they are not accessed within the aging time. The aging time can be from 10 to 1000000 seconds with a default value of 300 seconds. A very long aging time can result in dynamic forwarding table entries that are out-of-date or no longer exist. This may cause incorrect packet forwarding decisions by the Switch. If the aging time is too short however, many entries may be aged out too soon. This will result in a high percentage of received packets whose source addresses cannot be found in the forwarding table, in which case the

config fdb aging_time	
	Switch will broadcast the packet to all ports, negating many of the benefits of having a switch.
Parameters	<sec 10-1000000> – The aging time for the MAC address forwarding database value. The value in seconds may be between 10 and 1000000 seconds.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To set the FDB aging time:

```
DGS-3700-12:5#config fdb aging_time 300
Command: config fdb aging_time 300

Success.

DGS-3700-12:5#
```

delete fdb	
Purpose	Used to delete an entry to the Switch's forwarding database.
Syntax	delete fdb <vlan_name 32> <macaddr>
Description	This command is used to delete a previous entry to the Switch's MAC address forwarding database.
Parameters	<vlan_name 32> – The name of the VLAN on which the MAC address resides. <macaddr> – The MAC address wanted be deleted from the forwarding table.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete a permanent FDB entry:

```
DGS-3700-12:5#delete fdb default 00-00-00-00-01-02
Command: delete fdb default 00-00-00-00-01-02

Success.

DGS-3700-12:5#
```

To delete a multicast FDB entry:

```
DGS-3700-12:5#delete fdb default 01-00-00-00-01-02
Command: delete fdb default 01-00-00-00-01-02

Success.

DGS-3700-12:5#
```

clear fdb	
Purpose	Used to clear the Switch's forwarding database of all dynamically learned MAC addresses.
Syntax	clear fdb [vlan <vlan_name 32> port <port> all]
Description	This command is used to clear dynamically learned entries from the Switch's forwarding database.
Parameters	<vlan_name 32> – The name of the VLAN on which the MAC address resides.

clear fdb

	<i>port</i> <port> – The port number corresponding to the MAC destination address. <i>all</i> – Clears all dynamic entries from the Switch’s forwarding database.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To clear all FDB dynamic entries:

```
DGS-3700-12:5#clear fdb all
Command: clear fdb all

Success.

DGS-3700-12:5#
```

show multicast_fdb

Purpose	Used to display the contents of the Switch’s multicast forwarding database.
Syntax	show multicast_fdb [vlan <vlan_name 32> mac_address <macaddr>]
Description	This command is used to display the current contents of the Switch’s multicast MAC address forwarding database.
Parameters	<vlan_name 32> – The name of the VLAN on which the MAC address resides. <macaddr> – The MAC address that is present in the forwarding database table.
Restrictions	None.

Example usage:

To display multicast MAC address table of default VLAN:

```
DGS-3700-12:5#show multicast_fdb vlan default
Command: show multicast_fdb vlan default

VLAN Name       : default
MAC Address      : 01-00-00-00-00-01
Egress Ports     : 1-5
Mode             : Static

Total Entries: 1

DGS-3700-12:5#
```

show fdb

Purpose	Used to display the current unicast MAC address forwarding database.
Syntax	show fdb {port <port> vlan <vlan_name 32> mac_address <macaddr> static aging_time security}
Description	This command will display the current contents of the Switch’s forwarding database.
Parameters	<i>port</i> <port> – The port on which the MAC address resides. <vlan_name 32> – The name of the VLAN on which the MAC address resides. <macaddr> – The MAC address that is present in the forwarding database table. <i>static</i> – Displays the static MAC address entries. <i>security</i> – Displays the security setting for the MAC address forwarding database. <i>aging_time</i> – Displays the aging time for the MAC address forwarding database.
Restrictions	None.

Example usage:

To display unicast MAC address table:

```
DGS-3700-12:5#show fdb
Command: show fdb

Unicast MAC Address Aging Time = 300

VID  VLAN Name          MAC Address          Port  Type
-----
1    default             00-00-00-1B-FC-02   7     Dynamic
1    default             00-00-00-E0-06-09   7     Dynamic
1    default             00-00-48-CD-25-3A   7     Dynamic
1    default             00-00-5E-00-01-01   7     Dynamic
1    default             00-00-5E-00-01-5F   7     Dynamic
1    default             00-00-81-00-00-01   7     Dynamic
1    default             00-00-81-9A-F2-F4   7     Dynamic
1    default             00-00-C8-CD-25-3A   7     Dynamic
1    default             00-00-E2-2F-44-EC   7     Dynamic
1    default             00-00-EB-A4-50-5A   7     Dynamic
1    default             00-00-F0-78-EB-00   7     Dynamic
1    default             00-00-FC-0E-34-3E   7     Dynamic
1    default             00-01-02-03-04-00   CPU   Self
1    default             0-01-06-30-00-00    7     Dynamic
1    default             00-01-10-FE-0D-14   7     Dynamic
```

config multicast vlan_filtering_mode

Purpose	Used to configure the the multicast packet filtering mode for VLANs.
Syntax	config multicast vlan_filtering_mode [vlanid <vidlist> vlan <vlan_name 32> all] [forward_all_groups forward_unregistered_groups filter_unregistered_groups]
Description	This command is used to configure the multicast packet filtering mode for VLANs. Port filtering mode and VLAN filtering mode are mutual exclusive.
Parameters	<i>vidlist</i> – Specifies a range of VLANs to be configured. <i>vlan_name 32</i> – Specifies the name of the VLANs to be configured. <i>all</i> – Specifies all parameters of the VLAN to be configured. The filtering mode can be any of the following: <i>forward_all_groups</i> <i>forward_unregistered_groups</i> <i>filter_unregistered_groups</i>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the multicast packet filtering mode for VLANs:

```
DGS-3700-12:5#config multicast vlan_filtering_mode vlanid 200-300 forward_all_groups
Command: config multicast vlan_filtering_mode vlanid 200-300 forward_all_groups

Success.

DGS-3700-12:5#
```

show multicast vlan_filtering_mode

show multicast vlan_filtering_mode	
Purpose	Used to show the multicast packet filtering mode for VLANs.
Syntax	show multicast vlan_filtering_mode {[vlanid < vidlist > vlan <vlan_name 32>]}
Description	This command is used to display the multicast packet filtering mode for VLAN.
Parameters	<i>vidlist</i> – Specifies a range of vlans to be configured. <i>vlan_name 32</i> - Specifies the name of the VLANs to be configured. If no parameter specified , the device will show all multicast filtering settings in the device.
Restrictions	None.

Example usage:

To display multicast VLAN filtering mode for VLANs:

```
DGS-3700-12:5#show multicast vlan_filtering_mode
Command: show multicast vlan_filtering_mode

VLAN ID/VLAN Name                               Multicast Filter Mode
-----
1 /default                                       forward_unregistered_groups
3 /RG                                           forward_unregistered_groups

DGS-3700-12:5#
```

IGMP MULTICAST VLAN COMMANDS

Back to Section Header

The IGMP Multicast VLAN commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
create igmp_snooping multicast_vlan	<vlan_name 32> <vlanid 2-4094> {remap_priority [<value 0-7> none] { replace_priority}}
config igmp_snooping multicast_vlan	<vlan_name 32> {[add delete] [member_port <portlist> [source_port <portlist> untag_source_port <portlist>] tag_member_port <portlist>] state [enable disable] replace_source_ip <ipaddr> remap_priority [<value 0-7> none] { replace_priority}}(1)
config igmp_snooping multicast_vlan_group	<vlan_name 32> [add delete] profile_name <profile_name 1-32> <vlan_name 32>
show igmp_snooping multicast_vlan_group	{< vlan_name 32> }
delete igmp_snooping multicast_vlan	<vlan_name 32>
enable igmp_snooping multicast_vlan	
disable igmp_snooping multicast_vlan	
show igmp_snooping multicast_vlan	{<vlan_name 32> }
create igmp_snooping multicast_vlan_group_profile	<profile_name 1-32>
config igmp_snooping multicast_vlan_group_profile	<profile_name 1-32> [add delete] <mcast_address_list>
delete igmp_snooping multicast_vlan_group_profile	[profile_name <profile_name 1-32> all]
show igmp_snooping multicast_vlan_group_profile	{<profile_name 1-32> }
config igmp_snooping multicast_vlan forward_unmatched	[disable enable]

Each command is listed, in detail, in the following sections.

create igmp_snooping multicast_vlan	
Purpose	Used to create an IGMP multicast VLAN
Syntax	create igmp_snooping multicast_vlan <vlan_name 32> <vlanid 2-4094> {remap_priority [<value 0-7> none] { replace_priority}}
Description	This command is used to create an IGMP multicast_vlan. Multiple multicast VLAN can be configured. The IGMP multicast VLAN being created can not exist in the 1Q VLAN database. Multiple IGMP multicast VLAN can be created. The IGMP multicast VLAN snooping function co-exist with the 1Q VLAN snooping function.

create igmp_snooping multicast_vlan	
Parameters	<p><i><vlan_name></i> – The name of the VLAN to be created. Each multicast VLAN is given a name that can be up to 32 characters.</p> <p><i>vlanid</i> – The VLAN ID of the multicast VLAN to be create. The range is 2-4094</p> <p><i>remap_priority</i></p> <ul style="list-style-type: none"> • <i><value 0-7></i> - Specify the remap priority (0 to 7) to be associated with the data traffic to be forwarded on the multicast VLAN. • <i>none</i> - If none is specified, the packet’s original priority will be used. The default setting is none. <p><i>replace_priority</i> - Specify that the packet’s priority will be changed by the switch, based on the remap priority. This flag will only take effect when the remap priority is set.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create IGMP multicast VLAN RG 11:

```
DGS-3700-12:5# create igmp_snooping multicast_vlan RG 11
Command: create igmp_snooping multicast_vlan RG 11

Success.
DGS-3700-12:5#
```

config igmp_snooping multicast_vlan	
Purpose	Used to configure the parameter of the specific IGMP multicast VLAN.
Syntax	config igmp_snooping multicast_vlan <vlan_name 32> {[add delete] [member_port <portlist> [source_port <portlist> untag_source_port <portlist>] tag_member_port <portlist>] state [enable disable] replace_source_ip <ipaddr> remap_priority [<value 0-7> none] { replace_priority}}(1)
Description	<p>This command allows you to add a member port, add a tag member port, and add a source port to the port list. The member port will automatically become the untagged member of the IGMP multicast VLAN, the tag member port and the source port will automatically become the tagged member of the IGMP multicast VLAN. To change the port list, the new port list will replace the previous port list if the add or delete is not specified.</p> <p>The member port list and source port list can not overlap. However, the member port of one IGMP multicast VLAN can overlap with another IGMP multicast VLAN. The IGMP multicast VLAN must be created first before configuration.</p>
Parameters	<p><i><vlan_name></i> – The name of the VLAN to be created. Each multicast VLAN is given a name that can be up to 32 characters.</p> <p><i>member_port</i> – A range of member ports to add to the multicast VLAN. They will become the untagged member port of the IGMP multicast VLAN.</p> <p><i>untag_source_port</i> - Specify the source port or range of source ports as untagged members of the multicast VLAN. The PVID of the untagged source port is automatically changed to the multicast VLAN. Source ports must be either tagged or untagged for any single multicast VLAN, i.e. both types cannot be members of the same multicast VLAN</p> <p><i>tag_member_port</i> – Specifies the tagged member port of the IGMP multicast VLAN.</p> <p><i>source_port</i> – A range of source ports to add to the multicast VLAN.</p> <p><i>state</i> – enable or disable multicast VLAN for the chosen VLAN.</p>

config igmp_snooping multicast_vlan	
	<p><i>replace_source_ip</i> – With the IGMP snooping function, the IGMP report packet sent by the host will be forwarded to the source port. Before forwarding of the packet, the source IP address in the join packet needs to be replaced by this IP address.</p> <p><i>remap_priority</i> -</p> <ul style="list-style-type: none"> • <value 0-7> - The remap priority value (0 to 7) to be associated with the data traffic to be forwarded on the multicast VLAN. • <i>none</i> - If none is specified, the packet's original priority is used. The default setting is none. <p><i>replace_priority</i> - Specify that the packet priority will be changed to the remap priority, but only if remap priority is set.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure an IGMP multicast VLAN:

```
DGS-3700-12:5#config igmp_snooping multicast_vlan v1 add member_port 1,3 state enable
Command: config igmp_snooping multicast_vlan v1 add member_port 1,3 state enable

Success.

DGS-3700-12:5#
```

config igmp_snooping multicast_vlan_group	
Purpose	Used to configure the multicast group which will be learned with the specific IGMP multicast VLAN.
Syntax	<vlan_name 32> [add delete] profile_name <profile_name 1-32>
Description	<p>This command is used to configure the multicast group which will be learned by the specific IGMP multicast VLAN. There are two cases that need to be considered. The join packet will be learned with the IGMP multicast VLAN that contains the destination multicast group. If the destination multicast group of the join packet can not be classified into any IGMP multicast VLAN that this port belongs to, then the join packet will be learned with the natural VLAN of the packet.</p> <p>When an IGMP packet is received, first, it will check whether to be processed by the IGMP snooping. If the IGMP snooping for the classified VLAN of this IGMP packet is enabled, it will be processed based on IGMP snooping function. If the IGMP snooping for the classified VLAN of this IGMP packet is disabled, then it will be checked whether to be processed by the IGMP Multicast VLAN function.</p> <p>There are some cases when an IGMP packet can be processed by IGMP Multicast VLAN. If there are no profiles systemwise, and there is only one IGMP Multicast VLAN, then this IGMP packet will be associated with this only IGMP Multicast VLAN.</p> <p>If the packet is a tagged packet, the packet will be matched against the profile on this VLAN. If matched, the packet will be associated with this VLAN. Otherwise, the packet is an unmatched packet. If the packet is an untagged packet, the packet will be matched against profiles on all IGMP Multicast VLANs. If it matches profiles on one of the IGMP Multicast VLAN, the packet will be associated with this VLAN. If it does not match profiles on any VLANs, then the packet is an unmatched packet. If the packet is an unmatched packet, it will not be processed by the IGMP Multicast VLAN. Instead, it will be processed based on the forwarding mode for unmatched packets and the classified VLAN of this packet.</p>

config igmp_snooping multicast_vlan_group

	 <p>Note: The same profile can not be overlapped in different IGMP Multicast VLANs if these IGMP Multicast VLANs have an overlapping portlist. Multiple profiles can be added to a multicast VLAN.</p>
Parameters	<p><i><vlan_name 32></i> – The name of the multicast VLAN to be configured, each multicast VLAN is given a name that can be up to 32 characters.</p> <p><i>add</i> – Used to associate a profile to a multicast VLAN.</p> <p><i>delete</i> – Used to remove a profile from a multicast VLAN.</p> <p><i><profile_name 32></i> – The name of the IPv4 multicast VLAN group profile to be associated the specified multicast VLAN.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To add a group to an IGMP Multicast VLAN:

```
DGS-3700-12:5#config igmp_snooping multicast_vlan_group mv1 add profile_name RG
Command: config igmp_snooping multicast_vlan_group mv1 add profile_name RG

Success.

DGS-3700-12:5#
```

show igmp_snooping multicast_vlan_group

Purpose	Used to display the multicast groups configured for the specified IGMP Multicast VLAN.
Syntax	show igmp_snooping multicast_vlan_group {< vlan_name 32> }
Description	This command is used to display the multicast groups configured for the specified IGMP Multicast VLAN.
Parameters	<i>vlan_name</i> – The name of the multicast VLAN to be configured, each multicast VLAN is given a name that can be up to 32 characters.
Restrictions	None.

Example usage:

To display the multicast groups configured for an IGMP Multicast VLAN.

```
DGS-3700-12:5#show igmp_snooping multicast_vlan_group RG
Command: show igmp_snooping multicast_vlan_group RG

VLAN Name          VLAN ID  Multicast Group Profiles
-----
RG                  11

DGS-3700-12:5#
```

delete igmp_snooping multicast_vlan

Purpose	Used to delete an IGMP Muticast VLAN.
Syntax	delete igmp_snooping multicast_vlan <vlan_name 32>
Description	This command allows you to delete an IGMP Multicast VLAN.
Parameters	<i>vlan_name</i> – The name of the multicast VLAN to be deleted.

delete igmp_snooping multicast_vlan

Restrictions	Only Administrator and Operator-level users can issue this command.
---------------------	---

Example usage:

To delete an IGMP Multicast VLAN:

```
DGS-3700-12:5#delete igmp_snooping multicast_vlan v1
Command: delete igmp_snooping multicast_vlan v1

Success.

DGS-3700-12:5#
```

enable/disable igmp_snooping multicast_vlan

Purpose	Used to enable/disable the IGMP Multicast VLAN function.
Syntax	enable igmp_snooping multicast_vlan disable igmp_snooping multicast_vlan
Description	This command controls the IGMP Multicast VLAN function. The IGMP Multicast VLAN will take effect when igmp snooping multicast vlan is enabled. By default, the IGMP Multicast VLAN is in a disabled state.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable IGMP Multicast VLAN:

```
DGS-3700-12:5#enable igmp_snooping multicast_vlan
Command: enable igmp_snooping multicast_vlan

Success.

DGS-3700-12:5#
```

show igmp_snooping multicast_vlan

Purpose	Used to show the information of IGMP Multicast VLAN.
Syntax	show igmp_snooping multicast_vlan {<vlan_name 32>}
Description	This command allows you to show the information of IGMP Multicast VLAN.
Parameters	<vlan_name> – The name of the multicast VLAN to be shown.
Restrictions	None.

Example usage:

To display IGMP Multicast VLAN:

```
DGS-3700-12:5#show igmp_snooping multicast_vlan
Command: show igmp_snooping multicast_vlan

IGMP Multicast VLAN Global State      : Enabled
IGMP Multicast VLAN Forward Unmatched : Enabled

VLAN Name          : RG
VID                : 11

Member(Untagged) Ports : 4-5
Tagged Member Ports   :
Source Ports         :
Untagged Source Ports :
Status               : Enabled
Replace Source IP    : 0.0.0.0
Remap Priority        : None

Total Entry: 1

DGS-3700-12:5#
```

create igmp_snooping multicast_vlan_group_profile

Purpose	Used to create an IGMP Multicast VLAN group profile on the switch.
Syntax	create igmp_snooping multicast_vlan_group_profile <profile_name 1-32>
Description	This command is used to create an IGMP Multicast VLAN group profile. The profile name cannot be used for IGMP snooping or MLD snooping.
Parameters	<profile_name 32> – Specifies the IPv4 multicast VLAN group profile name, max length is 32. If not specified, all IPv4 multicast VLAN group profiles will be displayed.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create an IGMP multicast VLAN group profile “p1”:

```
DGS-3700-12:5#create igmp_snooping multicast_vlan_group_profile p1
Command: create igmp_snooping multicast_vlan_group_profile p1

Success.

DGS-3700-12:5#
```

config igmp_snooping multicast_vlan_group_profile

Purpose	Used to configure an IGMP Multicast VLAN group profile on the switch, to add or delete multicast address on the profile.
Syntax	config igmp_snooping multicast_vlan_group_profile <profile_name 1-32> [add delete] <mcast_address_list>
Description	This command configures an IGMP Multicast VLAN group profile on the switch, to add or delete multicast address for the profile.
Parameters	<profile_name 32> – Specifies the IGMP Multicast VLAN group profile name, max length is 32. [add delete] – Add or delete IGMP Multicast address list to or from this multicast VLAN group profile <mcast_address_list> – Specifies the IGMP Multicast addresses to be configured. It

config igmp_snooping multicast_vlan_group_profile

	can be continuous single multicast addresses, such as 225.1.1.1, 225.1.1.3, 225.1.1.8, or a multicast address range, such as 225.1.1.1-225.2.2.2, or both of them, such as 225.1.1.1, 225.1.1.18-225.1.1.20
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To add 233.1.1.1 to 266.1.1.1 to IGMP multicast VLAN group profile “p1”:

```
DGS-3700-12:5#config igmp_snooping multicast_vlan_group_profile p1 add 225.1.1.1-226.1.1.1
Command: config igmp_snooping multicast_vlan_group_profile p1 add 225.1.1.1-226.1.1.1

Success.

DGS-3700-12:5#
```

delete igmp_snooping multicast_vlan_group_profile

Purpose	Used to delete an IGMP Multicast VLAN group profile on the switch.
Syntax	delete igmp_snooping multicast_vlan_group_profile [profile_name <profile_name 1-32> all]
Description	This command deletes an IGMP Multicast VLAN group profile on the switch.
Parameters	<profile_name 32> – Specifies the IGMP Multicast VLAN profile name, max length is 32. all – All IGMP Multicast VLAN group profiles will be deleted.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete the IGMP multicast VLAN group profile “p1”:

```
DGS-3700-12:5#delete igmp_snooping multicast_vlan_group_profile profile_name p1
Command: delete igmp_snooping multicast_vlan_group_profile profile_name p1

Success.

DGS-3700-12:5#
```

show igmp_snooping multicast_vlan_group_profile

Purpose	Used to view an IGMP Multicast VLAN group profile on the switch.
Syntax	show igmp_snooping multicast_vlan_group_profile {<profile_name 1-32>}
Description	This command displays an IGMP Multicast VLAN group profile on the switch.
Parameters	{<profile_name 32>} – Specifies the IGMP Multicast VLAN profile name, max length is 32. If not specifies, all IGMP Multicast VLAN group profile will be displayed.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To display the IGMP Multicast VLAN group profile “p1”:

```
DGS-3700-12:5#show igmp_snooping multicast_vlan_group_profile p1
```

```
Command: show igmp_snooping multicast_vlan_group_profile p1
```

Profile Name	Multicast Addresses
p1	225.1.1.1-226.1.1.1

```
DGS-3700-12:5#
```

config igmp_snooping multicast_vlan forward_unmatched

Purpose	Used to configure forwarding mode for IGMP Multicast VLAN unmatched packets.
Syntax	config igmp_snooping multicast_vlan forward_unmatched [disable enable]
Description	When the switch receives an IGMP packet, it will match the packet against the multicast profile to determine the multicast VLAN to be associated with. If the packet does not match any profiles, the packet will be forwarded or dropped based on the the setting. By default, the packet will be dropped.
Parameters	<i>enable</i> – The unmatched packet will be flooded on the VLAN. <i>disable</i> – The unmatched packet will be dropped.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To set unmatched packets to be flooded on the VLAN:

```
DGS-3700-12:5#config igmp_snooping multicast_vlan forward_unmatched enable
```

```
Command: config igmp_snooping multicast_vlan forward_unmatched enable
```

```
Success.
```

```
DGS-3700-12:5#
```

IGMP SNOOPING COMMANDS

Back to Section Header

The IGMP Snooping commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
config igmp_snooping	[vlan_name <vlan_name 32> vlanid <vlanid_list> all] { state [enable disable] fast_leave [enable disable] report_suppression [enable disable]}
config igmp_snooping querier	[vlan_name <vlan_name 32> vlanid <vlanid_list> all] {query_interval <sec 1-65535> max_response_time <sec 1-25> robustness_variable <value 1-7> last_member_query_interval <sec 1-25> state [enable disable] version <value 1-3>}
enable igmp_snooping	
show igmp_snooping	{[vlan <vlan_name 32> vlanid <vlanid_list>]}
disable igmp_snooping	
show igmp_snooping group	{[vlan <vlan_name 32> vlanid <vlanid_list> ports <portlist>] {<ipaddr>}} {data_driven}
show igmp_snooping rate_limit	[ports <portlist> vlanid <vlanid_list>]
config igmp_snooping rate_limit	[ports <portlist> vlanid <vlanid_list>] [<value 1-1000> no_limit]
show igmp_snooping forwarding	{[vlan <vlan_name 32> vlanid <vlanid_list>]}
show igmp_snooping static_group	{[vlan <vlan_name 32> vlanid <vlanid_list>] <ipaddr >}
create igmp_snooping static_group	[vlan <vlan_name 32> vlanid <vlanid_list>] <ipaddr>
delete igmp_snooping static_group	[vlan <vlan_name 32> vlanid <vlanid_list>] <ipaddr>
config igmp_snooping static_group	[vlan <vlan_name 32> vlanid <vlanid_list>] <ipaddr> [add delete] <portlist>
show igmp_snooping statistic counter	[vlan <vlan_name 32> vlanid <vlanid_list> ports <portlist>]
clear igmp_snooping statistic counter	
show igmp_snooping host	{[vlan <vlan_name 32> vlanid <vlanid_list> ports <portlist> group <ipaddr>] }
config router_ports	[vlan <vlan_name 32> vlanid <vlanid_list>] [add delete] <portlist>
config router_ports_forbidden	[vlan <vlan_name 32> vlanid <vlanid_list>] [add delete] <portlist>
show router ports	[vlan <vlan_name 32> vlanid <vlanid_list> all] {[static dynamic forbidden]}
config igmp_snooping data_driven_learning max_learned_entry	<value 1-1024>
config igmp_snooping data_driven_learning	[all vlan_name <vlan_name> vlanid <vlanid_list>] { state [enable disable] aged_out [enable disable] expiry_time <sec 1-65535>}
clear igmp_snooping data_driven_group	[all [vlan_name <vlan_name> vlanid <vlanid_list>] [<ipaddr> all]]

Each command is listed, in detail, in the following sections.

config igmp_snooping	
Purpose	Used to configure IGMP snooping on the Switch.
Syntax	config igmp_snooping [vlan_name <vlan_name 32> vlanid <vlanid_list> all] { state [enable disable] fast_leave [enable disable] report_suppression [enable disable]}
Description	This command allows the user to configure IGMP snooping on the Switch.
Parameters	<p><vlan_name 32> – The name of the VLAN for which IGMP snooping is to be configured.</p> <p><vlanid_list> – The VIDs of the VLAN for which IGMP snooping is to be configured.</p> <p>state [enable disable] – Allows users to enable or disable IGMP snooping for the specified VLAN.</p> <p>fast_leave [enable disable] – Allows users to enable or disable IGMP snooping fast leave for the specified VLAN.</p> <p>report_suppression [enable/disable] – Allows users to enable or disable IGMP snooping report suppression for the specified VLAN.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure IGMP snooping:

```
DGS-3700-12:5#config igmp_snooping vlan default state enable fast_leave enable
report_suppression disable
Command: config igmp_snooping vlan default state enable fast_leave enable
report_suppression disable

Success.

DGS-3700-12:5#
```

config igmp_snooping querier	
Purpose	Used to configure the the time in seconds between general query transmissions, the maximum time in seconds to wait for reports from members and the permitted packet loss that guarantees IGMP snooping.
Syntax	config igmp_snooping querier [vlan_name <vlan_name 32> vlanid <vlanid_list> all] {query_interval <sec 1-65535> max_response_time <sec 1-25> robustness_variable <value 1-7> last_member_query_interval <sec 1-25> state [enable disable] version <value 1-3>}
Description	This command is used to configure IGMP snooping querier.
Parameters	<p>vlan_name – The name of the VLAN for which IGMP snooping querier is to be configured.</p> <p><vlanid_list> – The VIDs of the VLAN for which IGMP snooping is to be configured.</p> <p>query_interval – Specifies the amount of time in seconds between general query transmissions. the default setting is 125 seconds.</p> <p>max_response_time – The maximum time in seconds to wait for reports from members. The default setting is 10 seconds.</p> <p>robustness_variable – Provides fine-tuning to allow for expected packet loss on a</p>

config igmp_snooping querier	
	<p>subnet. The value of the robustness variable is used in calculating the following IGMP message intervals:</p> <p>Group member interval – Amount of time that must pass before a multicast router decides there are no more members of a group on a network. This interval is calculated as follows: (robustness variable x query interval) + (1 x query response interval).</p> <p>Other querier present interval – Amount of time that must pass before a multicast router decides that there is no longer another multicast router that is the querier. This interval is calculated as follows: (robustness variable x query interval) + (0.5 x query response interval).</p> <p>Last member query count – Number of group-specific queries sent before the router assumes there are no local members of a group. The default number is the value of the robustness variable.</p> <p>By default, the robustness variable is set to 2. You might want to increase this value if you expect a subnet to be lossy.</p> <p><i>last_member_query_interval</i> – The maximum amount of time between group-specific query messages, including those sent in response to leave-group messages. You might lower this interval to reduce the amount of time it takes a router to detect the loss of the last member of a group.</p> <p><i>state</i> – If the state is enable, it allows the switch to be selected as a IGMP Querier (sends IGMP query packets). If the state is disabled, then the switch can not play the role as a querier. Note that if the Layer 3 router connected to the switch provide only the IGMP proxy function but not provide the mutlicast routing function, then this state must be configured as disabled. Otherwise, if the Layer 3 router is not selected as the querier, it will not send the IGMP query packet. Since it will not also send the multicast-routing protocol packet, the port will be timed out as a router port.</p> <p><i>version</i> – The version of the IGMP Query sent by the switch.</p>
Restrictions	Only Administrator or Operator-level users can issue this command.

Example usage:

To configure the IGMP snooping querier:

```
DGS-3700-12:5#config igmp_snooping querier vlan default query_interval 125 state enable
Command: config igmp_snooping querier vlan default query_interval 125 state enable

Success.

DGS-3700-12:5#
```

config router_ports	
Purpose	Used to configure ports as router ports.
Syntax	config router_ports [<vlan_name 32> vlanid <vlanid_list>] [add delete] <portlist>
Description	This command allows users to designate a range of ports as being connected to multicast-enabled routers. This will ensure that all packets with such a router as its destination will reach the multicast-enabled router – regardless of protocol, etc.
Parameters	<p><vlan_name 32> – The name of the VLAN on which the router port resides.</p> <p><vlanid_list> – The VIDs of the VLAN on which the router port resides.</p> <p>[add delete] – Specifies whether to add or delete router ports of the specified VLAN.</p>

config router_ports

	<portlist> – Specifies a port or range of ports that will be configured as router ports.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To set up static router ports:

```
DGS-3700-12:5#config router_ports vlan default add 1-10
Command: config router_ports vlan default add 1-10

Success.

DGS-3700-12:5#
```

config router_ports_forbidden

Purpose	Used to configure ports as forbidden multicast router ports.
Syntax	config router_ports_forbidden [vlan <vlan_name 32> vlanid <vlanid_list>] [add delete] <portlist>
Description	This command allows designation of a port or range of ports as being forbidden to multicast-enabled routers. This will ensure that multicast packets will not be forwarded to this port – regardless of protocol, etc.
Parameters	<vlan_name 32> – The name of the VLAN on which the router port resides. <vlanid_list> – The VIDs of the VLAN on which the forbidden router port resides. [add delete] – Specifies whether to add or delete forbidden router ports of the specified VLAN. <portlist> – Specifies a range of ports that will be configured as forbidden router ports.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To set up forbidden router ports:

```
DGS-3700-12:5#config router_ports_forbidden vlan default add 2-10
Command: config router_ports_forbidden vlan default add 2-10

Success.

DGS-3700-12:5#
```

enable igmp_snooping

Purpose	Used to enable IGMP snooping on the Switch.
Syntax	enable igmp_snooping
Description	This command allows users to enable IGMP snooping on the Switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable IGMP snooping on the Switch:

```
DGS-3700-12:5#enable igmp_snooping
Command: enable igmp_snooping

Success.

DGS-3700-12:5#
```

disable igmp_snooping

Purpose	Used to enable IGMP snooping on the Switch.
Syntax	disable igmp_snooping
Description	This command disables IGMP snooping on the Switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To disable IGMP snooping on the Switch:

```
DGS-3700-12:5#disable igmp_snooping
Command: disable igmp_snooping

Success.

DGS-3700-12:5#
```

show igmp_snooping

Purpose	Used to show the current status of IGMP snooping on the Switch.
Syntax	show igmp_snooping {[vlan <vlan_name 32> vlanid <vlanid_list>] }
Description	This command will display the current IGMP snooping configuration on the Switch.
Parameters	<vlan_name 32> – The name of the VLAN for which to view the IGMP snooping configuration. <vlanid_list> – The VIDs of the VLAN for which to view the IGMP snooping configuration.
Restrictions	None.

Example usage:
To show IGMP snooping:

```
DGS-3700-12:5#show igmp_snooping
Command: show igmp_snooping

IGMP Snooping Global State           : Enabled
Data Driven Learning Max Entries     : 128

VLAN Name                             : default
Query Interval                         : 125
Max Response Time                      : 10
Robustness Value                       : 2
Last Member Query Interval            : 1
Querier State                          : Disable
Querier Role                           : Non-Querier
Querier IP                             : 0.0.0.0
Querier Expiry Time                   : 0 secs
State                                  : Disable
Fast Leave                             : Disable
Report Suppression                     : Enable
Rate Limit                             : No Limitation
Version                                : 3
Data Driven Learning State             : Enable
Data Driven Learning Aged Out         : Disable
Data Driven Group Expiry Time         : 260

Total Entries: 1

DGS-3700-12:5#
```

show router_ports

Purpose	Used to display the currently configured router ports on the Switch.
Syntax	show router_ports [vlan <vlan_name 32> vlanid <vlanid_list> all] {[static dynamic forbidden]}
Description	This command will display the router ports currently configured on the Switch.
Parameters	<p><vlan_name 32> – The name of the VLAN on which the router port resides.</p> <p><vlanid_list> – The VIDs of the VLAN on which the router port resides.</p> <p><i>all</i> – All the IGMP router ports will be displayed.</p> <p><i>static</i> – Displays router ports that have been statically configured.</p> <p><i>dynamic</i> – Displays router ports that have been dynamically configured.</p> <p><i>forbidden</i> – Displays router ports that are forbidden.</p>
Restrictions	None.

Example usage:

To display the router ports.

```
DGS-3700-12:5#show router_ports all
Command: show router_ports all

VLAN Name           : default
Static router port  :
Dynamic router port :
  Router IP         :
Forbidden router port :

VLAN Name           : v1
Static router port  :
Dynamic router port :
  Router IP         :
Forbidden router port :

VLAN Name           : RG
Static router port  :
Dynamic router port :
  Router IP         :
Forbidden router port :

Total Entries: 3

DGS-3700-12:5#
```

show igmp_snooping group

Purpose	Used to display the current IGMP snooping configuration on the Switch.
Syntax	show igmp_snooping group {[vlan <vlan_name 32> vlanid <vlanid_list> ports <portlist>] {<ipaddr>}} {data_driven}
Description	This command will display the current IGMP setup currently configured on the Switch.
Parameters	<p><vlan_name 32> – The name of the VLAN for which to view IGMP snooping group information.</p> <p><vlanid_list> – The VIDs of the VLAN for which to view IGMP snooping group information.</p> <p><portlist> – The list of ports for which to view IGMP snooping group information.</p> <p><ipaddr> – To view the information of this specified group.</p> <p>data_driven – To view the groups learnt by data driven only.</p> <p>If no parameter is specified, the system will display all current IGMP snooping groups.</p>
Restrictions	None.

Example usage:

To view the current IGMP snooping group:

```

DGS-3700-12:5#show igmp_snooping group
Command: show igmp_snooping group

Source/Group      : NULL/224.1.1.1
VLAN Name/VID     : default/1
Member Ports     : 12
Up Time          : 62
Expiry Time      : 198
Filter Mode      : EXCLUDE

Source/Group      : NULL/224.1.1.2
VLAN Name/VID     : default/1
Member Ports     : 11
Up Time          : 72
Expiry Time      : 188
Filter Mode      : EXCLUDE

Source/Group      : 29.1.1.1/229.1.1.1
VLAN Name/VID     : default/1
Member Ports     : 12
Up Time          : 3
Expiry Time      : 257
Filter Mode      : INCLUDE

Source/Group      : 29.1.1.2/229.1.1.1
VLAN Name/VID     : default/1
Member Ports     : 12
Up Time          : 3
Expiry Time      : 257
Filter Mode      : INCLUDE

Source/Group      : 29.1.1.3/229.1.1.1
VLAN Name/VID     : default/1
Member Ports     : 12
Up Time          : 3
Expiry Time      : 257
Filter Mode      : INCLUDE

Source/Group      : 29.1.1.4/229.1.1.1
VLAN Name/VID     : default/1
Member Ports     : 12
Up Time          : 3
Expiry Time      : 257
Filter Mode      : INCLUDE

Total Entries : 6

DGS-3700-12:5#
    
```

show igmp_snooping rate_limit

Purpose	Used to show rate limitation.
Syntax	show igmp_snooping rate_limit [ports <portlist> vlanid <vlanid_list>]
Description	This command is used to display the rate of IGMP control packet that is allowed per port or VLAN.
Parameters	<portlist> – Specifies a port or range of ports that will be displayed. <vlanid_list> – Specifies a VLAN or range of VLANs that will be displayed.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To show rate limitation:

```
DGS-3700-12G:5#show igmp_snooping rate_limit ports 1
Command: show igmp_snooping rate_limit ports 1

Port      Rate Limit
-----
1         No Limit

Total Entries: 1

DGS-3700-12G:5#
```

config igmp_snooping rate_limit

Purpose	Used to show rate limitation.
Syntax	config igmp_snooping rate_limit [ports <portlist> vlanid <vlanid_list>] [<value 1-1000> no_limit]
Description	This command is used to configure the rate of IGMP control packets that are allowed per port or VLAN.
Parameters	<p><portlist> – Specifies a port or range of ports that will be displayed.</p> <p><vlanid_list> – Specifies a VLAN or range of VLANs that will be displayed.</p> <p><value 1-1000> – Specifies the rate of IGMP control packet that the switch can process on a specific port. The rate is specified in packets per second. The packets that exceeds the limited rate will be dropped. The default setting is no_limit.</p> <p>no_limit – Allows users to configure the rate limitation to no limit.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure rate limitation:

```
DGS-3700-12:5#config igmp_snooping rate_limit ports 1 100
Command: config igmp_snooping rate_limit ports 1 100

Success.

DGS-3700-12:5#
```

show igmp_snooping forwarding

Purpose	Used to display the current IGMP snooping forwarding information on the Switch.
Syntax	show igmp_snooping forwarding {[vlan <vlan_name 32> vlanid <vlanid_list>]}
Description	This command will display the current IGMP forwarding information on the Switch.
Parameters	<p><vlan_name 32> – The name of the VLAN for which to view IGMP snooping forwarding information. If not specified, all VLAN's IGMP snooping forwarding information will be displayed.</p> <p><vlanid_list> – The list of the VLAN IDs for which to view IGMP snooping forwarding information. If not specified, all VLAN's IGMP snooping forwarding information will be displayed.</p>
Restrictions	None.

Example usage:

To view the current IGMP snooping forwarding information:

```
DGS-3700-12:5#show igmp_snooping forwarding
Command: show igmp_snooping forwarding

VLAN Name           : default
Source IP           : *
Multicast Group     : 225.1.1.1
Port Member        : 3

Total Entries : 1
```

show igmp_snooping static_group

Purpose	Used to display the current IGMP snooping static group information on the Switch.
Syntax	show igmp_snooping static_group {[vlan <vlan_name 32> vlanid <vlanid_list>] <ipaddr >}
Description	This command is used to display the current IGMP snooping static group information on the Switch.
Parameters	<vlan_name 32> – The name of the VLAN for which to view IGMP snooping static group information, if not specified, all static groups will be displayed. <vlanid_list> – The list of the VLAN IDs for which to view IGMP snooping static group information, if not specified, all static groups will be displayed. <ipaddr > – The static group address for which to view IGMP snooping static group information.
Restrictions	None.

Example usage:

To view the current IGMP snooping static group information:

```
DGS-3700-12:5#show igmp_snooping static_group
Command: show igmp_snooping static_group

VLAN ID/Name           IP Address           Static Member Ports
-----
1/default              225.1.1.1           1-3

Total Entries : 1

DGS-3700-12:5#
```

create igmp_snooping static_group

Purpose	Used to display the current IGMP snooping static group information on the Switch.
Syntax	create igmp_snooping static_group [vlan <vlan_name 32> vlanid <vlanid_list>] <ipaddr>
Description	This command allows you to create an IGMP snooping static group. Member ports can be added to the static group. The static member and the dynamic member port form the member ports of a group. The static group will only take effect when IGMP snooping is enabled on the VLAN. For those static member ports, the device needs to emulate the IGMP protocol operation to the querier, and forward the traffic destined to the multicast group to

create igmp_snooping static_group	
	<p>the member ports.</p> <p>For a layer 3 device, the device is also responsible to route the packet destined for this specific group to static member ports.</p> <p>The static member port will only affect V2 IGMP operation.</p> <p>The Reserved IP multicast address 224.0.0.X must be excluded from the configured group. The VLAN must be created first before a static group can be created.</p>
Parameters	<p><vlan_name 32> – The name of the VLAN for which to create IGMP snooping static group information.</p> <p><vlanid_list> – The list of the VLAN IDs for which to create IGMP snooping static group information.</p> <p><ipaddr > – The static group address for which to create IGMP snooping static group information.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create a static group 226.1.1.1 for VID 1:

<pre>DGS-3700-12:5#create igmp_snooping static_group vlanid 1 226.1.1.1 Command: create igmp_snooping static_group vlanid 1 226.1.1.1 Success. DGS-3700-12:5#</pre>

delete igmp_snooping static_group	
Purpose	Used to delete the current IGMP snooping static group on the Switch.
Syntax	delete igmp_snooping static_group [vlan <vlan_name 32> vlanid <vlanid_list >] <ipaddr>
Description	This command is used to delete an IGMP snooping static group will not affect the IGMP snooping dynamic member ports of a group.
Parameters	<p><vlan_name 32> – The name of the VLAN for which to delete IGMP snooping static group information.</p> <p><vlanid_list> – The list of the VLAN IDs for which to delete IGMP snooping static group information.</p> <p><ipaddr > – The static group address for which to delete IGMP snooping static group information.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete a static group 226.1.1.1 on VID 1:

```
DGS-3700-12:5#delete igmp_snooping static_group vlanid 1 226.1.1.1
Command: delete igmp_snooping static_group vlanid 1 226.1.1.1

Success.

DGS-3700-12:5#
```

config igmp_snooping static_group

Purpose	Used to configure the current IGMP snooping static group on the Switch.
Syntax	config igmp_snooping static_group [vlan <vlan_name 32> vlanid <vlanid_list>] <ipaddr> [add delete] <portlist>
Description	This command is used to add or delete ports to/from the given static group.
Parameters	<p><vlan_name 32> – The name of the VLAN for which to configure IGMP snooping static group information.</p> <p><vlanid_list> – The list of the VLAN IDs for which to configure IGMP snooping static group information.</p> <p>< ipaddr > – The static group address for which to configure IGMP snooping static group information.</p> <p>[add delete] <portlist> – Portlist to add or delete.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To add port 5 to static group 226.1.1.1 on VID 1:

```
DGS-3700-12:5#config igmp_snooping static_group vlanid 1 226.1.1.1 add 5
Command: config igmp_snooping static_group vlanid 1 226.1.1.1 add 5

Success.

DGS-3700-12:5#
```

show igmp_snooping statistic counter

Purpose	Used to view the current IGMP snooping statistics on the Switch.
Syntax	show igmp_snooping statistic counter [vlan <vlan_name 32> vlanid <vlanid_list> ports <portlist>]
Description	This command is used to view this information, snooping must be enabled first.
Parameters	<p><vlan_name 32> – The name of the VLAN for which to view IGMP snooping statistic counter.</p> <p><vlanid_list> – The list of the VLAN IDs for which to view IGMP snooping statistic counter.</p> <p><portlist> – The list of the ports for which to view IGMP snooping statistic counter.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To view IGMP snooping statistic on VID 1:

DGS-3700-12:5#show igmp_snooping statistic counter vlanid 1

Command: show igmp_snooping statistic counter vlanid 1

VLAN Name : default

Group Number : 1

Receive Statistics

Query

IGMP v1 Query : 0
 IGMP v2 Query : 0
 IGMP v3 Query : 0
 Total : 0
 Dropped By Rate Limitation : 0
 Dropped By Multicast VLAN : 0

Report & Leave

IGMP v1 Report : 0
 IGMP v2 Report : 0
 IGMP v3 Report : 0
 IGMP v2 Leave : 0
 Total : 0
 Dropped By Rate Limitation : 0
 Dropped By Max Group Limitation : 0
 Dropped By Group Filter : 0
 Dropped By Multicast VLAN : 0

Transmit Statistics

Query

IGMP v1 Query : 0
 IGMP v2 Query : 0
 IGMP v3 Query : 14
 Total : 14

Report & Leave

IGMP v1 Report : 0
 IGMP v2 Report : 0
 IGMP v3 Report : 0
 IGMP v2 Leave : 0
 Total : 0

Total Entries : 1

DGS-3700-12:5#

clear igmp_snooping statistic counter

Purpose	Used to clear the current IGMP snooping statistic on the Switch.
Syntax	clear igmp_snooping statistic counter
Description	This command is used to clear all IGMP snooping statistic counters.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To clear IGMP snooping statistic counter:

```
DGS-3700-12:5#clear igmp_snooping statistic counter
Command: clear igmp_snooping statistic counter

Success.

DGS-3700-12:5#
```

show igmp_snooping host

Purpose	To display the IGMP hosts that have joined groups on a specific port or specific VLAN.
Syntax	show igmp_snooping host {[vlan <vlan_name 32> vlanid <vlanid_list> ports <portlist> group <ipaddr>] }
Description	This command is used to display the IGMP hosts that have joined groups on a specific port or specific VLAN.
Parameters	<i>vlan</i> <vlan_name 32> – Here the user can enter the VLAN name. <i>vlanid</i> <vlanid_list> – Here the user can enter the VLAN ID. <i>ports</i> <portlist> – Here the user can enter the appropriate ports used. <i>group</i> <ipaddr> – Here the user can enter the group IP address. If VLAN or port is not specified, all joining hosts will be displayed.
Restrictions	None.

Example usage:

To display the host IP information:

```
DGS-3700-12:5#show igmp_snooping host vlan default
Command: show igmp_snooping host vlan default
```

VLAN ID	Group	Port No	IGMP Host
1	225.0.1.0	2	198.19.1.2
1	225.0.1.0	2	198.19.1.3
1	225.0.1.0	3	198.19.1.4
1	225.0.1.2	2	198.19.1.3
1	225.0.1.3	3	198.19.1.4

```
Total Entries : 5

DGS-3700-12:5#
```

config igmp_snooping data_driven_learning max_learned_entry

Purpose	Used to configure the max number of groups that can be learned by data driven.
Syntax	config igmp_snooping data_driven_learning max_learned_entry <value 1-1024>
Description	This command is used to configure the maximum number of groups that can be learned by data driven. When the table is full, the system will stop learning the new data-driven groups. Traffic for the new groups will be dropped.
Parameters	<value 1-1024 > – The max number of groups that can be learned by data driven.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the max number of groups that can be learned by data driven:

```
DGS-3700-12:5#config igmp_snooping data_driven_learning max_learned_
entry 100
Command: config igmp_snooping data_driven_learning max_learned_entry 100

Success.

DGS-3700-12:5#
```

config igmp_snooping data_driven_learning

Purpose	Used to configure the data driven learning of a IGMP snooping group.
Syntax	config igmp_snooping data_driven_learning [all vlan_name <vlan_name> vlanid <vlanid_list>] { state [enable disable] aged_out [enable disable] expiry_time <sec 1-65535>}
Description	<p>This command is used to configure the data driven learning of an IGMP snooping group.</p> <p>When data-driven learning is enabled for the VLAN, the switch receives the IP multicast traffic on this VLAN, and an IGMP snooping group will be created. The learning of an entry is not activated by IGMP membership registration, but by the traffic. For an ordinary IGMP snooping entry, the IGMP protocol will take care that the ageing out of the entry. For a data-driven entry, the entry can be specified so that it doesn't age out or age out by the aged timer.</p> <p>When data driven learning is enabled, and data driven table is not full, the multicast filtering mode for all ports are ignored. The multicast packets will be forwarded to router ports. If the data driven learning table is full, the multicast packets will be forwarded according to the multicast filtering mode.</p> <p>Note: If a data-driven group is created and IGMP member ports are learned later, the entry will become an ordinary IGMP snooping entry. That is, the ageing out mechanism will follow the ordinary IGMP snooping entry.</p>
Parameters	<p><i>all</i> – Configure all VLAN's IGMP Snooping configuration.</p> <p><i>vlan_name</i> <vlan_name> – The name of the VLAN for which IGMP snooping data driven learning is to be configured.</p> <p><i>vlanid</i> <vlanid_list> – The VID of the VLAN for which IGMP snooping data driven learning is to be configured.</p> <p><i>state</i> [<i>enable</i> <i>disable</i>] – Allows users to enable or disable IGMP snooping data driven learning for the specified VLAN.</p> <p><i>aged_out</i> [<i>enable</i>/<i>disable</i>] – Allows users to enable or disable the aged_out time of the IGMP Snooping data driven learning for the specified VLAN.</p> <p><i>expiry_time</i> <sec 1-65535> – Allows users to set the time that an IGMP Snooping data driven learning group will expire for the specified VLAN.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable data driven learning on VLAN default:

```
DGS-3700-12:5# config igmp_snooping data_driven_learning vlan_name default state enable
aged_out enable expiry_time 270

Command: config igmp_snooping data_driven_learning vlan_name default state enable
aged_out enable expiry_time 270

Success.

DGS-3700-12:5#
```

clear igmp_snooping data_driven_group

Purpose	Used to delete the IGMP snooping group learned by data driven.
Syntax	clear igmp_snooping data_driven_group [all [vlan_name <vlan_name> vlanid <vlanid_list>] [<ipaddr> all]]
Description	This command is used to delete the IGMP snooping group learned by data driven.
Parameters	<p><i>all</i> – Delete all groups learnt by data driven.</p> <p><i>vlan_name <vlan_name></i> – The name of the VLAN for which IGMP snooping data driven learning group is to be deleted.</p> <p><i>vlanid <vlanid_list></i> – The VID of the VLAN for which IGMP snooping data driven learning group is to be deleted.</p> <p><i><ipaddr></i> – The group address for which IGMP snooping data driven learning group is to be deleted on the specified VLAN.</p> <p><i><all></i> – All groups learnt by data driven on the specified VLAN will be deleted.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete all groups learnt by data driven on VLAN default:

```
DGS-3700-12:5#clear igmp_snooping data_driven_group vlan_name default all
Command: clear igmp_snooping data_driven_group vlan_name default all

Success.

DGS-3700-12:5#
```

IPMC COMMANDS

Back to Section Header

The IPMC commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
show ipfdb	{<ipaddr>}

Each command is listed, in detail, in the following sections.

show ipfdb	
Purpose	Used to show IP address forwarding table on the switch.
Syntax	show ipfdb {<ipaddr>}
Description	This command is used to display the IP address forwarding table on the switch.
Parameters	<ipaddr> - Specify the IP address of the forwarding table.
Restrictions	None.

Example usage:

To display the IP address forwarding table on the switch:

```
DGS-3700-12:5#show ipfdb
```

```
Command: show ipfdb
```

```
Interface      IP Address      Port      Learned
```

```
-----
```

```
Total Entries: 0
```

```
DGS-3700-12:5#
```

LAYER 2 PROTOCOL TUNNELING (L2PT) COMMANDS

Back to Section Header

The BPDU Tunnelling commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
config bpdu_tunnel ports	[<portlist> all] type [tunnel {stp gvrp} uplink none]
show bpdu_tunnel	
enable bpdu_tunnel	
disable bpdu_tunnel	

Each command is listed, in detail, in the following sections.

config bpdu_tunnel ports	
Purpose	Used to configure BPDU Tunnelling type ports.
Syntax	config bpdu_tunnel ports [<portlist> all] type [tunnel {stp gvrp} uplink none]
Description	<p>This command is used to configure BPDU Tunnelling type ports.</p> <p>When the device is operated with Q-in-Q enabled, the DA will be replaced by the tunnel multicast address, and the BPDU will be tagged with the tunnel VLAN based on the Q-in-Q VLAN configuration and the tunnel/uplink settings.</p> <p>When the device is operated without Q-in-Q enabled, the BPDU will have its DA replaced by the tunnel multicast address and be transmitted out based on the VLAN configuration and the tunnel/uplink settings.</p> <p>The tunnel multicast address for STP BPDU is 01-05-5d-00-00-00.</p> <p>The tunnel multicast address for GVRP BPDU is 01-05-5d-00-00-21.</p>
Parameters	<p><i>ports</i> – Specifies the ports on which the BPDU Tunnelling will be enabled or disabled.</p> <p><i>type</i> – Specifies the type of ports.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the BPDU tunnelling ports:

```
DGS-3700-12:5#config bpdu_tunnel ports 1-4 type tunnel stp
Command: config bpdu_tunnel ports 1-4 type tunnel stp

Success.

DGS-3700-12:5#
```

show bpdu_tunnel	
Purpose	Used to show BPDU Tunnelling global state, tunnel destination MAC address and ports state.
Syntax	show bpdu_tunnel
Description	This command is used to show BPDU Tunnelling global state, tunnel destination MAC address and ports state.
Parameters	None.
Restrictions	None.

Example usage:

To display the BPDU tunnelling state of all ports:

```
DGS-3700-12:5#show bpdu_tunnel
Command: show bpdu_tunnel

BPDU Tunnel : Disabled
STP Tunnel Multicast Address : 01-05-5D-00-00-00
STP Tunnel Port : 1-4
GVRP Tunnel Multicast Address : 01-05-5D-00-00-21
GVRP Tunnel Port :
Uplink Port :

DGS-3700-12:5#
```

enable bpdu_tunnel

Purpose	Used to enable the BPDU Tunnelling function.
Syntax	enable bpdu_tunnel
Description	This command is used to enable the BPDU Tunnelling function. By default, the BPDU Tunneling is disabled.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable bpdu_tunnel:

```
DGS-3700-12:5#enable bpdu_tunnel
Command: enable bpdu_tunnel

Success.

DGS-3700-12:5#
```

disable bpdu_tunnel

Purpose	Used to disable the BPDU Tunnelling function.
Syntax	disable bpdu_tunnel
Description	This command is used to disable the BPDU Tunneling function.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable bpdu_tunnel:

```
DGS-3700-12:5#disable bpdu_tunnel
Command: disable bpdu_tunnel

Success.

DGS-3700-12:5#
```

LINK AGGREGATION COMMANDS

Back to Section Header

The link aggregation commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
create link_aggregation	group_id <value 1-6> {type [lacp static]}
delete link_aggregation	group_id <value 1-6>
config link_aggregation	group_id <value 1-6> {master_port <port> ports <portlist> state [enable disable]}
config link_aggregation algorithm	[mac_source mac_destination mac_source_dest ip_source ip_destination ip_source_dest]
show link_aggregation	{group_id <value 1-6> algorithm}
config lacp_port	<portlist> mode [active passive]
show lacp_port	{<portlist>}

Each command is listed, in detail, in the following sections.

create link_aggregation	
Purpose	Used to create a link aggregation group on the Switch.
Syntax	create link_aggregation group_id <value 1-6> {type[lacp static]}
Description	This command will create a link aggregation group with a unique identifier.
Parameters	<p><value 1-6> – Specifies the group ID. The Switch allows up to six link aggregation groups to be configured. The group number identifies each of the groups.</p> <p>type – Specify the type of link aggregation used for the group. If the type is not specified the default type is <i>static</i>.</p> <p>lacp – This designates the port group as LACP compliant. LACP allows dynamic adjustment to the aggregated port group. LACP compliant ports may be further configured (see config lacp_ports). LACP compliant must be connected to LACP compliant devices.</p> <p>static – This designates the aggregated port group as static.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create a link aggregation group:

```
DGS-3700-12:5#create link_aggregation group_id 2
Command: create link_aggregation group_id 2

Success.

DGS-3700-12:5#
```

delete link_aggregation	
Purpose	Used to delete a previously configured link aggregation group.
Syntax	delete link_aggregation group_id <value 1-6>
Description	This command is used to delete a previously configured link aggregation group.

delete link_aggregation

Parameters	<value 1-6> – Specifies the group ID. The Switch allows up to six link aggregation groups to be configured. The group number identifies each of the groups.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete link aggregation group:

```
DGS-3700-12:5#delete link_aggregation group_id 2
Command: delete link_aggregation group_id 2

Success.

DGS-3700-12:5#
```

config link_aggregation

Purpose	Used to configure a previously created link aggregation group.
Syntax	config link_aggregation group_id <value 1-6> {master_port <port> ports <portlist> state [enable disable] }
Description	This command allows users to configure a link aggregation group that was created with the create link_aggregation command above.
Parameters	<p><i>group_id</i> <value 1-6> – Specifies the group ID. The Switch allows up to 6 link aggregation groups to be configured. The group number identifies each of the groups.</p> <p><i>master_port</i> <port> – Master port ID. Specifies which port (by port number) of the link aggregation group will be the master port. All of the ports in a link aggregation group will share the port configuration with the master port.</p> <p><i>ports</i> <portlist> – Specifies a port or range of ports that will belong to the link aggregation group.</p> <p><i>state</i> [enable disable] – Allows users to enable or disable the specified link aggregation group.</p>
Restrictions	Only Administrator and Operator-level users can issue this command. Link aggregation groups may not overlap.

Example usage:

To define a load-sharing group of ports, group-id 1, master port 5 with group members ports 5-7, 9:

```
DGS-3700-12:5#config link_aggregation group_id 1 master_port 5 ports 5-7, 9
Command: config link_aggregation group_id 1 master_port 5 ports 5-7, 9

Success.

DGS-3700-12:5#
```

config link_aggregation algorithm

Purpose	Used to configure the link aggregation algorithm.
Syntax	config link_aggregation algorithm [mac_source mac_destination mac_source_dest ip_source ip_destination ip_source_dest]
Description	This command configures the part of the packet examined by the Switch when selecting the egress port for transmitting load-sharing data. This feature is only available using the address-based load-sharing algorithm.

config link_aggregation algorithm	
Parameters	<p><i>mac_source</i> - Indicates that the switch should examine the MAC source address.</p> <p><i>mac_destination</i> - Indicates that the switch should examine the MAC destination address.</p> <p><i>mac_source_dest</i> - Indicates that the switch should examine the MAC source and destination address.</p> <p><i>ip_source</i> - Indicates that the switch should examine the IP source address.</p> <p><i>ip_destination</i> - Indicates that the switch should examine the IP destination address.</p> <p><i>ip_source_dest</i> - Indicates that the switch should examine the IP source and destination address.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure link aggregation algorithm for mac-source-dest:

```
DGS-3700-12:5#config link_aggregation algorithm mac_source_dest
Command: config link_aggregation algorithm mac_source_dest

Success.

DGS-3700-12:5#
```

show link_aggregation	
Purpose	Used to display the current link aggregation configuration on the Switch.
Syntax	show link_aggregation {group_id <value 1-6> algorithm}
Description	This command will display the current link aggregation configuration of the Switch.
Parameters	<p><i>group_id <value 1-6></i> – Specifies the group ID. The Switch allows up to 6 link aggregation groups to be configured. The group number identifies each of the groups.</p> <p><i>algorithm</i> – Allows users to specify the display of link aggregation by the algorithm in use by that group.</p>
Restrictions	None.

Example usage:

To display Link Aggregation configuration:

```
DGS-3700-12:5#show link_aggregation
Command: show link_aggregation

Link Aggregation Algorithm = MAC-Source-Dest

Group ID      : 3
Type          : TRUNK
Master Port   :
Member Port   :
Active Port   :
Status        : Disabled
Flooding Port :

Total Entries : 1

DGS-3700-12:5#
```

config lacp_port

Purpose	Used to configure LACP port activity.
Syntax	config lacp_port <portlist> mode [active passive]
Description	This command is used to configure ports that have been previously designated as LACP ports (see create link_aggregation).
Parameters	<p><i><portlist></i> – Specifies a port or range of ports to be configured.</p> <p><i>mode</i> – Select the mode to determine if LACP ports will process LACP control frames.</p> <p><i>active</i> – Active LACP ports are capable of processing and sending LACP control frames. This allows LACP compliant devices to negotiate the aggregated link so the group may be changed dynamically as needs require. In order to utilize the ability to change an aggregated port group, that is, to add or subtract ports from the group, at least one of the participating devices must designate LACP ports as active. Both devices must support LACP.</p> <p><i>passive</i> – LACP ports that are designated as passive cannot process LACP control frames. In order to allow the linked port group to negotiate adjustments and make changes dynamically, at one end of the connection must have “active” LACP ports (see above).</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure LACP port mode settings:

```
DGS-3700-12:5#config lacp_port 1-12 mode active
Command: config lacp_port 1-12 mode active

Success.

DGS-3700-12:5#
```

show lacp_port

Purpose	Used to display current LACP port mode settings.
Syntax	show lacp_port {<portlist>}
Description	This command will display the LACP mode settings as they are currently configured.
Parameters	<p><i><portlist></i> – Specifies a port or range of ports to be configured.</p> <p>If no parameter is specified, the system will display the current LACP status for all</p>

show lacp_port

	ports.
Restrictions	None.

Example usage:

To display LACP port mode settings:

```
DGS-3700-12:5#show lacp_port 1-10
Command: show lacp_port 1-10

Port      Activity
-----
1         Active
2         Active
3         Active
4         Active
5         Active
6         Active
7         Active
8         Active
9         Active
10        Active

DGS-3700-12:5#
```

LIMITED IP MULTICAST ADDRESS COMMANDS

Back to Section Header

The Limited IP Multicast command allows the administrator to permit or deny access to a port or range of ports by specifying a range of multicast addresses. The Limited IP Multicast Commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
create mcast_filter_profile profile_id	{[ipv4 ipv6]} profile_id <value 1-60> profile_name <name 1-32>
config mcast_filter_profile	[profile_id < value 1-60> profile_name <name 1-32>] { profile_name <name 1-32> [add delete] <mcast_address_list>}
config mcast_filter_profile ipv6	[profile_id < value 1-60> profile_name <name 1-32>] { profile_name <name 1-32> [add delete] <mcastv6_address_list>}
delete mcast_filter_profile	{[ipv4 ipv6]} [profile_id [<value 1-60> all] profile_name <name 1-32>]
show mcast_filter_profile	{[ipv4 ipv6]} { profile_id <value 1-60> profile name < name 1-32 > }
config limited_multicast_addr ports	[ports <portlist> vlanid <vlanid_list >] {[ipv4 ipv6]} {[add delete] [profile_id <value 1-60> profile_name <name 1-32>] access [permit deny]}
show limited_multicast_addr	[ports <portlist> vlanid <vlanid_list>] {[ipv4 ipv6]}
config max_mcast_group	[ports <portlist> vlanid <vlanid_list>] {[ipv4 ipv6]} { max_group [<value 1-1024> infinite] action [drop replace]}
show max_mcast_group	[ports <portlist> vlanid <vlanid_list>] {[ipv4 ipv6]}

Each command is listed, in detail, in the following sections.

create mcast_filter_profile profile_id	
Purpose	This command creates a multicast address profile.
Syntax	create mcast_filter_profile profile_id {[ipv4 ipv6]} profile_id <value 1-60> profile_name <name 1-32>
Description	This command configures a multicast address profile. Multiple ranges of multicast addresses can be defined in the profile.
Parameters	<i>profile_id</i> – ID of the profile. The range is 1 to 60. <name 1-32> – Provides a meaningful description for the profile. <i>profile_name</i> - Provides a meaningful description for the profile.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create a multicast filter profile:

```
DGS-3700-12:5#create mcast_filter_profile ipv4 profile_id 2 profile_name RG
Command: create mcast_filter_profile ipv4 profile_id 2 profile_name RG

Success.

DGS-3700-12:5#
```

config mcast_filter_profile	
Purpose	This command adds or deletes a range of multicast addresses to the profile.
Syntax	config mcast_filter_profile [profile_id < value 1-60> profile_name <name 1-32>] { profile_name <name 1-32> [add delete] <mcast_address_list>}
Description	This command allows the user to add or delete a range of multicast IP addresses previously defined.
Parameters	<i>profile_id</i> – ID of the profile. The range is 1 to 60. <i>profile_name</i> – Provides a meaningful description for the profile. <i>mcast_address_list</i> – List of the multicast addresses to be put in the profile. You can either specify a single multicast IP address or a range of multicast addresses using.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To config an IPv4 multicast filter profile:

```
DGS-3700-12:5#config mcast_filter_profile profile_id 2 add 225.1.1.1-225.1.1.1
Command: config mcast_filter_profile profile_id 2 add 225.1.1.1

Success.

DGS-3700-12:5#
```

config mcast_filter_profile ipv6	
Purpose	This command adds or deletes a range of IPv6 multicast addresses to the profile.
Syntax	config mcast_filter_profile ipv6 [profile_id < value 1-60> profile_name <name 1-32>] { profile_name <name 1-32> [add delete] <mcastv6_address_list>}
Description	This command allows the user to add or delete a range of multicast IPv6 addresses previously defined.
Parameters	<i>profile_id</i> – ID of the profile. Range is from 1 to 60. <i>profile_name</i> – Provides a meaningful description for the profile. <i>mcast_address_list</i> – List of the IPv6 multicast addresses to be put in the profile. You can either specify a single IPv6 multicast IP address or a range of IPv6 multicast addresses.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To config an IPv6 mcast_filter_profile:

```
DGS-3700-12:5#config mcast_filter_profile ipv6 profile_id 2 add FF12::1-FF12::1
Command: config mcast_filter_profile ipv6 profile_id 2 add FF12::1

Success.

DGS-3700-12:5#
```

delete mcast_filter_profile

Purpose	This command deletes a multicast address profile.
Syntax	delete mcast_filter_profile {[ipv4 ipv6]} [profile_id [<value 1-60> all] profile_name <name 1-32>]
Description	This command deletes a multicast address profile.
Parameters	<i>profile_id</i> – ID of the profile. <i>all</i> – All multicast address profiles will be deleted. <i>profile_name</i> - Specify a profile based on the profile name.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete a multicast filter profile:

```
DGS-3700-12:5#delete mcast_filter_profile profile_id ipv4 2
Command: delete mcast_filter_profile profile_id ipv4 2

Success.

DGS-3700-12:5#delete mcast_filter_profile profile_id ipv6 2
Command: delete mcast_filter_profile profile_id ipv6 2

Success.

DGS-3700-12:5#
```

show mcast_filter_profile

Purpose	This command displays the defined multicast address profiles.
Syntax	show mcast_filter_profile {[ipv4 ipv6]} { profile_id <value 1-60> profile_name <name 1-32>}
Description	This command displays the defined multicast address profiles.
Parameters	<i>profile_id</i> – ID of the profile if not specified all profiles will be displayed. <i>profile_name</i> <name 1-32 > – Name of the profile if not specified all profiles will be displayed.
Restrictions	None.

Example usage:

To display a multicast filter profile:

```
DGS-3700-12:5#show mcast_filter_profile ipv4
```

```
Command: show mcast_filter_profile ipv4
```

Profile ID	Name	Multicast Addresses
1	RG	234.1.1.1 - 238.244.244.244

```
Total Profile Count : 1
```

```
DGS-3700-12:5#
```

config limited_multicast_addr ports

Purpose	Used to configure the multicast address filtering function on a port.
Syntax	config limited_multicast_addr [ports <portlist> vlanid <vlanid_list>] {[ipv4 ipv6]} {[add delete] [profile_id <value 1-60> profile_name <name 1-32>] access [permit deny]}
Description	This command is used to configure the multicast address filtering function on a port. When there are no profiles specified with a port, the limited function is not effective. When the function is configured on a port, it limits the multicast group operated by the IGMP.
Parameters	<i><portlist></i> – A range of ports to config the multicast address filtering function. <i><vlanid_list></i> – A range of VLAN IDs to config the multicast address filtering function. <i>add</i> – Add a multicast address profile to a port. <i>delete</i> – Delete a multicast address profile to a port. <i>profile_id</i> – A profile to be added to or deleted from the port. <i>profile_name <name 1-32></i> – The name of the profile. <i>permit</i> – Specifies that the packet that match the addresses defined in the profiles will be permitted. The default mode is permit. <i>deny</i> – Specifies that the packet that match the addresses defined in the profiles will be denied.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To config port 1,3 to set the multicast address profile 2:

```
DGS-3700-12:5#config limited_multicast_addr ports 1,3 ipv4 add profile_id 2
```

```
Command: config limited_multicast_addr ports 1,3 ipv4 add profile_id 2
```

```
Success.
```

```
DGS-3700-12:5#
```

show limited_multicast_addr

Purpose	Used to show per-port Limited IP multicast address range.
Syntax	show limited_multicast_addr [ports <portlist> vlanid <vlanid_list>] {[ipv4 ipv6]}
Description	This command allows you to show multicast address range by ports. When the function is configured on a port, it limits the multicast groups operated by the IGMP or MLD snooping function and layer 3 function.

show limited_multicast_addr

Parameters	<portlist> – A range of ports to show the limited multicast address configuration. <vlanid_list> – range of VLAN IDs to show the multicast address configuration.
Restrictions	None.

Example usage:

To show a limited multicast address range:

```
DGS-3700-12:5#show limited_multicast_addr ipv4 ports 1,3
Command: show limited_multicast_addr ipv4 ports 1,3

Port      : 1
Access    : Deny

Profile ID Name           Multicast Addresses
-----
2             RG             234.1.1.1 - 238.244.244.244

Port      : 3
Access    : Deny

Profile ID Name           Multicast Addresses
-----
2             TG
```

DGS-3700-12:5#

config max_mcast_group

Purpose	This command configures the maximum number of multicast groups that a port can join.
Syntax	config max_mcast_group [ports <portlist> vlanid <vlanid_list>] {[ipv4 ipv6]} {max_group [<value 1-1024> infinite] action [drop replace]}
Description	This command configures the maximum number of multicast groups that a port can join.
Parameters	<portlist> – A range of ports to config the max_mcast_group. <vlanid_list> – A range of VLAN IDs to config the max_mcast_group. max_group – Specifies the maximum number of the multicast groups. The range is from 1 to 1024 or infinite. Infinite is the default setting. action - Specify the action for handling newly learned groups when the register is full. <ul style="list-style-type: none"> drop - The new group will be dropped. replace - The new group will replace the oldest group in the register table.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the maximum number of multicast groups:

```
DGS-3700-12:5#config max_mcast_group ipv4 ports 1,3 max_group 100
Command: config max_mcast_group ipv4 ports 1,3 max_group 100

Success.

DGS-3700-12:5#
```

show max_mcast_group

Purpose	This command display the max number of multicast groups that a port can join.
Syntax	show max_mcast_group [ports <portlist> vlanid <vlanid_list>] {[ipv4 ipv6]}
Description	This command is used to display the max number of multicast groups that a port can join.
Parameters	<portlist> – A range of ports to display the max number of multicast groups. <vlanid_list> – A range of VLAN IDs to display the max number of multicast groups.
Restrictions	None.

Example usage:

To display the maximum number of multicast groups:

```
DGS-3700-12:5#show max_mcast_group ipv4 ports 1,3
Command: show max_mcast_group ipv4 ports 1,3

Port          Max Multicast Group Number
-----
1             100
3             100

Total Entries: 2

DGS-3700-12:5#
```

MAC NOTIFICATION COMMANDS

Back to Section Header

The MAC notification commands in the Command Line Interface (CLI) are listed, in the following table, along with their appropriate parameters.

COMMAND	PARAMETERS
enable mac_notification	
disable mac_notification	
config mac_notification	{interval <int 1-2147483647> historysize <int 1-500>}
config mac_notification ports	[<portlist> all] [enable disable]
show mac_notification	
show mac_notification ports	{<portlist>}

Each command is listed, in detail, in the following sections.

enable mac_notification

Purpose	Used to enable global MAC address table notification on the Switch.
Syntax	enable mac_notification
Description	This command is used to enable MAC address notification without changing configuration.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable MAC notification without changing basic configuration:

DGS-3700-12:5#enable mac_notification Command: enable mac_notification Success. DGS-3700-12:5#

disable mac_notification

Purpose	Used to disable global MAC address table notification on the Switch.
Syntax	disable mac_notification
Description	This command is used to disable MAC address notification without changing configuration.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable MAC notification without changing basic configuration:

```
DGS-3700-12:5#disable mac_notification
```

```
Command: disable mac_notification
```

```
Success.
```

```
DGS-3700-12:5#
```

config mac_notification

Purpose	Used to configure MAC address notification.
Syntax	config mac_notification {interval <int 1-2147483647> historysize <int 1-500>}
Description	This command is used to monitor MAC addresses learned and entered into the FDB.
Parameters	<i>interval <sec 1-2147483647></i> – The time in seconds between notifications. The user may choose an interval between 1 and 2,147,483,647 seconds. <i>historysize <1-500></i> – The maximum number of entries listed in the history log used for notification.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the Switch's MAC address table notification global settings:

```
DGS-3700-12:5#config mac_notification interval 1 historysize 500
```

```
Command: config mac_notification interval 1 historysize 500
```

```
Success.
```

```
DGS-3700-12:5#
```

config mac_notification ports

Purpose	Used to configure MAC address notification status settings.
Syntax	config mac_notification ports [<portlist> all] [enable disable]
Description	This command is used to monitor MAC addresses learned and entered into the FDB.
Parameters	<i><portlist></i> – Specify a port or range of ports to be configured. <i>all</i> – Entering this command will set all ports on the system. <i>[enable disable]</i> – These commands will enable or disable MAC address table notification on the Switch.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable port 7 for MAC address table notification:

```
DGS-3700-12:5#config mac_notification ports 7 enable
```

```
Command: config mac_notification ports 7 enable
```

```
Success.
```

```
DGS-3700-12:5#
```

show mac_notification

Purpose	Used to display the Switch's MAC address table notification global settings.
----------------	--

show mac_notification	
Syntax	show mac_notification
Description	This command is used to display the Switch's MAC address table notification global settings.
Parameters	None.
Restrictions	None.

Example usage:

To view the Switch's MAC address table notification global settings:

```
DGS-3700-12:5#show mac_notification
```

```
Command: show mac_notification
```

```
Global Mac Notification Settings
```

```
State           : Enabled
```

```
Interval        : 1
```

```
History Size    : 1
```

```
DGS-3700-12:5#
```

show mac_notification ports	
Purpose	Used to display the Switch's MAC address table notification status settings.
Syntax	show mac_notification ports {<portlist>}
Description	This command is used to display the Switch's MAC address table notification status settings.
Parameters	<portlist> – Specify a port or group of ports to be viewed. Entering this command without the parameter will display the MAC notification table for all ports.
Restrictions	None.

Example usage:

To display all port's MAC address table notification status settings:

```
DGS-3700-12:5#show mac_notification ports
```

```
Command: show mac_notification ports
```

```
Port #  MAC Address Table Notification State
```

```
-----
```

```
1           Disabled
```

```
2           Disabled
```

```
3           Disabled
```

```
4           Disabled
```

```
5           Disabled
```

```
6           Disabled
```

```
7           Disabled
```

```
8           Disabled
```

```
9           Disabled
```

```
10          Disabled
```

```
11          Disabled
```

```
12          Disabled
```

MLD MULTICAST VLAN COMMANDS

Back to Section Header

The MLD Multicast VLAN commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
create mld_snooping multicast_vlan	<vlan_name 32> <vlanid 2-4094> {remap_priority [<value 0-7> none] { replace_priority}}
config mld_snooping multicast_vlan	<vlan_name 32> {[add delete] [member_port <portlist> [source_port <portlist> untag_source_port <portlist>] tag_member_port <portlist>] state [enable disable] replace_source_ip <ipv6addr> remap_priority [<value 0-7> none] { replace_priority}}(1)
create mld_snooping multicast_vlan_group_profile	<profile_name 1-32>
config mld_snooping multicast_vlan_group_profile	<profile_name 1-32> [add delete] <mcastv6_address_list>
delete mld_snooping multicast_vlan_group_profile	[profile_name <profile_name 1-32> all]
show mld_snooping multicast_vlan_group_profile	{<profile_name 1-32>}
config mld_snooping multicast_vlan_group	<vlan_name 32> [add delete] profile_name <profile_name 1-32>
show mld_snooping multicast_vlan_group	{< vlan_name 32> }
delete mld_snooping multicast_vlan	<vlan_name 32>
enable mld_snooping multicast_vlan	
disable mld_snooping multicast_vlan	
show mld_snooping multicast_vlan	{<vlan_name 32>}
config mld_snooping multicast_vlan forward_unmatched	[disable enable]

Each command is listed, in detail, in the following sections.

create mld_snooping multicast_vlan	
Purpose	Used to create an MLD multicast VLAN
Syntax	create mld_snooping multicast_vlan <vlan_name 32> <vlanid 2-4094> {remap_priority [<value 0-7> none] { replace_priority}}
Description	This command is used to create a MLD multicast_vlan. Multiple multicast VLANs can be configured. The MLD multicast VLAN being created can not exist in the 1Q VLAN database. Multiple MLD multicast VLANs can be created. The MLD Multicast VLAN snooping function co-exists with the 1Q VLAN snooping function.
Parameters	<vlan_name> – The name of the VLAN to be created. Each multicast VLAN is given a name that can be up to 32 characters.

create mld_snooping multicast_vlan	
	<p><i>vlanid</i> – The VLAN ID of the multicast VLAN to be create. The range is 2-4094.</p> <p><i>remap_priority</i> – The remap priority value (0 to 7) to be associated with the data traffic to be forwarded on the multicast VLAN. If none is specified, the packet’s original priority is used. The default setting is none.</p> <p><i>replace_priority</i> – The packet priority is changed to the remap_priority, but only if the remap_priority is set.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create MLD multicast VLAN mv1:

```
DGS-3700-12:5#create mld_snoop multicast_vlan mv1 2
Command: create mld_snooping multicast_vlan mv1 2

Success.

DGS-3700-12:5#
```

config mld_snooping multicast_vlan	
Purpose	Used to configure the parameter of the specific MLD multicast VLAN.
Syntax	config mld_snooping multicast_vlan <vlan_name 32> {[add delete] [member_port <portlist> [source_port <portlist> untag_source_port <portlist>] tag_member_port <portlist>] state [enable disable] replace_source_ip <ipv6addr> remap_priority [<value 0-7> none] { replace_priority}}(1)
Description	<p>This command allows you to add member ports, add tag_member ports and add source ports to the port list. The member port will automatically become the untagged member of the MLD multicast VLAN, the tag_member_port and the source port will automatically become the tagged member of the MLD multicast VLAN. To change the port-list, the new port-list will replace the previous port-list if add or delete is not specified.</p> <p>The member port list and source port list can not overlap. However, the member port of one MLD multicast VLAN can overlap with another MLD multicast VLAN. The MLD multicast VLAN must be created first before configuration.</p>
Parameters	<p><i><vlan_name></i> – The name of the VLAN to be created. Each multicast VLAN is given a name that can be up to 32 characters.</p> <p><i>member_port</i> – A range of member ports to add to the multicast VLAN. They will become the untagged member port of the MLD multicast VLAN.</p> <p><i>untag_source_port</i> - Specify the source port or range of source ports as untagged members of the multicast VLAN. The PVID of the untagged source port is automatically changed to the multicast VLAN. Source ports must be either tagged or untagged for any single multicast VLAN, i.e. both types cannot be members of the same multicast VLAN</p> <p><i>tag_member_port</i> – Specifies the tagged member port of the MLD multicast VLAN.</p> <p><i>source_port</i> – A range of source ports to add to the multicast VLAN.</p> <p><i>state</i> – enable or disable multicast VLAN for the chosen VLAN.</p> <p><i>replace_source_ip</i> – With the MLD snooping function, the MLD report packet sent by the host will be forwarded to the source port. Before the forwarding of the packet, the source IP address in the join packet needs to be replaced by this IPv6 address.</p> <p><i>remap_priority</i> -</p>

config mld_snooping multicast_vlan

	<ul style="list-style-type: none"> • <i><value 0-7></i> - The remap priority value (0 to 7) to be associated with the data traffic to be forwarded on the multicast VLAN. • <i>none</i> - If none is specified, the packet's original priority is used. The default setting is none. <p><i>replace_priority</i> - Specify that the packet priority will be changed to the remap priority, but only if remap priority is set.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To config MLD multicast VLAN mv1:

```
DGS-3700-12:5#config mld_snooping multicast_vlan mv1 add member_port
1,3 state enable
Command: config mld_snooping multicast_vlan mv1 add member_port 1,3
state enable

Success.

DGS-3700-12:5#
```

create mld_snooping multicast_vlan_group_profile

Purpose	Used to create an MLD multicast VLAN group profile on the switch.
Syntax	create mld_snooping multicast_vlan_group_profile <profile_name 1-32>
Description	This command is used to create an MLD multicast VLAN group profile. The profile name used for mld snooping must be unique.
Parameters	<i><profile_name 32></i> – Specifies the MLD multicast VLAN group profile name, max length is 32
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create an MLD multicast VLAN group profile "g1":

```
DGS-3700-12:5#create mld_snooping multicast_vlan_group_profile g1
Command: create mld_snooping multicast_vlan_group_profile g1

Success.

DGS-3700-12:5#
```

config mld_snooping multicast_vlan_group_profile

Purpose	Used to configure an MLD multicast VLAN group profile on the switch, to add or delete multicast address for the profile.
Syntax	config mld_snooping multicast_vlan_group_profile <profile_name 1-32> [add delete] <mcast v6_address_list>
Description	This command configures an MLD multicast VLAN group profile on the switch, and can add or delete multicast addresses for the profile.
Parameters	<i><profile_name 32></i> – Specifies the MLD multicast VLAN group profile name, max length is 32. <i>[add delete]</i> – Add or delete MLD multicast address list to or from this multicast VLAN group profile

config mld_snooping multicast_vlan_group_profile

	<i><mcastv6_address_list></i> – Specifies the MLD multicast addresses to be configured. It can be a continuous single multicast addresses, such as FF12::1, FF12::3, FF12::8, or a multicast address range, such as FF12::1- FF12::12, or both of them, such as FF12::1, FF12::18- FF12::20.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To add FF12::1 to FF12::2 to MLD multicast VLAN group profile "g1":

```
DGS-3700-12:5#config mld_snooping multicast_vlan_group_profile g1
add FF12::1-FF12::2
Command: config mld_snooping multicast_vlan_group_profile g1 add
FF12::1-FF12::2

Success.

DGS-3700-12:5#
```

delete mld_snooping multicast_vlan_group_profile

Purpose	Used to delete an MLD multicast VLAN group profile on the switch.
Syntax	delete mld_snooping multicast_vlan_group_profile [profile_name <profile_name 1-32> all]
Description	This command deletes an MLD multicast VLAN group profile on the switch.
Parameters	<i><profile_name 32></i> – Specifies the MLD multicast VLAN profile name, max length is 32. <i>all</i> – All MLD multicast VLAN group profile will be deleted.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete the MLD multicast VLAN group profile "g1":

```
DGS-3700-12:5#delete mld_snooping multicast_vlan_group_profile profile_name g1
Command: delete mld_snooping multicast_vlan_group_profile profile_name g1

Success.

DGS-3700-12:5#
```

show mld_snooping multicast_vlan_group_profile

Purpose	Used to view an MLD multicast VLAN group profile on the switch.
Syntax	show mld_snooping multicast_vlan_group_profile {<profile_name 1-32>}
Description	This command displays an MLD multicast VLAN group profile on the switch.
Parameters	<i>{<profile_name 32>}</i> – Specifies the MLD multicast VLAN profile name, max length is 32. If not specified, all MLD multicast VLAN group profiles will be displayed.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To display the MLD multicast VLAN group profile:

```
DGS-3700-12:5#show mld_snooping multicast_vlan_group_profile
```

```
Command: show mld_snooping multicast_vlan_group_profile
```

```
Profile Name          Multicast Addresses
-----
g1                    FF12::1-FF12::2
```

```
Total Entry: 1
```

```
DGS-3700-12:5#
```

config mld_snooping multicast_vlan multicast_group

Purpose	Used to configure the multicast group which will be learned with the specific MLD multicast VLAN.
Syntax	config mld_snooping multicast_vlan_group <vlan_name 32> [add delete] profile_name <profile_name 1-32>
Description	<p>When a MLD packet is received, first, it will be checked whether to be processed by MLD snooping. If MLD snooping for the classified VLAN of this MLD packet is enabled, it will be processed, based on the MLD snooping function. If the MLD snooping for the classified VLAN of this MLD packet is disabled, then it will check whether to be processed by the MLD multicast VLAN function.</p> <p>There are some cases when an MLD packet can be processed by the MLD multicast VLAN.</p> <p>If there are no profiles system wide, and there is only one MLD multicast VLAN, then this MLD packet will be associated with only this MLD multicast VLAN.</p> <p>However if the packet is a tagged packet, the packet will be matched against the profile on this VLAN. If matched, the packet will be associated with this VLAN. Otherwise, the packet is an unmatched packet.</p> <p>Otherwise if the packet is an untagged packet, the packet will be matched against profiles on all MLD multicast VLANs. If it matches profiles on one of the MLD multicast VLANs, the packets will be associated with this VLAN. If it does not match profiles on any VLANs, then the packet is an unmatched packet.</p> <p>If the packet is an unmatched packet, it will not be processed by the MLD Multicast VLAN. Instead, it will be processed based on the forwarding mode for unmatched packets and the classified VLAN of this packet.</p> <p>Note: The same profile can not be overlapped in different multicast VLANs if these multicast VLANs have an overlapping portlist. Multiple profiles can be added to a multicast VLAN.</p>
Parameters	<p><vlan_name 32> – The name of the multicast VLAN to be configured, each multicast VLAN is given a name that can be up to 32 characters.</p> <p><i>add</i> – Used to associate a profile to a multicast VLAN.</p> <p><i>delete</i> – Used to de-associate a profile from a multicast VLAN.</p> <p><profile_name 32> – The name of the MLD multicast VLAN group profile to be associated or de- associated to the specified multicast VLAN.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To associate an MLD multicast VLAN group profile “g1” to MLD multicast VLAN “mv1”:

```
DGS-3700-12:5#config mld_snooping multicast_vlan_group mv1 add profile_name g1
Command: config mld_snooping multicast_vlan_group mv1 add profile_name g1

Success.

DGS-3700-12:5#
```

show mld_snooping multicast_vlan_group

Purpose	Used to display the multicast groups configured for the specified MLD multicast VLAN.
Syntax	show mld_snooping multicast_vlan_group {< vlan_name 32> }
Description	This command is used to display the multicast groups configured for the specified MLD multicast VLAN.
Parameters	<i>vlan_name</i> – The name of the multicast VLAN to be configured, each multicast VLAN is given a name that can be up to 32 characters. If not specified, all IPv6 multicast VLAN groups will be displayed.
Restrictions	None.

Example usage:

To display the multicast groups configured for an MLD multicast VLAN.

```
DGS-3700-12:5#show mld_snooping multicast_vlan_group
Command: show mld_snooping multicast_vlan_group

VLAN Name                VLAN ID  Multicast Group Profiles
-----
mv1                        2        g1

DGS-3700-12:5#
```

delete mld_snooping multicast_vlan

Purpose	Used to delete an MLD muticast VLAN.
Syntax	delete mld_snooping multicat_vlan <vlan_name 32>
Description	This command is used to delete an MLD multicast VLAN.
Parameters	<i>vlan_name</i> – The name of the multicast VLAN to be deleted.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete an MLD multicast VLAN:

```
DGS-3700-12:5#delete mld_snooping multicast_vlan mv1
Command: delete mld_snooping multicast_vlan mv1

Success.

DGS-3700-12:5#
```

enable/disable mld_snooping multicast_vlan

Purpose	Used to enable/disable the MLD Multicast VLAN function.
Syntax	enable mld_snooping multicast_vlan disable mld_snooping multicast_vlan
Description	This command controls the MLD Multicast VLAN function. The MLD Multicast

enable/disable mld_snooping multicast_vlan

	VLAN will take effect when MLD snooping multicast VLAN is enabled. By default, the MLD Multicast VLAN is in a disabled state.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable MLD Multicast VLAN:

```
DGS-3700-12:5#enable mld_snooping multicast_vlan
Command: enable mld_snooping multicast_vlan

Success.

DGS-3700-12:5#
```

show mld_snooping multicast_vlan

Purpose	Used to show the information of MLD multicast VLAN.
Syntax	show mld_snooping multicast_vlan {<vlan_name 32>}
Description	This command is used to show the information of an MLD multicast VLAN.
Parameters	<vlan_name> – The name of the multicast VLAN to be shown. If not specified, all MLD multicast VLANs will be displayed.
Restrictions	None.

Example usage:

To show MLD multicast VLAN:

```
DGS-3700-12:5#show mld_snooping multicast_vlan mv1
Command: show mld_snooping multicast_vlan mv1

MLD Multicast VLAN Global State      : Disabled
MLD Multicast VLAN Forward Unmatched  : Disabled

VLAN Name          : mv1
VID                : 23

Member(Untagged) Ports :
Tagged Member Ports   :
Source Ports         :
Untagged Source Ports :
Status               : Disabled
Replace Source IP    : ::
Remap Priority        : None

Total Entry: 1

DGS-3700-12:5#
```

config mld_snooping multicast_vlan forward_unmatched

Purpose	Used to configure forwarding mode for MLD Multicast VLAN unmatched packet.
Syntax	config mld_snooping multicast_vlan forward_unmatched [disable enable]
Description	When the switch receives an MLD packet, it will match the packet against the multicast profile to determine the MLD multicast VLAN to be associated with. If

config mld_snooping multicast_vlan forward_unmatched

the packet does not match any profiles, the packet will be forwarded or dropped based on the setting.
By default, the packet will be dropped.

Parameters

enable – The unmatched packet will be flooded on the VLAN.
disable – The unmatched packet will be dropped.

Restrictions

Only Administrator and Operator-level users can issue this command.

Example usage:

To set unmatched packet to be flooded on the VLAN:

```
DGS-3700-12:5#config mld_snooping multicast_vlan forward_unmatched enable
Command: config mld_snooping multicast_vlan forward_unmatched enable
```

Success.

```
DGS-3700-12:5#
```

MLD SNOOPING COMMANDS

Back to Section Header

The MLD Snooping Commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
config mld_snooping	[vlan <vlan_name 32> vlanid <vlanid_list> all] { state [enable disable] fast_done [enable disable] report_suppression [enable disable]}
config mld_snooping querier	[vlan <vlan_name 32> vlanid <vlanid_list> all] { query_interval <sec 1-65535> max_response_time <sec 1-25> robustness_variable <value 1-7> last_listener_query_interval <sec 1-25> state [enable disable] version <value 1-2>}
config mld_snooping mrouter_ports	[vlan <vlan_name 32> vlanid <vidlist>] [add delete] <portlist>
config mld_snooping mrouter_ports_forbidden	[vlan <vlan_name 32> vlanid <vidlist>] [add delete]<portlist>
enable mld_snooping	
disable mld_snooping	
show mld_snooping	{[vlan <vlan_name 32> vlanid <vlanid_list>]}
show mld_snooping group	{[vlan <vlan_name 32> vlanid <vlanid_list> ports <portlist>] {<ipv6addr>}} {data_driven}
show mld_snooping mrouter_ports	[vlan <vlan_name 32> vlanid <vlanid_list> all] { [static dynamic forbidden]}
show mld_snooping rate_limit	[ports <portlist> vlanid <vlanid_list>]
config mld_snooping rate_limit	[ports <portlist> vlanid <vlanid_list>] [<value 1-1000> no_limit]
show mld_snooping forwarding	{[vlan <vlan_name 32> vlanid <vlanid_list>]}
show mld_snooping static_group	{[vlan <vlan_name 32> vlanid <vlanid_list>] < ipv6addr >}
create mld_snooping static_group	[vlan <vlan_name 32> vlanid <vlanid_list>] < ipv6addr >
delete mld_snooping static_group	[vlan <vlan_name 32> vlanid <vlanid_list>] < ipv6addr >
config mld_snooping static_group	[vlan <vlan_name 32> vlanid <vlanid_list>] < ipv6addr > [add delete] <portlist>
show mld_snooping statistic counter	[vlan <vlan_name 32> vlanid <vlanid_list> ports <portlist>]
clear mld_snooping statistic counter	
config mld_snooping data_driven_learning max_learned_entry	<value 1-1024>
config mld_snooping data_driven_learning	[all vlan_name <vlan_name> vlanid <vlanid_list>] { state [enable disable] aged_out [enable disable] expiry_time <sec 1-65535>}
clear mld_snooping data_driven_group	[all [vlan_name <vlan_name> vlanid <vlanid_list>] [<ipv6addr> all]]
show mld_snooping host	{[vlan <vlan_name 32> vlanid <vlanid_list> ports <portlist> group

COMMAND	PARAMETERS
	<ipv6addr>] }

Each command is listed, in detail, in the following sections.

config mld_snooping	
Purpose	Used to configure MLD snooping on the switch.
Syntax	config mld_snooping [vlan <vlan_name 32> vlanid <vlanid_list> all] { state [enable disable] fast_done [enable disable] report_suppression [enable disable]}
Description	This command is used to configure MLD snooping on the switch. If the MLD version is configured with a lower version, the higher version's MLD Report/Leave messages will be ignored.
Parameters	<p><i>vlan</i> – The name of the VLAN for which MLD snooping is to be configured.</p> <p><i>vlanid</i> – The VIDs of the VLAN for which MLD snooping is to be configured.</p> <p><i>all</i> – Specifies that all VLANs configured on the switch will be configured.</p> <p><i>state</i> – Allows the user to enable or disable the MLD snooping function for the chosed VLAN.</p> <p><i>fast_done</i> – enable or disable MLD snooping fast_done function.If enable, the membership is immediately removed when the system receive the MLD done message.</p> <p><i>report suppression</i> – Enables or Disables MLD snooping report suppression function. If enabled, multiple MLD reports are done for a specific (S,G) and will be intregrated into one report only before sending to the router port.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the MLD snooping to the default vlan with state enable:

<pre>DGS-3700-12:5#config mld_snooping vlan default state enable Command: config mld_snooping vlan default state enable Success. DGS-3700-12:5#</pre>

config mld_snooping querier	
Purpose	Used to configure the timers and the attributes of the MLD snooping.querier.
Syntax	config mld_snooping querier [vlan <vlan_name 32> vlanid <vlanid_list> all] { query_interval <sec 1-65535> max_response_time <sec 1-25> robustness_variable <value 1-7> last_listener_query_interval <sec 1-25> state [enable disable] version <value 1-2>}
Description	This command is used to configure the timer in seconds between general query transmissions, the maximum time in seconds to wait for reports from listeners, and the permitted packet loss that guarantees MLD snooping.
Parameters	<p><i>vlan</i> – The name of the VLAN for which MLD snooping is to be configured.</p> <p><i>vlanid</i> – The VIDs of the VLAN for which MLD snooping querier is to be configured.</p> <p><i>all</i> – Specifies that all VLANs configured on the switch will be configured.</p> <p><i>query_interval</i> – Specifies the amount of time in seconds between general query transmissions. The default setting is 125 seconds.</p>

config mld_snooping querier	
	<p><i>max_reponse_time</i> – The maximum time in seconds to wait for reports from listeners. The default setting is 10 seconds.</p> <p><i>robustness_variable</i> – Provides fine-tuning to allow for expected packet loss on a subnet. The value of the robustness variable is used in calculating the following MLD message intervals:</p> <p><i>group listener interval</i> – Amount of time that must pass before a multicast router decides there are no more listeners of a group on a network. This interval is calculated as follows: (robustness variable * query interval) + (1 * query response interval).</p> <p><i>other querier present interval</i> – Amount of time that must pass before a multicast router decides that there is no longer another multicast router that is the querier. This interval is calculated as follows: (robustness variable * query interval) + (0.5 * query response interval).</p> <p><i>last listener query count</i> – Number of group-specific queries sent before the router assumes there are no local listeners of a group. The default number is the value of the robustness variable.</p> <p>By default, the robustness variable is set to 2. You might want to increase this value if you expect a subnet to be lossy.</p> <p><i>last_listener_query_interval</i> – The maximum amount of time between group-specific query messages, including those sent in response to done-group messages. You might lower this interval to reduce the amount of time it takes a router to detect the loss of the last listener of a group.</p> <p><i>state</i> – Allows you to enable or disable the MLD snooping function for the chosen VLAN.</p> <p><i>version</i> – The version of MLD Query sent by the switch.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the MLD snooping querier query interval to 125 secs and state enable:

```
DGS-3700-12:5#config mld_snooping querier vlan default query_interval 125 state enable
Command: config mld_snooping querier vlan default query_interval 125 state enable

Success.

DGS-3700-12:5#
```

config mld_snooping mrouter_ports	
Purpose	Used to configure ports as router ports.
Syntax	config mld_snooping mrouter_ports [vlan <vlan_name 32> vlanid <vidlist>] [add delete] <portlist>
Description	This command is used to designate a range of ports as being connected to multicast-enabled routers. This will ensure that all packets with such a router as its destination will reach the multicast-enabled router – regardless of protocol, etc.
Parameters	<p><i>vlan</i> – The name of the VLAN for which MLD snooping is to be configured.</p> <p><i>vlanid</i> – The VIDs of the VLAN for which MLD snooping is to be configured.</p> <p><i>add delete</i> – Specifies to add or delete the router ports.</p> <p><i>portlist</i> – Specifies a range of ports to be configured.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To set up port range 1-10 to be static router ports:

```
DGS-3700-12:5#config mld_snooping mrouter_ports vlan default add 1-10
Command: config mld_snooping mrouter_ports vlan default add 1-10

Success.

DGS-3700-12:5#
```

config mld_snooping mrouter_ports_forbidden

Purpose	Used to configure ports as forbidden router ports.
Syntax	config mld_snooping mrouter_ports_forbidden [vlan <vlan_name 32> vlanid <vlanid_list>] [add delete] <portlist>
Description	This command is used to designate a range of ports as being not connected to multicast-enabled routers. This ensures that the forbidden router port will not propagate routing packets out.
Parameters	<i>vlan</i> – The name of the VLAN for which MLD snooping is to be configured. <i>vlanid</i> – The VIDs of the VLAN for which MLD snooping is to be configured. <i>add / delete</i> – Specifies to add or delete the router ports. <i>portlist</i> – Specifies a range of ports to be configured as forbidden router ports.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To set up port range 1-10 to static router ports:

```
DGS-3700-12:5#config mld_snooping mrouter_ports_forbidden vlan default add 1-10
Command: config mld_snooping mrouter_ports_forbidden vlan default add 1-10

Success.

DGS-3700-12:5#
```

enable mld_snooping

Purpose	Used to enable MLD snooping on the switch.
Syntax	enable mld_snooping
Description	This command is used to enable MLD snooping on the switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable MLD snooping on the switch:

```
DGS-3700-12:5#enable mld_snooping
Command: enable mld_snooping

Success.

DGS-3700-12:5#
```

disable mld_snooping

Purpose	Used to disable MLD snooping on the switch.
----------------	---

disable mld_snooping	
Syntax	disable mld_snooping
Description	This command is used to disable MLD snooping on the switch. Disabling MLD snooping allows all MLD and IPv6 multicast traffic to flood within a given IPv6 interface.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable MLD snooping on the switch:

```
DGS-3700-12:5#disable mld_snooping
Command: disable mld_snooping

Success.

DGS-3700-12:5#
```

show mld_snooping	
Purpose	Used to the current status of MLD snooping on the switch.
Syntax	show mld_snooping {[vlan <vlan_name 32> vlanid <vlanid_list>]}
Description	This command is used to display the current MLD snooping configuration on the switch.
Parameters	<i>vlan</i> – The name of the VLAN for which you want to view the MLD snooping configuration. <i>vlanid</i> – The VIDs of the VLAN for which you want to view the MLD snooping configuration. If no parameter specified, the system will display all current MLD snooping configurations.
Restrictions	None.

Example usage:

To show MLD snooping on the switch:

```
DGS-3700-12:5#show mld_snooping
Command: show mld_snooping

MLD Snooping Global State           : Disabled
Data Driven Learning Max Entries    : 128

VLAN Name                           : default
Query Interval                       : 125
Max Response Time                    : 10
Robustness Value                     : 2
Last Listener Query Interval        : 1
Querier State                        : Disable
Querier Role                         : Non-Querier
Querier IP                           :
Querier Expiry Time                  : 0 secs
State                                : Disable
Fast Done                            : Disable
Report Suppression                   : Enable
Rate Limit                           : No Limitation
Version                              : 2
Data Driven Learning State           : Enable
Data Driven Learning Aged Out       : Disable
Data Driven Group Expiry Time       : 260

Total Entries: 1
DGS-3700-12:5#
```

show mld_snooping group

Purpose	Used to display the current MLD snooping group configuration on the switch.
Syntax	show mld_snooping group {[vlan <vlan_name 32> vlanid <vlanid_list> ports <portlist>] {<ipv6addr>}} {data_driven}
Description	This command is used to display the current MLD snooping group configuration on the switch.
Parameters	<p><i>vlan</i> – The name of the VLAN for which you want to view the MLD snooping group.</p> <p><i>vlanid</i> – The VIDs of the VLAN for which you want to view the MLD snooping group group.</p> <p><i>ports</i> – The list of the ports for which you want to view the MLD snooping group configuration.</p> <p><ipv6addr> – To view the information of this specified group.</p> <p><i>data_driven</i> – To view the groups learnt by data driven only.</p> <p>If no parameter is specified, the system will display all current MLD snooping groups.</p>
Restrictions	None.

Example usage:

To show MLD snooping group on the switch:

```
DGS-3700-12:5#show mld_snooping group
```

```
Command: show mld_snooping group
```

```
Source/Group      : 2001::2/FF1E::1
```

```
VLAN Name/VID     : default/1
```

```
Member Ports     : 12
```

```
UP Time          : 2
```

```
Expiry Time      : 258
```

```
Filter Mode      : INCLUDE
```

```
Total Entries : 1
```

```
DGS-3700-12:5#
```

show mld_snooping mrouter_ports

Purpose	Used to display the currently configured router ports on the switch.
Syntax	show mld_snooping mrouter_ports [vlan <vlan_name 32> vlanid <vlanid_list> all] {[static dynamic forbidden]}
Description	This command is used to display the currently configured router ports on the switch.
Parameters	<p><i>vlan</i> – The name of the VLAN for which you want to view the MLD snooping configuration.</p> <p><i>vlanid</i> – The VIDs of the VLAN for which you want to view the MLD snooping configuration.</p> <p><i>all</i> – All the MLD router ports will be displayed.</p> <p><i>static</i> – Displays router ports that have been statically configured.</p> <p><i>dynamic</i> – Displays router ports that have been dynamically configured.</p> <p><i>forbidden</i> – Displays forbidden router ports that have been statically configured.</p> <p>If no parameter specified, the system will display all currently configured router ports on the switch.</p>
Restrictions	None.

Example usage:

To display the router ports on the switch:

```
DGS-3700-12:5#show mld_snooping mrouter_ports all
```

```
Command: show mld_snooping mrouter_ports all
```

```
VLAN Name          : default
```

```
Static router port : 
```

```
Dynamic router port : 
```

```
Router IP         : 
```

```
Forbidden router port : 
```

```
Total Entries: 1
```

```
DGS-3700-12:5#
```

show mld_snooping rate_limit

Purpose	Used to show rate limitation.
Syntax	show mld_snooping rate_limit [ports <portlist> vlanid <vlanid_list>]
Description	This command shows the rate of MLD control packets that are allowed per port or VLAN.
Parameters	<i>ports</i> – Specifies a port or range of ports that will be displayed.

show mld_snooping rate_limit

	<i>vlanid</i> – Specifies a VLAN or range of VLANs that will be displayed.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To show rate limitation:

```
DGS-3700-12:5#show mld_snooping rate_limit ports 1
Command: show mld_snooping rate_limit ports 1

Port      Rate Limitation
-----  -
1         No Limitation

Total Entries: 1

DGS-3700-12:5#
```

config mld_snooping rate_limit

Purpose	Used to show MLD snooping rate limitation.
Syntax	config mld_snooping rate_limit [ports <portlist> vlanid <vlanid_list>] [<value 1-1000> no_limit]
Description	This command configures the rate of MLD control packets that are allowed per port or VLAN.
Parameters	<p><i>ports</i> – Specifies a port or range of ports that will be configured.</p> <p><i>vlanid</i> – Specifies a VLAN or range of VLANs that will be configured.</p> <p><value 1-1000> – Specifies the rate of MLD control packets that the switch can process on a specific port. The rate is specified in packets per second. The packet that exceeds the limited rate will be dropped. The default setting is no_limit.</p> <p><i>no_limit</i> – Allows user to configure the rate limitation to no limit.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure rate limitation:

```
DGS-3700-12:5#config mld_snooping rate_limit ports 1 100
Command: config mld_snooping rate_limit ports 1 100

Success.

DGS-3700-12:5#
```

show mld_snooping forwarding

Purpose	Used to display the current MLD snooping forwarding information on the Switch.
Syntax	show mld_snooping forwarding {[vlan <vlan_name 32> vlanid <vlanid_list>]}
Description	This command will display the current MLD forwarding information on the Switch.
Parameters	<p><i>vlan</i> – The name of the VLAN for which to view MLD snooping forwarding information. If not specified, all VLAN's MLD snooping forwarding information will be displayed.</p> <p><i>vlanid</i> – The list of the VLAN IDs for which to view MLD snooping forwarding information. If not specified, all VLAN's MLD snooping forwarding information</p>

show mld_snooping forwarding

will be displayed.

Restrictions None.

Example usage:

To view the current MLD snooping forwarding information:

```
DGS-3700-12:5#show mld_snooping forwarding
```

```
Command: show mld_snooping forwarding
```

```
VLAN Name           : default
Source IP            : *
Multicast Group      : FF12::1
Port Member          : 3
```

```
VLAN Name           : default
Source IP            : *
Multicast Group      : FF12::2
Port Member          : 3
```

```
Total Entries : 2
```

```
DGS-3700-12:5#
```

show mld_snooping static_group

Purpose Used to display the current MLD snooping static group information on the Switch.

Syntax **show mld_snooping static_group** {[vlan <vlan_name 32>| vlanid <vlanid_list>] < ipv6addr >}

Description This command is used to display the current MLD snooping static group information on the Switch.

Parameters

- vlan* – The name of the VLAN for which to view MLD snooping static group information, if not specified, all static group will be displayed.
- vlanid* – The list of the VLAN IDs for which to view MLD snooping static group information, if not specified, all static group will be displayed.
- < *ipv6addr* > – The static group IPv6 address for which to view MLD snooping static group information.

Restrictions None.

Example usage:

To view the current MLD snooping static group information:

```
DGS-3700-12:5#show mld_snooping static_group
```

```
Command: show mld_snooping static_group
```

```
VLAN ID/Name          IP Address           Static Member Ports
-----
1 /default            FF12::1              3
1 /default            FF12::2              3
```

```
Total Entries : 2
```

```
DGS-3700-12:5#
```

create mld_snooping static_group	
Purpose	Used to display the current MLD snooping static group information on the Switch.
Syntax	create mld_snooping static_group [vlan <vlan_name 32> vlanid <vlanid_list>] <ipv6addr>
Description	<p>This command is used to create a mld snooping static group. Member ports can be added to the static group. The static member and the dynamic member port form the member ports of a group.</p> <p>The static group will only take effect when MLD snooping is enabled on the VLAN. For those static member ports, the device needs to emulate the MLD protocol operation to the querier, and forward the traffic destined to the multicast group to the member ports.</p> <p>For a layer 3 device, the device is also responsible to route the packet destined for this specific group to static member ports.</p> <p>The static member port will only affect V1 MLD operation.</p> <p>The Reserved IP multicast address FF0E::X must be excluded from the configured group. The VLAN must be created first before a static group can be created.</p>
Parameters	<p><i>vlan</i> – The name of the VLAN for which to create MLD snooping static group information.</p> <p><i>vlanid</i> – The list of the VLAN IDs for which to create MLD snooping static group information.</p> <p>< <i>ipv6addr</i> > – The static group IPv6 address for which to create MLD snooping static group information.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create a static group FF12::1 for VID 1:

```
DGS-3700-12:5#create mld_snooping static_group vlanid 1 FF12::1
```

```
Command: create mld_snooping static_group vlanid 1 FF12::1
```

```
Success.
```

```
DGS-3700-12:5#
```

delete mld_snooping static_group	
Purpose	Used to delete the current MLD snooping static group on the Switch.
Syntax	delete mld_snooping static_group [vlan <vlan_name 32> vlanid <vlanid_list >] <ipv6addr>
Description	This command is used to delete an MLD snooping static group will not affect the MLD snooping dynamic member ports of a group.
Parameters	<p><i>vlan</i> – The name of the VLAN for which MLD snooping static group information will be deleted.</p> <p><i>vlanid</i> – The list of the VLAN IDs for which MLD snooping static group information will be deleted.</p> <p>< <i>ipv6addr</i> > – The static group IPv6 address for which MLD snooping static group information will be deleted.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete a static group FF12::1 on VID 1:

```
DGS-3700-12:5#delete mld_snooping static_group vlanid 1 FF12::1
Command: delete mld_snooping static_group vlanid 1 FF12::1
```

Success.

```
DGS-3700-12:5#
```

config mld_snooping static_group

Purpose	Used to configure the current MLD snooping static group on the Switch.
Syntax	config mld_snooping static_group [vlan <vlan_name 32> vlanid <vlanid_list>] <ipv6addr> [add delete] <portlist>
Description	This command is used to add or delete ports to/from the given static group.
Parameters	<p><i>vlan</i> – The name of the VLAN for which to configure MLD snooping static group information.</p> <p><i>vlanid</i> – The list of the VLAN IDs for which to configure MLD snooping static group information.</p> <p>< <i>ipv6addr</i> > – The static group IPv6 address for which to configure MLD snooping static group information.</p> <p>[<i>add</i> <i>delete</i>] < <i>portlist</i> > – Portlist to add or delete.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To add port 5 to static group FF12::1 on VID 1:

```
DGS-3700-12:5#config mld_snooping static_group vlanid 1 FF12::1 add 5
Command: config mld_snooping static_group vlanid 1 FF12::1 add 5
```

Success.

```
DGS-3700-12:5#
```

show mld_snooping statistic counter

Purpose	Used to view the current MLD snooping statistic on the Switch.
Syntax	show mld_snooping statistic counter [vlan <vlan_name 32> vlanid <vlanid_list> ports <portlist>]
Description	This command is used to view this information, MLD snooping must be enabled first.
Parameters	<p><i>vlan</i> – The name of the VLAN for which to view MLD snooping statistic counter.</p> <p><i>vlanid</i> – The list of the VLAN ID for which to view MLD snooping statistic counter.</p> <p><i>ports</i> – The list of the ports for which to view MLD snooping statistic counter.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To view MLD snooping statistic on VID 1:

DGS-3700-12:5#show mld_snooping statistic counter vlanid 1

Command: show mld_snooping statistic counter vlanid 1

VLAN Name : default

Group Number : 0

Receive Statistics

Query

MLD v1 Query : 0
MLD v2 Query : 0
Total : 0
Dropped By Rate Limitation : 0
Dropped By Multicast VLAN : 0

Report & Done

MLD v1 Report : 0
MLD v2 Report : 0
MLD v1 Done : 0
Total : 0
Dropped By Rate Limitation : 0
Dropped By Max Group Limitation : 0
Dropped By Group Filter : 0
Dropped By Multicast VLAN : 0

Transmit Statistics

Query

MLD v1 Query : 0
MLD v2 Query : 0
Total : 0

Report & Done

MLD v1 Report : 0
MLD v2 Report : 0
MLD v1 Done : 0
Total : 0

Total Entries : 1

DGS-3700-12:5#

clear mld_snooping statistic counter

Purpose	Used to clear the current MLD snooping statistic on the Switch.
Syntax	clear mld_snooping statistic counter
Description	This command is used to clear all MLD snooping statistic counters.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To clear MLD snooping statistic counter:

```
DGS-3700-12:5#clear mld_snooping statistic counter
```

```
Command: clear mld_snooping statistic counter
```

```
Success.
```

```
DGS-3700-12:5#
```

config mld_snooping data_driven_learning max_learned_entry

Purpose	Used to configure the max number of groups that can be learnt by data driven.
Syntax	config mld_snooping data_driven_learning max_learned_entry <value 1-1024>
Description	This command is used to configure the maximum number of groups that can be learnt by data driven. When the table is full, the system will stop learning the new data-driven groups. Traffic for the new groups will be dropped.
Parameters	<value 1-1024 > – The max number of groups that can be learned by data driven.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the max number of groups that can be learned by data driven to 100:

```
DGS-3700-12:5#config mld_snooping data_driven_learning max_learned_entry 100
```

```
Command: config mld_snooping data_driven_learning max_learned_entry 100
```

```
Success.
```

```
DGS-3700-12:5#
```

config mld_snooping data_driven_learning

Purpose	Used to configure the data driven learning of a MLD snooping group.
Syntax	config mld_snooping data_driven_learning [all vlan_name <vlan_name> vlanid <vlanid_list>] { state [enable disable] aged_out [enable disable] expiry_time <sec 1-65535>}
Description	This command is used to enable/disable the data driven learning of a MLD snooping group. When data-driven learning is enabled for the VLAN, and the switch receives the IP multicast traffic on this VLAN, a MLD snooping group will be created. That is, the learning of an entry is not activated by MLD membership registration, but activated by the traffic. For an ordinary MLD snooping entry, the MLD protocol will take care regarding the ageing out of the entry. For a data-driven entry, the entry can be specified not to be ageout or to be ageout by the aged timer. When the data driven learning is enabled, and data driven table is not full, the multicast filtering mode for all ports are ignored. That is, the multicast packets will be forwarded to router ports. If the data driven learning table is full, the multicast packets will be forwarded according to multicast filtering mode. Note: If a data-driven group is created and MLD member ports are learned later, the entry will become an ordinary MLD snooping entry. Therefore the ageing out mechanism will follow the ordinary MLD snooping entry.
Parameters	<i>all</i> – Configure all VLAN’s MLD Snooping configuration. <i>vlan_name</i> – The name of the VLAN for which MLD snooping data driven learning is to be configured.

config mld_snooping data_driven_learning

	<p><i>vlanid</i> – The VID of the VLAN for which MLD snooping data driven learning is to be configured.</p> <p><i>state [enable disable]</i> – Allows users to enable or disable MLD snooping data driven learning for the specified VLAN.</p> <p><i>aged_out [enable/disable]</i> – Allows users to enable or disable aged_out of MLD Snooping data driven learning for the specified VLAN.</p> <p><i>expiry_time <sec 1-65535></i> – Allows users to set the time that an MLD Snooping data driven learning group will expire for the specified VLAN.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable mld data driven learning on VLAN default:

```
DGS-3700-12:5#config mld_snooping data_driven_learning vlan_name default state enable
aged_out enable expiry_time 270
Command: config mld_snooping data_driven_learning vlan_name default state enable
aged_out enable expiry_time 270

Success.

DGS-3700-12:5#
```

clear mld_snooping data_driven_group

Purpose	Used to delete the MLD snooping group learnt by data driven.
Syntax	clear mld_snooping data_driven_group [all [vlan_name <vlan_name> vlanid <vlanid_list>] [<ipaddr> all]]
Description	This command is used to delete the MLD snooping group learnt by data driven.
Parameters	<p><i>all</i> – Delete all groups learnt by data driven.</p> <p><i>vlan_name</i> – The name of the VLAN for which MLD snooping data driven learning group is to be deleted.</p> <p><i>vlanid</i> – The VID of the VLAN for which MLD snooping data driven learning group is to be deleted.</p> <p><i><ipaddr></i> – The group address for which MLD snooping data driven learning group is to be deleted on the specified VLAN.</p> <p><i><all></i> – All groups learnt by data driven on the specified VLAN will be deleted.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete all groups learnt by data driven on VLAN default:

```
DGS-3700-12:5#clear mld_snooping data_driven_group vlan_name default all
Command: clear mld_snooping data_driven_group vlan_name default all

Success.

DGS-3700-12:5#
```

show mld_snooping host

Purpose	To display the MLD host that has joined groups on a specific port or specific VLAN.
Syntax	show mld_snooping host {[vlan <vlan_name 32> vlanid <vidlist > ports

show mld_snooping host	
	<portlist> group <ipv6addr>}}
Description	This command is used to display the MLD snooping host on the switch.
Parameters	<i>vlan</i> - Specify the VLAN name. It belongs to the host information to be displayed. <i>vlanid</i> - Specify the VLAN ID. It belongs to the host information to be displayed. <i>ports</i> - Specify the port range. It belongs to the host information to be displayed. <i>group</i> - Specify the group's IPv6 address. It belongs to the host information to be displayed.
Restrictions	None.

Example

To display the IP information of hosts:

```
DGS-3700-12:5#show mld_snooping host vlan default
Command: show mld_snooping host vlan default
```

```
VLAN ID : 1
Group   : FF1E::1
Port    : 2
Host    : 2001::1
```

```
VLAN ID : 1
Group   : FF1E::2
Port    : 3
Host    : 2001::1
```

```
VLAN ID : 1
Group   : FF1E::3
Port    : 4
Host    : 2001::1
```

```
VLAN ID : 1
Group   : FF1E::1
Port    : 5
Host    : 2001::2
```

```
Total Entries: 4
```

```
DGS-3700-12:5#
```

MULTIPLE SPANNING TREE PROTOCOL (MSTP) COMMANDS

Back to Section Header

This Switch supports three versions of the Spanning Tree Protocol: 802.1D-2004 STP-compatible, 802.1D-2004 Rapid STP and 802.1Q-2005 MSTP. Multiple Spanning Tree Protocol, or MSTP, is a standard defined by the IEEE community that allows multiple VLANs to be mapped to a single spanning tree instance, which will provide multiple pathways across the network. Therefore, these MSTP configurations will balance the traffic load, preventing wide scale disruptions when a single spanning tree instance fails. This will allow for faster convergences of new topologies for the failed instance. Frames designated for these VLANs will be processed quickly and completely throughout interconnected bridges utilizing either of the three spanning tree protocols (STP, RSTP or MSTP). This protocol will also tag BPDU packets so receiving devices can distinguish spanning tree instances, spanning tree regions and the VLANs associated with them. These instances will be classified by an *instance_id*. MSTP will connect multiple spanning trees with a Common and Internal Spanning Tree (CIST). The CIST will automatically determine each MSTP region, its maximum possible extent and will appear as one virtual bridge that runs a single spanning tree. Consequentially, frames assigned to different VLANs will follow different data routes within administratively established regions on the network, continuing to allow simple and full processing of frames, regardless of administrative errors in defining VLANs and their respective spanning trees.

Each switch utilizing the MSTP on a network will have a single MSTP configuration that will have the following three attributes:

- A configuration name defined by an alphanumeric string of up to 32 characters (defined in **the config stp mst_config_id** command as *name <string>*).
- A configuration revision number (named here as a *revision_level*) and;
- A 4096 element table (defined here as a *vid_range*) which will associate each of the possible 4096 VLANs supported by the Switch for a given instance.

To utilize the MSTP function on the Switch, three steps need to be taken:

- The Switch must be set to the MSTP setting (*config stp version*)
- The correct spanning tree priority for the MSTP instance must be entered (*config stp priority*).
- VLANs that will be shared must be added to the MSTP Instance ID (*config stp instance_id*).

The Multiple Spanning Tree Protocol commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
enable stp	
disable stp	
config stp version	[mstp rstp stp]
config stp	{maxage <value 6-40> maxhops <value 6-40> hellotime <value 1-2> forwarddelay <value 4-30> txholdcount <value 1-10> fbpdu [enable disable] nni_bpdu_addr [dot1d dot1ad]}
config stp ports	<portlist> {externalCost [auto <value 1-200000000>] hellotime <value 1-2> migrate [yes no] edge [true false auto] p2p [true false auto] state [enable disable] restricted_role [true false] restricted_tcn [true false] fbpdu [enable disable]}
create stp instance_id	<value 1-15>
config stp instance_id	<value 1-15> [add_vlan remove_vlan] <vidlist>
delete stp instance_id	<value 1-15>
config stp priority	<value 0-61440> instance_id <value 0-15>

COMMAND	PARAMETERS
config stp mst_config_id	{revision_level <int 0-65535> name <string>}
config stp mst_ports	<portlist> instance_id <value 0-15> {internalCost [auto value 1-200000000] priority <value 0-240>}
show stp	
show stp ports	{<portlist>}
show stp instance	{<value 0-15>}
show stp mst_config_id	

Each command is listed, in detail, in the following sections.

enable stp	
Purpose	Used to globally enable STP on the Switch.
Syntax	enable stp
Description	This command allows the Spanning Tree Protocol to be globally enabled on the Switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable STP, globally, on the Switch:

```
DGS-3700-12:5#enable stp
Command: enable stp

Success.

DGS-3700-12:5#
```

disable stp	
Purpose	Used to globally disable STP on the Switch.
Syntax	disable stp
Description	This command allows the Spanning Tree Protocol to be globally disabled on the Switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable STP on the Switch:

```
DGS-3700-12:5#disable stp
Command: disable stp

Success.

DGS-3700-12:5#
```

config stp version	
Purpose	Used to globally set the version of STP on the Switch.
Syntax	config stp version [mstp rstp stp]

config stp version	
Description	This command allows the user to choose the version of the spanning tree to be implemented on the Switch.
Parameters	<p><i>mstp</i> – Selecting this parameter will set the Multiple Spanning Tree Protocol (MSTP) globally on the Switch.</p> <p><i>rstp</i> – Selecting this parameter will set the Rapid Spanning Tree Protocol (RSTP) globally on the Switch.</p> <p><i>stp</i> – Selecting this parameter will set the Spanning Tree Protocol (STP) globally on the Switch.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To set the Switch globally for the Multiple Spanning Tree Protocol (MSTP):

<pre>DGS-3700-12:5#config stp version mstp Command: config stp version mstp Success DGS-3700-12:5#</pre>
--

config stp	
Purpose	Used to setup STP, RSTP and MSTP on the Switch.
Syntax	{maxage <value 6-40> maxhops <value 6-40> hellotime <value 1-2> forwarddelay <value 4-30> txholdcount <value 1-10> fbpdu [enable disable] nni_bpdu_addr [dot1d dot1ad]}
Description	This command is used to setup the Spanning Tree Protocol (STP) for the entire Switch. All commands here will be implemented for the STP version that is currently set on the Switch.
Parameters	<p><i>maxage</i> <value 6-40> – This value may be set to ensure that old information does not endlessly circulate through redundant paths in the network, preventing the effective propagation of the new information. Set by the Root Bridge, this value will aid in determining that the Switch has spanning tree configuration values consistent with other devices on the bridged LAN. If the value ages out and a BPDU has still not been received from the Root Bridge, the Switch will start sending its own BPDU to all other switches for permission to become the Root Bridge. If it turns out that your switch has the lowest Bridge Identifier, it will become the Root Bridge. The user may choose a time between 6 and 40 seconds. The default value is 20.</p> <p><i>maxhops</i> <value 6-40> – The number of hops between devices in a spanning tree region before the BPDU (bridge protocol data unit) packet sent by the Switch will be discarded. Each switch on the hop count will reduce the hop count by one until the value reaches zero. The Switch will then discard the BPDU packet and the information held for the port will age out. The user may set a hop count from 6 to 40. The default is 20.</p> <p><i>hellotime</i> <value 1-2> – The user may set the time interval between transmission of configuration messages by the root device, thus stating that the Switch is still functioning. A time between 1 and 2 seconds may be chosen, with a default setting of 2 seconds.</p>

config stp	
	 <p>NOTE: In MSTP, the spanning tree is configured by port and therefore, the hellotime must be set using the <code>configure stp ports</code> command for switches utilizing the Multiple Spanning Tree Protocol.</p> <p><i>forwarddelay</i> <value 4-30> – The maximum amount of time (in seconds) that the root device will wait before changing states. The user may choose a time between 4 and 30 seconds. The default is 15 seconds.</p> <p><i>txholdcount</i> <value 1-10> – The maximum number of BPDU Hello packets transmitted per interval. Default value is 6.</p> <p><i>fbpdu</i> [enable disable] – Allows the forwarding of STP BPDU packets from other network devices when STP is disabled on the Switch. The default is <i>disable</i>.</p> <p><i>nni_bpdu_addr</i> [dot1d dot1ad] – Configure NNI port address. The default is dot1d.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure STP with maxage 18 and maxhops of 15:

```
DGS-3700-12:5#config stp maxage 18 maxhops 15
Command: config stp maxage 18 maxhops 15

Success.

DGS-3700-12:5#
```

config stp ports	
Purpose	Used to setup STP on the port level.
Syntax	config stp ports <portlist> {externalCost [auto <value 1-200000000>] hellotime <value 1-2> migrate [yes no] edge [true false auto] p2p [true false auto] state [enable disable] restricted_role [true false] restricted_tcn [true false] fbpdu [enable disable]}
Description	This command is used to create and configure STP for a group of ports.
Parameters	<p><portlist> - Specify a range of ports.</p> <p><i>externalCost</i> - Specify the path cost between the MST regions from the transmitting Bridge to the CIST Root Bridge. It is only used at CIST level.</p> <p><i>auto</i> - Specify to automatically choose the path cost.</p> <p><value 1-200000000> - Specify a value between 1 and 200000000.</p> <p><i>hellotime</i> - The default value is 2 . This is a per-Bridge parameter in RSTP, but it becomes a per-Port parameter in MSTP.</p> <p><i>migrate</i> - Operation of management in order to specify the port to send MSTP BPDU for a delay time.</p> <p><i>yes</i> - Specify for port to send MSTP BPDU for a delay time.</p> <p><i>no</i> - Specify for port not to send MSTP BPDU for a delay time.</p> <p><i>edge</i> - Decides if this port is connected to a LAN or a Bridged LAN. In auto mode, the bridge will delay for a period to become edge port if no bridge BPUD is received.</p> <p><i>true</i> - Specify a true edge connection.</p> <p><i>false</i> - Specify a false edge connection.</p> <p><i>auto</i> - The bridge will delay for a period to become edge port if no bridge BPUD is received.</p> <p><i>p2p</i> - Decides if this port is in Full-Duplex or Half-Duplex mode.</p>

config stp ports	
	<p><i>true</i> - Specify full-duplex mode. <i>false</i> - Specify half-duplex mode. <i>auto</i> - The switch will automatically determine the P2P mode. <i>state</i> - Decides if this port supports the STP functionality. <i>enable</i> - Enable to support STP functionality. <i>disable</i> - Disable STP functionality support. <i>restricted_role</i> - Decides if this port is to be selected as Root Port or not. The default value is false. <i>true</i> - Decides that this port is not to be selected as Root Port. <i>false</i> - Decides that this port is to be selected as Root Port <i>restricted_tcn</i> - Decides if this port is to to propagate a topology change or not. The default value is false <i>true</i> - Specify not to propagate a topology change. <i>false</i> - Specify to propagate a topology change. <i>fbpdu</i> - Decides if this port will flood STP BPDU when STP functionality is disabled. <i>enable</i> - Enable port to flood STP BPDU when STP functionality is disabled. <i>disable</i> - Disable port from flooding STP BPDU when STP functionality is disabled.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure STP ports:

```
DGS-3700-12:5# config stp ports 1 externalCost auto
Command: config stp ports 1 externalCost auto

Success.

DGS-3700-12:5#
```

create stp instance_id	
Purpose	Used to create a STP instance ID for MSTP.
Syntax	create stp instance_id <value 1-15>
Description	This command allows the user to create a STP instance ID for the Multiple Spanning Tree Protocol. There are 16 STP instances on the Switch (one internal CIST, unchangeable) and the user may create up to 15 instance IDs for the Switch.
Parameters	<value 1-15> – Enter a value between 1 and 15 to identify the Spanning Tree instance on the Switch.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create a spanning tree instance 2:

```
DGS-3700-12:5#create stp instance_id 2
Command: create stp instance_id 2

Warning:There is no VLAN mapping to this instance_id!
Success.

DGS-3700-12:5#
```

config stp instance_id	
Purpose	Used to add or delete VID to/from an STP instance.
Syntax	config stp instance_id <value 1-15> [add_vlan remove_vlan] <vidlist>
Description	<p>This command is used to map VIDs (VLAN IDs) to previously configured STP instances on the Switch by creating an <i>instance_id</i>. A STP instance may have multiple members with the same MSTP configuration. There is no limit to the number of STP regions in a network but each region only supports a maximum of 16 spanning tree instances (one unchangeable default entry). VIDs can belong to only one spanning tree instance at a time.</p>  <p>NOTE: Switches in the same spanning tree region having the same STP instance_id must be mapped identically, and have the same configuration revision_level number and the same name.</p>
Parameters	<p><value 1-15> – Enter a number between 1 and 15 to define the <i>instance_id</i>. The Switch supports 16 STP instances with one unchangeable default instance ID set as 0.</p> <p><i>add_vlan</i> – Along with the <i>vid_range</i> <vidlist> parameter, this command will add VIDs to the previously configured STP <i>instance_id</i>.</p> <p><i>remove_vlan</i> – Along with the <i>vid_range</i> <vidlist> parameter, this command will remove VIDs to the previously configured STP <i>instance_id</i>.</p> <p><vidlist> – Specify the VID range from configured VLANs set on the Switch. Supported VIDs on the Switch range from ID number 1 to 4094.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure instance ID 2 to add VID 10:

```
DGS-3700-12:5#config stp instance_id 2 add_vlan 10
Command : config stp instance_id 2 add_vlan 10

Success.

DGS-3700-12:5#
```

Example usage:

To remove VID 10 from instance ID 2:

```
DGS-3700-12:5#config stp instance_id 2 remove_vlan 10
Command : config stp instance_id 2 remove_vlan 10

Success.

DGS-3700-12:5#
```

delete stp instance_id	
Purpose	Used to delete a STP instance ID from the Switch.
Syntax	delete stp instance_id <value 1-15>
Description	This command allows the user to delete a previously configured STP instance ID from the Switch.
Parameters	<value 1-15> – Enter a value between 1 and 15 to identify the Spanning Tree instance on the Switch.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete STP instance ID 2 from the Switch.

```
DGS-3700-12:5#delete stp instance_id 2
Command: delete stp instance_id 2
```

Success.

```
DGS-3700-12:5#
```

config stp priority

Purpose	Used to configure the bridge priority.
Syntax	config stp priority <value 0-61440> instance_id <value 0-15>
Description	This command is used to update the STP instance configuration settings on the Switch. The MSTP will utilize the priority in selecting the root bridge, root port and designated port. Assigning higher priorities to STP regions will instruct the Switch to give precedence to the selected <i>instance_id</i> for forwarding packets. The lower the priority value set, the higher the priority.
Parameters	<i>priority <value 0-61440></i> – Select a value between 0 and 61440 to specify the priority for a specified instance ID for forwarding packets. The lower the value, the higher the priority. This value must be divisible by 4096. The default settings is 32768. <i>instance_id <value 0-15></i> – Enter the value corresponding to the previously configured instance ID of which the user wishes to set the priority value. An instance id of 0 denotes the default <i>instance_id</i> (CIST) internally set on the Switch.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To set the priority value for *instance_id* 2 as 4096.

```
DGS-3700-12:5#config stp priority 4096 instance_id 2
Command : config stp priority 4096 instance_id 2
```

Success.

```
DGS-3700-12:5#
```

config stp mst_config_id

Purpose	Used to update the MSTP configuration identification.
Syntax	config stp mst_config_id {revision_level <int 0-65535> name <string>}
Description	This command will uniquely identify the MSTP configuration currently configured on the Switch. Information entered here will be attached to BPDU packets as an identifier for the MSTP region to which it belongs. Switches having the same <i>revision_level</i> and <i>name</i> will be considered as part of the same MSTP region.
Parameters	<i>revision_level <int 0-65535></i> – Enter a number between 0 and 65535 to identify the MSTP region. This value, along with the name will identify the MSTP region configured on the Switch. The default setting is 0. <i>name <string></i> – Enter an alphanumeric string of up to 32 characters to uniquely identify the MSTP region on the Switch. This <i>name</i> , along with the <i>revision_level</i> value will identify the MSTP region configured on the Switch. If no <i>name</i> is entered, the default name will be the MAC address of the device.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the MSTP region of the Switch with *revision_level* 10 and the *name* “Trinity”:

```
DGS-3700-12:5#config stp mst_config_id revision_level 10 name Trinity
Command : config stp mst_config_id revision_level 10 name Trinity
```

Success.

```
DGS-3700-12:5#
```

config stp mst_ports

Purpose	Used to update the port configuration for a MSTP instance.
Syntax	config stp mst_ports <portlist> instance_id <value 0-15> {internalCost [auto <value 1-200000000>] priority <value 0-240>}
Description	This command will update the port configuration for a STP <i>instance_id</i> . If a loop occurs, the MSTP function will use the port priority to select an interface to put into the forwarding state. Set a higher priority value for interfaces to be selected for forwarding first. In instances where the priority value is identical, the MSTP function will implement the lowest MAC address into the forwarding state and other interfaces will be blocked. Remember that lower priority values mean higher priorities for forwarding packets.
Parameters	<p><i><portlist></i> – Specifies a port or range of ports to be configured.</p> <p><i>instance_id <value 0-15></i> – Enter a numerical value between 0 and 15 to identify the <i>instance_id</i> previously configured on the Switch. An entry of 0 will denote the CIST (Common and Internal Spanning Tree).</p> <p><i>internalCost</i> – This parameter is set to represent the relative cost of forwarding packets to specified ports when an interface is selected within a STP instance. The default setting is <i>auto</i>. There are two options:</p> <p><i>auto</i> – Selecting this parameter for the <i>internalCost</i> will set quickest route automatically and optimally for an interface. The default value is derived from the media speed of the interface.</p> <p><i>value 1-200000000</i> – Selecting this parameter with a value in the range of 1-200000000 will set the quickest route when a loop occurs. A lower <i>internalCost</i> represents a quicker transmission.</p> <p><i>priority <value 0-240></i> – Enter a value between 0 and 240 to set the priority for the port interface. A higher priority will designate the interface to forward packets first. A lower number denotes a higher priority. This value must be divisible by 16. The default setting is 128.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To designate ports 1 through 5, with instance id 2, to have an auto *internalCost* and a priority of 16:

```
DGS-3700-12:5#config stp mst_ports 1-5 instance_id 2 internalCost auto priority 16
Command : config stp mst_ports 1-5 instance_id 2 internalCost auto priority 16

Success.

DGS-3700-12:5#
```

show stp

Purpose	Used to display the Switch's current STP configuration.
Syntax	show stp
Description	This command displays the Switch's current STP configuration.
Parameters	None.
Restrictions	None.

Example usage:

To display the status of STP on the Switch:

Status 1: STP enabled with STP compatible version

```
DGS-3700-12:5#show stp
Command: show stp

STP Bridge Global Settings
-----
STP Status          : Enabled
STP Version         : STP compatible
Max Age             : 18
Hello Time          : 2
Forward Delay       : 15
Max Hops            : 15
TX Hold Count       : 6
Forwarding BPDU     : Disabled
NNI BPDU Address    : dot1d

DGS-3700-12:5#
```

Status 2 : STP enabled for RSTP

```
DGS-3700-12:5#show stp
Command: show stp

STP Bridge Global Settings
-----
STP Status          : Enabled
STP Version         : RSTP
Max Age             : 20
Hello Time          : 2
Forward Delay       : 15
Max Hops            : 20
TX Hold Count       : 6
Forwarding BPDU     : Disabled
NNI BPDU Address    : dot1d

DGS-3700-12:5#
```

Status 3 : STP enabled for MSTP

```
DGS-3700-12:5#show stp
Command: show stp

STP Bridge Global Settings
-----
STP Status          : Enabled
STP Version         : MSTP
Max Age             : 18
Forward Delay      : 15
Max Hops            : 15
TX Hold Count      : 6
Forwarding BPDU    : Disabled
NNI BPDU Address   : dot1d

DGS-3700-12:5#
```

show stp ports

Purpose	Used to display the Switch's current STP ports configuration.
Syntax	show stp ports <portlist>
Description	This command displays the STP ports settings for a specified port or group of ports (one port at a time).
Parameters	<portlist> – Specifies a port or range of ports to be viewed. Information for a single port is displayed. If no ports are specified the STP information for port 1 will be displayed. Users may use the Space bar, p and n keys to view information for the remaining ports.
Restrictions	None.

Example usage:
 To show STP ports information for port 1 (STP enabled on Switch):

```
DGS-3700-12:5#show stp ports
Command: show stp ports

MSTP Port Information
-----
Port Index      : 1      , Hello Time: 2 /2 , Port STP : Enabled ,
External PathCost : 1      , Edge Port : False/No , P2P : Auto /Yes
Port RestrictedRole : False, Port RestrictedTCN : False
Port Forward BPDU : Enabled
MSTI  Designated Bridge  Internal PathCost  Prio  Status      Role
-----
0      N/A                20000              128   Disabled    Disabled
1      N/A                200000             128   Disabled    Disabled
2      N/A                200000             128   Disabled    Disabled

DGS-3700-12:5#
```

show stp instance_id

Purpose	Used to display the Switch's STP instance configuration
Syntax	show stp instance_id <value 0-15>
Description	This command displays the Switch's current STP Instance Settings and the STP Instance Operational Status.
Parameters	<value 0-15> – Enter a value defining the previously configured <i>instance_id</i> on the Switch. An entry of 0 will display the STP configuration for the CIST internally set on the Switch.

show stp instance_id

Restrictions	None.
---------------------	-------

Example usage:

To display the STP instance configuration for instance 0 (the internal CIST) on the Switch:

```
DGS-3700-12:5#show stp instance 0
Command: show stp instance 0

STP Instance Settings
-----
Instance Type           : CIST
Instance Status        : Enabled
Instance Priority       : 32768(Bridge Priority : 32768, SYS ID Ext : 0 )

STP Instance Operational Status
-----
Designated Root Bridge : 4096 /00-11-95-AA-41-00
External Root Cost     : 200004
Regional Root Bridge   : 32768/00-01-02-03-04-00
Internal Root Cost     : 0
Designated Bridge      : 32768/00-50-BA-97-D9-56
Root Port              : 7
Max Age                : 20
Forward Delay          : 15
Last Topology Change   : 0
Topology Changes Count : 21

DGS-3700-12:5#
```

show stp mst_config_id

Purpose	Used to display the MSTP configuration identification.
Syntax	show stp mst_config_id
Description	This command displays the Switch's current MSTP configuration identification.
Parameters	None.
Restrictions	None.

Example usage:

To show the MSTP configuration identification currently set on the Switch:

```
DGS-3700-12:5#show stp mst_config_id
Command: show stp mst_config_id

Current MST Configuration Identification
-----
Configuration Name : 00:53:13:1A:33:24      Revision Level :0
MSTI ID    Vid list
-----
CIST       2-4094
1          1

DGS-3700-12:5#
```

PACKET STORM COMMANDS

Back to Section Header

On a computer network, packets such as Multicast, Broadcast, and Unicast packets continually flood the network as normal procedure. At times, this traffic may increase do to a malicious endstation on the network or a malfunctioning device, such as a faulty network card. Thus, switch throughput problems will arise and consequently affect the overall performance of the switch network. To help rectify this packet storm, the Switch will monitor and control the situation.

The packet storm is monitored to determine if too many packets are flooding the network, based on the threshold level provided by the user. Once a packet storm has been detected, the Switch will drop packets coming into the Switch until the storm has subsided. This method can be utilized by selecting the **Drop** option of the **Action** field in the window below.

The Switch will also scan and monitor packets coming into the Switch by monitoring the Switch's chip counter. This method is only viable for Broadcast and Multicast storms because the chip only has counters for these two types of packets. Once a storm has been detected (that is, once the packet threshold set below has been exceeded), the Switch will shutdown the port to all incoming traffic with the exception of STP BPDU packets, for a time period specified using the *countdown* field. If this field times out and the packet storm continues, the port will be placed in a Shutdown Forever mode which will produce a warning message to be sent to the Trap Receiver. Once in Shutdown Forever mode, one method of recovering this port is to manually recoup it using the **Port Configuration** window in the **Administration** folder and selecting the disabled port and returning it to an Enabled status and the port will be recovered automatically , when auto-recover time is over. To utilize this method of Storm Control, choose the **Shutdown** option of the **Action** field in the window below.

The broadcast storm control commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
config traffic control	[<portlist> all] {broadcast [enable disable] multicast [enable disable] unicast [enable disable] action [drop shutdown] threshold <value 0-255000> countdown [<min 0> <min 3-30>]} time_interval <sec 5-600>}
show traffic control	{<portlist>}
config traffic trap	[none storm_occurred storm_cleared both]
config traffic control auto_recover_time	[<min 0> <min 1-65535>]
config traffic control log state	[enable disable]

Each command is listed, in detail, in the following sections.

config traffic control	
Purpose	Used to configure broadcast/multicast/unicast packet storm control. The software mechanism is provided to monitor the traffic rate in addition to the hardware storm control mechanism previously provided.
Syntax	config traffic control [<portlist> all] { broadcast [enable disable] multicast [enable disable] unicast [enable disable] action [drop shutdown] threshold <value 0-255000> countdown [<min 0> <min 3-30>]} time_interval <sec 5-600>}
Description	This command is used to configure broadcast/multicast/unicast storm control. By

config traffic control	
	adding the new software traffic control mechanism, the user can now use both a hardware and software mechanism, the latter of which now provides shutdown, recovery and trap notification functions for the Switch.
Parameters	<p><i><portlist></i> – Used to specify a group list of ports to be configured for traffic control, as defined below:</p> <p><i>all</i> – Specifies all portlists are to be configured for traffic control on the Switch.</p> <p><i>broadcast [enable / disable]</i> – Enables or disables broadcast storm control.</p> <p><i>multicast [enable / disable]</i> – Enables or disables multicast storm control.</p> <p><i>unicast [enable / disable]</i> – Enables or disables unicast traffic control.</p> <p><i>action</i> – Used to configure the action taken when a storm control has been detected on the Switch. The user has two options:</p> <p><i>drop</i> – Utilizes the hardware Traffic Control mechanism, which means the Switch’s hardware will determine the Packet Storm based on the Threshold value stated and drop packets until the issue is resolved.</p> <p><i>shutdown</i> – Utilizes the Switch’s software Traffic Control mechanism to determine the Packet Storm occurring. Once detected, the port will deny all incoming traffic to the port except STP BPDU packets, which are essential in keeping the Spanning Tree operational on the Switch. If the countdown timer has expired and yet the Packet Storm continues, the port will be placed in Shutdown Forever mode and is no longer operational until the user manually resets the port using the config ports enable command or when the auto-recover time has expired. Choosing this option obligates the user to configure the <i>time_interval</i> field as well, which will provide packet count samplings from the Switch’s chip to determine if a Packet Storm is occurring.</p> <p><i>threshold <value 0-255000></i> – The upper threshold at which the specified traffic control is switched on. The <i><value></i> is the number of broadcast/multicast/unicast packets, in packets per second (pps), received by the Switch that will trigger the storm traffic control measures. The default setting is 131072.</p> <p><i>time_interval</i> – The Interval will set the time between Multicast and Broadcast packet counts sent from the Switch’s chip to the Traffic Control function. These packet counts are the determining factor in deciding when incoming packets exceed the Threshold value.</p> <p><i>sec 5-600</i> – The Interval may be set between 5 and 60 seconds with the default setting of 5 seconds.</p> <p><i>countdown</i> – The countdown timer is set to determine the amount of time, in minutes, that the Switch will wait before shutting down the port that is experiencing a traffic storm. The switch will shutdown the port only if the traffic level exceeds the configured threshold all the time during this countdown period. This parameter is only useful for ports configured as shutdown in the action field of this command and therefore will not operate for Hardware based Traffic Control implementations.</p> <p><i>min 0</i> – 0 is the default setting for this field and 0 will denote that the port will never shutdown forever.</p> <p><i>min 3-30</i> – Select a time from 3 to 30 minutes that the Switch will wait before shutting down. Once this time expires and the port is still experiencing packet storms, the port will be placed in shutdown forever mode and can be manually recovered using the config ports command mentioned previously in this manual or the when the auto-recover time has expired.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure traffic control and enable broadcast storm control for ports 1-12:

```
DGS-3700-12:5#config traffic control 1-12 broadcast enable action shutdown threshold 1
countdown 10 time_interval 10
Command: config traffic control 1-12 broadcast enable action shutdown threshold 1
countdown 10 time_interval 10

Success.

DGS-3700-12:5#
```

show traffic control

Purpose	Used to display current traffic control settings.
Syntax	show traffic control { <portlist> }
Description	This command displays the current storm traffic control configuration on the Switch.
Parameters	<portlist> – Used to specify port or list of ports for which to display traffic control settings. The beginning and end of the port list range are separated by a dash.
Restrictions	None.

Example usage:

To display traffic control settings:

```
DGS-3700-12:5#show traffic control
Command: show traffic control

Traffic Control Trap           : [None]
Traffic Control Log           : Enabled
Traffic Control Auto Recover Time : 0 Minutes

Port Thres  Broadcast  Multicast  Unicast  Action  Count  Time  Shutdown
   hold   Storm    Storm     Storm   Action  Down  Interval Forever
-----
1   131072 Disabled  Disabled  Disabled drop    0     5
2   131072 Disabled  Disabled  Disabled drop    0     5
3   131072 Disabled  Disabled  Disabled drop    0     5
4   131072 Disabled  Disabled  Disabled drop    0     5
5   131072 Disabled  Disabled  Disabled drop    0     5
6   131072 Disabled  Disabled  Disabled drop    0     5
7   131072 Disabled  Disabled  Disabled drop    0     5
8   131072 Disabled  Disabled  Disabled drop    0     5
9   131072 Disabled  Disabled  Disabled drop    0     5
10  131072 Disabled  Disabled  Disabled drop    0     5
11  131072 Disabled  Disabled  Disabled drop    0     5
12  131072 Disabled  Disabled  Disabled drop    0     5

DGS-3700-12:5#
```

config traffic trap

Purpose	Used to configure the trap settings for the packet storm control mechanism.
Syntax	config traffic trap [none storm_occurred storm_cleared both]
Description	This command will configure how packet storm control trap messages will be used when a packet storm is detected by the Switch. This function can only be used for the software traffic storm control mechanism (when the action field in the config traffic storm_control command is set as shutdown).

config traffic trap	
Parameters	<p><i>none</i> – No notification will be generated or sent when a packet storm control is detected by the Switch.</p> <p><i>storm_occurred</i> – A notification will be generated and sent when a packet storm has been detected by the Switch.</p> <p><i>storm_cleared</i> – A notification will be generated and sent when a packet storm has been cleared by the Switch.</p> <p><i>both</i> – A notification will be generated and sent when a packet storm has been detected and cleared by the Switch.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure notifications to be sent when a packet storm control has been detected and cleared by the Switch.

```
DGS-3700-12:5# config traffic trap both
Command: config traffic trap both

Success.

DGS-3700-12:5#
```

config traffic control auto_recover_time	
Purpose	Used to configure the auto recover time.
Syntax	config traffic control auto_recover_time [<min 0> <min 1- 65535>]
Description	This command will configure all ports' auto recover time from shutdown forever state.
Parameters	<p><i>min</i> – The time allowed for auto recovery from shutdown for a port. The default value is 0, so no auto recovery is possible; the port remains in shutdown forever mode. This requires manual entry of the CLI command “config ports [<portlist> all] state enable” to return the port to a forwarding state.</p> <p>The default value is 0, which means disable auto recover mode, shutdown forever.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the auto recover time to 5 minutes:

```
DGS-3700-12:5# config traffic control auto_recover_time 5
Command: config traffic control auto_recover_time 5

Success.

DGS-3700-12:5#
```

config traffic control log state	
Purpose	Used to configure the trap settings for the packet storm control mechanism.
Syntax	config traffic control log state [enable disable]
Description	This command will configure the traffic log state. When the log state is enabled, traffic control states are logged when a storm occurs and when a storm is cleared. If the log state is disabled, traffic control events are not logged.
Parameters	<i>enable</i> – Enable to logged when a storm occurs or be cleared.

config traffic control log state

disable – Don't logged the storm event when a storm occurs or be cleared.

Restrictions

Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the traffic log state to enable:

```
DGS-3700-12:5# config traffic control log state enable
Command: config traffic control log state enable

Success.

DGS-3700-12:5#
```

PORT MIRRORING COMMANDS

Back to Section Header

The port mirroring commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
config mirror port	<port> {[add delete] source ports <portlist> [rx tx both]}
enable mirror	
disable mirror	
show mirror	

Each command is listed, in detail, in the following sections.

config mirror port	
Purpose	Used to configure a mirror port – source port pair on the Switch. Traffic from any source port to a target port can be mirrored for real-time analysis. A logic analyzer or an RMON probe can then be attached to study the traffic crossing the source port in a completely obtrusive manner.
Syntax	config mirror port <port> {[add delete] source ports <portlist> [rx tx both]}
Description	This command allows a range of ports to have all of their traffic also sent to a designated port, where a network sniffer or other device can monitor the network traffic. In addition, users can specify that only traffic received by or sent by one or both is mirrored to the Target port.
Parameters	<p><port> – This specifies the Target port (the port where mirrored packets will be received). The target port must be configured in the same VLAN and must be operating at the same speed as the source port. If the target port is operating at a lower speed, the source port will be forced to drop its operating speed to match that of the target port.</p> <p>[add delete] – Specifies if the user wishes to add or delete ports to be mirrored that are specified in the <i>source ports</i> parameter.</p> <p><i>source ports</i> – The port or ports being mirrored. This cannot include the Target port.</p> <p><portlist> – This specifies a port or range of ports that will be mirrored. That is, the range of ports in which all traffic will be copied and sent to the Target port.</p> <p><i>rx</i> – Allows the mirroring of only packets received by (flowing into) the port or ports in the port list.</p> <p><i>tx</i> – Allows the mirroring of only packets sent to (flowing out of) the port or ports in the port list.</p> <p><i>both</i> – Mirrors all the packets received or sent by the port or ports in the port list.</p>
Restrictions	<p>The Target port cannot be listed as a source port.</p> <p>Only Administrator and Operator-level users can issue this command.</p>

Example usage:

To add the mirroring ports:

```
DGS-3700-12:5#config mirror port 1 add source ports 2-5 both
Command: config mirror port 1 add source ports 2-5 both

Success.

DGS-3700-12:5#
```

Example usage:
To delete the mirroring ports:

```
DGS-3700-12:5# config mirror port 1 delete source ports 2-4 both
Command: config mirror port 1 delete source ports 2-4 both

Success.

DGS-3700-12:5#
```

enable mirror

Purpose	Used to enable a previously entered port mirroring configuration.
Syntax	enable mirror
Description	This command, combined with the disable mirror command below, allows the user to enter a port mirroring configuration into the Switch, and then turn the port mirroring on and off without having to modify the port mirroring configuration.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To enable mirroring configurations:

```
DGS-3700-12:5#enable mirror
Command: enable mirror

Success.

DGS-3700-12:5#
```

disable mirror

Purpose	Used to disable a previously entered port mirroring configuration.
Syntax	disable mirror
Description	This command, combined with the enable mirror command above, allows the user to enter a port mirroring configuration into the Switch, and then turn the port mirroring on and off without having to modify the port mirroring configuration.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To disable mirroring configurations:

```
DGS-3700-12:5#disable mirror
Command: disable mirror

Success.

DGS-3700-12:5#
```

show mirror

Purpose	Used to show the current port mirroring configuration on the Switch.
Syntax	show mirror
Description	This command displays the current port mirroring configuration on the Switch.
Parameters	None.
Restrictions	None.

Example usage:
To display mirroring configuration:

```
DGS-3700-12:5#show mirror
Command: show mirror

Current Settings
Mirror Status : Enabled
Target Port   : 1
Mirrored Port
              RX :
              TX : 5-7

DGS-3700-12:5#
```

PORT SECURITY COMMANDS

Back to Section Header

The Switch's port security commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
config port_security ports	[<portlist> all] [{admin_state [enable disable] max_learning_addr <max_lock_no 0-16384> lock_address_mode [permanent deleteontimeout deleteonreset]}] (1) {vlan [<vlan_name 32> vlandid <vidlist>] max_learning_addr [<max_lock_no 0-16384> no_limit]}
delete port_security_entry	[vlan <vlan_name 32> vlandid <vlandid 1-4094>] mac_address <macaddr>
clear port_security_entry	{ports [<portlist> all] { [vlan <vlan_name> vlandid <vidlist>] }}
show port_security	{ports [<portlist> all] { [vlan <vlan_name> vlandid <vidlist>] }}
show port_security_entry	{ports [<portlist> all] { [vlan <vlan_name> vlandid <vidlist>] }}
enable port_security trap_log	
disable port_security trap_log	
config port_security system	max_learning_addr [<max_lock_no 1-16384> no_limit]
config port_security vlan	[<vlan_name> vlandid <vidlist>] max_learning_addr [<max_lock_no 0-16384> no_limit]

Each command is listed, in detail, in the following sections.

config port_security ports	
Purpose	Used to configure port security settings.
Syntax	config port_security ports [<portlist> all] [{ admin_state [enable disable] max_learning_addr <max_lock_no 0-16384> lock_address_mode [permanent deleteontimeout deleteonreset]}] (1) { vlan [<vlan_name 32> vlandid <vidlist>] max_learning_addr [<max_lock_no 0-16384> no_limit]}
Description	This command allows for the configuration of the port security feature. Only the ports listed in the <portlist> are affected.
Parameters	<p><i>portlist</i> – Specifies a port or range of ports to be configured.</p> <p><i>all</i> – Configure port security for all ports on the Switch.</p> <p><i>admin_state</i> [enable disable] – Enable or disable port security for the listed ports.</p> <p><i>max_learning_addr</i> <max_lock_no 0-16384> – Use this to limit the number of MAC addresses dynamically listed in the FDB for the ports.</p> <p><i>lock_address_mode</i> [Permanent DeleteOnTimeout DeleteOnReset] – Indicates the method of locking addresses. The user has three choices:</p> <p><i>permanent</i> – The locked addresses will not age out after the aging timer expires.</p> <p><i>DeleteOnTimeout</i> – The locked addresses will age out after the aging timer expires.</p> <p><i>DeleteOnReset</i> – The locked addresses will not age out until the Switch has been restarted.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the port security:

```
DGS-3700-12:5#config port_security ports 1-5 admin_state enable max_learning_addr 5
lock_address_mode deleteonreset
Command: config port_security ports 1-5 admin_state enable max_learning_addr 5
lock_address_mode deleteonreset

Success.

DGS-3700-12:5#
```

delete port_security_entry

Purpose	Used to delete a port security entry by MAC address and VLAN ID.
Syntax	delete port_security_entry [vlan <vlan_name 32> vlanid <vlanid 1-4094>] mac_address <macaddr>
Description	This command is used to delete a single, previously learned port security entry, VLAN name, and MAC address.
Parameters	<p><i>vlan name <vlan_name 32></i> – Enter the corresponding VLAN name of the port to delete.</p> <p><i>vlanid <vlanid 1-4094></i> – Enter the corresponding VID of the port to delete.</p> <p><i>mac_address <macaddr></i> – Enter the corresponding MAC address, previously learned by the port, to delete.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete a port security entry:

```
DGS-3700-12:5#delete port_security_entry vlan rg mac_address 00-01-30-10-2C-C7
Command: delete port_security_entry vlan rg mac_address 00-01-30-10-2C-C7

Success.

DGS-3700-12:5#
```

clear port_security_entry

Purpose	Used to clear MAC address entries learned from a specified port for the port security function.
Syntax	clear port_security_entry {ports [<portlist> all] { [vlan <vlan_name> vlanid <vidlist>]}}
Description	This command is used to clear MAC address entries which were learned by the Switch by a specified port. This command only relates to the port security function.
Parameters	<p><i><portlist></i> – Specifies a port or port range to clear.</p> <p><i>vlan</i> – The port security entry learned on the specified VLAN will be cleared.</p> <p><i>vlanid</i> – Specifies a list of VLANs by their VLAN ID.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To clear a port security entry by port:

```
DGS-3700-12:5# clear port_security_entry ports 6
```

```
Command: clear port_security_entry ports 6
```

```
Success.
```

```
DGS-3700-12:5#
```

show port_security

Purpose	Used to display the current port security configuration.
Syntax	show port_security_entry {ports [<portlist> all] { [vlan <vlan_name> vlanid <vidlist>] }}
Description	This command is used to display port security information of the Switch's ports. The information displayed includes port security, admin state, maximum number of learning address and lock mode.
Parameters	<i><portlist></i> – Specifies a port or range of ports to be viewed. <i>vlan</i> – The port security entries learned on the specified VLANs will be cleared. <i>vlanid</i> – Specifies a list of VLANs by their VLAN ID.
Restrictions	None.

Example usage:

To display the port security configuration:

```
DGS-3700-12:5#show port_security ports 1-5
```

```
Command: show port_security ports 1-5
```

Port Configuration:

Port	State	Lock Address Mode	Max. Learning Addr.
1	Disabled	DeleteOnReset	1
2	Disabled	DeleteOnReset	1
3	Disabled	DeleteOnReset	1
4	Disabled	DeleteOnReset	1
5	Disabled	DeleteOnReset	1

```
DGS-3700-12:5#
```

enable port_security trap_log

Purpose	Used to enable the trap/log for port security.
Syntax	enable port_security trap_log
Description	This command is used to enable port security traps/logs. When this command is enabled, if there's a new MAC that violates the pre-defined port security configuration, a trap will be sent out with the MAC and port information and the relevant information will be logged.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable the port security trap/log setting:

```
DGS-3700-12:5#enable port_security trap_log
```

```
Command: enable port_security trap_log
```

```
Success.
```

```
DGS-3700-12:5#
```

disable port_security trap_log

Purpose	Used to disable the trap/log for port security.
Syntax	disable port_security trap_log
Description	This command is used to disable a port security trap/log. If the port security trap is disabled, no trap will be sent out for MAC violations.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable the port security trap/log setting:

```
DGS-3700-12:5#disable port_security trap_log
```

```
Command: disable port_security trap_log
```

```
Success.
```

```
DGS-3700-12:5#
```

config port_security system max_learning_addr

Purpose	This command is used to set the maximum number of port security entries that can be learned by the system.
Syntax	config port_security system max_learning_addr [<max_lock_no 1-16384> no_limit (99999)]
Description	This command sets the maximum number of port security entries that can be authorized system wide. There are four levels of limitations on the learned entry number, for the entire system, for a port, for a VLAN, and for specific VLANs on a port. If any limitation is exceeded, the new entry will be discarded. The setting for system level max learned users must be greater than the total of the max learned users allowed on all ports.
Parameters	<i>max_lock_no</i> – Specifies the maximum number of port security entries that can be learned by the system. If the setting is smaller than the number of current learned entries on all enabled ports, the command will be rejected. By default, the number is set to <i>no_limit</i> .
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure port security:

```
DGS-3700-12:5#config port_security system max_learning_addr 2048
Command: config port_security system max_learning_addr 2048

Success.

DGS-3700-12:5#
```

show port_security entry

Purpose	This command is used to show the maximum port-security entries that can be learned by a specific VLAN on a specific port.
Syntax	show port_security_entry {ports [ports [<portlist> all] [[vlan <vlan_name> vlanid <vidlist>]]}
Description	This command is used to show port security entries on the Switch.
Parameters	<p><i>portlist</i> – Specifies a port or range of ports to be shown.</p> <p><i>all</i> – Shows port security for all ports on the Switch.</p> <p><vlan_name> – Specifies a list of VLANs by VLAN name to show the port security entry.</p> <p><i>vlanid</i> – Specifies a list of VLANs by VLAN ID to show the port security entry.</p>
Restrictions	None.

Example usage:

To display port security entries on the Switch:

```
DGS-3700-12:5#show port_security_entry
Command: show port_security_entry

No entry is found!

DGS-3700-12:5#
```

config port_security vlan

Purpose	This command is used to set the maximum port-security entries that can be learned on a specific VLAN.
Syntax	config port_security vlan [<vlan_name> vlanid <vidlist>] max_learning_addr [<max_lock_no 0-16384> no_limit]
Description	<p>This command sets the maximum port-security entries that can be learned on a specific VLAN.</p> <p>There are four levels of limitations on the learned entry number, for the entire system, for a port, for a VLAN, and for a specific VLAN on a port. If any limitation is exceeded, the new entry will be discarded.</p>
Parameters	<p><vlan_name> – Specifies a list of VLANs by VLAN ID to limit the address learning.</p> <p><i>vlanid</i> – Specifies a list of VLAN by VLAN ID.</p> <p><i>max_learning_addr</i> – Specifies the maximum number of port-security entries that can be learned with this VLAN.</p> <p>If this parameter is set to 0, it means that no user can get authorization on this VLAN. If the setting is smaller than the number of current learned entries on the VLAN, the command will be rejected.</p> <p>The default value is “no_limit”</p> <p><i>no_limit</i> – No limitation on the number.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the port security:

```
DGS-3700-12:5#config port_security vlan vlanid 1 max_learning_addr 64
```

```
Command: config port_security vlan vlanid 1 max_learning_addr 64
```

```
Success.
```

```
DGS-3700-12:5#
```

Q-IN-Q COMMANDS

Back to Section Header

The Q-in-Q commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
enable qinq	
config qinq ports	[<portlist> all] {role [uni nni] missdrop [enable disable] outer_tpid <hex 0x1 - 0xffff> use_inner_priority [enable disable] add_inner_tag [<hex 0x1 - 0xffff> disable]}(1)
disable qinq	
show qinq	
show qinq ports	{<portlist>}
create vlan_translation ports	[<portlist> all] [add cvid <vidlist> replace cvid <vlanid 1-4094>] svid <vlanid 1-4094> {priority <value 0-7>}
delete vlan_translation ports	[<portlist> all] {cvid <vidlist>}
show vlan_translation	{[ports <portlist> cvid <vidlist> hardware]}
config qinq inner_tpid	<hex 0x1 - 0xffff>
show qinq inner_tpid	

Each command is listed, in detail, in the following sections.

enable qinq	
Purpose	Used to enable Q-in-Q mode.
Syntax	enable qinq
Description	<p>This command enables Q-in-Q mode.</p> <p>When enable Q-in-Q, all network port roles will be NNI port and their outer TPID will be set to 88A8. All existed static VLAN will run as SP-VLAN. All dynamically learned L2 address will be cleared. All dynamically registered VLAN entries will be cleared, GVRP will be disabled.</p> <p>If you need to run GVRP on the switch, you shall enable GVRP manually. In Q-in-Q mode, the GVRP PDU address is configurable. By default, the PDU address defined in 802.1ad (01-80-C2-00-00-0D)The default setting of Q-in-Q is disabled.</p>
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable Q-in-Q:

```
DGS-3700-12:5#enable qinq
Command: enable qinq

Success.

DGS-3700-12:5#
```

config qinq ports	
Purpose	This command is used to configure the Q-in-Q port parameters.
Syntax	config qinq ports [<portlist> all] {role [uni nni] missdrop [enable disable] outer_tpid <hex 0x1 - 0xffff> use_inner_priority [enable disable] add_inner_tag [<hex 0x1 - 0xffff> disable]}(1)
Description	<p>This command is used to configure QinQ port parameters, including:</p> <ul style="list-style-type: none"> • Role of a port; • Missdrop of port; • Outer-TPID of a port; • Use inner-priority of a port; • Add inner-tag of port; • Enable/disable state miss drop of a port; • If miss drop is enabled at a port, drop action will be performed immediately if the CVLAN translation look up fails, and will not do flow based VLAN translation look up. • MAC address will be learned on C-VLAN domain if missdrop is disabled at a UNI port and CVLAN based VLAN Translation looks up fail. <p>For Example: If C-VID of ingress packet from UNI port1 is 2, MAC address is 00:00:00:11:22:33, and there is no VLAN translation rule about CVID=2 and the miss drop of port1 is disable, the system will learn an FDB which VID=2, MAC=00:00:00:11:22:33 at port1.</p>
Parameters	<p><i>ports</i> - A range of ports to configure.</p> <p><i>role</i> - Port role in QinQ mode</p> <p><i>uni</i> - Port is connecting to customer network.</p> <p><i>nni</i> - Port is connecting to service provider network.</p> <p><i>outer_tpid</i> - Outer-TPID of a port.</p> <p><i>use_inner_priority</i> - Specify whether to use the priority in the C-VLAN tag as the priority in the S-VLAN tag. By default, the setting is disabled.</p> <p><i>add_inner_tag</i> - Specify whether to add inner tag for ingress untagged packets. If set, the inner tag will be added for the ingress untagged packets and, therefore, the packets that egress to the NNI port will be double tagged. If disable, only s-tag will be added for ingress untagged packets.</p> <p><i>missdrop</i> - Enable/disable miss drop of ports.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure ports 1 to 4 as NNI ports and set the TPID to 0x88A8:

```
DGS-3700-12:5#config qinq ports 1-4 role nni outer_tpid 0x88a8
```

```
Command: config qinq ports 1-4 role nni outer_tpid 0x88a8
```

```
Success.
```

```
DGS-3700-12:5#
```

disable qinq	
Purpose	Used to disable the Q-in-Q mode.
Syntax	disable qinq
Description	This command is used to disable the Q-in-Q mode.

disable qinq

	All dynamically learned L2 address will be cleared. All dynamically registered VLAN entries will be cleared. GVRP will be disabled. If you need to run GVRP on the switch, you shall enable GVRP manually. All existed SP-VLAN will run as static 1Q VLAN.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable Q-in-Q:

```
DGS-3700-12:5#disable qinq
Command: disable qinq

Success.

DGS-3700-12:5#
```

show qinq

Purpose	Used to show global Q-in-Q.
Syntax	show qinq
Description	This command is used to show the global Q-in-Q status.
Parameters	None.
Restrictions	None.

Example usage:

To show global Q-in-Q status:

```
DGS-3700-12:5#show qinq
Commands: show qinq

QinQ Status: Enabled

DGS-3700-12:5#
```

show qinq ports

Purpose	Used to show port's attributes in Q-in-Q mode.
Syntax	show qinq ports {<portlist>}
Description	This command is used to show the Q-in-Q configuration for a port, include: <ul style="list-style-type: none"> • port role in Q-in-Q mode, • enable/disable to drop the SP-VLAN assignment miss packet, port outer TPID, and • enable/disable use inner priority, add inner tag's configuration.
Parameters	<i>portlist</i> – Specifies a range of ports to be displayed. If no parameter specified, system will display all ports information.
Restrictions	None.

Example usage:

To show double tagging mode for ports 1-4 of unit 1:

```

DGS-3700-12:5#show qinq ports
Command: show qinq ports

Port ID:    1
-----
Role:                NNI
Miss Drop:           Disabled
Outer Tpid:          0x8100
Use Inner Priority:  Disabled
Add Inner Tag:       Disabled

Port ID:    2
-----
Role:                NNI
Miss Drop:           Disabled
Outer Tpid:          0x8100
Use Inner Priority:  Disabled
Add Inner Tag:       Disabled

Port ID:    3
-----
Role:                NNI
Miss Drop:           Disabled
Outer Tpid:          0x8100
CTRL+C  ESC  q  Quit  SPACE  n  Next Page  ENTER  Next Entry  a  All
    
```

create vlan_translation ports

Purpose	create VLAN translation rule.
Syntax	create vlan_translation ports [<portlist> all] [add cvid <vidlist> replace cvid <vlanid 1-4094>] svid <vlanid 1-4094> {priority <value 0-7>}
Description	<p>This command is used to add translation relationship between C-VLAN and SP-VLAN. On ingress at UNI port, the C-VLAN tagged packets will be translated to SP-VLAN tagged packets by adding or replacing according the configured rule. On egress at this port, the SP-VLAN tag will be recovered to C-VLAN tag or be striped.</p> <p>The priority will be the priority in the SP-VLAN tag if the use_inner_priority flag is disabled for the receipt port.</p> <p>This configuration is only effective for an UNI port.</p> <p>This setting will not be effective when Q-in-Q mode is disabled.</p>
Parameters	<p><portlist> - Specify a range of ports on which the C-VLAN will be translated to S-VLAN.</p> <p>all - Specify to configure all ports.</p> <p>add cvid - Specify to add a Customer VLAN ID.</p> <p>replace cvid - Specify to replace a Customer VLAN ID.</p> <p>svid - Specify a value for the Service provider VLAN ID between 1 and 4094.</p> <p>priority - Specify a 802.1p priority of the S-Tag between 0 and 7. If the priority is NOT specified, 802.1p priority of S-Tag will be assigned by default procedure.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create vlan translation rule which assign to add SP-VALN 100 to C-VLAN 1-10 on ports 1-4 and the priority is 4:

```
DGS-3700-12:5# create vlan_translation ports 1-4 add cvid 10 svid 100 priority 4
Command: create vlan_translation ports 1-4 add cvid 10 svid 100 priority 4

Success.

DGS-3700-12:5#
```

delete vlan_translation ports

Purpose	Used to delete pre-created VLAN translation rules
Syntax	delete vlan_translation ports [<portlist> all] {cvid <vidlist>}
Description	The command used to delete pre-created VLAN translation rules.
Parameters	<i>ports</i> – A range of ports which the rule will be deleted. <i>cvid</i> – Specify C-VLAN range which the rules will be deleted. If no specify the parameter, all rules on the specified ports will be deleted.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete vlan translation rule on ports 1-4:

```
DGS-3700-12:5# delete vlan_translation ports 1-4
Command: delete vlan_translation ports 1-4

Success.

DGS-3700-12:5#
```

show vlan_translation

Purpose	Used to show pre-created C-VLAN based SP-VLAN assignment rules.
Syntax	show vlan_translation {[ports <portlist> cvid <vidlist> hardware] }
Description	The command used to show pre-created C-VLAN based SP-VLAN assignment rules.
Parameters	<i>ports</i> – A range of ports which the rules will be displayed. <i>cvid</i> – Specify C-VLAN range which the rules will be displayed. If no specify the parameter, all rules on the specified ports will be displayed. If no parameters specified, all rules will be displayed. <i>hardware</i> – If this is specified, the hardware VLAN translation entries will be displayed.
Restrictions	None.

Example usage:

To show vlan_translation rules in the system:

```
DGS-3700-12G:5#show vlan_translation
```

```
Command: show vlan_translation
```

Port	SPVID	Action	Priority	CVID
-----	-----	-----	-----	-----
2	10	Add	-	10
3	10	Add	-	10
4	10	Add	-	10
5	20	Add	-	20
6	20	Add	-	20
7	20	Add	-	20
8	20	Add	-	20

```
Resource Remain: 1017
```

```
DGS-3700-12G:5#
```

RSPAN COMMANDS

Back to Section Header

The RSPAN commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
enable rspan	
disable rspan	
create rspan vlan	[vlan_name <vlan_name> vlan_id <value 1-4094>]
delete rspan vlan	[vlan_name <vlan_name> vlan_id <value 1-4094>]
config rspan vlan	[vlan_name <vlan_name> vlan_id <vlanid 1-4094>] [redirect [add delete] ports <portlist> source {[add delete] ports <portlist> [rx tx both]}]
show rspan	{[vlan_name <vlan_name> vlan_id <vlanid 1-4094>]}

Each command is listed, in detail, in the following sections.

enable rspan	
Purpose	This command is used to enable RSPAN.
Syntax	enable rspan
Description	<p>This command controls the RSPAN function. The purpose of RSPAN function is to mirror the packets to the remote switch. The packet travels from the switch where the monitored packet is received, through an intermediate switch, then to the switch where the sniffer is attached. The first switch is also named the source switch. To make the RSPAN work, for the source switch, the RSPAN VLAN source setting must be configured. For the intermediate and the last switch, the RSPAN VLAN redirect setting must be configured.</p> <p>Note: RSPAN VLAN mirroring only works when RSPAN is enabled, an RSPAN VLAN has been configured with source ports, and mirror is enabled. RSPAN redirect function will work when RSPAN is enabled and at least one RSPAN VLAN has been configured with redirect ports.</p>
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable RSPAN:

DGS-3700-12:5#enable rspan Command: enable rspan Success. DGS-3700-12:5#

disable rspan	
Purpose	This command is used to disable RSPAN
Syntax	disable rspan
Description	This command controls the RSPAN function
Parameters	None.

disable rspan

Restrictions	Only Administrator and Operator-level users can issue this command.
---------------------	---

Example usage:

To disable RSPAN:

```
DGS-3700-12:5#disable rspan
Command: disable rspan

Success.

DGS-3700-12:5#
```

create rspan vlan

Purpose	Used to create an RSPAN VLAN
Syntax	create rspan vlan [vlan_name <vlan_name> vlan_id <value 1-4094>]
Description	This command is used to create the RSPAN VLAN. Up to 16 RSPAN VLANs can be created.
Parameters	<i>vlan_name</i> – Create the RSPAN VLAN by VLAN name. <i>vlan_id</i> – Create the RSPAN VLAN by VLAN ID.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create a RSPAN VLAN:

```
DGS-3700-12:5#create rspan vlan vlan_name v3
Command: create rspan vlan vlan_name v3

Success.

DGS-3700-12:5#
```

delete rspan vlan

Purpose	Used to delete a RSPAN VLAN
Syntax	delete rspan vlan [vlan_name <vlan_name> vlan_id <value 1-4094>]
Description	This command is used to delete RSPAN VLANs.
Parameters	<i>vlan_name</i> – Delete RSPAN VLAN by VLAN name. <i>vlan_id</i> – Delete RSPAN VLAN by VLAN ID.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete a RSPAN VLAN:

```
DGS-3700-12:5#delete rspan vlan vlan_name v3
Command: delete rspan vlan vlan_name v3

Success.

DGS-3700-12:5#
```

config rspan vlan

Purpose	Used by the source switch to configure the source setting for the RSPAN VLAN.
----------------	---

config rspan vlan	
Syntax	config rspan vlan [vlan_name <vlan_name> vlan_id <vlanid 1-4094>] [redirect [add delete] ports <portlist> source {[add delete] ports <portlist> [rx tx both]]}
Description	<p>This command configures the source setting for the RSPAN VLAN on the source switch. The output port of the RSPAN mirrored packet will use the same destination port as defined by the mirror command.</p> <p>Note: If RSPAN is enabled, the packets mirrored to the destination port are always added with an RSPAN VLAN tag. If mirror is enabled but RSPAN is disabled, the packets mirrored to the destination port may be in tagged form or in untagged form.</p> <p>Note: Only one RSPAN VLAN can be configured with source settings.</p>
Parameters	<p><i>vlan_name</i> - Specify the RSPAN VLAN by VLAN name.</p> <p><i>vlan_id</i> - Specify the RSPAN VLAN by VLAN ID.</p> <p><i>redirect</i> - Specify output portlist for the RSPAN VLAN packets. If the redirect port is a Link Aggregation port, the Link Aggregation behavior will apply to the RSPAN packets.</p> <p><i>add</i> - Specify to add the redirect port.</p> <p><i>delete</i> - Specify to delete the redirect port.</p> <p><i>ports</i> - Specify source portlist to add to or delete from the RSPAN source.</p> <p><i>source</i> - If the ports are not specified by this command, the source of RSPAN will come from the source specified by the mirror command or the flow-based source specified by an ACL. If no parameter is specified for source, it deletes the configured source parameters.</p> <p><i>add</i> - Specify to add source ports.</p> <p><i>delete</i> - Specify to delete source ports.</p> <p><i>rx</i> - Specify to only monitor ingress packets.</p> <p><i>tx</i> - Specify to only monitor egress packets.</p> <p><i>both</i> - Specify to monitor both ingress and egress packets.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the rx traffic of port 2 to port 5 mirrored and add vid tag 2 :

<pre>DGS-3700-12:5#config rspan vlan vlan_name v3 source add ports 2-5 rx Command: config rspan vlan vlan_name v3 source add ports 2-5 rx</pre>
<p>Success.</p>
<pre>DGS-3700-12:5#</pre>

show rspan	
Purpose	Used to display RSPAN configuration.
Syntax	show rspan {[vlan_name <vlan_name> vlan_id <vlanid 1-4094>]}
Description	This command displays the RSPAN configuration.
Parameters	<p><i>vlan_name</i> – Specify the RSPAN VLAN by VLAN name.</p> <p><i>vlan_id</i> – Specify the RSPAN VLAN by VLAN ID.</p>
Restrictions	None.

Example usage:

To display special setting:

```
DGS-3700-12:5#show rspan vlan_id 63
```

```
Command: show rspan vlan_id 63
```

```
RSPAN : Enabled
```

```
RSPAN VLAN ID : 63
```

```
-----
```

```
Source Ports
```

```
RX      : 2-5
```

```
TX      : 2-5
```

```
Total RSPAN VLAN:1
```

```
DGS-3700-12:5#
```

STATIC MAC-BASED VLAN COMMANDS

Back to Section Header

The Static MAC-Based VLAN commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
create mac_based_vlan mac_address	<macaddr> [vlan <vlan_name 32> vlanid <vlanid 1-4094>]
delete mac_based_vlan	{mac_address <macaddr> [vlan <vlan_name 32> vlanid <vlanid 1-4094>] }
show mac_based_vlan	{mac_address <macaddr> [vlan <vlan_name 32> <vlanid <vlanid 1-4094>]}

Each command is listed, in detail, in the following sections.

create mac_based_vlan	
Purpose	Used to create a static mac-based vlan entry.
Syntax	create mac_based_vlan mac_address <macaddr> [vlan <vlan_name 32> vlanid <vlanid 1-4094>]
Description	<p>This command only needs to be supported by the model which supports mac-based VLAN.</p> <p>The user can use this command to create a static mac-based VLAN entry. When a static mac_based_vlan entry is created for a user, the traffic from this user will be able to be serviced under the specified VLAN regardless of the authentication function operated on this port.</p> <p>There is a global limitation of the maximum entries supported for the static mac-based entry.</p>
Parameters	<p><i>mac_address</i> – The MAC address.</p> <p><i>vlan</i> – The VLAN to be associated with the MAC address.</p> <p><i>vlanid</i> - Specify the VLAN ID to be associated with the MAC address.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create mab_local:

```
DGS-3700-12:5# create mac_based_vlan mac_address 00-00-00-00-00-01 vlan default
Command: create mac_based_vlan mac_address 00-00-00-00-00-01 vlan default

Success.

DGS-3700-12:5#
```

delete mac_based_vlan	
Purpose	Used to delete the static mac-based vlan entry.
Syntax	delete mac_based_vlan {mac_address <macaddr> [vlan <vlan_name 32> vlanid <vlanid 1-4094>] }
Description	This command is used to delete a database entry. If the mac_address and vlan is not specified, all static entries associated with the port will be removed.

delete mac_based_vlan

Parameters	<i>mac_address</i> – The MAC address. <i>vlan</i> – The VLAN to be associated with the MAC address. <i>vlanid</i> - Specify the VLAN ID to be associated with the MAC address.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete a static mac-based-vlan entry:

```
DGS-3700-12:5#delete mac_based_vlan mac_address 00-00-00-00-00-01 vlan default
Command: delete mac_based_vlan mac_address 00-00-00-00-00-01 vlan default

Success.

DGS-3700-12:5#
```

show mac_based_vlan

Purpose	Used to show the static or dynamic mac-based vlan entry.
Syntax	show mac_based_vlan {mac_address <macaddr> [vlan <vlan_name 32> <vlanid <vlanid 1-4094>]}
Description	This command is used to display the static or dynamic MAC-Based VLAN entry.
Parameters	<i>mac</i> – The MAC address. <i>vlan</i> – The VLAN to be associated with the MAC address. <i>vlanid</i> - Specify the VLAN ID to be associated with the MAC address.
Restrictions	None.

Example usage:

To display the static or dynamic mac-based-vlan entry:

```
DGS-3700-12:5#show mac_based_vlan
Command: show mac_based_vlan

MAC Address          VLAN      Status      Type
-----
00-80-e0-14-a7-57    200      Active      Static
00-80-c2-33-c3-45    200      Inactive    Static
00-80-c2-33-c3-45    300      Active      Mac_based Access Control
00-80-c2-33-c3-90    400      Active      802.1x

Total Entries : 4

DGS-3700-12:5#
```

STATIC SUBNET VLAN COMMANDS

Back to Section Header

The Static Subnet VLAN commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
create subnet_vlan	[network <network_address> ipv6network <ipv6networkaddr>] [vlan <vlan_name 32> vlanid <vlanid 1-4094>] {priority <value 0-7>}
delete subnet_vlan	[network <network_address> ipv6network <ipv6networkaddr>] vlan <vlan_name 32> vlanid <vidlist> all]
show subnet_vlan	{[network<network_address> ipv6network<ipv6networkaddr> vlan <vlan_name 32> vlanid <vidlist>]}
config vlan_precedence	ports <portlist> [mac_based_vlan subnet_vlan]
show vlan_precedence	ports {<portlist>}

Each command is listed, in detail, in the following sections.

create subnet_vlan	
Purpose	Used to create a static subnet VLAN entry.
Syntax	create subnet_vlan [network <network_address> ipv6network <ipv6networkaddr>] [vlan <vlan_name 32> vlanid <vlanid 1-4094>] {priority <value 0-7>}
Description	This command is used to create a subnet VLAN entry. A subnet VLAN entry is an IP subnet-based VLAN classification rule. If an untagged or priority-tagged IP packet is received on a port, its source IP address will be used to match the subnet VLAN entries. If the source IP is in the subnet of an entry, the packet will be classified to the VLAN defined for this subnet.
Parameters	<p><i>network</i> – Is used to specify an IPv4 network address. The format is ipaddress/prefix length.</p> <p><i>ipv6network</i> – Is used to specify an IPv6 network address. The format is ipaddress/prefix length. The prefix length of the IPv6 network address cannot be greater than 64.</p> <p><i>vlan</i> – The VLAN to be associated with the subnet. You can specify a VLAN name or VLAN ID. The VLAN must be an existing static VLAN.</p> <p><i>priority</i> – The priority to be associated with the subnet. It's range is 0-7.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create subnet VLAN:

```
DGS-3700-12:5#create subnet_vlan network 172.168.1.1/24 vlan v3 priority 2
Command: create subnet_vlan network 172.168.1.1/24 vlan v3 priority 2

Success.

DGS-3700-12:5#
```

delete subnet_vlan	
Purpose	Used to delete a static subnet VLAN entry.
Syntax	delete subnet_vlan [network <network_address> ipv6network <ipv6networkaddr>] [vlan <vlan_name 32> vlanid <vlanid 1-4094>] { priority <value 0-7>}
Description	This command is used to delete a subnet VLAN entry. Subnet VLAN entries can be deleted by IP subnet or VLAN, or delete all subnet VLAN entries.
Parameters	<i>network</i> – To specify an IPv4 network address. The format is ipaddress/prefix length. <i>ipv6network</i> – To specify an IPv6 network address. The format is ipaddress/prefix length. The prefix length of IPv6 network address shall not be greater than 64. <i>vlan</i> – The VLAN to be associated with the subnet. You can specify a VLAN name or VLAN ID. <i>all</i> – All subnet VLAN entries will be deleted.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete subnet VLAN:

```
DGS-3700-12:5#delete subnet_vlan network 172.168.1.1/24
Command: delete subnet_vlan network 172.168.1.1/24

Success.

DGS-3700-12:5#
```

show subnet_vlan	
Purpose	This command is used to show static subnet VLAN entries.
Syntax	show subnet_vlan {[network <network_address> ipv6network <ipv6networkaddr> vlan <vlan_name 32> vlanid <vidlist>]}
Description	This command is used to display subnet VLAN entries.
Parameters	<i>network</i> – To specify an IPv4 network address. The format is ipaddress/prefix length. <i>ipv6network</i> – To specify an IPv6 network address. The format is ipaddress/prefix length. The prefix length of IPv6 network address can not be greater than 64. <i>vlan</i> – The VLAN to be associated with the subnet. You can specify a VLAN name or VLAN ID.
Restrictions	None.

Example usage:

To display subnet VLAN:

```
DGS-3700-12:5#show subnet_vlan network 172.168.1.1/24
Command: show subnet_vlan network 172.168.1.1/24

IP Address/Subnet mask                VLAN        Priority
-----
172.168.1.0/255.255.255.0            3           2

DGS-3700-12:5#
```

config vlan_precedence ports	
Purpose	Used to configure the VLAN classification precedence.
Syntax	config vlan_precedence ports <portlist> [mac_based_vlan subnet_vlan]
Description	<p>This command is used to configure VLAN classification precedence on each port. You can specify the order of MAC-based VLAN classifications and subnet VLAN classifications.</p> <p>If a port's VLAN classification is a MAC-based precedence, MAC-based VLAN classification will process first. If MAC-based VLAN classification fails, the subnet VLAN classification will be executed.</p> <p>If a port's VLAN classification is subnet VLAN precedence, the subnet VLAN classification will process first. If subnet VLAN classification fails, the MAC-based VLAN classification will be executed.</p>
Parameters	<p><i>portlist</i> – To specify a range of ports</p> <p><i>mac_based_vlan</i> – If the parameter is specified, the MAC-based VLAN classification is given precedence over the subnet VLAN classification</p> <p><i>subnet_vlan</i> – If the parameter is specified, the subnet VLAN classification is given precedence over the MAC-based VLAN classification.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure VLAN precedence:

```
DGS-3700-12:5#config vlan_precedence ports 1 subnet_vlan
Command: config vlan_precedence ports 1 subnet_vlan

Success.

DGS-3700-12:5#
```

show vlan_precedence ports	
Purpose	Used to show the VLAN classification precedence.
Syntax	show vlan_precedence ports {<portlist>}
Description	This command is used to show VLAN classification precedence on each port.
Parameters	<i>portlist</i> – To specify a range of ports. If not specified, all ports will be displayed.
Restrictions	None

Example usage:

To display VLAN precedence:

```
DGS-3700-12:5#show vlan_precedence ports 1-5
Command: show vlan_precedence ports 1-5

Port          VLAN Precedence
-----
1             Subnet VLAN
2             MAC-Based VLAN
3             MAC-Based VLAN
4             MAC-Based VLAN
5             MAC-Based VLAN

DGS-3700-12:5#
```

TRAFFIC SEGMENTATION COMMANDS

Back to Section Header

Traffic segmentation allows users to further sub-divide VLANs into smaller groups of ports that will help to reduce traffic on the VLAN. The VLAN rules take precedence, and then the traffic segmentation rules are applied.

COMMAND	PARAMETERS
config traffic_segmentation	[<portlist> all] forward_list [null all <portlist>]
show traffic_segmentation	<portlist>

Each command is listed, in detail, in the following sections.

config traffic_segmentation	
Purpose	Used to configure traffic segmentation on the Switch.
Syntax	config traffic_segmentation [<portlist> all] forward_list [null all <portlist>]
Description	This command is used to configure traffic segmentation on the Switch.
Parameters	<p><portlist> – Specifies a port or range of ports that will be configured for traffic segmentation.</p> <p>all – Specifies all the ports that will be configured for traffic segmentation.</p> <p>forward_list – Specifies a range of ports that will receive forwarded frames from the ports specified in the portlist, above.</p> <p>null – No ports are specified.</p> <p>all – All ports are specified.</p> <p><portlist> – Specifies a range of ports for the forwarding list. This list must be on the same Switch previously specified for traffic segmentation (i.e. following the <portlist> specified above for config traffic_segmentation).</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure ports 1 through 10 to be able to forward frames to port 1 through 5:

```
DGS-3700-12:5#config traffic_segmentation 1-10 forward_list 1-5
Command: config traffic_segmentation 1-10 forward_list 1-5

Success.

DGS-3700-12:5#
```

show traffic_segmentation	
Purpose	Used to display the current traffic segmentation configuration on the Switch.
Syntax	show traffic_segmentation <portlist>
Description	This command is used to display the current traffic segmentation configuration on the Switch.
Parameters	<portlist> – Specifies a port or range of ports for which the current traffic segmentation configuration on the Switch will be displayed.
Restrictions	None.

Example usage:

To display the current traffic segmentation configuration on the Switch:

```
DGS-3700-12:5#show traffic_segmentation
```

```
Command: show traffic_segmentation
```

Traffic Segmentation Table

```
Port Forward Portlist
```

Port	Forward Portlist
1	1-12
2	1-12
3	1-12
4	1-12
5	1-12
6	1-12
7	1-12
8	1-12
9	1-12
10	1-12
11	1-12
12	1-12

```
DGS-3700-12:5#
```

VLAN COMMANDS

Back to Section Header

The VLAN commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
create vlan	<vlan_name 32> tag <vlanid 2-4094> {type 1q_vlan advertisement}
create vlan vlanid	<vidlist> {advertisement}
delete vlan	<vlan_name 32>
delete vlan vlanid	<vidlist>
config vlan	<vlan_name 32> {[add [tagged untagged forbidden] delete] <portlist> advertisement [enable disable]}(1)
config vlan vlanid	<vidlist> {[add [tagged untagged forbidden] delete] <portlist> advertisement [enable disable] name <vlan_name 32>} (1)
config port_vlan	[<portlist> all] {gvrp_state [enable disable] ingress_checking [enable disable] acceptable_frame [tagged_only admit_all] pvid <vlanid 1-4094>} (1)
enable gvrp	
disable gvrp	
show vlan	{[<vlan_name 32> vlanid < vidlist > ports {<portlist>}]}
show port_vlan	{<portlist>}
create dot1v_protocol_group	group_id <id> group_name <name 32>
config dot1v_protocol_group	[group_id <id> group_name <name 32>] add protocol [ethernet_2 ieee802.3_snap ieee802.3_llc] < protocol_value>
config dot1v_protocol_group	[group_id <id> group_name <name 32>] delete protocol [ethernet_2 ieee802.3_snap ieee802.3_llc] < protocol_value>
delete dot1v_protocol_group	[group_id <id> group_name <name 32> all]
show dot1v_protocol_group	{group_id <id> group_name <name 32>}
config port dot1v ports	[<portlist> all] [add protocol_group [group_id <id> group_name <name 32>] [vlan < vlan_name 32> vlanid <id>] {priority <value 0-7>} delete protocol_group [group_id <id> all]]
show port dot1v	{ports <portlist>}
enable pvid auto_assign	
disable pvid auto_assign	
show pvid auto_assign	
config gvrp	[timer [join leave leaveall] < value 100-100000> nni_bpdu_addr [dot1d dot1ad]]
show gvrp	

Each command is listed, in detail, in the following sections.

create vlan

Purpose	Used to create a VLAN on the Switch.
Syntax	create vlan <vlan_name 32> tag <vlanid 2-4094> {type 1q_vlan advertisement}

create vlan	
Description	This command allows the user to create a VLAN on the Switch.
Parameters	<i>vlan</i> <vlan_name 32> - Specify the name of the VLAN to be created. <i>tag</i> <vlanid 2-4094> - Specify the VLAN ID of the VLAN to be created. The range is from 2 to 4094. <i>type</i> - Specify the type of VLAN to be created. <i>1q_vlan</i> - Specify the VLAN is a 802.1q VLAN. <i>advertisement</i> - Specify the VLAN as being able to be advertised out.
Restrictions	Each VLAN name can be up to 32 characters. Up to 4094 static VLANs may be created per configuration. Only Administrator and Operator-level users can issue this command.

Example usage:

To create a VLAN v1, tag 2:

```
DGS-3700-12:5#create vlan v1 tag 2
Command: create vlan v1 tag 2

Success.

DGS-3700-12:5#
```

create vlan vlanid	
Purpose	Used to create multiple VLANs by VLAN ID list on the switch.
Syntax	create vlan vlanid <vidlist> {advertisement}
Description	This command is used to create multiple VLANs on the switch.
Parameters	<vidlist> - Specify the VLAN ID of the VLAN to be created. <i>advertisement</i> - Specify the VLAN as being able to be advertised out.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To create VLAN by VLAN ID on the switch:

```
DGS-3700:5#create vlan vlanid 5 advertisement
Command: create vlan vlanid 5 advertisement

Success

DGS-3700:5#
```

delete vlan	
Purpose	Used to delete a previously configured VLAN on the Switch.
Syntax	delete vlan <vlan_name 32>
Description	This command is used to delete a previously configured VLAN on the Switch.
Parameters	<vlan_name 32> – The VLAN name of the VLAN to be delete.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To remove the VLAN “v1”:

```
DGS-3700-12:5#delete vlan v1
Command: delete vlan v1

Success.

DGS-3700-12:5#
```

delete vlan vlanid

Purpose	Used to delete multiple VLANs by VLAN ID on the switch.
Syntax	delete vlan vlanid <vidlist>
Description	This command is used to delete previously configured multiple VLANs on the switch.
Parameters	<vidlist> – Specifies a range of multiple VLAN IDs to be deleted.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To delete VLAN by VLAN ID on the switch:

```
DGS-3700-12:5#delete vlan vlanid 5
Command: delete vlan vlanid 5

Success

DGS-3700-12:5#
```

config vlan

Purpose	Used to add additional ports to a previously configured VLAN.
Syntax	config vlan <vlan_name 32> { [add [tagged untagged forbidden] delete] <portlist> advertisement [enable disable]}(1)
Description	This command allows the user to add ports to the port list of a previously configured VLAN. The user can specify the additional ports as tagged, untagged, or forbidden. The default is to assign the ports as untagged.
Parameters	<p><vlan_name 32> – The name of the VLAN.</p> <p><i>add</i> – Entering the add parameter will add ports to the VLAN. There are three types of ports to be add:</p> <p><i>tagged</i> – Specifies the additional ports as tagged.</p> <p><i>untagged</i> – Specifies the additional ports as untagged.</p> <p><i>forbidden</i> – Specifies the additional ports as forbidden.</p> <p><i>delete</i> – Deletes ports from the specified VLAN.</p> <p><portlist> – A port or range of ports to be added to , or deleted from the specified VLAN</p> <p><i>advertisement [enable disable]</i> – Enables or disables GVRP on the specified VLAN.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To add port 4 to 8 as tagged ports to the VLAN v1:

```
DGS-3700-12:5#config vlan v1 add tagged 4-8
Command: config vlan v1 add tagged 4-8

Success.

DGS-3700-12:5#
```

To delete ports from a VLAN:

```
DGS-3700-12:5#config vlan v1 delete 6-8
Command: config vlan v1 delete 6-8

Success.

DGS-3700-12:5#
```

config vlan vlanid	
Purpose	This command is used to add or delete one or more ports of a previously configured VLAN and used to enable or disable the VLAN advertisement.
Syntax	config vlan vlanid <vidlist> {[add [tagged untagged forbidden] delete] <portlist> advertisement [enable disable] name <vlan_name 32>} (1)
Description	<p>This command allows you to add or delete ports of the port list of previously configured VLAN(s). You can specify the additional ports as being tagged, untagged or forbidden. The same port is allowed to be an untagged member port of multiple VLAN's.</p> <p>You can also specify if the ports will join GVRP or not with the <i>advertisement</i> parameter. The <i>name</i> parameter allows you to specify the name of the VLAN that needs to be modified.</p>
Parameters	<p><i><vidlist></i> - Specifies the VLAN ID of the VLAN to add or delete ports to.</p> <p><i>add</i> - Specifies to add ports to the VLAN.</p> <p><i>tagged</i> - Specifies the additional ports as tagged.</p> <p><i>untagged</i> - Specifies the additional ports as untagged.</p> <p><i>forbidden</i> - Specifies the additional ports as forbidden.</p> <p><i>delete</i> - Specifies to delete ports from the specified VLAN.</p> <p><i>portlist</i> - Specifies a range of ports to add or delete to the VLAN.</p> <p><i>advertisement</i> - Specifies to join GVRP or not. If not, the VLAN cannot join dynamically</p> <p><i>enable</i> - Specifies to enable to join GVRP.</p> <p><i>disable</i> - Specifies to disable from joining GVRP.</p> <p><i>name</i> - Specifies the VLAN name to be modified, the length is up to 32 .</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To configure a VLAN by VID on the switch:

```
DGS-3700-12:5#config vlan vlanid 5 add tagged 7 advertisement enable name RG
Command: config vlan vlanid 5 add tagged 7 advertisement enable name RG

Success.

DGS-3700-12:5#
```

config port_vlan	
Purpose	Used to configure GVRP status, ingress checking acceptable frame and PVID per port.
Syntax	config port_vlan [<portlist> all] {gvrp_state [enable disable] ingress_checking [enable disable] acceptable_frame [tagged_only admit_all] pvid <vlanid 1- 4094>} (1)
Description	This command is used to configure the Group VLAN Registration Protocol on the Switch. Ingress checking, the sending and receiving of GVRP information, and the Port VLAN ID (PVID) can be configured.
Parameters	<p><portlist> - Specify a range of ports to be configured.</p> <p>all - Specify all ports to be configured.</p> <p>gvrp_state - See below:</p> <p> enable - Enable GVRP for the ports specified in the port list.</p> <p> disable - Disable GVRP for the ports specified in the port list.</p> <p>ingress_checking - See Below:</p> <p> enable - Enable ingress checking for the specified portlist.</p> <p> disable - Disable ingress checking for the specified portlist.</p> <p>acceptable_frame - Specify the type of frame that will be accepted by the port.</p> <p> tagged_only - Only tagged frame will be received.</p> <p> admit_all - Both tagged and untagged frames will be accepted.</p> <p>pvid - Specifies the pvid of the port to be modified, the value range is from 1 to 4094.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To set the ingress checking status, the sending and receiving GVRP information:

```
DGS-3700-12:5#config port_vlan 1-4 gvrp_state enable ingress_checking enable
acceptable_frame tagged_only pvid 2
Command: config port_vlan 1-4 gvrp_state enable ingress_checking enable
acceptable_frame tagged_only pvid 2

Success.

DGS-3700-12:5#
```

enable gvrp	
Purpose	Used to enable the Generic VLAN Registration Protocol (GVRP).
Syntax	enable gvrp
Description	This command, along with disable gvrp below, is used to enable and disable GVRP on the Switch, without changing the GVRP configuration on the Switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable the Generic VLAN Registration Protocol (GVRP):

```
DGS-3700-12:5#enable gvrp
Command: enable gvrp

Success.

DGS-3700-12:5#
```

disable gvrp

Purpose	Used to disable the Generic VLAN Registration Protocol (GVRP).
Syntax	disable gvrp
Description	This command, along with enable gvrp , is used to enable and disable GVRP on the Switch, without changing the GVRP configuration on the Switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable the Generic VLAN Registration Protocol (GVRP):

```
DGS-3700-12:5#disable gvrp
Command: disable gvrp

Success.

DGS-3700-12:5#
```

show vlan

Purpose	Used to display the current VLAN configuration on the Switch
Syntax	show vlan {[<vlan_name 32> vlanid <vidlist> ports {<portlist>}]}
Description	This command displays summary information about each VLAN including the VLAN ID, VLAN name, the tagged or untagged status, and the Member, Non-member, or Forbidden status of each port that is a member of the VLAN.
Parameters	<vlan_name 32> – The VLAN name of the VLAN for which a summary of the settings is to be displayed. vlanid <vidlist> - The VLAN ID of the VLAN to be displayed ports <portlist> - The membership ports of previous created VLANs.
Restrictions	None.

Example usage:

To display the Switch's current VLAN settings:

```
DGS-3700-12:5#show vlan
Command: show vlan

VLAN Trunk State      : Disabled
VLAN Trunk Member Ports :

VID      : 1          VLAN Name      : default
VLAN Type : Static     Advertisement : Enabled
Member Ports : 1:1-1:26,2:1-2:26
Static Ports : 1:1-1:26,2:1-2:26
Current Tagged Ports  :
Current Untagged Ports: 1:1-1:26,2:1-2:26
Static Tagged Ports   :
Static Untagged Ports : 1:1-1:26,2:1-2:26
Forbidden Ports       :

VID      : 2          VLAN Name      : v1
VLAN Type : Static     Advertisement : Disabled
Member Ports :
Static Ports :
Current Tagged Ports  :
Current Untagged Ports:
Static Tagged Ports   :
Static Untagged Ports :
Forbidden Ports       :

Total Static VLAN Entries: 2
Total GVRP VLAN Entries: 0

DGS-3700-12:5#
```

```
DGS-3700-12:5# show vlan ports 1-4
Command: show vlan ports 1-4

Port    VID    Untagged  Tagged  Dynamic  Forbidden
-----  ---    -
1       1       X         -       -        -
2       1       X         -       -        -
3       1       X         -       -        -
4       1       X         -       -        -

DGS-3700-12:5#
```

show port_vlan

Purpose	Used to display the GVRP status for a port list on the Switch.
Syntax	show port_vlan <portlist>
Description	This command displays the GVRP status for a port list on the Switch
Parameters	<portlist> – Specifies a port or range of ports for which the GVRP status is to be displayed.
Restrictions	None.

Example usage:

To display GVRP port status:

```
DGS-3700-12:5#show port_vlan 1-10
Command: show port_vlan 1-10
```

Port	PVID	GVRP	Ingress Checking	Acceptable Frame Type
1	1	Disabled	Enabled	All Frames
2	1	Disabled	Enabled	All Frames
3	1	Disabled	Enabled	All Frames
4	1	Disabled	Enabled	All Frames
5	1	Disabled	Enabled	All Frames
6	1	Disabled	Enabled	All Frames
7	1	Disabled	Enabled	All Frames
8	1	Disabled	Enabled	All Frames
9	1	Disabled	Enabled	All Frames
10	1	Disabled	Enabled	All Frames

Total Entries : 10

create dot1v_protocol_group

Purpose	Create a protocol group for protocol VLAN function.
Syntax	create dot1v_protocol_group group_id <id> group_name <name 32>
Description	This command is used to create a protocol group for protocol VLAN function.
Parameters	<i>group_id</i> – The id of a protocol group which is used to identify a set of protocols. <i>group_name</i> – The name of the protocol group. The maximum length is 32 characters.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To create a protocol group:

```
DGS-3700-12:5#create dot1v_protocol_group group_id 1 group_name General_Group
Command: create dot1v_protocol_group group_id 1 group_name General_Group

Success.

DGS-3700-12:5#
```

config dot1v_protocol_group add protocol

Purpose	Add a protocol to a protocol group.
Syntax	config dot1v_protocol_group [group_id <id> group_name <name>] add protocol [ethernet_2 ieee802.3_snap ieee802.3_llc] < protocol_value>
Description	This command adds a protocol to a protocol group. The selection of a protocol can be a pre-defined protocol type or a user defined protocol.
Parameters	<i>group_id</i> – The id of protocol group which is used to identify a set of protocols. <i>group_name</i> – The name of the protocol group. The maximum length is 32 characters. <i>protocol_value</i> – The protocol value is used to identify a protocol of the frame type specified. Depending on the frame type, the octet string will have one of the following values: The form of the input is 0x0 to 0xffff. For 'ethernet'II, this is a 16-bit (2-octet) hex value. Example: Ipv4 is 800, ipv6 is 86dd, ARP is 806,... and so on. For 'IEEE802.3 SNAP', this is this is a 16-bit (2-octet) hex value.

config dot1v_protocol_group add protocol

	Example: Ipv4 is 800, ipv6 is 86dd, ARP is 806,. and so on. For 'IEEE802.3 LLC', this is the 2-octet IEEE 802.2 Link Service Access Point (LSAP) pair: first octet is for Destination Service Access Point (DSAP), and second octet is for Source.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To add a protocol IPv6 to protocol group 1:

```
DGS-3700-12:5#config dot1v_protocol_group group_id 1 add protocol ethernet_2 86DD
Command: config dot1v_protocol_group group_id 1 add protocol ethernet_2 86DD

Success.

DGS-3700-12:5#
```

config dot1v_protocol_group delete protocol

Purpose	Used to delete a protocol from protocol group.
Syntax	config dot1v_protocol_group [group_id <id> group_name <name>] delete protocol [ethernet_2 ieee802.3_snap ieee802.3_llc] <protocol_value>
Description	This command is used to delete a protocol from a protocol group.
Parameters	<p><i>group_id</i> – The id of protocol group which is used to identify a set of protocols.</p> <p><i>group_name</i> – The name of the protocol group. The maximum length is 32 characters.</p> <p><i>protocol_value</i> – The protoocl vlaue is used to identify a protocol of the frame type specified.</p> <p>Depending on the frame type, the octet string will have one of the following values: The form of the input is 0x0 to 0xffff.</p> <p>For 'ethernet'II, this is a 16-bit (2-octet) hex value. Example: Ipv4 is 800, ipv6 is 86dd, ARP is 806,. and so on.</p> <p>For ' IEEE802.3 SNAP ',this is this is a 16-bit (2-octet) hex value. Example: Ipv4 is 800, ipv6 is 86dd, ARP is 806,. and so on. For 'IEEE802.3 LLC', this is the 2-octet IEEE 802.2 Link Service Access Point (LSAP) pair: first octet is for Destination Service Access Point (DSAP), and second octet is for Source.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete protocol ipv6 from a protocol group 1:

```
DGS-3700-12:5#config dot1v_protocol_group group_id 1 delete protocol ethernet_2 86DD
Command: config dot1v_protocol_group group_id 1 delete protocol ethernet_2 86DD

Success.

DGS-3700-12:5#
```

delete dot1v_protocol_group

Purpose	Delete a protocol group.
Syntax	delete dot1v_protocol_group [group_id <id> group_name <name 32> all]
Description	This command deletes a protocol group.

delete dot1v_protocol_group

Parameters	<i>group_id</i> – The id of protocol group which is used to identify a set of protocols. <i>group_name</i> – The name of the protocol group. The maximum length is 32 characters. <i>all</i> - Specifies all protocol groups.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete protocol group 1:

```
DGS-3700-12:5#delete dot1v_protocol_group group_id 1
Command: delete dot1v_protocol_group group_id 1

Success.

DGS-3700-12:5#
```

show dot1v_protocol_group

Purpose	Display the protocols defined in a protocol group.
Syntax	show dot1v_protocol_group {group_id <id> group_name <name 32>}
Description	This command is used to display the protocols defined in protocol groups.
Parameters	<i>group_id</i> – The id of protocol group which is used to identify a set of protocols. <i>group_name</i> – The name of the protocol group. The maximum length is 32 characters.
Restrictions	None.

Example usage:

To display the protocol group ID 1:

```
DGS-3700-12:5#show dot1v_protocol_group group_id 1
Command: show dot1v_protocol_group group_id 1

Protocol Group ID      Protocol Group Name    Frame Type             Protocol Value
-----
1                      General Group         EthernetII             86DD

Total Entries: 1
DGS-3700-12:5#
```

config port dot1v

Purpose	Assign the VLAN for untagged packets ingress from the portlist based on the protocol group configured.
Syntax	config port dot1v ports [<portlist> all] [add protocol_group [group_id <id> group_name <name 32>] [vlan <vlan_name 32> vlanid <id>] {priority <value 0-7>} delete protocol_group [group_id <id> all]}
Description	This command is used to assign the VLAN for untagged packets ingress from the portlist based on the protocol group configured. This assignment can be removed by using delete protocol_group option. When priority is not specified in the command, the port default priority will be the priority for those untagged packets classified by the protocol vlan.
Parameters	<i><portlist></i> – Specifies a range of ports to apply this command. <i>group_id</i> – The id of protocol group which is used to identify a set of protocols. <i>group_name</i> – The name of the protocol group. The maximum length is 32 characters.

config port dot1v

	<p><i>vlan</i> – Vlan that is to be associated with this protocol group on this port.</p> <p><i>vlan_id</i> – Specifies the VLAN id.</p> <p><i>priority</i> – Specifies the priority to be associated with the packet which has been classified to the specified vlan by the protocol.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

The example is to assign VLAN marketing-1 for untagged IPv6 packet ingress from port 3
 To configure the group ID 1 on port 3 to be associated with VLAN marketing-1:

```
DGS-3700-12:5#config port dot1v ports 3 add protocol_group group_id 1 vlan marketing_1
Command: config port dot1v ports 3 add protocol_group group_id 1 vlan marketing_1

Success.

DGS-3700-12:5#
```

show port dot1v

Purpose	Display the VLAN to be associated with untagged packet ingressed from a port based on the protocol group.
Syntax	show port dot1v{ ports <portlist>}
Description	This command is used to display the VLAN to be associated with untagged packet ingressed from a port based on the protocol group.
Parameters	<i>portlist</i> – Specifies a range of ports to apply this command.
Restrictions	None.

Example usage:

The example display the protocol VLAN information for ports 1-2:

```
DGS-3700-12:5#show port dot1v ports 1-2
Command: show port dot1v ports 1-2

Port : 1
Protocol Group ID      VLAN Name      Protocol Priority
-----
1                       default        -
2                       vlan_2         -
3                       vlan_3         -
4                       vlan_4         -

Port : 2
Protocol Group ID      VLAN Name      Protocol Priority
-----
1                       vlan_2         -
2                       vlan_3         -
3                       vlan_4         -
4                       vlan_5         -

Total Entries: 2
DGS-3700-12:5#
```

enable pvid auto_assign	
Purpose	Enable/disable auto assignment of pvid.
Syntax	enable disable pvid auto_assign
Description	<p>The command enables the auto-assign of PVID.</p> <p>If “auto-assign PVID” is disabled, PVID only be changed by PVID configuration (user changes explicitly). The VLAN configuration will not automatically change PVID.</p> <p>If “Auto-assign PVID” is enabled, PVID will be possibly changed by PVID or VLAN configuration. When user configures a port to VLAN X’s untagged membership, this port’s PVID will be updated with VLAN X. In the form of VLAN list command, PVID is updated with last item of VLAN list. When user removes a port from the untagged membership of the PVID’s VLAN, the port’s PVID will be assigned with “default VLAN”.</p> <p>The default setting is enabled.</p>
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable the auto-assign PVID:

```
DGS-3700-12:5#enable pvid auto_assign
Command: enable pvid auto_assign

Success.

DGS-3700-12:5#
```

show pvid auto_assign	
Purpose	Show PVID auto-assignment state.
Syntax	show pvid auto_assign
Description	This command is used to display PVID auto-assignment state.
Parameters	None.
Restrictions	None.

Example usage:

To display PVID auto-assignment state:

```
DGS-3700-12:5#show pvid auto_assign
Command: show pvid auto_assign

PVID Auto-assignment: Enabled

DGS-3700-12:5#
```

config gvrp	
Purpose	Used to configure the timer’s value of GVRP and MAC address of GVRP’s PDU of NNI port in Q-in-Q mode.
Syntax	config gvrp [timer [join leave leaveall] < value 100-100000> nni_bpdu_addr [dot1d dot1ad]]
Description	This command is used to set the GVRP timer’s value and GVRP’s PDU MAC address of NNI port in Q-in-Q mode. The default value for Join time is 200 milliseconds;

config gvrp	
	for Leave time is <i>600</i> milliseconds; for LeaveAll time is <i>10000</i> milliseconds. The GVRP's PDU MAC address can be set to which is defined in 802.1d or 802.1ad.
Parameters	<p><i>timer</i> – Specifies GVRP timer will be set.</p> <p><i>join</i> – Specifies the Join time will be set</p> <p><i>leave</i> – Specifies the Leave time will be set</p> <p><i>leaveall</i> – Specifies the LeaveAll time will be set</p> <p><i>value</i> – The time value will be set. The value range is <i>100</i> to <i>100000</i> milliseconds. In addition, the Leave time should greater than 2 Join times and the LeaveAll time should greater than Leave time.</p> <p><i>nni_bpdu_addr</i> – Specifies GVRP's PDU MAC address of NNI port in Q-in-Q mode will be set.</p> <p><i>dot1d</i> – Specifies GVRP's PDU MAC address of NNI port using 802.1d's definement.</p> <p><i>dot1ad</i> – Specifies GVRP's PDU MAC address of NNI port using 802.1ad's definement.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To set the Join time to 200 milliseconds:

```
DGS-3700-12:5#config gvrp timer join 200
Command: config gvrp timer join 200

Success.

DGS-3700-12:5#
```

show gvrp	
Purpose	Used to display the GVRP global settings.
Syntax	show gvrp
Description	This command is used to display the timer's value of GVRP.
Parameters	None.
Restrictions	None.

Example usage:

To display the global settings of GVRP:

```
DGS-3700-12:5#show gvrp
Command: show gvrp

Global GVRP      : Disabled
Join Time        : 200 Milliseconds
Leave Time        : 600 Milliseconds
LeaveAll Time     : 10000 Milliseconds
NNI BPDU Address: dot1d

DGS-3700-12:5#
```

VLAN COUNTER COMMANDS

Back to Section Header

The VLAN counter commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
create vlan_counter	[vlan <vlan_name> vlanid < vidlist >] {ports [<portlist> all] } [all_frame broadcast multicast unicast] [packet byte]
delete vlan_counter	[all [vlan <vlan_name> vlanid < vidlist >] [all ports <portlist> [all [all_frame broadcast multicast unicast][packet byte]]]]
clear vlan_counter statistics	[all [vlan <vlan_name> vlanid < vidlist >] [all ports <portlist>]]
show vlan_counter	{[vlan <vlan_name> vlanid < vidlist >]}
show vlan_counter statistics	{[vlan <vlan_name> vlanid < vidlist >] {ports <portlist>}}

Each command is listed, in detail, in the following sections.

create vlan_counter	
Purpose	This command creates the control entry for VLAN traffic flow statistics.
Syntax	create vlan_counter [vlan <vlan_name> vlanid < vidlist >] {ports [<portlist> all] } [all_frame broadcast multicast unicast] [packet byte]
Description	This command is used to create control entries to count statistics for specific VLANs, or to count statistics for specific ports on specific VLANs. The statistics can be either byte count or packet count. The statistics can be counted for different frame types.
Parameters	<p><i>vlan_name</i> – Specifies the VLAN name.</p> <p><i>vidlist</i> – Specifies a list of VLANs by VLAN ID.</p> <p><i>ports <portlist></i> – To enable to count statistics by specific port on specific VLAN.</p> <p><i>all_frame</i> – The statistics will be counted for all packets.</p> <p><i>broadcast</i> – Specifies to count broadcast packets</p> <p><i>multicast</i> – Specifies to count multicast packets</p> <p><i>unicast</i> – Specifies to count unicast packets</p> <p><i>packet</i> – Specifies to count at packet level.</p> <p><i>byte</i> – Specifies to count at byte level.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To begin counting packet levels for broadcast packets on VLAN 1:

```
DGS-3700-12:5#create vlan_counter vlanid 1 broadcast packet
Command: create vlan_counter vlanid 1 broadcast packet

Success.

DGS-3700-12:5#
```

delete vlan_counter	
Purpose	This command deletes the control entry for VLAN traffic flow statistics.
Syntax	delete vlan_counter [all [vlan <vlan_name> vlanid < vidlist >] [all ports

delete vlan_counter	
	<portlist> [all [all_frame broadcast multicast unicast][packet byte]]]
Description	This command deletes the control entry for VLAN traffic flow statistics.
Parameters	<i>all</i> – Specifies to delete all VLAN statistic control entries. <i>vlan_name</i> – Specifies the VLAN name. <i>vidlist</i> – Specifies a list of VLANs by VLAN ID. <i>ports <portlist></i> – To disable to count statistics by specific port on specific VLAN. <i>all_frame</i> – The statistics will be stop counting for all packets. <i>broadcast</i> – Specifies to stop counting broadcast packets <i>multicast</i> – Specifies to stop counting multicast packets <i>unicast</i> – Specifies to stop counting unicast packets <i>packet</i> – Specifies to stop counting at packet level. <i>byte</i> – Specifies to stop counting at byte level.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To stop counting packet levels for all packets on VLAN 1:

```
DGS-3700-12:5#delete vlan_counter vlanid 1 all
Command: delete vlan_counter vlanid 1 all

Success.

DGS-3700-12:5#
```

clear vlan_counter statistics	
Purpose	Used to clear statistics gathered by the VLAN counter.
Syntax	clear vlan_counter statistics [all [vlan <vlan_name> vlanid <vidlist >] [all ports <portlist>]]
Description	This command is used to clear statistic gathered by the VLAN counter.
Parameters	<i>all</i> – Specifies to clear all VLAN statistics <i>vlan_name</i> – Specifies the VLAN name. <i>vidlist</i> – Specifies a list of VLANs by VLAN ID. <i>ports <portlist></i> – To clear to count statistics by specific port on specific VLAN.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To clear statistics for VLAN 1-10:

```
DGS-3700-12:5#clear vlan_counter statistics vlanid 1-10 port 1-3
Command: clear vlan_counter statistics vlanid 1-10 port 1-3

Success.

DGS-3700-12:5#
```

show vlan_counter	
Purpose	This commands displays the statistic control entries created for VLANs.
Syntax	show vlan_counter {[vlan <vlan_name> vlanid <vidlist >]}
Description	This commands displays the statistic control entries created for VLANs.

show vlan_counter

Parameters	<i>vlan_name</i> – Specifies the VLAN name. <i>vlanid</i> – Specifies a list of VLANs by VLAN ID. When VLAN is not specified, all VLAN counters will be displayed.
Restrictions	None.

Example usage:

To display the statistic control entries:

```
DGS-3700-12:5#show vlan_counter vlanid 1-2
Command: show vlan_counter vlanid 1-2

VLAN ID  Ports                Packet Type  Counter Type
-----  -
1                Broadcast   Packet

DGS-3700-12:5#
```

show vlan_counter statistics

Purpose	Displays the VLAN level receives packets or receive byte statistics.
Syntax	show vlan_counter statistics {[vlan <vlan_name> vlanid <vidlist >] {port <portlist>}}
Description	This command displays the VLAN level receives packet or receive byte statistics.
Parameters	<i>vlan_name</i> – Specifies the VLAN name. <i>vlanid</i> – Specifies a list of VLANs by VLAN ID. When VLAN is not specified, all VLAN counters will be displayed.
Restrictions	None.

Example usage:

To display the VLAN counter statistic entries:

```
DGS-3700-12:5#show vlan_counter statistics vlanid 1-2
Command: show vlan_counter statistics vlanid 1-2

VLAN Port  Frame Type                RX Frames/RX Bytes  Frames Per Sec/Bytes Per Sec
====  =====  =====
1                Broadcast(Packet)  12335                23

CTRL+C  ESC  q  Quit  SPACE  n  Next Page  p  Previous Page  r  Refresh
```

VOICE VLAN COMMANDS

Back to Section Header

The Voice VLAN commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
enable voice_vlan	[<vlan_name 32> vlanid <vlanid 1-4094>]
disable voice_vlan	
config voice_vlan priority	<int 0-7>
config voice_vlan oui	[add <macaddr> < macmask> {description <desc 32> } delete <macaddr> < macmask>]
config voice_vlan ports	[<portlist> all] [state [enable disable] mode [auto manual]]
config voice_vlan log state	[enable disable]
config voice_vlan aging_time	<min 1-65535>
show voice_vlan	
show voice_vlan oui	
show voice_vlan ports	{<portlist>}
show voice_vlan voice_device ports	{<portlist>}

Each command is listed, in detail, in the following sections.

enable voice_vlan	
Purpose	To enable the global voice VLAN function.
Syntax	enable voice_vlan [<vlan_name 32> vlanid <vlanid 1-4094>]
Description	This command is used to enable the global voice VLAN function on a Switch. To enable the voice VLAN, the voice VLAN must be also assigned . At the same time, the VLAN must be an existing static 802.1Q VLAN. To change the voice VLAN, the user must disable the voice VLAN function, and re-issue this command. By default, the global voice VLAN state is disabled.
Parameters	<vlan name 32> - Specify the name of the voice VLAN. vlanid - Specify the VLAN ID of the voice VLAN.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable voice VLAN named “v2”:

```
DGS-3700-12:5#enable voice_vlan v2
Command: enable voice_vlan v2

Success °

DGS-3700-12:5#
```

disable voice_vlan	
Purpose	To disable the global voice VLAN function.

disable voice_vlan

Syntax	disable voice_vlan
Description	This command is used to disable the voice VLAN function on a Switch. When the voice VLAN function is disabled, the voice VLAN will become unassigned.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable voice VLAN:

```
DGS-3700-12:5#disable voice_vlan
Command: disable voice_vlan

Success.

DGS-3700-12:5#
```

config voice_vlan priority

Purpose	To configure the priority of the voice VLAN.
Syntax	config voice_vlan priority <int 0-7>
Description	This command is used to configure voice VLAN priority. The voice VLAN priority will be the priority associated with the voice VLAN traffic to distinguish the QoS of the voice traffic from data traffic.
Parameters	<int 0-7> - Specify the priority of the voice VLAN. The range is 0 to 7. The default priority is 5.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To set the priority of the voice VLAN to be six:

```
DGS-3700-12:5#config voice_vlan priority 6
Command: config voice_vlan priority 6

Success.

DGS-3700-12:5#
```

config voice_vlan oui

Purpose	To configure the user-defined OUI of the voice device for voice VLAN.		
Syntax	config voice_vlan oui [add <macaddr> < macmask> {description <desc 32> } delete <macaddr> < macmask>]		
Description	This command is used to configure the user-defined voice traffic's OUI. The OUI is used to identify the voice traffic. There are a number of pre-defined OUIs. The user can further define the user-defined OUIs if needed. The user-defined OUI cannot be the same as the pre-defined OUI. The following are the pre-defined voice traffic's OUI:		
	OUI	Vendor	Mnemonic Name
	00:E0:BB	3COM	3com
	00:03:6B	Cisco	cisco
	00:E0:75	Veritel	veritel

config voice_vlan oui			
	00:D0:1E	Pingtel	pingtel
	00:01:E3	Siemens	siemens
	00:60:B9	NEC/ Philips	nec&Philips
	00:0F:E2	Huawei-3COM	huawei&3com
	00:09:6E	Avaya	avaya
Parameters	<i>add</i> - Specify to add a user-defined OUI of Voice device vendor. <i>delete</i> - Specify to delete a user-defined OUI of Voice device vendor. <macaddr> - Specify a user-defined OUI MAC address. <macmask> - Specify a user-defined OUI MAC address mask. <i>description</i> - Specify a description for the user-defined OUI.		
Restrictions	Only Administrator and Operator-level users can issue this command.		

Example usage:

To add user-defined OUI of a voice device:

```
DGS-3700-12:5#config voice_vlan oui add 00-0A-0B-00-00-00 FF-FF-FF-00-00-00
Command: config voice_vlan oui add 00-0A-0B-00-00-00 FF-FF-FF-00-00-00

Success.

DGS-3700-12:5#
```

config voice_vlan ports	
Purpose	To configure the voice VLAN state of ports or mode per port.
Syntax	config voice_vlan ports [<portlist> all] [state [enable disable] mode [auto manual]]
Description	This command is used to enable or disable the voice VLAN function on ports or mode per port.
Parameters	<portlist> - Specify a range of ports to set. all - Specify to set all ports. state - Specify the voice VLAN function state on ports. The default state is disabled. <i>enable</i> - Specify to enable the voice VLAN function state on ports. <i>disable</i> - Specify to disable the voice VLAN function state on ports. mode - The voice VLAN mode. The default mode is auto. <i>auto</i> - If the mode is auto, the port may become the voice VLAN member port by auto-learning. If the MAC address of the received packet matches the configured OUI, the port will be learned as dynamic member port. The dynamic membership will be removed via the aging out mechanism <i>manual</i> - If the mode is set to manual, the port needs to be manually added into or removed from the voice VLAN by 802.1Q VLAN configuration command
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure voice VLAN ports 4 to 6 to enable:

```
DGS-3700-12:5#config voice_vlan ports 4-6 state enable
Command: config voice_vlan ports 4-6 state enable

Success.

DGS-3700-12:5#
```

To set voice VLAN ports 4 to 6 to auto mode:

```
DGS-3700-12:5#config voice_vlan ports 4-6 mode auto
Command: config voice_vlan ports 4-6 mode auto

Success.

DGS-3700-12:5#
```

config voice_vlan log state

Purpose	To configure the voice VLAN log state.
Syntax	config voice_vlan log state [enable disable]
Description	This command is used to configure the voice VLAN log state.
Parameters	<i>enable</i> - Specify to enable the voice VLAN log state. <i>disable</i> - Specify to disable the voice VLAN log state.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable the voice VLAN log state:

```
DGS-3700-12:5#config voice_vlan log state enable
Command: config voice_vlan log state enable

Success.

DGS-3700-12:5#
```

config voice_vlan aging_time

Purpose	To configure the voice VLAN aging time.
Syntax	config voice_vlan aging_time <min 1-65535>
Description	This command is used to set the aging time of the voice VLAN. The aging time is used to remove a port from voice VLAN if the port is an automatic VLAN member. When the last voice device stops sending traffic and the MAC address of this voice device is aged out, the voice VLAN aging timer will be started. The port will be removed from the voice VLAN after expiration of voice VLAN aging timer. If the voice traffic resumes during the aging time, the aging timer will be reset and stop.
Parameters	< <i>min 1-65535</i> > - Specify the aging time. The range is 1 to 65535 minutes. The default value is 720 minutes.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To set 60 minutes as the aging time of voice VLAN:

```
DGS-3700-12:5#config voice_vlan aging_time 60
Command: config voice_vlan aging_time 60

Success.

DGS-3700-12:5#
```

show voice_vlan

Purpose	To display voice VLAN global information.
Syntax	show voice_vlan
Description	This command is used to display voice VLAN global information.
Parameters	None.
Restrictions	None.

Example usage:
 To display voice VLAN information:

```
DGS-3700-12:5#show voice_vlan
Command: show voice_vlan

Voice VLAN State      : Disabled
Voice VLAN            : Unassigned
Priority              : 5
Aging Time           : 720 minutes
Log State             : Enabled

DGS-3700-12:5#
```

show voice_vlan oui

Purpose	To display OUI information for voice VLAN.
Syntax	show voice_vlan oui
Description	This command is used to display the OUI information for voice VLAN.
Parameters	None.
Restrictions	None.

Example usage:
 To display voice VLAN OUI:

```
DGS-3700-12:5#show voice_vlan oui
```

```
Command: show voice_vlan oui
```

OUI Address	Mask	Description
00-01-E3-00-00-00	FF-FF-FF-00-00-00	Siemens
00-03-6B-00-00-00	FF-FF-FF-00-00-00	Cisco
00-09-6E-00-00-00	FF-FF-FF-00-00-00	Avaya
00-0F-E2-00-00-00	FF-FF-FF-00-00-00	Huawei&3COM
00-60-B9-00-00-00	FF-FF-FF-00-00-00	NEC&Phillips
00-D0-1E-00-00-00	FF-FF-FF-00-00-00	Pingtel
00-E0-75-00-00-00	FF-FF-FF-00-00-00	Veritel
00-E0-BB-00-00-00	FF-FF-FF-00-00-00	3COM

```
Total Entries: 8
```

```
DGS-3700-12:5#
```

show voice_vlan ports

Purpose	To display port voice VLAN information.
Syntax	show voice_vlan ports {<portlist>}
Description	This command is used to display port voice VLAN information.
Parameters	<portlist> - Specify a range of ports to display. If all is specified, all port voice VLAN information will be displayed.
Restrictions	None.

Example usage:

To display voice VLAN ports 1 to 3:

```
DGS-3700-12:5#show voice_vlan ports 1-3
```

```
Command: show voice_vlan ports 1-3
```

Ports	Status	Mode
1	Disabled	Auto
2	Disabled	Auto
3	Disabled	Auto

```
DGS-3700-12:5#
```

show voice_vlan voice_device ports

Purpose	To display voice VLAN devices that are connected to ports.
Syntax	show voice_vlan voice_device ports {<portlist>}
Description	This command is used to show voice devices that are connected to the ports. The start time is the time when the device is detected on this port and the activate time is the latest time when the device sends the traffic.
Parameters	<portlist> - Specify a range of ports to display. If all is specified, the system will display the connected Voice device of all ports
Restrictions	None.

Example usage:

To display voice VLAN device ports 1 to 2:

```
DGS-3700-12:5#show voice_vlan voice_device ports 1-2
```

```
Command: show voice_vlan voice_device ports 1-2
```

Ports	Voice Device	Start Time	Last Active Time
-----	-----	-----	-----

```
Total Entries : 0
```

```
DGS-3700-12:5#
```

LAYER 3 FEATURES SECTION

Table of Contents

Next Section

Previous Section

ARP COMMANDS

Back to Section Header

The ARP commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
create arpentry	<ipaddr> <macaddr>
config arpentry	<ipaddr> <macaddr>
delete arpentry	[<ipaddr> all]
show arpentry	{ipif <ipif_name 12> ipaddress <ipaddr> static mac_address <macaddr>}
config arp_aging time	<value 0-65535>
clear arptable	

Each command is listed, in detail, in the following sections.

create arpentry	
Purpose	Used to make a static entry into the ARP table.
Syntax	create arpentry <ipaddr> <macaddr>
Description	This command is used to enter an IP address and the corresponding MAC address into the Switch's ARP table.
Parameters	<ipaddr> – The IP address of the end node or station. <macaddr> – The MAC address corresponding to the IP address above.
Restrictions	Only Administrator and Operator-level users can issue this command. The Switch supports up to 255 static ARP entries.

Example usage:

To create a static arp entry for the IP address 10.48.74.121 and MAC address 00:50:BA:00:07:36:

```
DGS-3700-12:5#create arpentry 10.48.74.121 00-50-BA-00-07-36
Command: create arpentry 10.48.74.121 00-50-BA-00-07-36

Success.

DGS-3700-12:5#
```

config arpentry	
Purpose	Used to configure a static entry to the ARP table.
Syntax	config arpentry <ipaddr> <macaddr>
Description	This command is used to configure a static entry in the ARP Table. The user may specify the IP address and the corresponding MAC address of an entry in the Switch's ARP table.
Parameters	<ipaddr> – The IP address of the end node or station.

config arpentry	
	<macaddr> – The MAC address corresponding to the IP address.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure a static arp entry for the IP address 10.48.74.12 and MAC address 00:50:BA:00:07:36:

```
DGS-3700-12:5#config arpentry 10.48.74.12 00-50-BA-00-07-36
Command: config arpentry 10.48.74.12 00-50-BA-00-07-36

Success.

DGS-3700-12:5#
```

delete arpentry	
Purpose	Used to delete a static entry into the ARP table.
Syntax	delete arpentry [<ipaddr> all]
Description	This command is used to delete a static ARP entry, made using the create arpentry command above, by specifying either the IP address of the entry or all. Specifying <i>all</i> clears the Switch's ARP table.
Parameters	<ipaddr> – The IP address of the end node or station. <i>all</i> – Deletes all ARP entries.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete an entry of IP address 10.48.74.121 from the ARP table:

```
DGS-3700-12:5#delete arpentry 10.48.74.121
Command: delete arpentry 10.48.74.121

Success.

DGS-3700-12:5#
```

config arp_aging time	
Purpose	Used to configure the age-out timer for ARP table entries on the Switch.
Syntax	config arp_aging time <value 0-65535>
Description	This command sets the maximum amount of time, in minutes, that an ARP entry can remain in the Switch's ARP table, without being accessed, before it is dropped from the table.
Parameters	<i>time</i> <value 0-65535> – The ARP age-out time, in minutes. The value may be set in the range of 0 to 65535 minutes with a default setting of 20 minutes.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure ARP aging time:

```
DGS-3700-12:5#config arp_aging time 30
Command: config arp_aging time 30

Success.

DGS-3700-12:5#
```

show arpentry

Purpose	Used to display the ARP table.
Syntax	show arpentry {ipif <ipif_name 12> ipaddress <ipaddr> static mac_address <macaddr>}
Description	This command is used to display the current contents of the Switch's ARP table.
Parameters	<p><i>ipif <ipif_name 12></i> – The name of the IP interface the end node or station for which the ARP table entry was made, resides on.</p> <p><i>ipaddress <ipaddr></i> – The network address corresponding to the IP interface name above.</p> <p><i>static</i> – Displays the static entries to the ARP table.</p> <p><i><macaddr></i> - Displays the ARP entry by MAC address.</p> <p>If no parameter is specified, all current effective ARP entries will be displayed.</p>
Restrictions	None.

Example usage:

To display the ARP table:

```
DGS-3700-12:5#show arpentry
Command: show arpentry

ARP Aging Time : 20

Interface      IP Address      MAC Address      Type
-----
System         10.0.0.0        FF-FF-FF-FF-FF-FF Local/Broadcast
System         10.24.73.21     00-01-02-03-04-00 Local
System         10.48.74.121    00-50-BA-00-07-36 Static
System         10.255.255.255  FF-FF-FF-FF-FF-FF Local/Broadcast

Total Entries: 4

DGS-3700-12:5#
```

clear arptable

Purpose	Used to remove all dynamic ARP table entries.
Syntax	clear arptable
Description	This command is used to remove dynamic ARP table entries from the Switch's ARP table. Static ARP table entries are not affected.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To remove dynamic entries in the ARP table:

```
DGS-3700-12:5#clear arptable
```

```
Command: clear arptable
```

```
Success.
```

```
DGS-3700-12:5#
```

BASIC IP COMMANDS

Back to Section Header

The IP interface commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
config ipif	<ipif_name 12> [{ipaddress <network_address> vlan <vlan_name 32> state [enable disable]} boot dhcp ipv6 [ipv6address<ipv6networkaddr> state [enable disable]] ipv4 state [enable disable] dhcpv6_client [enable disable]]
create ipif	<ipif_name 12> {<network_address>} <vlan_name 32> {state [enable disable]}
delete ipif	[<ipif_name 12> {ipv6address <ipv6networkaddr>} all]
show ipif	{<ipif_name 12>}
enable ipif	[<ipif_name 12> all]
disable ipif	[<ipif_name 12> all]
enable autoconfig*	
disable autoconfig	
show autoconfig	
enable ipif_ipv6_link_local_auto	[<ipif_name 12> all]
disable ipif_ipv6_link_local_auto	[<ipif_name 12> all]
show ipif_ipv6_link_local_auto	{<ipif_name 12>}

Each command is listed, in detail, in the following sections.

*See Switch Utility Commands for descriptions of all autoconfig commands.

config ipif	
Purpose	Used to configure an IP interface on the switch.
Syntax	config ipif <ipif_name 12> [{ipaddress <network_address> vlan <vlan_name 32> state [enable disable]} boot dhcp ipv6 [ipv6address<ipv6networkaddr> state [enable disable]] ipv4 state [enable disable] dhcpv6_client [enable disable]]
Description	This command is used to configure the IP interface on the Switch.
Parameters	<p><i>ipif</i> - The name of the IP interface.</p> <p><i>ipaddress</i> - The IP address and netmask of the IP interface to be created. Specify the address and mask information using the traditional format (for example, 10.1.2.3/255.0.0.0 or in CIDR format, 10.1.2.3/16).</p> <p><i>vlan</i> - The name of the VLAN corresponding to the IP interface.</p> <p><i>state</i> - Enable or disable the IP interface.</p> <p><i>enable</i> - Enable the IP interface.</p> <p><i>disable</i> - Disable the IP interface.</p> <p><i>bootp</i> - Allows the selection of the BOOTP protocol for the assignment of an IP address to the switch's System IP interface.</p> <p><i>dhcp</i> - Allows the selection of the DHCP protocol for the assignment of an IP address</p>

config ipif	
	<p>to the switch's System.</p> <p><i>ipv6</i> - The IPv6 address and subnet prefix of the IPV6 address to be created.</p> <p><i>state</i> - Enable or disable the state of the IP interface.</p> <p><i>enable</i> - Enable the state of the IPv6 interface.</p> <p><i>disable</i> - Disable the state of the IPv6 interface.</p> <p><i>ipv4 state</i> - The state of the IPv4 interface.</p> <p><i>enable</i> - Enable the IPv4 state.</p> <p><i>disable</i> - Disable the IPv4 state.</p> <p><i>dhcpv6_client</i> - See below:</p> <p><i>enable</i> - Enabled the DHCPv6 client state of the interface.</p> <p><i>disable</i> - Disabled the DHCPv6 client state of the interface.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the IP interface System:

```
DGS-3700-12:5#config ipif System ipaddress 10.48.74.122/8
Command: config ipif System ipaddress 10.48.74.122/8

Success.

DGS-3700-12:5#
```

create ipif	
Purpose	Used to create an IP interface on the switch.
Syntax	create ipif <ipif_name 12> {<network_address>} <vlan_name 32> {state [enable disable]}
Description	<p>This command creates a IP interface.</p> <p>This interface can be configured with IPv4 or IPv6 address. Currently, it has a restriction. An interface can have only one IPv4 address defined. But it can have multiple IPv6 addresses defined. Configuration of IPv6 addresses must be done through the command config ipif.</p>
Parameters	<p><i><ipif_name 12></i> – The name created for the IP interface.</p> <p><i><network_address></i> – The network address for the IP interface to be created.</p> <p><i><vlan_name 32></i> – The name of VLAN.</p> <p><i>state</i> – <i>the state of interface</i> .</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create an interface

```
DGS-3700-12:5#create ipif if2 vlan2 state enable
Command: create ipif if2 vlan2 state enable

Success.

DGS-3700-12:5#
```

delete ipif	
Purpose	Used to delete a previously configured IP interface on the switch.

delete ipif	
Syntax	delete ipif [<ipif_name 12> {ipv6address <ipv6networkaddr>} all]
Description	This command is used to delete an interface, all interfaces, or the IPv6 address of the interface. Note that the system interface can not be deleted. By using this command, an IPv6 address can be deleted from the IP interface.
Parameters	<i><ipif_name 12></i> – The name of the deleted IP interface. <i>ipv6address</i> – The IPv6 address which will be deleted from the IP interface. <i>all</i> – Specifies that all the information will be deleted from the IP interface.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete an IP interface.

```
DGS-3700-12:5#delete ipif if2
Command: delete ipif if2

Success.

DGS-3700-12:5#
```

To delete an IPv6 address from the interface:

```
DGS-3700-12:5#delete ipif if2 ipv6address 5001::3700/8
Command: delete ipif if2 ipv6address 5001::3700/8

Success.

DGS-3700-12:5#
```

enable ipif	
Purpose	Used to enable an IP interface on the switch.
Syntax	enable ipif [<ipif_name 12> all]
Description	This command is used to enable the state for an IPIF. When the state is enabled, the IPv4 processing will be started. When the IPv4 address is configured on the IPIF. The IPv6 processing will be started when the IPv6 address is explicitly configured on the IPIF.
Parameters	<i><ipif_name 12></i> – The name of the IP interface. <i>all</i> – All the interface
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable the admin state of one interface.

```
DGS-3700-12G:5#enable ipif System
Command: enable ipif System

Success.

DGS-3700-12G:5#
```

disable ipif	
Purpose	Used to disable an IP interface on the switch.
Syntax	disable ipif [<ipif_name 12> all]
Description	This command is used to disable the state for an ipif.
Parameters	<ipif_name 12> – The name of the IP interface. all – Specifies all interfaces.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable the admin state for an interface.

```
DGS-3700-12G:5#disable ipif System
Command: disable ipif System

Success.

DGS-3700-12G:5#
```

show ipif	
Purpose	Used to display the configuration of an IP interface on the Switch.
Syntax	show ipif {<ipif_name 12>}
Description	This command is used to display the configuration of an IP interface on the Switch.
Parameters	<ipif_name 12> – The name created for the IP interface.
Restrictions	None.

Example usage:

To display IP interface settings.

```
DGS-3700-12:5#show ipif System
Command: show ipif System

IP Interface           : System
VLAN Name              : default
Interface Admin State  : Enabled
DHCPv6 Client State    : Disabled
Link Status            : LinkUp
IPv4 Address           : 10.24.73.21/8 (Manual) Primary
IPv4 State             : Enabled
IPv6 State             : Enabled

DGS-3700-12:5#
```

enable autoconfig	
Purpose	This command is used to automatically enable getting the configuration from the TFTP server.
Syntax	enable autoconfig
Description	When autoconfig is enabled on the Switch, the DHCP reply will contain a configuration file and path name. It will then request the file from the TFTP server specified in the reply. When autoconfig is enabled, the ipif settings will automatically become DHCP client.
Parameters	None.

enable autoconfig

Restrictions	When autoconfig is enabled, the Switch becomes a DHCP client automatically (same as: config ipif System dhcp). The DHCP server must have the TFTP server IP address and configuration file name, and be configured to deliver this information in the data field of the DHCP reply packet. The TFTP server must be running and have the requested configuration file in its base directory when the request is received from the Switch. Consult the DHCP server and TFTP server software instructions for information on loading a boot file or configuration file. Only Administrator and Operator-level users can issue this command.
---------------------	---

Example usage:

To enable autoconfiguration on the Switch:

```
DGS-3700-12:5#enable autoconfig
Command: enable autoconfig

Success.

DGS-3700-12:5#
```



NOTE: More detailed information for this command and related commands can be found in the section titled Switch Utility Commands.

disable autoconfig

Purpose	This command is used to automatically disable getting the configuration from the TFTP server.
Syntax	disable autoconfig
Description	When auto configuration is disabled, the switch will configure itself using the local configuration file.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable the auto configuration function:

```
DGS-3700-12:5#disable autoconfig
Command:disable autoconfig

Success.

DGS-3700-12:5#
```

show autoconfig

Purpose	Show the status of automatically getting the configuration from the TFTP server.
Syntax	show autoconfig
Description	The command is used to show autoconfig enable or disable status.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To display the auto configuration status:

```
DGS-3700-12:5#show autoconfig
Command: show autoconfig

Autoconfig State: Disabled

DGS-3700-12:5#
```

enable ipif_ipv6_link_local_auto

Purpose	Used to enable IPv6 link local auto configure on IP interfaces.
Syntax	enable ipif_ipv6_link_local_auto [<ipif_name 12> all]
Description	This command is used to enable the auto configuration of link local addresses when there are no IPv6 addresses explicitly configured. When an IPv6 address is explicitly configured, the link local address will be automatically configured, and the IPv6 processing will be started. When there is no IPv6 address explicitly configured, by default, link local address is not configured and the IPv6 processing will be disabled. By enabling this automatic configuration, the link local address will be automatically configured and IPv6 processing will be started.
Parameters	<ipif_name 12> – The name of the IP interface. all – Indicates all IP interfaces.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable the automatic configuration of link local address for an interface:

```
DGS-3700-12:5#enable ipif_ipv6_link_local_auto all
Command: enable ipif_ipv6_link_local_auto all

Success.

DGS-3700-12:5#
```

disable ipif_ipv6_link_local_auto

Purpose	Used to disable IPv6 link local auto configure on IP interfaces.
Syntax	disable ipif_ipv6_link_local_auto [<ipif_name 12> all]
Description	This command is used to disable the auto configuration of link local addresses when no IPv6 address is explicitly configured.
Parameters	<ipif_name 12> – The name of the IP interface. all – Indicates all IP interfaces.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable the automatic configuration of link local address for an interface:

```
DGS-3700-12:5#disable ipif_ipv6_link_local_auto System
Command: disable ipif_ipv6_link_local_auto System

Success.

DGS-3700-12:5#
```

show ipif_ipv6_link_local_auto

Purpose	This command is used to show the IPv6 link local auto configure status.
Syntax	show ipif_ipv6_link_local_auto {<ipif_name 12>}
Description	This command is used to display the link local address automatic configuration state.
Parameters	<ipif_name 12> – The name created for the IP interface.
Restrictions	None.

Example usage:

To display the link local address automatic configuration state:

```
DGS-3700-12:5#show ipif_ipv6_link_local_auto
Command: show ipif_ipv6_link_local_auto

IPIF: System           Automatic Link Local Address: Disabled

DGS-3700-12:5#
```

LOOP-BACK DETECTION COMMANDS

Back to Section Header

The Loop-back Detection commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
config loopdetect	{recover_timer [value 0] <value 60-1000000> interval <1-32767> mode [port-based vlan-based]}
config loopdetect ports	[<portlist> all] state [enabled disabled]
enable loopdetect	
disable loopdetect	
show loopdetect	
show loopdetect ports	[all <portlist>]
config loopdetect trap	[none loop_detected loop_cleared both]

Each command is listed, in detail, in the following sections.

config loopdetect	
Purpose	Used to configure loop-back detection on the switch.
Syntax	config loopdetect {recover_timer [value 0] <value 60-1000000> interval <1-32767> mode [port-based vlan-based]}
Description	This command is used to configure loop-back detection on the switch.
Parameters	<p><i>recover_timer</i> – The time interval (in seconds) used by the Auto-Recovery mechanism to decide how long to check if the loop status is gone. The valid range is <i>60</i> to <i>1000000</i>. Zero is a special value which means to disable the auto-recovery mechanism. The default value is <i>60</i>.</p> <p><i>interval</i> – The time interval (inseconds) at which the remote device transmits all the CTP packets to detect the loop-back event. The default value is <i>10</i>, with a valid range of <i>1</i> to <i>32767</i>.</p> <p><i>mode</i> – In port-based mode, the port will be disabled during the loop detection. In vlan-based mode, the port can not process VLAN packets destined for ports involved in detecting the loop.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To set the recover time to 0, and interval to 20, and VLAN-based mode:

```
DGS-3700-12:5#config loopdetect recover_timer 0 interval 20 mode vlan-based
Command: config loopdetect recover_timer 0 interval 20 mode vlan-based

Success

DGS-3700-12:5#
```

config loopdetect ports	
Purpose	Used to configure loop-back detection state of ports.
Syntax	config loopdetect ports [<portlist> all] state [enabled disabled]
Description	This command is used to configure loop-back detection state of ports.

config loopdetect ports

Parameters	<p><i><portlist></i> – Specifies a range of ports for the loop-back detection</p> <p><i>all</i> – Specifies all the ports used for the loop-back detection.</p> <p><i>state [enabled disabled]</i> – Allows the loop-back detection to be disabled and enabled.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To set the loop-detect state to enable:

```
DGS-3700-12:5#config loopdetect ports 1-5 state enabled
Command: config loopdetect ports 1-5 state enabled

Success

DGS-3700-12:5#
```

enable loopdetect

Purpose	Used to globally enable loop-back detection on the switch.
Syntax	enable loopdetect
Description	This command is used to globally enable loop-back detection on the switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable loop-back detection on the switch:

```
DGS-3700-12:5#enable loopdetect
Command: enable loopdetect

Success

DGS-3700-12:5#
```

disable loopdetect

Purpose	Used to globally disable loop-back detection on the switch.
Syntax	disable loopdetect
Description	This command is used to globally disable loop-back detection on the switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable loop-back detection on the switch:

```
DGS-3700-12:5#disable loopdetect
Command: disable loopdetect

Success

DGS-3700-12:5#
```

show loopdetect	
Purpose	Used to display the current loop-back detection settings on the switch.
Syntax	show loopdetect
Description	This command is used to display the current loop-back detection settings on the switch.
Parameters	None.
Restrictions	None.

Example usage:

To show loop-detect:

```
DGS-3700-12:5#show loopdetect
Command: show loopdetect

LBD Global Settings
-----
LBD Status       : Disabled
LBD Mode         : Port_based
LBD Interval     : 10
LBD Recover Time : 60
LBD Trap Status  : None

DGS-3700-12:5#
```

show loopdetect ports	
Purpose	Used to display the current per-port loop-back detection settings on the switch.
Syntax	show loopdetect ports [all <portlist>]
Description	This command is used to display the current per-port loop-back detection settings on the switch.
Parameters	<portlist> – Specifies a range of ports for the loop-back detection all – Specifies all ports for the loop-back detection.
Restrictions	None.

Example usage:

To show loop-detect ports:

```
DGS-3700-12:5#show loopdetect ports 1-3
Command: show loopdetect ports 1-3

Port   Loopdetect State   Loop Status
-----
1      Enabled           Normal
2      Enabled           Normal
3      Enabled           Normal

DGS-3700-12:5#
```

config loopdetect trap	
Purpose	This command is used to configure trap modes.
Syntax	config loopdetect trap [none loop_detected loop_cleared both]
Description	The loop-detect trap is sent when the loop condition is detected. The loop-detect will be cleared when the trap is sent and the loop condition is cleared.

config loopdetect trap

Parameters

none – Trap will not be sent for both cases.
loop_detected – Trap is sent when the loop condition is detected.
loop_cleared – Trap is sent when the loop condition is cleared.
both – Trap will be sent for both cases.

Restrictions

Only Administrator and Operator-level users can issue this command.

Example usage:

To config loop trap both:

```
DGS-3700-12:5#config loopdetect trap both
Command: config loopdetect trap both

Success.

DGS-3700-12:5#
```

OUT-OF-BAND MANAGEMNET COMMANDS

Back to Section Header

The Out-of-Band Management commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	Parameters
config out_band_ipif	{ ipaddress <network_address> state [enable disable] gateway <ipaddr> }
show out_band_ipif	

Each command is listed, in detail, in the following sections.

config out_band_ipif	
Purpose	Used to configure the out-of-band management settings.
Syntax	config out_band_ipif {ipaddress <network_address> state [enable disable] gateway <ipaddr>}
Description	This command is used to change out-of-band management settings. Out of Band Management is a method to manage devices while sharing the network bandwidth with other management traffic. Out of Band Management allows Management packets and ARP requests to pass between the CPU and the management interface while other packets will be dropped.
Parameters	<i>ipaddress <network_address></i> – The IP address of the interface, the parameter must give the mask. <i>state [enable disable]</i> – Allows users to enable or disable the IP interface. <i>gateway <ipaddr></i> – Default gateway of out-of-band management networks.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the out_band interface:

```
DGS-3700-12:5#config out_band_ipif ipaddress 10.90.90.4/8 state enable
Command: config out_band_ipif ipaddress 10.90.90.4/8 state enable

Success.

DGS-3700-12:5#
```

show out_band_ipif	
Purpose	Use to display the current configurations of special out-of-band management interface.
Syntax	show out_band_ipif
Description	The command is used to display the current configurations of out-of-band management interface.
Parameters	None
Restrictions	None.

Example usage:

To display the out_band interface .

```
DGS-3700-12:5#show out_band_ipif
Command: show out_band_ipif

Status                : Enable
IP Address             : 192.168.0.1
Subnet Mask            : 255.255.255.0
GateWay               : 0.0.0.0
Link Status           : LinkDown

DGS-3700-12:5#
```

ROUTING TABLE COMMANDS

Back to Section Header

The routing table commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
create iproute	[default <network_address>] <ipaddr> {<metric 1-65535>} {[primary backup]}
delete iproute	[default <network_address>] <ipaddr>
show iproute	{<network_address> <ipaddr>} {static}
create ipv6route	[default <ipv6networkaddr>] [<ipif_name 12> <ipv6addr> <ipv6addr>] {<metric 1-65535>} {[primary backup]}
delete ipv6route	[[default <ipv6networkaddr>] [<ipif_name 12> <ipv6addr> <ipv6addr>]] all
show ipv6route	{<ipv6networkaddr>}

Each command is listed, in detail, in the following sections.

create iproute	
Purpose	Used to create IP route entries to the Switch's IP routing table.
Syntax	create iproute [default <network_address>] <ipaddr> {<metric 1-65535>} {[primary backup]}
Description	This command is used to create a default static IP route entry to the Switch's IP routing table.
Parameters	<p><i>default</i> – Specifies to create the default IP route.</p> <p><network_address> - Specifies the network address used.</p> <p><ipaddr> – The gateway IP address for the next hop router.</p> <p><metric 1-65535> – Allows the entry of a routing protocol metric entry representing the number of routers between the Switch and the IP address above. The default setting is 1.</p> <p><i>primary</i> – Specifies to use this IP route as the primary route.</p> <p><i>backup</i> - Specifies to use this IP route as the backup route.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To add the default static address 10.48.74.121, with a metric setting of 1, to the routing table:

DGS-3700-12:5#create iproute default 10.48.74.121 1 Command: create iproute default 10.48.74.121 1
Success.
DGS-3700-12:5#

delete iproute	
Purpose	Used to delete a default IP route entry from the Switch's IP routing table.
Syntax	delete iproute [default <network_address>] <ipaddr>
Description	This command will delete an existing default entry from the Switch's IP routing table.
Parameters	<i>default</i> – Specifies to remove the default IP route.

delete iproute

	<p><network_address> - Specifies to remove an IP route by entering its network address. <ipaddr> - Specifies to enter the network address.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete the default IP route 10.53.13.254:

```
DGS-3700-12:5#delete iproute default 10.53.13.254
Command: delete iproute default 10.53.13.254

Success.

DGS-3700-12:5#
```

show iproute

Purpose	Used to display the Switch's current IP routing table.
Syntax	show iproute {<network_address> <ipaddr>} {static}
Description	This command will display the Switch's current IP routing table.
Parameters	<p><network_address> - Specifies to display the IP route using its network address. <ipaddr> - Specifies to enter the network address of the IP route to display. static – Specifies to display whether the route is static.</p>
Restrictions	None.

Example usage:

To display the contents of the IP routing table:

```
DGS-3700-12:5#show iproute
Command: show iproute

Routing Table

IP Address/Netmask  Gateway      Interface    Cost    Protocol
-----
10.0.0.0/8          10.48.74.122 System        1       Local

Total Entries: 1

DGS-3700-12:5#
```

create ipv6route

Purpose	create an ipv6 default gateway.
Syntax	create ipv6route [default <ipv6networkaddr>] [<ipif_name 12> <ipv6addr> <ipv6addr>] {<metric 1-65535>} {[primary backup]}
Description	This command is used to create a primary and backup IPv6 default gateway.
Parameters	<p>default – Use this parameter to create an IPv6 default gateway. <ipv6networkaddr> - Specifies the IPv6 network address used. <ipif_name 12> – Enter the corresponding ipif name of the IPv6 address. <ipv6addr> – IPv6 address for the next hop router. <metric 1-65535> – Allows the entry of a routing protocol metric entry, representing the number of routers between the Switch and the IP address above. The default setting is 1.</p>

create ipv6route

[*primary | backup*] – The user may choose between Primary and Backup. If the Primary Static/Default Route fails, the Backup Route will support the entry.

Restrictions Only Administrator and Operator-level users can issue this command.

Example usage:

Create an ipv6 default gateway:

```
DGS-3700-12:5#create ipv6route default System 3FFE::1 33 primary
Command: create ipv6route default System 3FFE::1 33 primary
Success.

DGS-3700-12:5#
```

delete ipv6route

Purpose delete an ipv6 default gateway.

Syntax **delete ipv6route** [[**default** |<ipv6networkaddr>] [<ipif_name 12> <ipv6addr> | <ipv6addr>] **all**]

Description This command is used to delete an ipv6 route.

Parameters
default – Use this parameter to delete an IPv6 default gateway.
 <ipv6networkaddr> - Specifies the IPv6 network address used.
 <ipif_name 12> – Enter the corresponding ipif name of the IPv6 address.
 <ipv6addr> – IPv6 address for the next hop router.
 all – This will delete all IPv6 default gateways.

Restrictions Only Administrator and Operator-level users can issue this command.

Example usage:

Delete an ipv6 default route:

```
DGS-3700-12:5#delete ipv6route default System 3ffe::1
Command: delete ipv6route default System 3ffe::1

Success.

DGS-3700-12:5#
```

show ipv6route

Purpose Used to display the Switch's current IPv6 route.

Syntax **show ipv6route** <ipv6networkaddr>

Description This command will display the Switch's current IPv6 route.

Parameters <ipv6networkaddr> - This option will display the IPv6 route address.

Restrictions None.

Example usage:

To display the static IPv6 entries in the routing table:

```
DGS-3700-12G:5#show ipv6route
```

```
Command: show ipv6route
```

```
IPv6 Prefix: ::/0
```

```
Protocol: Static Metric: 1
```

```
Next Hop   : 3311::1
```

```
IPIF      : System
```

```
Backup     : Primary
```

```
Status    : Inactive
```

```
Total Entries: 1
```

```
DGS-3700-12G:5#
```

QUALITY OF SERVICE (QoS) SECTION

Table of Contents

Next Section

Previous Section

QoS COMMANDS

Back to Section Header

The Switch supports 802.1p priority queuing. The Switch has 8 priority queues. These priority queues are numbered from 7 (Class 7) — the highest priority queue — to 0 (Class 0) — the lowest priority queue.

The eight priority tags specified in IEEE 802.1p (p0 to p7) are mapped to the Switch's priority queues as follows:

- Priority 0 is assigned to the Switch's Q2 queue.
- Priority 1 is assigned to the Switch's Q0 queue.
- Priority 2 is assigned to the Switch's Q1 queue.
- Priority 3 is assigned to the Switch's Q3 queue.
- Priority 4 is assigned to the Switch's Q4 queue.
- Priority 5 is assigned to the Switch's Q5 queue.
- Priority 6 is assigned to the Switch's Q6 queue.
- Priority 7 is assigned to the Switch's Q7 queue.

Priority scheduling is implemented by the priority queues stated above. The Switch will empty the eight hardware priority queues in order, beginning with the highest priority queue, 7, to the lowest priority queue, 0. Each hardware queue will transmit all of the packets in its buffer before permitting the next lower priority to transmit its packets. When the lowest hardware priority queue has finished transmitting all of its packets, the highest hardware priority queue will begin transmitting any packets it may have received.

The commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
config bandwidth_control	[<portlist> all] {rx_rate [no_limit <value 64-1024000>] tx_rate [no_limit <value 64-1024000>]}
show bandwidth_control	{<portlist>}
config scheduling	{ports [<portlist> all]} <class_id 0-7> [strict weight<value 1-127>]
config scheduling_mechanism	{ports [<portlist> all]} [strict wrp]
show scheduling	{<portlist>}
show scheduling_mechanism	{<portlist>}
config 802.1p user_priority	{ports [<portlist> all]} <priority 0-7> <class_id 0-7>
show 802.1p user_priority	{<portlist>}
config 802.1p default_priority	[<portlist> all] <priority 0-7>
show 802.1p default_priority	{<portlist>}
enable hol_prevention	
disable hol_prevention	
show hol_prevention	
config mgmt_pkt_priority	[default <priority 0-7>]

COMMAND	PARAMETERS
show mgmt_pkt_priority	
config per_queue bandwidth_control	{ports [<portlist> all]} <cos_id_list 0-7> {{min_rate [no_limit <value 64-1024000>]} max_rate [no_limit <value 64-1024000>]}
show per_queue bandwidth_control	{<portlist>}

Each command is listed, in detail, in the following sections.

config bandwidth_control	
Purpose	Used to configure bandwidth control on a port by-port basis.
Syntax	config bandwidth_control [<portlist> all] {rx_rate [no_limit <value 64-1024000>] tx_rate [no_limit <value 64-1024000>]}
Description	This command is used to configure bandwidth on a port by-port basis.
Parameters	<p><portlist> – Specifies a port or range of ports to be configured.</p> <p>rx_rate – Specifies that one of the parameters below (<i>no_limit</i> or <value 64-1024000>) will be applied to the rate at which the above specified ports will be allowed to receive packets</p> <p>no_limit – Specifies that there will be no limit on the rate of packets received by the above specified ports.</p> <p><value 64-1024000> – Specifies the packet limit, in Kbps, that the above ports will be allowed to receive.</p> <p>tx_rate – Specifies that one of the parameters below (<i>no_limit</i> or <value 64-1024000>) will be applied to the rate at which the above specified ports will be allowed to transmit packets.</p> <p>no_limit – Specifies that there will be no limit on the rate of packets received by the above specified ports.</p> <p><value 64-1024000> – Specifies the packet limit, in Kbps, that the above ports will be allowed to receive.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure bandwidth control:

DGS-3700-12:5#config bandwidth_control 1-10 tx_rate 64
Command: config bandwidth_control 1-10 tx_rate 64
Success.
DGS-3700-12:5#

show bandwidth_control	
Purpose	Used to display the bandwidth control table.
Syntax	show bandwidth_control {<portlist>}
Description	This command is used to display the current bandwidth control configuration on the Switch, on a port-by-port basis.
Parameters	<portlist> – Specifies a port or range of ports to be viewed.
Restrictions	None.

Example usage:

To display port bandwidth control table:

```
DGS-3700-12:5#show bandwidth_control 1-10
Command: show bandwidth_control 1-10

Bandwidth Control Table

Port    RX Rate      TX Rate      Effective RX  Effective TX
      (Kbit/sec)  (Kbit/sec)  (Kbit/sec)   (Kbit/sec)
-----  -
1      No Limit     No Limit     No Limit     No Limit
2      No Limit     No Limit     No Limit     No Limit
3      No Limit     No Limit     No Limit     No Limit
4      No Limit     No Limit     No Limit     No Limit
5      No Limit     No Limit     No Limit     No Limit
6      No Limit     No Limit     No Limit     No Limit
7      No Limit     No Limit     No Limit     No Limit
8      No Limit     No Limit     No Limit     No Limit
9      No Limit     No Limit     No Limit     No Limit
10     No Limit     No Limit     No Limit     No Limit

DGS-3700-12:5#
```

config scheduling	
Purpose	Used to configure the traffic scheduling mechanism for each COS queue.
Syntax	config scheduling {ports [<portlist> all]} <class_id 0-7> [strict weight <value 1-127>]
Description	<p>The Switch contains eight hardware priority queues. Incoming packets must be mapped to one of these eight queues. This command is used to specify the rotation by which these eight hardware priority queues are emptied.</p> <p>The Switch's default (if the config scheduling command is not used, or if the config scheduling command is entered with <i>weight</i> parameters set to 0) is to empty the 8 hardware priority queues in order – from the highest priority queue (hardware queue 7) to the lowest priority queue (hardware queue 0). Each hardware queue will transmit all of the packets in its buffer before allowing the next lower priority queue to transmit its packets. When the lowest hardware priority queue has finished transmitting all of its packets, the highest hardware priority queue can again transmit any packets it may have received.</p> <p>The <i>weight</i> parameter allows the user to specify the maximum number of packets a given hardware priority queue can transmit before allowing the next lowest hardware priority queue to begin transmitting its packets. A value between 1 and 127 can be specified. For example, if a value of 3 is specified, then the highest hardware priority queue (number 7) will be allowed to transmit 3 packets – then the next lowest hardware priority queue (number 6) will be allowed to transmit 3 packets, and so on, until all of the queues have transmitted 3 packets. The process will then repeat.</p>
Parameters	<p><i><class_id 0-7></i> – This specifies which of the eight hardware priority queues the config scheduling command will apply to. The eight hardware priority queues are identified by number – from 0 to 7 – with the 0 queue being the lowest priority.</p> <p><i>[<portlist> all]</i> – Specifies a range of ports to be configured.</p> <p><i>strict</i> – Specifies this queue is always working in strict mode.</p> <p><i>weight <value 1-127></i> – Using weighted fair algorithm to handle packets in priority queues. Means each queue will operate based on its setting of max_packet.</p>

config scheduling

Restrictions	Only Administrator and Operator-level users can issue this command.
---------------------	---

Example usage:

To configure the traffic scheduling mechanism for each queue:

```
DGS-3700-12G:5#config scheduling ports 10 3 strict
Command: config scheduling ports 10 3 strict

Success.

DGS-3700-12G:5#
```

config scheduling_mechanism

Purpose	Used to configure the traffic scheduling mechanism for each port.
Syntax	config scheduling_mechanism {ports [<portlist> all]} [strict wrr]
Description	This command is used to specify how the switch handles packets in priority queues.
Parameters	<p><portlist> – Select the port of list of ports you wish to configure.</p> <p>all – Choose this option to select all ports.</p> <p>strict – The highest queue first process. That is, the highest queue should be finished at first.</p> <p>wrr – Using weighted round-robin algorithm to handle packets in priority queues.</p>
Restrictions	Only Administrator and Operation-level users can issue this command.

Example usage:

To configure the traffic scheduling mechanism for port1:

```
DGS-3700-12G:5#config scheduling_mechanism ports 1 strict
Command: config scheduling_mechanism ports 1 strict

Success.

DGS-3700-12G:5#
```

show scheduling

Purpose	Used to display the currently configured traffic scheduling on the Switch.
Syntax	show scheduling {<portlist>}
Description	This command is used to display the current traffic scheduling parameters in use on the Switch.
Parameters	<portlist> – Specifies a range of ports to be displayed.
Restrictions	None.

Example usage:

To display the current scheduling configuration:

```
DGS-3700-12:5#show scheduling 1,2,3
Command: show scheduling 1-3

QOS Output Scheduling On Port: 1
Class ID  Weight
-----  -
Class-0   1
Class-1   2
Class-2   3
Class-3   4
Class-4   5
Class-5   6
Class-6   7
Class-7   8

QOS Output Scheduling On Port: 2
Class ID  Weight
-----  -
Class-0   1
Class-1   2
Class-2   3
Class-3   4

CTRL+C  ESC  q  Quit  SPACE  n  Next Page  ENTER  Next Entry  a  All
```

show scheduling_mechanism

Purpose	Used to show the traffic scheduling mechanism.
Syntax	show scheduling_mechanism {<portlist>}
Description	This command is used to display the current traffic scheduling mechanism in use on the Switch.
Parameters	<portlist> – Specifies a range of ports to be displayed.
Restrictions	None.

Example usage:

To display the scheduling mechanism:

```
DGS-3700-12:5#show scheduling_mechanism 1-4
Command: show scheduling_mechanism 1-4

Port  Mode
-----  -
1     Strict
2     Strict
3     Strict
4     Strict

DGS-3700-12:5#
```

config 802.1p user_priority

Purpose	Used to map the 802.1p user priority of an incoming packet to one of the eight hardware queues available on the Switch.
Syntax	config 802.1p user_priority {ports [<portlist> all]} <priority 0-7> <class_id 0-n>
Description	This command allows users to configure the way the Switch will map an incoming packet, based on its 802.1p user priority, to one of the eight available hardware

config 802.1p user_priority																												
	<p>priority queues on the Switch.</p> <p>The Switch's default is to map the following incoming 802.1p user priority values to the eight hardware priority queues:</p> <table border="1"> <thead> <tr> <th>802.1p</th> <th>Hardware Queue</th> <th>Remark</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>2</td> <td>Mid-low</td> </tr> <tr> <td>1</td> <td>0</td> <td>Lowest</td> </tr> <tr> <td>2</td> <td>1</td> <td>Lowest</td> </tr> <tr> <td>3</td> <td>3</td> <td>Mid-low</td> </tr> <tr> <td>4</td> <td>4</td> <td>Mid-high</td> </tr> <tr> <td>5</td> <td>5</td> <td>Mid-high</td> </tr> <tr> <td>6</td> <td>6</td> <td>Mid-high</td> </tr> <tr> <td>7</td> <td>7</td> <td>Highest</td> </tr> </tbody> </table> <p>This mapping scheme is based upon recommendations contained in IEEE 802.1D. Change this mapping by specifying the 802.1p user priority users want to map to the <i><class_id 0-7></i> (the number of the hardware queue).</p>	802.1p	Hardware Queue	Remark	0	2	Mid-low	1	0	Lowest	2	1	Lowest	3	3	Mid-low	4	4	Mid-high	5	5	Mid-high	6	6	Mid-high	7	7	Highest
802.1p	Hardware Queue	Remark																										
0	2	Mid-low																										
1	0	Lowest																										
2	1	Lowest																										
3	3	Mid-low																										
4	4	Mid-high																										
5	5	Mid-high																										
6	6	Mid-high																										
7	7	Highest																										
Parameters	<p><i>ports <portlist></i> – Specifies a port or range of ports to be configured.</p> <p><i>all</i> – Specifies that the command applies to all the ports on the Switch.</p> <p><i><priority 0-7></i> – The 802.1p user priority you want to associate with the <i><class_id 0-7></i> (the number of the hardware queue) with.</p> <p><i><class_id 0-7></i> – The number of the Switch's hardware priority queue. The Switch has eight hardware priority queues available. They are numbered between 0 (the lowest priority) and 7 (the highest priority).</p>																											
Restrictions	Only Administrator and Operator-level users can issue this command.																											

Example usage:

To configure 802.1p user priority on the Switch:

```
DGS-3700-12G:5#config 802.1p user_priority ports 1 1 3
Command: config 802.1p user_priority ports 1 1 3

Success.

DGS-3700-12G:5#
```

show 802.1p user_priority	
Purpose	Used to display the current mapping between an incoming packet's 802.1p priority value and one of the Switch's eight hardware priority queues.
Syntax	show 802.1p user_priority {<portlist>}
Description	This command is used to display the current mapping of an incoming packet's 802.1p priority value to one of the Switch's eight hardware priority queues.
Parameters	<i>{<portlist>}</i> – Specifies a range of ports to be displayed.
Restrictions	None.

Example usage:

To show 802.1p user priority:

```
DGS-3700-12:5#show 802.1p user_priority 1-2
```

```
Command: show 802.1p user_priority 1-2
```

QOS Class of Traffic

Port 1

```
Priority-0 -> <Class-2>
Priority-1 -> <Class-0>
Priority-2 -> <Class-1>
Priority-3 -> <Class-3>
Priority-4 -> <Class-4>
Priority-5 -> <Class-5>
Priority-6 -> <Class-6>
Priority-7 -> <Class-7>
```

Port 2

```
Priority-0 -> <Class-2>
Priority-1 -> <Class-0>
Priority-2 -> <Class-1>
Priority-3 -> <Class-3>
Priority-4 -> <Class-4>
Priority-5 -> <Class-5>
Priority-6 -> <Class-6>
Priority-7 -> <Class-7>
```

CTRL+C **ESC** **q** Quit **SPACE** **n** Next Page **ENTER** Next Entry **a** All

config 802.1p default_priority

Purpose	Used to configure the 802.1p default priority settings on the Switch. If an untagged packet is received by the Switch, the priority configured with this command will be written to the packet's priority field.
Syntax	config 802.1p default_priority [<portlist> all] <priority 0-7>
Description	This command allows the user to specify default priority handling of untagged packets received by the Switch. The priority value entered with this command will be used to determine which of the eight hardware priority queues the packet is forwarded to.
Parameters	<p><portlist> – Specifies a port or range of ports to be configured.</p> <p>all – Specifies that the command applies to all ports on the Switch.</p> <p><priority 0-7> – The priority value to assign to untagged packets received by the Switch or a range of ports on the Switch.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure 802.1p default priority on the Switch:

```
DGS-3700-12:5#config 802.1p default_priority all 5
```

```
Command: config 802.1p default_priority all 5
```

```
Success.
```

```
DGS-3700-12:5#
```

show 802.1 default_priority

Purpose	Used to display the currently configured 802.1p priority value that will be assigned to
----------------	---

show 802.1p default_priority	
	an incoming, untagged packet before being forwarded to its destination.
Syntax	show 802.1p default_priority {<portlist>}
Description	This command is used to display the currently configured 802.1p priority value that will be assigned to an incoming, untagged packet before being forwarded to its destination.
Parameters	<portlist> – Specifies a port or range of ports to be configured.
Restrictions	None.

Example usage:

To display the current 802.1p default priority configuration on the Switch:

```
DGS-3700-12:5#show 802.1p default_priority
Command: show 802.1p default_priority
```

Port	Priority	Effective Priority
----	-----	-----
1	0	0
2	0	0
3	0	0
4	0	0
5	0	0
6	0	0
7	0	0
8	0	0
9	0	0
10	0	0
11	0	0
12	0	0

```
DGS-3700-12:5#
```

enable hol_prevention	
Purpose	Used to enable the HOL prevention state.
Syntax	enable hol_prevention
Description	This command enables the HOL prevention function on the switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable HOL prevention:

```
DGS-3700-12:5#enable hol_prevention
Command: enable hol_prevention

Success.

DGS-3700-12:5#
```

disable hol_prevention	
Purpose	Used to disable HOL prevention.
Syntax	disable hol_prevention
Description	This command disables the HOL prevention function on the switch.

disable hol_prevention

Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable HOL prevention:

```
DGS-3700-12:5#disable hol_prevention
Command: disable hol_prevention

Success.
DGS-3700-12:5#
```

show hol_prevention

Purpose	Used to show the HOL prevention state.
Syntax	show hol_prevention
Description	This command displays the HOL prevention state.
Parameters	None.
Restrictions	None.

Example usage:

To display HOL prevention:

```
DGS-3700-12:5#show hol_prevention
Command: show hol_prevention

Device HOL Prevention State: Enabled

DGS-3700-12:5#
```

config mgmt_pkt_priority

Purpose	Used to configure the priority of management packet.
Syntax	config mgmt_pkt_priority [default <priority 0-7>]
Description	This command is used to configure the priority of management packet.
Parameters	<i>default</i> – Specifies to use the original management packet priority. <priority 0-7> - Specifies the priority of packets, the range is 0-7. 7 is highest priority.
Restrictions	Only Administrator level users can issue this command.

Example usage:

To config priority of management packet setting:

```
DGS-3700-12:5#config mgmt_pkt_priority 3
Command: config mgmt_pkt_priority 3

Success.

DGS-3700-12:5#
```

show mgmt_pkt_priority

Purpose	Used to display current priority of management packet.
----------------	--

show mgmt_pkt_priority	
Syntax	show mgmt_pkt_priority
Description	This command is used to display current priority of management packet.
Parameters	None.
Restrictions	None.

Example usage:

To display the current priority of management packets:

```
DGS-3700-12:5# show mgmt_pkt_priority
Command: show mgmt_pkt_priority

Management Packet Priority:3

DGS-3700-12:5#
```

config per_queue bandwidth_control	
Purpose	To configure the bandwidth control of per egress queue for each port.
Syntax	config per_queue bandwidth_control {ports [<portlist> all]} <cos_id_list 0-7> {{min_rate [no_limit <value 64-1024000>]}max_rate [no_limit <value 64-1024000>]}
Description	<p>This command is used to set the bandwidth control for each specific egress queue on specified ports.</p> <p>The maximum rate limits the bandwidth. When specified, packets transmitted from the queue will not exceed the specified limit even if extra bandwidth is available. The specification of the maximum rate is effective regardless of whether the queue is operating in strict or WRR mode.</p> <p>The minimum rate limits the bandwidth. When specified, packets transmitted from the queue will not be lower than the specified limit. The specification of the minimum rate is effective regardless of whether the queue is operating in strict or WRR mode.</p>
Parameters	<p><i>ports</i> - Specify a range of ports to be configured.</p> <p><i>all</i> - To set all ports in the system, use the “all” parameter. If no parameter is specified, the system will set all the ports.</p> <p><i><cos_id_list 0-7></i> - Specify a list of priority queues. The priority queue number ranges from 0 to 7.</p> <p><i>min_rate</i> – Specifies one of the parameters below will be applied to the minimum rate that the class, specified above, will be allowed to transmit packets at.</p> <p><i>no_limit</i> - Indicates there is no limit on egress queue of specified port bandwidth.</p> <p><i><value 64-1024000></i> - An integer value from 64 to 1024000 sets a minimum limit in Kbits/sec. The specified bandwidth limit may be equaled or exceeded. The exact logical limit or token value is hardware determined. Note: 1 Kbit = 1000 bits, 1 Gigabit = 1000*1000 Kbits. Actual rate = (inputted rate/ 64) * 64. On a GE port, the minimal granularity for TX rate is 1850Kbps. Actual rate = (inputted rate/ 1850) * 1850 Note: On a GE port, the TX rate granularity is different.</p> <p><i>max_rate</i> - Specify one of the parameters below will be applied to the maximum rate that the class specified above will be allowed to transmit packets at.</p> <p><i>no_limit</i> - Indicates there is no limit on egress queue of specified port bandwidth.</p>

config per_queue bandwidth_control

	<p><value 64-1024000> - An integer value from 64 to 1024000 sets a maximum limit in Kbits/sec. The specified bandwidth limit may be equaled but not exceeded. The exact logical limit or token value is hardware determined. Note: 1 Kbit = 1000 bits, 1 Gigabit = 1000*1000 Kbits. Actual rate = (inputted rate/ 64) * 64. On a GE port, the minimal granularity for TX rate is 1850Kbps. Actual rate = (inputted rate/ 1850) * 1850 Note: On a GE port, the TX rate granularity is different.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the maximum rate to be 100 on queue 1 for ports 1 to 10:

```
DGS-3700-12:5#config per_queue bandwidth_control ports 1-10 1 max_rate 100
Command: config per_queue bandwidth_control ports 1-10 1 max_rate 100

The setting value is not an integer multiple of granularity 64. The closest value 64 is chosen.

Success.

DGS-3700-12:5#
```

show per_queue bandwidth_control

Purpose	To display the bandwidth control setting of per egress queue for each port.
Syntax	show per_queue bandwidth_control {<portlist>}
Description	This command is used to display the bandwidth control setting of per egress queue for each port.
Parameters	<portlist> - Specifies a range of ports to be displayed. If no parameter is specified, the system will display the per egress queue bandwidth configuration for all ports.
Restrictions	None.

Example usage:

To display the port bandwidth control table for port 1:

```
DGS-3700-12:5#show per_queue bandwidth_control 1
Command: show per_queue bandwidth_control 1

Queue Bandwidth Control Table On Port: 1

Queue      Min Rate(Kbit/sec)      Max Rate(Kbit/sec)
0          No Limit                No Limit
1          No Limit                No Limit
2          No Limit                No Limit
3          No Limit                No Limit
4          No Limit                No Limit
5          No Limit                No Limit
6          No Limit                No Limit
7          No Limit                No Limit

DGS-3700-12:5#
```

SIMPLE RED COMMANDS

Back to Section Header

The Simple RED commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
enable sred	
disable sred	
config sred	[<portlist> all] [<class_id 0-7> all] { threshold {low <value 0-100> high<value 0-100>} rop_rate {low<value 1-8> high<value 1-8>}} drop_green [enable disable]}
show sred	{ <portlist>{ <class_id 0-7>}}
show sred drop_counter	{<portlist>}
config dscp trust	[<portlist> all] state [enable disable]
show dscp trust	{<portlist>}
config dscp map	[<portlist> all] [dscp_priority <dscp_list> to <priority 0-7> dscp_dscp <dscp_list> to <dscp 0-63> dscp_color <dscp_list> to [green red yellow]]
show dscp map	{ <portlist> } [dscp_priority dscp_dscp dscp_color] {dscp <dscp_list>}
config 802.1p map	[<portlist> all] 1p_color [<priority_list> to [green red yellow]
show 802.1p map 1p_color	{ <portlist>}

Each command is listed, in detail, in the following sections.

enable sred	
Purpose	Used to enable the simple RED function.
Syntax	enable sred
Description	This command is used to enable the sRED function. By default, sRED is disabled.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable sred:

```
DGS-3700-12:5#enable sred
Command: enable sred

Success.

DGS-3700-12:5#
```

disable sred	
Purpose	Used to disable the simple RED function.
Syntax	disable sred
Description	This command is used to disable the sRED function.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable sred:

```
DGS-3700-12:5#disable sred
Command: disable sred

Success.

DGS-3700-12:5#
```

config sred

Purpose Used to config the simple RED parameter.

Syntax `config sred [<portlist>|all] [<class_id 0-7>|all] { threshold {low <value 0-100>|high<value 0-100>} | drop_rate {low<value 1-8>|high<value 1-8>}| drop_green [enable|disable]}`

Description This command is used to configure sRED threshold per port or per port per queue.

Parameters

portlist – Specifies a range of ports that will be configured.

All – Specifies that all ports will be configured.

class_id 0-7 – This specifies which of the 8 hardware CoS queues the config sred command will apply to.

threshold –

- low** – Low threshold that specifies the percent of space utilized. By default, the value is 60. The range is 0 to 100.
- high** – High threshold that specifies the percent of queue space utilized. By default, the value is 80. The range is 0 to 100.

drop_rate –

- low** – Probabilistic drop rate if above the low threshold, By default, the value is 1.
- high** – Probabilistic drop rate if above the high threshold. By default, the value is 1.

drop_green –

- disable** – Probabilistic drop red colored packets if the queue depth is above the low threshold, and probabilistic drop yellow colored packets if the queue depth is above the high threshold. By default, if the option is not specified, the setting is disabled.
- enable** – Probabilistic drop yellow and red colored packets if the queue depth is above the low threshold, and probabilistic drop green colored packets if the queue depth is above the high threshold.

 **NOTE:** There are 8 drop rates:

1	100%
2	6.25%
3	3.125%
4	1.5625%
5	0.78125%
6	0.390625%
7	0.1953125%
8	0.09765625%

Restrictions Only Administrator and Operator-level users can issue this command.

Example usage:

To configure sred:

```
DGS-3700-12:5# config sred all all threshold low 64 high 80 drop_rate low 8 high 8
drop_green disable
Command: config sred all all threshold low 64 high 80 drop_rate low 8 high 8 drop_green
disable

Success.

DGS-3700-12:5#
```

show sred

Purpose	Used to display the simple RED configure parameter.
Syntax	show sred { <portlist>{ <class_id 0-7>}}
Description	This command is used to display the current threshold(per port and per queue) parameters in use on the switch
Parameters	<i>portlist</i> – A range of ports to show. <i>class_id 0-7</i> – This specifies which of the hardware CoS queues the config sred command will apply to.
Restrictions	None.

Example usage:

To show sred:

```
DGS-3700-12:5#show sred
Command: show sred

Simple RED Globale Status: Disabled

Port Class Drop Green Threshold Drop Rate
          Low  High Low  High
-----
1    0    Disabled 60   80  1   1
1    1    Disabled 60   80  1   1
1    2    Disabled 60   80  1   1
1    3    Disabled 60   80  1   1
1    4    Disabled 60   80  1   1
1    5    Disabled 60   80  1   1
1    6    Disabled 60   80  1   1
1    7    Disabled 60   80  1   1
2    0    Disabled 60   80  1   1
2    1    Disabled 60   80  1   1
2    2    Disabled 60   80  1   1
2    3    Disabled 60   80  1   1
2    4    Disabled 60   80  1   1
2    5    Disabled 60   80  1   1
2    6    Disabled 60   80  1   1
2    7    Disabled 60   80  1   1
3    0    Disabled 60   80  1   1

CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All
```

show sred drop_counter

Purpose	Used to display the simple RED drop packet counter per port.
----------------	--

show sred drop_counter

Syntax	show sred drop_counter {<portlist>}
Description	This command is used to display, for the egress port, the count of dropped packets
Parameters	<i>portlist</i> – A range of ports to show.
Restrictions	None.

Example usage:

This example displays red and yellow packet drop counts for all ports:

```
DGS-3700-12:5#show sred drop_counter
Command: show sred drop_counter

Port  Yellow          Red
----  -
1     0                 0
2     0                 0
3     0                 0
4     0                 0
5     0                 0
6     0                 0
7     0                 0
8     0                 0
9     0                 0
10    0                 0
11    0                 0
12    0                 0

DGS-3700-12:5#
```

config dscp trust

Purpose	Enable/Disable DSCP trust state on selected portlist.
Syntax	config dscp trust [<portlist> all] state [enable disable]
Description	This command is used to onfigure the port DSCP trust state. When DSCP is not trusted, 1p is trusted.
Parameters	<i>portlist</i> – Specifies a range of ports that will be configured. <i>all</i> – Specifies that all the ports will be configured. <i>state</i> – Enable/disable to trust DSCP. By default, DSCP trust is disabled.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

This config DSCP trust:

```
DGS-3700-12:5#config dscp trust 1-8 state enable
Command: config dscp trust 1-8 state enable

Success.

DGS-3700-12:5#
```

show dscp trust

Purpose	Used to display DSCP trust state.
Syntax	show dscp trust {<portlist>}

show dscp trust

Description	This command is used to display DSCP trust state.
Parameters	<i>portlist</i> – A range of ports to display.
Restrictions	None.

Example usage:

To display the DSCP trust state:

```
DGS-3700-12:5#show dscp trust
Command: show dscp trust

Port      DSCP-Trust
-----
1         Disabled
2         Disabled
3         Disabled
4         Disabled
5         Enabled
6         Enabled
7         Enabled
8         Enabled
9         Disabled
10        Disabled
11        Disabled
12        Disabled

DGS-3700-12:5#
```

config dscp map

Purpose	This command is used to configure the mapping of DSCP to priority, DSCP, or packet's initial color .																		
Syntax	config dscp map [<i><portlist></i> all] [<i>dscp_priority <dscp_list> to <priority 0-7></i> <i>dscp_dscp <dscp_list> to <dscp 0-63></i> <i>dscp_color <dscp_list> to [green red yellow]</i>]																		
Description	<p>The mapping of DSCP to priority will be used to determine the priority of the packet (which will be then used to determine the scheduling queue) when the port is in DSCP trust state.</p> <p>The mapping of DSCP to color will be used to determine the initial color of the packet when the policing function of the packet is color aware and the packet is DSCP-trusted.</p> <p>The DSCP-to-DSCP mapping is used in the swap of DSCP of the packet when the packet is ingress to the port. The remaining processing of the packet will be based on the new DSCP. By default, the DSCP is mapped to the same DSCP.</p>																		
Parameters	<p><i>portlist</i> – Specifies ports to be configured.</p> <p><i>dscp_priority</i> – Specifies a list of DSCP value to be mapped to a specific priority</p> <p><i>priority</i> – Specifies the result priority of mapping.</p> <p>The default mapping are:</p> <table border="1" data-bbox="363 1872 1249 1998"> <tr> <td>DSCP</td> <td>0-7</td> <td>8-15</td> <td>16-23</td> <td>24-31</td> <td>32-39</td> <td>40-47</td> <td>48-55</td> <td>56-63</td> </tr> <tr> <td>priority</td> <td>0</td> <td>1</td> <td>2</td> <td>3</td> <td>4</td> <td>5</td> <td>6</td> <td>7</td> </tr> </table> <p><i>dscp_dscp</i> – Specifies a list of DSCP value to be mapped to a specific dscp.</p> <p><i>dscp</i> – Specifies the result DSCP of mapping.</p>	DSCP	0-7	8-15	16-23	24-31	32-39	40-47	48-55	56-63	priority	0	1	2	3	4	5	6	7
DSCP	0-7	8-15	16-23	24-31	32-39	40-47	48-55	56-63											
priority	0	1	2	3	4	5	6	7											

config dscp map	
	<i>dscp_color</i> – Specifies a list of DSCP value to be mapped to a specific color. <i>color</i> – Specifies the result color of mapping.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

This config DSCP map:

```
DGS-3700-12:5#config dscp map 1-8 dscp_priority 1 to 1
Command: config dscp map 1-8 dscp_priority 1 to 1

Success.

DGS-3700-12:5#
```

show dscp map	
Purpose	Used to display the DSCP map configure parameter.
Syntax	show dscp map { <portlist> } [dscp_priority dscp_dscp dscp_color] {dscp <dscp_list>}
Description	This command is used to show DSCP trusted portlist and mapped color, priority and DSCP.
Parameters	<i>portlist</i> - A range of ports to show. If no parameter is specified, all ports' dscp mapping will be displayed. If project only support global configure, display global information. <i>dscp_priority</i> - Specifies a list of DSCP value to be mapped to a specific priority. <i>dscp_dscp</i> - Specifies a list of DSCP value to be mapped to a specific DSCP. <i>dscp_color</i> - Specifies a list of DSCP value to be mapped to a specific color.
Restrictions	None.

Example usage:

This show DSCP map:

```
DGS-3700-12:5#show dscp map dscp_color
Command: show dscp map dscp_color

DSCP to Color Mapping:
Port 1
    DSCP 0-63 is mapped to Green
Port 2
    DSCP 0-63 is mapped to Green
Port 3
    DSCP 0-63 is mapped to Green
Port 4
    DSCP 0-63 is mapped to Green
Port 5
    DSCP 0-63 is mapped to Green
Port 6
    DSCP 0-63 is mapped to Green
Port 7
    DSCP 0-63 is mapped to Green
Port 8
    DSCP 0-63 is mapped to Green
Port 9
    DSCP 0-63 is mapped to Green
Port 10
    DSCP 0-63 is mapped to Green
CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All
```

config 802.1p map

Purpose	Config mapping of 802.1p to packet's initial color.
Syntax	config 802.1p map [<portlist> all] 1p_color [<priority_list>] to [green red yellow]
Description	This command is used to configure mapping of 802.1p to packet's initial color. The mapping of 802.1p to color will be used to determine the initial color of the packet, when the policing function of the packet is color aware and the packet is 802.1p-trusted.
Parameters	<i>portlist</i> – A range of ports to configure. <i>priority</i> – Source priority of incoming packets. <i>color</i> – Mapped color for packet, default value is green
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

This config 802.1p map:

```
DGS-3700-12:5#config 802.1p map 1-8 1p_color 1 to red
Command: config 802.1p map 1-8 1p_color 1 to red
Success.

DGS-3700-12:5#
```

show 802.1p map

Purpose	Used to display the 802.1p to color mapping
Syntax	show 802.1p map 1p_color { <portlist>}
Description	This command is used to display the 802.1p to color mapping
Parameters	<i>portlist</i> – A range of ports to show.
Restrictions	None.

Example usage:

This show 802.1p map:

```
DGS-3700-12:5#show 802.1p map 1p_color
Command: show 802.1p map 1p_color

802.1p to Color Mapping:
-----
Port 0      1      2      3      4      5      6      7
-----
1   Green  Red   Green Green Green Green Green Green
2   Green  Red   Green Green Green Green Green Green
3   Green  Red   Green Green Green Green Green Green
4   Green  Red   Green Green Green Green Green Green
5   Green  Red   Green Green Green Green Green Green
6   Green  Red   Green Green Green Green Green Green
7   Green  Red   Green Green Green Green Green Green
8   Green  Red   Green Green Green Green Green Green
9   Green  Green Green Green Green Green Green Green
10  Green  Green Green Green Green Green Green Green
11  Green  Green Green Green Green Green Green Green
12  Green  Green Green Green Green Green Green Green

DGS-3700-12:5#
```

ACCESS CONTROL LIST (ACL) SECTION

[Table of Contents](#)

[Next Section](#)

[Previous Section](#)

ACCESS CONTROL LIST (ACL) COMMANDS

[Back to Section Header](#)

The Switch implements Access Control Lists that enable the Switch to control network access to specific devices or device groups based on IP settings and MAC address.

The access profile commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.



Note: The ACL command set has been changed for the Release III firmware. In particular, note the different role of the *profile_id* and *access_id* parameters. The new treatment has changed some of the command parameters as well.

COMMAND	PARAMETERS
create access_profile	profile_id <value 1-12> profile_name <name 1-32> [ethernet {vlan {<hex 0x0-0x0fff>} source_mac <macmask> destination_mac <macmask> 802.1p ethernet_type} ip {vlan {<hex 0x0-0x0fff>} source_ip_mask <netmask> destination_ip_mask <netmask> dscp icmp {type code} igmp {type} tcp {src_port_mask <hex 0x0-0xffff> dst_port_mask <hex 0x0-0xffff> flag_mask [all {urg ack psh rst syn fin}] } udp {src_port_mask <hex 0x0-0xffff> dst_port_mask <hex 0x0-0xffff> protocol_id_mask <hex 0x0-0xff> {user_define_mask <hex 0x0-0xffffffff>}]} packet_content_mask { offset_chunk_1 <value 0-31> <hex 0x0-0xffffffff> offset_chunk_2 <value 0-31> <hex 0x0-0xffffffff> offset_chunk_3 <value 0-31> <hex 0x0-0xffffffff> offset_chunk_4 <value 0-31> <hex 0x0-0xffffffff>} ipv6 [{ class flowlabel [tcp { src_port_mask <hex 0x0-0xffff> dst_port_mask <hex 0x0-0xffff>} udp { src_port_mask <hex 0x0-0xffff> dst_port_mask <hex 0x0-0xffff>}]} source_ipv6_mask <ipv6mask> destination_ipv6_mask <ipv6mask>]]]
delete access_profile	[profile_id <value 1-12> all profile_name <name 1-32 >]
config access_profile	[profile_id <value 1-12> profile_name <name 1-32>] [add access_id [auto_assign <value 1-128>][ethernet {[vlan <vlan_name 32> vlan_id <vlanid 1-4094>] {mask <hex 0x0-0x0fff>}} source_mac <macaddr> {mask <macmask>} destination_mac <macaddr> {mask <macmask>}]802.1p <value 0-7> ethernet_type <hex 0x0-0xffff>] ip{[vlan <vlan_name 32> vlan_id <vlanid 1-4094>] {mask <hex 0x0-0x0fff>}} source_ip <ipaddr> {mask <netmask>} destination_ip <ipaddr> {mask <netmask>} dscp <value 0-63> [icmp {type <value 0-255> code <value 0-255>}]igmp {type <value 0-255>} tcp {src_port <value 0-65535> {mask <hex 0x0-0xffff>} dst_port <value 0-65535> {mask <hex 0x0-0xffff>}} flag [all { urg ack psh rst syn fin}] } udp {src_port <value 0-65535> {mask <hex 0x0-0xffff>} dst_port <value 0-65535> {mask <hex 0x0-0xffff>}} protocol_id <value 0-255> {user_define <hex 0x0-0xffffffff> {mask <hex 0x0-0xffffffff>}}]] packet_content { offset_chunk_1 <hex 0x0-0xffffffff> offset_chunk_2 <hex 0x0-0xffffffff> offset_chunk_3 <hex 0x0-0xffffffff>

COMMAND	PARAMETERS
	offset_chunk_4 <hex 0x0-0xffffffff> } ipv6 {[{ class <value 0-255> flowlabel <hex 0x0-0xffff> [tcp {src_port <value 0-65535> {mask <hex 0x0-0xffff>} dst_port <value 0-65535> {mask <hex 0x0-0xffff>}} udp {src_port <value 0-65535> {mask <hex 0x0-0xffff>} dst_port <value 0-65535> {mask <hex 0x0-0xffff>}}]} source_ipv6 <ipv6addr> {mask <ipv6mask>} destination_ipv6 <ipv6addr> {mask <ipv6mask>}}] [port [<portlist> all] vlan_based [vlan <vlan_name 32> vlan_id <vlanid 1-4094>]] [permit {priority <value 0-7> {replace_priority} [replace_dscp_with <value 0-63> replace_tos_precedence_with <value 0-7>] couner[enable disable]} mirror deny] {time_range <range_name 32>} delete access_id <value 1-128>]
show access_profile	{[profile_id <value 1-12> profile_name <name 1-32>]}
enable cpu_interface_filtering	
disable cpu_interface_filtering	
create cpu access_profile profile_id	<value 1-5>[ethernet{ vlan source_mac <macmask> destination_mac <macmask> 802.1p ethernet_type } ip {vlan source_ip_mask <netmask> destination_ip_mask <netmask> dscp [icmp {type code } igmp {type } tcp {src_port_mask <hex 0x0-0xffff> dst_port_mask <hex 0x0-0xffff> flag_mask [all {urg ack psh rst syn fin}] } udp {src_port_mask <hex 0x0-0xffff> dst_port_mask <hex 0x0-0xffff> protocol_id_mask <hex 0x0-0xff> {user_define_mask <hex 0x0-0xffffffff> }] } packet_content_mask {offset_0-15 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_16-31 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_32-47 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_48-63 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_64-79 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> } ipv6 {[{class flowlabel } source_ipv6_mask <ipv6mask> destination_ipv6_mask <ipv6mask>}]
delete cpu access_profile	[profile_id <value 1-5 all]
config cpu access_profile	<value 1-5> [add access_id <value 1-100> [ethernet {[vlan <vlan_name 32> vlan_id <vlanid 1-4094>] source_mac <macaddr> destination_mac <macaddr> 802.1p <value 0-7> ethernet_type <hex 0x0-0xffff>} ip{[vlan <vlan_name 32> vlan_id <vlanid 1-4094>] source_ip <ipaddr> destination_ip <ipaddr> dscp <value 0-63> [icmp {type <value 0-255> code <value 0-255>} igmp {type <value 0-255>} tcp {src_port <value 0-65535> dst_port <value 0-65535> flag [all {urg ack psh rst syn fin}]} udp {src_port <value 0-65535> dst_port <value 0-65535> } protocol_id <value 0-255> {user_define <hex 0x0-0xffffffff>}}] packet_content {offset_0-15 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_16-31 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_32-47 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_48-63 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_64-79 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> } ipv6 {[{ class <value 0-255> flowlabel <hex 0x0-0xffff> } source_ipv6 <ipv6addr> destination_ipv6 <ipv6addr>}] port [<portlist> all] [permit deny] {time_range <range_name

COMMAND	PARAMETERS
	32>} delete access_id <value 1-100>]
show cpu access_profile	profile_id <value 1-5>
config flow_meter	[profile_id <value 1-12> profile_name <name 1-32>] access_id <value 1-128>[rate [<value 0-1000000>] {burst_size [<value 0-16384>]} rate_exceed [drop_packet remark_dscp <value 0-63>] tr_tcm cir <value 0-1000000> {cbs <value 0-16384>} pir <value 0-1000000> {pbs <value 0-16384>} {conform [permit replace_dscp <value 0-63>] {counter [enable disable]}} exceed [permit {replace_dscp <value 0-63>} drop] {counter [enable disable]} violate [permit {replace_dscp <value 0-63>} drop] {counter [enable disable]} sr_tcm cir <value 0-1000000> cbs <value 0-16384> ebs <value 0-16384> {conform [permit replace_dscp <value 0-63>] {counter [enable disable]}} exceed [permit {replace_dscp <value 0-63>} drop] {counter [enable disable]} violate [permit {replace_dscp <value 0-63>} drop] {counter [enable disable]} delete]
show flow_meter	{ [profile_id < value 1-12> profile_name <name 1-32>] { access_id < value 1-128 > } }
config time_range	<range_name 32> [hours start_time < time hh:mm:ss > end_time< time hh:mm:ss > weekdays <daylist> delete]
show time_range	
show current_config access_profile	

Access profiles allow users to establish criteria to determine whether or not the Switch will forward packets based on the information contained in each packet’s header.

Creating an access profile is divided into two basic parts. First, an access profile must be created using the **create access_profile** command. For example, if users want to deny all traffic to the subnet 10.42.73.0 to 10.42.73.255, users must first **create** an access profile that instructs the Switch to examine all of the relevant fields of each frame.

First create an access profile that uses IP addresses as the criteria for examination:

create access_profile profile_id 1 profile_name 1 ip source_ip_mask 255.255.255.0

Here we have created an access profile that will examine the IP field of each frame received by the Switch. Each source IP address the Switch finds will be combined with the **source_ip_mask** with a logical AND operation. The **profile_id** parameter is used to give the access profile an identifying number – in this case, 1 – and it is used to assign a priority in case a conflict occurs. The **profile_id** establishes a priority within the list of profiles. A lower **profile_id** gives the rule a higher priority. In case of a conflict in the rules entered for different profiles, the rule with the highest priority (lowest profile_id) will take precedence. *See below for information regarding limitations on access profiles and access rules.*

The **deny** parameter instructs the Switch to filter any frames that meet the criteria – in this case, when a logical AND operation between an IP address specified in the next step and the **ip_source_mask** match. The default for an access profile on the Switch is to **permit** traffic flow. If users want to restrict traffic, users must use the **deny** parameter.

Now that an access profile has been created, users must add the criteria the Switch will use to decide if a given frame should be forwarded or filtered. We will use the **config access_profile** command to create a new rule that defines the criteria we want. Let’s further specify in the new rule to deny access to a range of IP addresses through an individual port: Here, we want to filter any packets that have an IP source address

between 10.42.73.0 and 10.42.73.255, and specify the port that will not be allowed:

```
config access_profile profile_id 1 add access_id 1 ip source_ip 10.42.73.1 port 7 deny
```

We use the **profile_id 1** which was specified when the access profile was created. The **add** parameter instructs the Switch to add the criteria that follows to the list of rules that are associated with access profile 1. For each rule entered into the access profile, users can assign an **access_id** that identifies the rule within the list of rules. The **access_id** is an index number and does not effect priority within the **profile_id**. This **access_id** may be used later if users want to remove the individual rule from the profile.

The **ip** parameter instructs the Switch that this new rule will be applied to the IP addresses contained within each frame's header. **source_ip** tells the Switch that this rule will apply to the source IP addresses in each frame's header. The IP address **10.42.73.1** will be combined with the **source_ip_mask 255.255.255.0** to give the IP address 10.42.73.0 for any source IP address between 10.42.73.0 to 10.42.73.255. Finally the restricted port - port number 7 - is specified.

If the new rule is configuration below: **config access_profile profile_id 1 add access_id 1 ip source_ip 10.42.73.1 mask 255.255.0.0 port 7 deny**, the **source_ip_mask 255.255.255.0** of profile will be ignored and **mask 255.255.0.0** will combine with IP address **10.42.73.1** to give the IP address 10.42.0.0 for any source IP address between 10.42.0.0 to 10.42.255.255.

Due to a chipset limitation, the Switch supports a maximum of twelve access profiles. The rules used to define the access profiles are limited to a total of 1536 rules for the Switch.

create access_profile	
Purpose	Used to create an access profile on the Switch and to define which parts of each incoming frame's header the Switch will examine. Masks can be entered that will be combined with the values the Switch finds in the specified frame header fields. Specific values for the rules are entered using the create access_profile command, below.
Syntax	create access_profile profile_id <value 1-12> profile_name <name 1-32> [ethernet {vlan {<hex 0x0-0x0fff>} source_mac <macmask> destination_mac <macmask> 802.1p ethernet_type} ip {vlan {<hex 0x0-0x0fff>} source_ip_mask <netmask> destination_ip_mask <netmask> dscp [icmp {type code } igmp {type} tcp {src_port_mask <hex 0x0-0xffff> dst_port_mask <hex 0x0-0xffff> flag_mask [all {urg ack psh rst syn fin}]} udp {src_port_mask <hex 0x0-0xffff> dst_port_mask <hex 0x0-0xffff>} protocol_id_mask <hex 0x0-0xff> {user_define_mask <hex 0x0-0xffffffff>}]} packet_content_mask { offset_chunk_1 <value 0-31> <hex 0x0-0xffffffff> offset_chunk_2 <value 0-31> <hex 0x0-0xffffffff> offset_chunk_3 <value 0-31> <hex 0x0-0xffffffff> offset_chunk_4 <value 0-31> <hex 0x0-0xffffffff>} ipv6 {[class flowlabel [tcp { src_port_mask <hex 0x0-0xffff> dst_port_mask <hex 0x0-0xffff>} udp { src_port_mask <hex 0x0-0xffff> dst_port_mask <hex 0x0-0xffff> }]} source_ipv6_mask <ipv6mask> destination_ipv6_mask <ipv6mask>}]]
Description	This command is used to create an access profile on the Switch and to define which parts of each incoming frame's header the Switch will examine. Masks can be entered that will be combined with the values the Switch finds in the specified frame header fields. Specific values for the rules are entered using the config access_profile command, below.
Parameters	<i>profile_id</i> <value 1-12> – Sets the relative priority for the profile. Priority is set relative to other profiles where the lowest profile ID has the highest priority. The

create access_profile

user may enter a profile ID number between 1 - 12, yet, remember only 12 access profiles can be created on the Switch.

profile_name <name 1-32> – Specifies the name of the profile. The maximum length is 32 characters.

ethernet – Specifies that the Switch will examine the layer 2 part of each packet header.

vlan – Specifies that the Switch will examine the VLAN part of each packet header.

source_mac <macmask> – Specifies a MAC address mask for the source MAC address. This mask is entered in a hexadecimal format.

destination_mac <macmask> – Specifies a MAC address mask for the destination MAC address.

802.1p – Specifies that the Switch will examine the 802.1p priority value in the frame's header.

ethernet_type – Specifies that the Switch will examine the Ethernet type value in each frame's header.

ip – Specifies that the Switch will examine the IP address in each frame's header.

vlan – Specifies a VLAN mask.

source_ip_mask <netmask> – Specifies an IP address mask for the source IP address.

destination_ip_mask <netmask> – Specifies an IP address mask for the destination IP address.

dscp – Specifies that the Switch will examine the DiffServ Code Point (DSCP) field in each frame's header.

icmp – Specifies that the Switch will examine the Internet Control Message Protocol (ICMP) field in each frame's header.

type – Specifies that the Switch will examine each frame's ICMP Type field.

code – Specifies that the Switch will examine each frame's ICMP Code field.

igmp – Specifies that the Switch will examine each frame's Internet Group Management Protocol (IGMP) field.

type – Specifies that the Switch will examine each frame's IGMP Type field.

tcp – Specifies that the Switch will examine each frame's Transmission Control Protocol (TCP) field.

src_port_mask <hex 0x0-0xffff> – Specifies a TCP port mask for the source port.

dst_port_mask <hex 0x0-0xffff> – Specifies a TCP port mask for the destination port.

flag_mask – Enter the appropriate flag_mask parameter. All incoming packets have TCP port numbers contained in them as the forwarding criterion. These numbers have flag bits associated with them which are parts of a packet that determine what to do with the packet. The user may deny packets by denying certain flag bits within the packets. The user may choose between *all*, *urg* (urgent), *ack* (acknowledgement), *psh* (push), *rst* (reset), *syn* (synchronize) and *fin* (finish).

udp – Specifies that the Switch will examine each frame's User Datagram Protocol (UDP) field.

src_port_mask <hex 0x0-0xffff> – Specifies a UDP port mask for the source port.

dst_port_mask <hex 0x0-0xffff> – Specifies a UDP port mask for the destination port.

protocol_id <value 0-255> – Specifies that the Switch will examine the protocol field in each packet and if this field contains the value entered here, apply the following rules.

create access_profile

user_define_mask <hex 0x0-0xffffffff> – Specifies that the rule applies to the IP protocol ID and the mask options behind the IP header.

packet_content_mask – Allows users to examine up to 4 specified offset_chunk within a packet at one time and specifies that the Switch will mask the packet header beginning with the offset value specified as follows:

packet_content_mask {offset_chunk_1 <value 0-31> <hex 0x0-0xffffffff>| offset_chunk_2 <value 0-31> <hex 0x0-0xffffffff>| offset_chunk_3 <value 0-31> <hex 0x0-0xffffffff>|offset_chunk_4 <value 0-31> <hex 0x0-0xffffffff> }

With this advanced unique Packet Content Mask (also known as Packet Content Access Control List - ACL), D-Link switches can effectively mitigate some network attacks like the common ARP Spoofing attack that is wide spread today. This is the reason why Packet Content ACL is able to inspect any specified content of a packet in different protocol layers.

IPV6 – Denotes that IPv6 packets will be examined by the Switch for forwarding or filtering based on the rules configured in the **config access_profile** command for IPv6.

class – Entering this parameter will instruct the Switch to examine the *class* field of the IPv6 header. This class field is a part of the packet header that is similar to the Type of Service (ToS) or Precedence bits field in IPv4.

flowlabel – Entering this parameter will instruct the Switch to examine the *flow label* field of the IPv6 header. This flow label field is used by a source to label sequences of packets such as non-default quality of service or real time service packets.

tcp – Specifies that the Switch will examine each frame's Transmission Control Protocol (TCP) field.

src_port_mask <hex 0x0-0xffff> – Specifies a TCP port mask for the source port.

dst_port_mask <hex 0x0-0xffff> – Specifies a TCP port mask for the destination port.

udp – Specifies that the Switch will examine each frame's User Datagram Protocol (UDP) field.

src_port_mask <hex 0x0-0xffff> – Specifies a UDP port mask for the source port.

dst_port_mask <hex 0x0-0xffff> – Specifies a UDP port mask for the destination port.

source_ipv6_mask <ipv6mask> – Specifies an IP address mask for the source IPv6 address.

destination_ipv6_mask <ipv6mask> – Specifies an IP address mask for the destination IPv6 address.

Restrictions

Only Administrator and Operator-level users can issue this command.

Example usage:

To create an access list rules:

```
DGS-3700-12:5#create access_profile profile_id 5 profile_name 5 ethernet vlan
source_mac 00-00-00-00-00-01 destination_mac 00-00-00-00-00-02 802.1p ethernet_type
Command: create access_profile profile_id 5 profile_name 5 ethernet vlan source_mac 00-
00-00-00-00-01 destination_mac 00-00-00-00-00-02 802.1p ethernet_type
```

Success.

```
DGS-3700-12:5#
```

delete access_profile	
Purpose	Used to delete a previously created access profile.
Syntax	delete access_profile [profile_id <value 1-12> all profile_name <name 1-32 >]
Description	This command is used to delete a previously created access profile on the Switch.
Parameters	<p><i>profile_id</i> <value 1-12> – Enter an integer between 1 and 12 that is used to identify the access profile that will be deleted with this command. This value is assigned to the access profile when it is created with the create access_profile command. The user may enter a profile ID number between 1 and 12, yet, remember only 12 access profiles can be created on the Switch.</p> <p><i>profile_name</i> <name 1-32> – Specifies the name of the profile. The maximum length is 32 characters.</p> <p><i>all</i> – Entering this parameter will delete all access profiles currently configured on the Switch.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete the access profile with a profile ID of 1:

```
DGS-3700-12:5#delete access_profile profile_id 1
Command: delete access_profile profile_id 1

Success.

DGS-3700-12:5#
```

config access_profile	
Purpose	Used to configure an access profile on the Switch and to define specific values that will be used to by the Switch to determine if a given packet should be forwarded or filtered. If masks in the rules are not specified, masks entered using the create access_profile command, will be combined using a logical AND operational method, with the values the Switch finds in the specified frame header fields. Specific values for the rules are entered using the config access_profile command, below.
Syntax	config access_profile [profile_id <value 1-12> profile_name <name 1-32>] [add access_id [auto_assign <value 1-128>][ethernet {[vlan <vlan_name 32> vlan_id <vlanid 1-4094>] {mask <hex 0x0-0x0fff>}}source_mac <macaddr> {mask <macmask>}}destination_mac <macaddr> {mask <macmask>}} 802.1p <value 0-7> ethernet_type <hex 0x0-0xffff>}}ip{[vlan <vlan_name 32> vlan_id <vlanid 1-4094>] {mask <hex 0x0-0x0fff>}}source_ip <ipaddr> {mask <netmask>}}destination_ip <ipaddr> {mask <netmask>}}dscp <value 0-63> [icmp {type <value 0-255> code <value 0-255>}}igmp {type <value 0-255>}}tcp {src_port <value 0-65535> {mask <hex 0x0-0xffff>} dst_port <value 0-65535> {mask <hex 0x0-0xffff>}}flag [all { urg ack psh rst syn fin}] } udp {src_port <value 0-65535> {mask <hex 0x0-0xffff>} dst_port <value 0-65535> {mask <hex 0x0-0xffff>}} protocol_id <value 0-255> {user_define <hex 0x0-0xffffffff> {mask <hex 0x0-0xffffffff>}}}] packet_content { offset_chunk_1 <hex 0x0-0xffffffff> offset_chunk_2 <hex 0x0-0xffffffff> offset_chunk_3 <hex 0x0-0xffffffff> offset_chunk_4 <hex 0x0-0xffffffff> } ipv6 {[class <value 0-255> flowlabel <hex 0x0-0xffff> [tcp {src_port <value 0-65535> {mask <hex 0x0-0xffff>} dst_port <value 0-65535> {mask <hex 0x0-0xffff>}} udp {src_port <value 0-65535> {mask <hex 0x0-0xffff>} dst_port <value 0-65535> {mask <hex 0x0-0xffff>}}}] source_ipv6

config access_profile	
	<pre><ipv6addr> {mask <ipv6mask>} destination_ipv6 <ipv6addr> {mask <ipv6mask>}}] [port [<portlist> all] vlan_based [vlan <vlan_name 32> vlan_id <vlanid 1-4094>]] [permit {priority <value 0-7> {replace_priority} [replace_dscp_with <value 0-63> replace_tos_precedence_with <value 0- 7>] couner[enable disable]} mirror deny] {time_range <range_name 32>} delete access_id <value 1-128>]</pre>
Description	This command is used to configure an access profile on the Switch and to enter specific values that will be combined, using a logical AND operational method, with masks entered with the create access_profile command, above.
Parameters	<p><i>profile_id</i> <value 1-12> – Enter an integer used to identify the access profile that will be configured with this command. This value is assigned to the access profile when it is created with the create access_profile command. The profile ID sets the relative priority for the profile and specifies an index number that will identify the access profile being created with this command. Priority is set relative to other profiles where the lowest profile ID has the highest priority. The user may enter a profile ID number between 1 and 12, yet, remember only 12 access profiles can be created on the Switch.</p> <p><i>profile_name</i><name 1-32> – Specifies the name of the profile. The maximum length is 32 characters.</p> <p><i>add access_id</i> <value 1-128> – Adds an additional rule to the above specified access profile. The value is used to index the rule created. For information on number of rules that can be created for a given port, please see the introduction to this chapter.</p> <p><i>ethernet</i> – Specifies that the Switch will look only into the layer 2 part of each packet.</p> <p><i>vlan</i> <vlan_name 32>/<i>vlan_id</i> <value 1-4094> – Specifies that the access profile will apply to only to this VLAN.</p> <p><i>source_mac</i> <macaddr> – Specifies that the access profile will apply to only packets with this source MAC address.</p> <p><i>destination_mac</i> <macaddr> – Specifies that the access profile will apply to only packets with this destination MAC address.</p> <p><i>802.1p</i> <value 0-7> – Specifies that the access profile will apply only to packets with this 802.1p priority value.</p> <p><i>ethernet_type</i> <hex 0x0-0xffff> – Specifies that the access profile will apply only to packets with this hexadecimal 802.1Q Ethernet type value in the packet header.</p>
Parameters	<p><i>ip</i> – Specifies that the Switch will look into the IP fields in each packet.</p> <p><i>vlan</i> <vlan_name 32>/<i>vlan_id</i><value 1-4094> – Specifies that the access profile will apply to only this VLAN.</p> <p><i>source_ip</i> <ipaddr> – Specifies that the access profile will apply to only packets with this source IP address.</p> <p><i>destination_ip</i> <ipaddr> – Specifies that the access profile will apply to only packets with this destination IP address.</p> <p><i>dscp</i> <value 0-63> – Specifies that the access profile will apply only to packets that have this value in their Type-of-Service (DiffServ code point, DSCP) field in their IP packet header</p> <p><i>icmp</i> – Specifies that the Switch will examine the Internet Control Message Protocol (ICMP) field within each packet.</p> <p><i>type</i> <value 0-65535> – Specifies that the access profile will apply to this ICMP type value.</p> <p><i>code</i> <value 0-255> – Specifies that the access profile will apply to this ICMP code.</p> <p><i>igmp</i> – Specifies that the Switch will examine the Internet Group Management</p>

config access_profile

Protocol (IGMP) field within each packet.

type <value 0-255> – Specifies that the access profile will apply to packets that have this IGMP type value.

tcp – Specifies that the Switch will examine the Transmission Control Protocol (TCP) field within each packet.

src_port <value 0-65535> – Specifies that the access profile will apply only to packets that have this TCP source port in their TCP header.

dst_port <value 0-65535> – Specifies that the access profile will apply only to packets that have this TCP destination port in their TCP header.

urg: TCP control flag (urgent)

ack: TCP control flag (acknowledgement)

psh: TCP control flag (push)

rst: TCP control flag (reset)

syn: TCP control flag (synchronize)

fin: TCP control flag (finish)

udp – Specifies that the Switch will examine the User Datagram Protocol (UDP) field in each packet.

src_port <value 0-65535> – Specifies that the access profile will apply only to packets that have this UDP source port in their UDP header.

dst_port <value 0-65535> – Specifies that the access profile will apply only to packets that have this UDP destination port in their UDP header.

protocol_id <value 0-255> – Specifies that the Switch will examine the protocol field in each packet and if this field contains the value entered here, apply the following rules.

user_define <hex 0x0-0xffffffff> – Specifies a mask to be combined with the value found in the frame header and if this field contains the value entered here, apply the following rules.

packet_content_mask – Allows users to examine any up to four specified *offset_chunk* within a packet at one time and specifies that the Switch will mask the packet header beginning with the offset value specified as follows:

packet_content { offset_chunk_1 <hex 0x0-0xffffffff>| offset_chunk_2 <hex 0x0-0xffffffff>| offset_chunk_3 <hex 0x0-0xffffffff>| offset_chunk_4 <hex 0x0-0xffffffff>

With this advanced unique Packet Content Mask (also known as Packet Content Access Control List - ACL), D-Link switches can effectively mitigate some network attacks like the common ARP Spoofing attack that is wide spread today. This is the reason that Packet Content ACL is able to inspect any specified content of a packet in different protocol layers.

IPV6 - Denotes that IPv6 packets will be examined by the Switch for forwarding or filtering based on the rules configured in the **config access_profile** command for IPv6.

class – Entering this parameter will instruct the Switch to examine the *class* field of the IPv6 header. This class field is a part of the packet header that is similar to the Type of Service (ToS) or Precedence bits field in IPv4.

flowlabel – Entering this parameter will instruct the Switch to examine the *flow label* field of the IPv6 header. This flow label field is used by a source to label sequences of packets such as non-default quality of service or real time service packets.

tcp – Specifies that the Switch will examine each frame's Transmission Control Protocol (TCP) field.

config access_profile	
	<p><i>src_port_mask</i> <hex 0x0-0xffff> – Specifies a TCP port mask for the source port.</p> <p><i>dst_port_mask</i> <hex 0x0-0xffff> – Specifies a TCP port mask for the destination port.</p> <p><i>udp</i> – Specifies that the Switch will examine each frame’s User Datagram Protocol (UDP) field.</p> <p><i>src_port_mask</i> <hex 0x0-0xffff> – Specifies a UDP port mask for the source port.</p> <p><i>dst_port_mask</i> <hex 0x0-0xffff> – Specifies a UDP port mask for the destination port.</p> <p><i>source_ipv6_mask</i> <ipv6mask> – Specifies an IP address mask for the source IPv6 address.</p> <p><i>destination_ipv6_mask</i> <ipv6mask> – Specifies an IP address mask for the destination IPv6 address.</p> <p><i>port</i> <portlist> – Specifies the port number on the Switch to permit or deny access for the rule.</p> <p><i>vlan_based</i> [<i>vlan</i> <vlan_name> <i>vlan_id</i> <vlanid 1-4094>] – Specifies that the access profile will apply to only to this VLAN.</p> <p><i>permit</i> – Specifies the rule permit access for incoming packets on the previously specified port.</p> <p><i>priority</i> <value 0-7> – Specifies that the access profile will apply to packets that contain this value in their 802.1p priority field of their header for incoming packets on the previously specified port.</p> <p><i>{replace_priority}</i> – Allows users to specify a new value to be written to the priority field of an incoming packet on the previously specified port.</p> <p><i>replace_dscp_with</i> <value 0-63> – Allows users to specify a new value to be written to the DSCP field of an incoming packet on the previously specified port.</p> <p><i>replace_tos_precedence_with</i> <value 0-7> – Specifies the packets that match the access profile and that tos-precedence values will be changed by the switch.</p> <p><i>deny</i> – Specifies the rule will deny access for incoming packets on the previously specified port.</p> <p><i>mirror</i> – Specifies the packets that match the access profile, copies it and sends the copied one to the mirror port.</p> <p><i>time_range</i> – Specifies the time_range profile that has been associated with the ACL entries.</p> <p><i>delete_access_id</i> <value 1-128> – Use this to remove a previously created access rule of a profile ID. For information on number of rules that can be created for a given port, lease see the introduction to this chapter.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the access profile with the profile ID of 1 to filter frames on port 7 that have IP addresses in the range between 10.42.73.0 to 10.42.73.255:

```
DGS-3700-12:5#config access_profile profile_id 1 add access_id 1 ip source_ip
10.42.73.1 port 7 deny
Command: config access_profile profile_id 1 add access_id 1 ip source_ip 10.42.73.1
port 7 deny

Success.

DGS-3700-12:5#
```



NOTE: Address Resolution Protocol (ARP) is the standard for finding a host's hardware address (MAC Address). However, ARP is vulnerable as it can be easily spoofed and utilized to attack a LAN (known as ARP spoofing attack). For a more detailed explanation on how ARP protocol works and how to employ D-Link's advanced unique Packet Content ACL to prevent an ARP spoofing attack, please see Appendix B, at the end of this manual.

show access_profile	
Purpose	Used to display the currently configured access profiles on the Switch.
Syntax	show access_profile {[profile_id <value 1-12> profile_name <name 1-32>]}
Description	This command is used to display the currently configured access profiles.
Parameters	<p><i>profile_id</i> <value 1-12> – Specify the profile id to display only the access rules configuration for a single profile ID. The user may enter a profile ID number between 1 and 12, yet, remember only 12 access profiles can be created on the Switch</p> <p><i>profile_name</i> <name 1-32> – Specifies the name of the profile. The maximum length is 32 characters.</p>
Restrictions	None.

Example usage:

To display all of the currently configured access profiles on the Switch:

```
DGS-3700-12:5#show access_profile
Command: show access_profile

Access Profile Table

Total User Set Rule Entries : 0
Total Used HW Entries      : 0
Total Available HW Entries : 1536

=====
Profile ID: 5      Profile name: 5  Type: Ethernet

MASK on
  VLAN           : 0xFFFF
  Source MAC     : FF-FF-FF-FF-FF-FF
  Destination MAC : FF-FF-FF-FF-FF-FF
  802.1p
  Ethernet Type

Available HW Entries : 128

=====

Profile ID: 13    Profile name: System
Consumed HW Entries : 15

=====

DGS-3700-12:5#
```

create cpu access_profile

<p>Purpose</p>	<p>Used to create an access profile specifically for CPU Interface Filtering on the Switch and to define which parts of each incoming frame's header the Switch will examine. Masks can be entered that will be combined with the values the Switch finds in the specified frame header fields. Specific values for the rules are entered using the create cpu access_profile command, below.</p>
<p>Syntax</p>	<pre>create cpu access_profile <value 1-5>[ethernet{ vlan source_mac <macmask> destination_mac <macmask> 802.1p ethernet_type}ip { vlan source_ip_mask <netmask> destination_ip_mask <netmask> dscp [icmp {type code} igmp {type} tcp {src_port_mask <hex 0x0-0xffff> dst_port_mask <hex 0x0-0xffff> flag_mask [all {urg ack psh rst syn fin}] } udp {src_port_mask <hex 0x0-0xffff> dst_port_mask <hex 0x0- 0xffff>} protocol_id_mask <hex 0x0-0xff> {user_define_mask <hex 0x0- 0xffffffff>}]} packet_content_mask {offset_0-15 <hex 0x0-0xffffffff> <hex 0x0- 0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_16-31 <hex 0x0- 0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0- 0xffffffff> offset_32-47 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0- 0xffffffff> <hex 0x0-0xffffffff> offset_48-63 <hex 0x0-0xffffffff> <hex 0x0- 0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_64-79 <hex 0x0- 0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff>} ipv6 {[class flowlabel] source_ipv6_mask <ipv6mask> destination_ipv6_mask <ipv6mask>}]}</pre>
<p>Description</p>	<p>This command is used to create an access profile used only for CPU Interface Filtering. Masks can be entered that will be combined with the values the Switch finds in the specified frame header fields. Specific values for the rules are entered</p>

create cpu access_profile

using the **create cpu access_profile** command, below.

Parameters

profile_id <value 1-5> – Enter an integer between 1 and 5 that is used to identify the CPU access profile to be created with this command.

ethernet – Specifies that the Switch will examine the layer 2 part of each packet header.

vlan – Specifies that the Switch will examine the VLAN part of each packet header.

source_mac <macmask> – Specifies to examine the source MAC address mask.

destination_mac <macmask> – Specifies to examine the destination MAC address mask.

802.1p – Specifies that the Switch will examine the 802.1p priority value in the frame's header.

ethernet_type – Specifies that the Switch will examine the Ethernet type value in each frame's header.

ip – Specifies that the switch will examine the IP address in each frame's header.

vlan – Specifies that the Switch will examine the VLAN part of each packet header.

source_ip_mask <netmask> – Specifies an IP address mask for the source IP address.

destination_ip_mask <netmask> – Specifies an IP address mask for the destination IP address.

dscp – Specifies that the Switch will examine the DiffServ Code Point (DSCP) field in each frame's header.

icmp – Specifies that the Switch will examine the Internet Control Message Protocol (ICMP) field in each frame's header.

type – Specifies that the Switch will examine each frame's ICMP Type field.

code – Specifies that the Switch will examine each frame's ICMP Code field.

igmp – Specifies that the Switch will examine each frame's Internet Group Management Protocol (IGMP) field.

type – Specifies that the Switch will examine each frame's IGMP Type field.

tcp – Specifies that the Switch will examine each frames Transmission Control Protocol (TCP) field.

src_port_mask <hex 0x0-0xffff> – Specifies a TCP port mask for the source port.

dst_port_mask <hex 0x0-0xffff> – Specifies a TCP port mask for the destination port.

flag_mask [*all* | { *urg* | *ack* | *psh* | *rst* | *syn* | *fin* }] – Enter the appropriate flag_mask parameter. All incoming packets have TCP port numbers contained in them as the forwarding criterion. These numbers have flag bits associated with them which are parts of a packet that determine what to do with the packet. The user may deny packets by denying certain flag bits within the packets. The user may choose between **all**, **urg** (urgent), **ack** (acknowledgement), **psh** (push), **rst** (reset), **syn** (synchronize) and **fin** (finish).

udp – Specifies that the switch will examine each frame's User Datagram Protocol (UDP) field.

src_port_mask <hex 0x0-0xffff> – Specifies a UDP port mask for the source port.

dst_port_mask <hex 0x0-0xffff> – Specifies a UDP port mask for the destination port.

protocol_id_mask <hex 0x0-0xffffffff> – Specifies that the Switch will examine each frame's Protocol ID field using the hex form entered here.

user_define_mask <hex 0x0-0xffffffff> – Specifies that the rule applies to the IP protocol ID and the mask options behind the IP header.

packet_content_mask – Specifies that the Switch will mask the packet header beginning with the offset value specified as follows:

create cpu access_profile

offset_0-15 – Enter a value in hex form to mask the packet from byte 0 to byte 15.
offset_16-31 – Enter a value in hex form to mask the packet from byte 16 to byte 31.
offset_32-47 – Enter a value in hex form to mask the packet from byte 32 to byte 47.
offset_48-63 – Enter a value in hex form to mask the packet from byte 48 to byte 63.
offset_64-79 – Enter a value in hex form to mask the packet from byte 64 to byte 79.
IPV6 – Denotes that IPv6 packets will be examined by the Switch for forwarding or filtering based on the rules configured in the **config access_profile** command for IPv6.
class – Entering this parameter will instruct the Switch to examine the *class* field of the IPv6 header. This class field is a part of the packet header that is similar to the Type of Service (ToS) or Precedence bits field in IPv4.
flowlabel – Entering this parameter will instruct the Switch to examine the *flow label* field of the IPv6 header. This flow label field is used by a source to label sequences of packets such as non-default quality of service or real time service packets.
source_ipv6_mask <ipv6mask> – Specifies an IP address mask for the source IPv6 address.
destination_ipv6_mask <ipv6mask> – Specifies an IP address mask for the destination IPv6 address.

Restrictions Only Administrator and Operator-level users can issue this command.

Example usage:

To create a CPU access profile:

```
DGS-3700-12:5#create cpu access_profile profile_id 1 ip vlan source_ip_mask 20.0.0.0
destination_ip_mask 10.0.0.0 dscp icmp type code
Command: create cpu access_profile profile_id 1 ip vlan source_ip_mask 20.0.0.0
destination_ip_mask 10.0.0.0 dscp icmp type code

Success.

DGS-3700-12:5#
```

delete cpu access_profile

Purpose	Used to delete a previously created CPU access profile.
Syntax	delete cpu access_profile [profile_id <value 1-5 all]
Description	This command is used to delete a previously created CPU access profile.
Parameters	<i>profile_id</i> <value 1-5> – Enter an integer between 1 and 5 that is used to identify the CPU access profile to be deleted with this command. This value is assigned to the access profile when it is created with the create cpu access_profile command. <i>all</i> – This will delete all previously configured cpu access_profiles.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete the CPU access profile with a profile ID of 1:

```
DGS-3700-12:5#delete cpu access_profile profile_id 1
```

```
Command: delete cpu access_profile profile_id 1
```

```
Success.
```

```
DGS-3700-12:5#
```

config cpu access_profile

<p>Purpose</p>	<p>Used to configure a CPU access profile used for CPU Interface Filtering and to define specific values that will be used to by the Switch to determine if a given packet should be forwarded or filtered. Masks entered using the create cpu access_profile command will be combined, using a logical AND operational method, with the values the Switch finds in the specified frame header fields. Specific values for the rules are entered using the config cpu access_profile command, below.</p>
<p>Syntax</p>	<pre><value 1-5> [add access_id <value 1-100> [ethernet {[vlan <vlan_name 32> vlan_id <vlanid 1-4094>] source_mac <macaddr> destination_mac <macaddr> 802.1p <value 0-7> ethernet_type <hex 0x0-0xffff>} ip{[vlan <vlan_name 32> vlan_id <vlanid 1-4094>] source_ip <ipaddr> destination_ip <ipaddr> dscp <value 0-63> [icmp {type <value 0-255> code <value 0-255>} igmp {type <value 0-255>} tcp {src_port <value 0-65535> dst_port <value 0-65535> flag [all { urg ack psh rst syn fin}]} udp {src_port <value 0-65535> dst_port <value 0-65535> } protocol_id <value 0- 255> {user_define <hex 0x0-0xffffffff>}] packet_content {offset_0-15 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_16-31 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_32-47 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_48-63 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_64-79 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> } ip6 { [class <value 0-255> flowlabel <hex 0x0-0xffff> } source_ip6 <ip6addr> destination_ip6 <ip6addr>]}] port [<portlist> all] [permit deny] {time_range <range_name 32>} delete access_id <value 1-100>]</pre>
<p>Description</p>	<p>This command is used to configure a CPU access profile for CPU Interface Filtering and to enter specific values that will be combined, using a logical AND operational method, with masks entered with the config cpu access_profile command, above.</p>
<p>Parameters</p>	<p><i>profile_id</i> <value 1-5> – Enter an integer used to identify the access profile that will be configured with this command. This value is assigned to the access profile when it is created with the create access_profile command. The profile ID sets the relative priority for the profile and specifies an index number that will identify the access profile being created with this command. Priority is set relative to other profiles where the lowest profile ID has the highest priority.</p> <p><i>add access_id</i> <value 1-100> – Adds an additional rule to the above specified access profile. The value is used to index the rule created.</p> <p><i>ethernet</i> – Specifies that the Switch will look only into the layer 2 part of each packet.</p> <p><i>vlan</i> <vlan_name 32>/ <i>vlan_id</i> <vlanid 1-4094> – Specifies that the access profile will apply to only to this VLAN.</p> <p><i>source_mac</i> <macaddr> – Specifies that the access profile will apply to this source MAC address.</p> <p><i>destination_mac</i> <macaddr> – Specifies that the access profile will apply to this destination MAC address.</p> <p><i>ethernet_type</i> <hex 0x0-0xffff> – Specifies that the access profile will apply only to packets with this hexadecimal 802.1Q Ethernet type value in the packet header.</p>

config cpu access_profile

ip – Specifies that the Switch will look into the IP fields in each packet.

vlan <vlan_name 32> / *vlan_id* <vlanid 1-4094> – Specifies that the access profile will apply to only this VLAN.

source_ip <ipaddr> – Specifies that the access profile will apply to only packets with this source IP address.

destination_ip <ipaddr> – Specifies that the access profile will apply to only packets with this destination IP address.

dscp <value 0-63> – Specifies that the access profile will apply only to packets that have this value in their Type-of-Service (DiffServ code point, DSCP) field in their IP packet header

icmp – Specifies that the Switch will examine the Internet Control Message Protocol (ICMP) field within each packet.

type <value 0-255> – Specifies that the access profile will apply to this ICMP type value.

code <value 0-255> – Specifies that the access profile will apply to this ICMP code.

igmp – Specifies that the Switch will examine the Internet Group Management Protocol (IGMP) field within each packet.

type <value 0-255> – Specifies that the access profile will apply to this IGMP type value.

tcp – Specifies that the Switch will examine the Transmission Control Protocol (TCP) field within each packet.

src_port <value 0-65535> – Specifies that the access profile will apply only to packets that have this TCP source port in their TCP header.

dst_port <value 0-65535> – Specifies that the access profile will apply only to packets that have this TCP destination port in their TCP header.

urg / *ack* / *psh* / *rst* / *syn* / *fin* – Enters the appropriate flag_mask parameter. All incoming packets have TCP port numbers contained in them as the forwarding criterion. These numbers have flag bits associated with them which are parts of a packet that determine what to do with the packet. The user may deny packets by denying certain flag bits within the packets. The user may choose between urg (urgent), ack (acknowledgement), psh (push), rst (reset), syn (synchronize) and fin (finish).

udp – Specifies that the Switch will examine the User Datagram Protocol (UDP) field within each packet.

src_port <value 0-65535> – Specifies that the access profile will apply only to packets that have this UDP source port in their UDP header.

dst_port <value 0-65535> – Specifies that the access profile will apply only to packets that have this UDP destination port in their UDP header.

protocol_id <value 0-255> – Specifies that the Switch will examine the protocol field in each packet and if this field contains the value entered here, apply the following rules.

user_define_mask <hex 0x0-0xffffffff> – Specifies that the rule applies to the IP protocol ID and the mask options behind the IP header.

packet_content_mask – Specifies that the Switch will mask the packet header beginning with the offset value specified as follows:

offset_0-15 – Enters a value in hex form to mask the packet from byte 0 to byte 15.

offset_16-31 – Enters a value in hex form to mask the packet from byte 16 to byte 31.

offset_32-47 – Enters a value in hex form to mask the packet from byte 32 to byte 47.

offset_48-63 – Enters a value in hex form to mask the packet from byte 48 to byte 63.

config cpu access_profile	
	<p><i>offset_64-79</i> – Enters a value in hex form to mask the packet from byte 64 to byte 79.</p> <p><i>IPV6</i> – Denotes that IPv6 packets will be examined by the Switch for forwarding or filtering based on the rules configured in the config access_profile command for IPv6.</p> <p><i>class</i> – Entering this parameter will instruct the Switch to examine the <i>class</i> field of the IPv6 header. This class field is a part of the packet header that is similar to the Type of Service (ToS) or Precedence bits field in IPv4.</p> <p><i>flowlabel</i> – Entering this parameter will instruct the Switch to examine the <i>flow label</i> field of the IPv6 header. This flow label field is used by a source to label sequences of packets such as non-default quality of service or real time service packets.</p> <p><i>source_ipv6_mask</i> <ipv6mask> – Specifies an IP address mask for the source IPv6 address.</p> <p><i>destination_ipv6_mask</i> <ipv6mask> – Specifies an IP address mask for the destination IPv6 address.</p> <p><i>permit / deny</i> – Specify that the packet matching the criteria configured with command will either be permitted or denied entry to the CPU.</p> <p><i>time_range</i> – Specifies the time_range profile that has been associated with the ACL entries.</p> <p><i>delete access_id</i> <value 1-100> – Use this to remove a previously created access rule in a profile ID.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure CPU access list entry:

```
DGS-3700-12:5#config cpu access_profile profile_id 5 add access_id 1 ip vlan default
source_ip 20.2.2.3 destination_ip 10.1.1.252 dscp 3 icmp type 11 code 32 port 1 deny
Command: config cpu access_profile profile_id 10 add access_id 1 ip vlan default
source_ip 20.2.2.3 destination_ip 10.1.1.252 dscp 3 icmp type 11 code 32 port 1 deny

Success.

DGS-3700-12:5#
```

show cpu access_profile	
Purpose	Used to view the CPU access profile entry currently set in the Switch.
Syntax	show cpu access_profile {profile_id <value 1-5>}
Description	This command is used to view the current CPU interface filtering entries set on the Switch.
Parameters	<i>profile_id</i> <value 1-5> – Enter an integer between 1 and 5 that is used to identify the CPU access profile to be deleted with this command. This value is assigned to the access profile when it is created with the create cpu access_profile command.
Restrictions	None.

Example usage:

To show the CPU filtering state on the Switch:

```

DGS-3700-12:5#show cpu access_profile
Command: show cpu access_profile

CPU Interface Filtering State: Disabled

CPU Interface Access Profile Table

Total Unused Rule Entries:499
Total Used Rule Entries  :1

=====
Profile ID: 1      Type: IPv4

MASK on
  VLAN      : 0xFFFF
  Source IP  : 255.255.255.0
  Dest IP   : 255.255.255.0
  DSCP
  ICMP
  Type
  Code

Unused Rule Entries: 99

-----
Rule ID : 1      Ports: 1

Match on
  VLAN ID   : 1
  Source IP : 20.0.0.0
  Dest IP  : 10.0.0.0
  DSCP     : 3
  ICMP
  Type     : 11
  Code    : 32

Action:
  Deny

=====
DGS-3700-12:5#
    
```

enable cpu_interface_filtering

Purpose	Used to enable CPU interface filtering on the Switch.
Syntax	enable cpu_interface_filtering
Description	This command is used in conjunction with the disable cpu_interface_filtering command below, to enable and disable CPU interface filtering on the Switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable CPU interface filtering:

```
DGS-3700-12:5#enable cpu_interface_filtering
Command: enable cpu_interface_filtering

Success.

DGS-3700-12:5#
```

disable cpu_interface_filtering

Purpose	Used to disable CPU interface filtering on the Switch.
Syntax	disable cpu_interface_filtering
Description	This command is used in conjunction with the enable cpu_interface_filtering command above to enable and disable CPU interface filtering on the Switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To disable CPU filtering:

```
DGS-3700-12:5#disable cpu_interface_filtering
Command: disable cpu_interface_filtering

Success.

DGS-3700-12:5#
```

config flow_meter

Purpose	Used to limit the bandwidth of the ingress traffic.
Syntax	config flow_meter [profile_id <value 1-12> profile_name <name 1-32>] access_id <value 1-128>[rate [<value 0-1000000>] {burst_size [<value 0-16384>]} rate_exceed [drop_packet remark_dscp <value 0-63>] tr_tcm cir <value 0-1000000> {cbs <value 0-16384>} pir <value 0-1000000> {pbs <value 0-16384>} {conform [permit replace_dscp <value 0-63>] {counter [enable disable]}} exceed [permit {replace_dscp <value 0-63>} drop] {counter [enable disable]} violate [permit {replace_dscp <value 0-63>} drop] {counter [enable disable]} sr_tcm cir <value 0-1000000> cbs <value 0-16384> ebs <value 0-16384> {conform [permit replace_dscp <value 0-63>] {counter [enable disable]}} exceed [permit {replace_dscp <value 0-63>} drop] {counter [enable disable]} violate [permit {replace_dscp <value 0-63>} drop] {counter [enable disable]} delete]
Description	This command is used to limit the bandwidth of the ingress traffic. When the users create an ACL rule to filter packets, a metering rule can be created to associate with this ACL rule to limit traffic.
Parameters	<p><i>profile_id</i> <value 1-12> – Enter an integer used to identify the access profile that will be configured with this command. This value is assigned to the access profile when it is created with the create access_profile command. The profile ID sets the relative priority for the profile and specifies an index number that will identify the access profile being created with this command. Priority is set relative to other profiles where the lowest profile ID has the highest priority. The user may enter a profile ID number between 1 and 12.</p> <p><i>profile_name</i> <name 1-32> – Specifies the name of the profile. The maximum length is 32 characters.</p> <p><i>rate</i> - Specify the rate for single rate two color mode. The unit is Kbps.</p>

config flow_meter	
	<p><i>burst_size</i> - Specify the burst size for the single rate two color mode. The unit is Kbytes.</p> <p><i>rate_exceed</i> - Specify the action for packets that exceed the committed rate in single rate two color mode. The action can be specified as one of the following:</p> <p><i>drop_packet</i> - Drop the packet immediately.</p> <p><i>remark_dscp</i> - Mark the packet with a specified DSCP.</p> <p><i>tr_tcm</i> - Specify the “two rate three color mode”</p> <p><i>cir</i> <value 0-1000000> - Specify the “committed information rate” The unit is Kbps.</p> <p><i>cbs</i> <value 0-16384> - Specify the “committed burst size”</p> <ol style="list-style-type: none"> 1. The unit is Kbyte. That is to say, 1 means 1Kbyte. 2. This parameter is an optional parameter. The default value is 4. 3. The max set value is 16*1024. <p><i>pir</i> <value 0-1000000> - Specify the “peak information rate” The unit is Kbps.</p> <p><i>pbs</i> <value 0-16384> - Specify the “peak burst size”</p> <ol style="list-style-type: none"> 1. The unit is Kbyte. That is to say, 1 means 1Kbyte. 2. This parameter is an optional parameter. The default value is 4 3. The max set value is 16*1024. <p><i>sr_tcm</i> - Specify the “single rate three color mode”</p> <p><i>cir</i> <value 0-1000000> - Specify the “committed information rate” The unit is Kbps.</p> <p><i>cbs</i> <value 0-16384> - Specify the “committed burst size”</p> <ol style="list-style-type: none"> 1. The unit is Kbyte. That is to say, 1 means 1Kbyte. 2. The max set value is 16*1024. <p><i>ews</i> <value 0-16384> - Specify the “excess burst size”</p> <ol style="list-style-type: none"> 1. The unit is Kbyte. That is to say, 1 means 1 Kbyte. 2. The max set value is 16*1024. <p><i>conform</i> - Specify the action when packet is in “green color”</p> <p><i>permit</i> - Permit the packet.</p> <p><i>replace_dscp</i> - Change the dscp of the packet.</p> <p><i>counter</i> - Specify the counter. This is optional. The default is “disable”.</p> <p><i>exceed</i> - Specify the action when packet is in “yellow color”</p> <p><i>permit</i> - Permit the packet.</p> <p><i>replace_dscp</i> - Change the dscp of packet</p> <p><i>counter</i> - Specify the counter. This is optional. The default is “disable”.</p> <p><i>drop</i> - Drop the packet.</p> <p><i>violate</i> - Specify the action when packet is in “red color”</p> <p><i>permit</i> - Permit the packet.</p> <p><i>replace_dscp</i> - Change the dscp of packet.</p> <p><i>drop</i> - Specifies to drop the packet.</p> <p><i>counter</i> - Specify the counter. This is optional. The default is “disable”.</p> <p>The resource may be limited so that the counter can not be turned on. The limitation is project dependent. The counter will be cleared when the function is disabled.</p> <p><i>delete</i> - Delete the specified flow_meter.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the ACL flow meter on the Switch:

```
DGS-3700-12:5#config flow_meter profile_id 1 access_id 1 tr_tcm cir 1000 cbs 200 pir
2000 pbs 2000 exceed permit replace_dscp 21 violate drop
Command: config flow_meter profile_id 1 access_id 1 tr_tcm cir 1000 cbs 200 pir 2000
pbs 2000 exceed permit replace_dscp 21 violate drop

Success.

DGS-3700-12:5#
```

show flow_meter

Purpose	Used to view the current state of ACL flow meter on the Switch.
Syntax	show flow_meter { [profile_id <value 1-12> profile_name <name 1-32>] { access_id <value 1-128>} }
Description	This command is used to view the current state of ACL flow meter on the Switch.
Parameters	<i>profile_id</i> <value 1-12> – Specifies the profile_ID <i>profile_name</i> <name 1-32>– Specifies the name of the profile. The maximum length is 32 characters. <i>access_id</i> <value 1-128> – Specifies the access_ID
Restrictions	None.

Example usage:

To show the ACL flow meter state on the Switch:

```
DGS-3700-12:5#show flow_meter
Command: show flow_meter

Flow Meter Information:
-----
Profile ID : 1      Access ID : 1      Mode : trTCM
CIR(Kbps):1000    CBS(Kbyte):2000   PIR(Kbps):2000   PBS(Kbyte):2000
Action:
  Conform : Permit   Replace DSCP : 11   Counter : Enabled
  Exceed  : Permit   Replace DSCP : 22   Counter : Enabled
  Violate : Drop     Counter : Disabled
-----

Profile ID : 1      Access ID : 2      Mode : srTCM
CIR(Kbps):2500    CBS(Kbyte):2000   EBS(Kbyte):3500
Action:
  Conform : Permit   Replace DSCP:      Counter : Enabled
  Exceed  : Permit   Replace DSCP: 33   Counter : Enabled
  Violate : Drop     Counter : Disabled
-----

Total Entries: 2
DGS-3700-12:5#
```

config time_range

Purpose	Used to configure the range of time to activate a function on the switch.
Syntax	config time_range <range_name 32> [hours start_time <time hh:mm:ss > end_time<time hh:mm:ss > weekdays <daylist> delete]
Description	This command defines a specific range of time to activate a function on the Switch by

config time_range	
	specifying which time range in a day and which days in a week are covered in the time range. Note that the specified time range is based on SNTP time or configured time. If this time is not available, then the time range will not be met.
Parameters	<p><i>range_name</i> – Specifies the name of the time range settings.</p> <p><i>start_time</i> – Specifies the starting time in a day. (24-hr time) For example, 19:00 means 7PM. 19 is also acceptable. <i>start_time</i> must be smaller than <i>end_time</i>.</p> <p><i>end_time</i> – Specifies the ending time in a day. (24-hr time)</p> <p><i>weekdays</i> – Specify the list of days contained in the time range. Use a dash to define a period of days. Use a comma to separate specific days. For example, mon-fri (Monday to Friday) sun, mon, fri (Sunday, Monday and Friday)</p> <p><i>delete</i> – Deletes a time range profile. When a <i>time_range</i> profile has been associated with ACL entries, the delete of this <i>time_range</i> profile will fail.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To config time range:

```
DGS-3700-12:5#config time_range 1-3_new hours start_time 11:21:20 end_time 11:44:40
weekdays mon-fri
Command: config time_range 1-3_new hours start_time 11:21:20 end_time 11:44:40 weekdays
mon-fri

Success.

DGS-3700-12:5#
```

show time_range	
Purpose	This command is used to display current time range of the access list table.
Syntax	show time_range
Description	The show <i>time_range</i> command displays the current time range settings.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To display the current time range setting:

```
DGS-3700-12G:5#show time_range
Command: show time_range

Time Range Information
-----
Range Name      : 1
Weekdays       : Mon,Tue,Wed,Thu,Fri
Start Time      : 09:00:00
End Time        : 12:00:00

Total Entries :1

DGS-3700-12G:5#
```

show current_config access_profile	
Purpose	This command displays the ACL part of current configuration.
Syntax	show current_config access_profile
Description	This command displays the ACL privilege of the current configuration in user level of privilege. The overall current configuration can be displayed by show config command which is accessible in administrator level of privilege.
Parameters	None.
Restrictions	None.

Example usage:

To show the current configuration access profile on the Switch:

```
DGS-3700-12:5#show current_config access_profile
Command: show current_config access_profile

#-----
# ACL

create access_profile profile_id 1 profile_name RG ethernet vlan ethernet_type

#-----

DGS-3700-12:5#
```

SECURITY SECTION

Table of Contents

Next Section

Previous Section

802.1X AND GUEST VLAN COMMANDS

Back to Section Header

The Switch implements the server-side of the IEEE 802.1X Port-based and MAC-based Network Access Control. This mechanism is intended to allow only authorized users, or other network devices, access to network resources by establishing criteria for each port on the Switch that a user or network device must meet before allowing that port to forward or receive frames.

COMMAND	PARAMETERS
enable 802.1x	
disable 802.1x	
create 802.1x user	<username 15>
delete 802.1x user	<username 15>
show 802.1x user	
config 802.1x max_users	[<value 1 -1536> no_limit]
config 802.1x fwd_pdu system	[enable disable]
config 802.1x fwd_pdu ports	[<portlist> all] [enable disable]
show 802.1x [auth_state auth_configuration]	{ports [<portlist all>]}
config 802.1x capability ports	[<portlist> all] [authenticator none]
config 802.1x auth_parameter ports	[<portlist> all] [default {direction [both in] port_control [force_unauth auto force_auth] quiet_period <sec 0-65535> tx_period <sec 1-65535> supp_timeout <sec 1-65535> server_timeout <sec 1-65535> max_req <value 1-10> reauth_period <sec 1-65535> max_users [<value 1-128> no_limit] enable_reauth [enable disable]}]
config 802.1x auth_protocol	[local radius_eap]
config 802.1x init	[port_based ports [<portlist> all] mac_based [ports] [<portlist> all] {mac_address <macaddr>}]
config 802.1x auth_mode	[port_based mac_based]
config 802.1x reauth	[port_based ports [<portlist> all] mac_based [ports] [<portlist> all] {mac_address <macaddr>}]
config 802.1x authorization attributes radius	[enable disable]
config radius add	<server_index 1-3> [<server_ip> <ipv6addr>] key <passwd 32> [default { auth_port<udp_port_number 1-65535> acct_port <udp_port_number 1-65535> timeout<int 1-255> retransmit<int 1-20> }]
config radius delete	<server_index 1-3>

COMMAND	PARAMETERS
config radius	<server_index 1-3> {ipaddress [<server_ip> <ipv6addr>] key <passwd 32> auth_port[<udp_port_number 1-65535 > default] acct_port [<udp_port_number 1-65535 > default] timeout [<int 1-255> default] retransmit [<int 1-20> default] }
show radius	
create 802.1x guest_vlan	<vlan_name 32>
config 802.1x guest_vlan ports	[<portlist> all] state [enable disable]
delete 802.1x guest_vlan	<vlan_name 32>
show 802.1x guest_vlan	
show auth_statistics	{ports [<portlist> all]}
show auth_diagnostics	{ports [<portlist> all]}
show auth_session_statistics	{ports [<portlist> all]}
show auth_client	
show acct_client	
config accounting service	[network shell system] state [enable disable]
show accounting service	

Each command is listed, in detail, in the following sections:

enable 802.1x	
Purpose	Used to enable the 802.1X server on the Switch.
Syntax	enable 802.1x
Description	This command is used to enable the 802.1X Network Access control server application on the Switch. To select between port-based or MAC-based, use the config 802.1x auth_mode command.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable 802.1X switch globally:

```
DGS-3700-12:5#enable 802.1x
Command: enable 802.1x

Success.

DGS-3700-12:5#
```

disable 802.1x	
Purpose	Used to disable the 802.1X server on the Switch.
Syntax	disable 802.1x
Description	This command is used to disable the 802.1X Network Access control server application on the Switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable 802.1X on the Switch:

```
DGS-3700-12:5#disable 802.1x
Command: disable 802.1x

Success.

DGS-3700-12:5#
```

create 802.1x user

Purpose	This command is used to create an 802.1X local user.
Syntax	create 802.1x user <username 15>
Description	This command is used to create an 802.1X user.
Parameters	<i>username</i> – Specifies adding user name
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To create user “test”:

```
DGS-3700-12:5#create 802.1x user test
Command: create 802.1x user test

Enter a case-sensitive new password:
Enter the new password again for confirmation:

Success.

DGS-3700-12:5#
```

delete 802.1x user

Purpose	This command is used to delete an 802.1X local user.
Syntax	delete 802.1x user <username 15>
Description	This command is used to delete a specified user.
Parameters	<i>username</i> – Specifies deleting user name
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To delete user “test”:

```
DGS-3700-12:5#delete 802.1x user test
Command: delete 802.1x user test

Success.

DGS-3700-12:5#
```

show 802.1x user

Purpose	This command is used to show the 802.1X local user.
Syntax	show 802.1x user
Description	This command is used to display the 802.1X local user account information.
Parameters	None.

show 802.1x user

Restrictions	None.
---------------------	-------

Example usage:

To display the 802.1X local user information:

```
DGS-3700-12:5#show 802.1x user
```

```
Command: show 802.1x user
```

```
Current Accounts:
```

```
Username      Password
-----
test          123
```

```
Total Entries:1
```

```
DGS-3700-12:5#
```

config 802.1x max_users

Purpose	This command is used to configure the 802.1X maximum users of the system that can be learned via 802.1X authentication.
Syntax	config 802.1x max_users [<value 1 -1536> no_limit]
Description	This command is used to configure a global limitation on the maximum number of users that can be learned via 802.1X authentication. In addition to the global limitation, per port max users is also limited. It is specified by config 802.1X auth_parameter command.
Parameters	<i>max_users</i> – Specifies the maximum number of users. The range is 1 to 1536. By default, there is no limit on the max users.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the 802.1X max users:

```
DGS-3700-12:5#config 802.1x max_users 100
```

```
Command: config 802.1x max_users 100
```

```
Success.
```

```
DGS-3700-12:5#
```

config 802.1x auth_protocol

Purpose	This command is used to configure the 802.1X authentication protocol
Syntax	config 802.1x auth_protocol [local radius_eap]
Description	This command is used to configure the 802.1X auth protocol.
Parameters	<i>local</i> – Specifies the auth protocol as local. <i>radius_eap</i> – Specifies the auth protocol as RADIUS EAP.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To configure the 802.1X RADIUS EAP:

```
DGS-3700-12:5#config 802.1x auth_protocol radius_eap
Command: config 802.1x auth_protocol radius_eap

Success.
DGS-3700-12:5#
```

config 802.1x fwd_pdu system

Purpose	Used to configure forwarding of EAPOL PDU when 802.1X is disabled.
Syntax	config 802.1x fwd_pdu system [enable disable]
Description	This command is a global setting to control the forwarding of EAPOL PDU. When 802.1X functionality is disabled globally or for a port, and if 802.1X fwd_pdu is enabled both globally and for the port, a received EAPOL packet on the port will be flooded in the same VLAN to those ports for which 802.1X fwd_pdu is enabled and 802.1X is disabled (globally or just for the port). The default state is disable.
Parameters	<i>enable</i> - Specifies enable fwd_pdu global settings. <i>disable</i> - Specifies disable fwd_pdu global settings.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure forwarding of EAPOL PDU for the system

```
DGS-3700-12:5#config 802.1x fwd_pdu system enable
Command: config 802.1x fwd_pdu system enable

Success.

DGS-3700-12:5#
```

config 802.1x fwd_pdu ports

Purpose	Used to configure if the port will flood EAPOL PDU when 802.1X functionality is disabled.
Syntax	config 802.1x fwd_pdu ports [<portlist> all] [enable disable]
Description	This command is a per port setting to control the forwarding of EAPOL PDU. When 802.1X functionality is disabled globally or for a port, and if 802.1X fwd_pdu is enabled both globally and for the port, a received EAPOL packet on the port will be flooded in the same VLAN to those ports for which 802.1X fwd_pdu is enabled and 802.1X is disabled (globally or just for the port). The default state is disable.
Parameters	<i><portlist></i> - Specifies the specific port to be enabled or disabled fwd_pdu capability. <i>all</i> - Specifies all the ports to be enabled or disabled fwd_pdu capability. <i>enable</i> - Specifies enable per port fwd_pdu capability. <i>disable</i> - Specifies disable per port fwd_pdu capability.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure 802.1X fwd PDU for ports:

```
DGS-3700-12:5#config 802.1x fwd_pdu ports 1-2 enable
Command: config 802.1x fwd_pdu ports 1-2 enable

Success.

DGS-3700-12:5#
```

show 802.1x

Purpose	Used to display the 802.1X state or configurations.
Syntax	show 802.1x [auth_state auth_configuration] {ports <portlist all>}
Description	This command is used to display the 802.1X state or configurations.
Parameters	<i>auth_state</i> – Used to display 802.1X authentication state machine of some or all ports <i>auth_configuration</i> – Used to display 802.1X configurations of some or all ports. <i>portlist</i> – Specifies a range of ports to be displayed. <i>all</i> – Specifies all of ports to be displayed
Restrictions	None.

Example usage:

To display the 802.1X authentication state.

```
DGS-3700-12:5#show 802.1x auth_state ports
Command: show 802.1x auth_state ports

Status:  A - Authorized; U - Unauthorized; (P): Port-Based 802.1X
Port  MAC Address          PAE State      Backend State Status VID Priority
-----
CTRL+C  ESC  q  Quit  SPACE  n  Next Page  p  Previous Page  r  Refresh
```

To display the 802.1X configurations:

```
DGS-3700-12:5#show 802.1x auth_configuration ports 1
Command: show 802.1x auth_configuration ports 1

Port Number      : 1
Capability        : None
AdminCrldir     : Both
OpenCrldir      : Both
Port Control     : Auto
QuietPeriod      : 60    sec
TxPeriod         : 30    sec
SuppTimeout      : 30    sec
ServerTimeout    : 30    sec
MaxReq           : 2     times
ReAuthPeriod     : 3600  sec
ReAuthenticate   : Disabled
Forward EAPOL PDU On Port : Disabled
Max Users On port : 128

DGS-3700-12:5#
```

config 802.1x capability

Purpose	Used to configure the port capability.
Syntax	config 802.1x capability ports [<portlist> all] [authenticator none]

config 802.1x capability	
Description	This command is used to configure the port capability.
Parameters	<p><i>portlist</i> – Specifies a range of ports to be configured.</p> <p><i>all</i> – Specifies all of ports to be configured.</p> <p><i>authenticator</i> – The port that wishes to enforce authentication before accessing to services that are are accessible via that port adopts the authenticator role.</p> <p><i>none</i> – Allows the flow of PDUs via the Port</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the port capability:

```
DGS-3700-12:5#config 802.1x capability ports 1-10 authenticator
Command: config 802.1x capability ports 1-10 authenticator

Success.

DGS-3700-12:5#
```

config 802.1x auth_parameter	
Purpose	Used to configure the parameters that control the operation of the authenticator associated with a port.
Syntax	config 802.1x auth_parameter [<portlist> all] [default {direction [both in]} port_control[force_unauth auto force_auth] quiet_period <sec 0-65535> tx_period <sec 1-65535> supp_timeout <sec 1-65535> server_timeout <sec 1-65535> max_req <value 1-10> reauth_period <sec 1-65535> max_users [<value 1-128> no_limit] enable_reauth [enable disable]]]
Description	This command is used to configure the parameters that control the operation of the authenticator associated with a port.
Parameters	<p><i>portlist</i> – Specifies a range of ports to be configured</p> <p><i>all</i> – Specifies all of ports to be configured</p> <p><i>default</i> – Sets all parameter to be default value.</p> <p><i>direction</i> – Sets the direction of access control .</p> <p>both: For bidirectional access control.</p> <p>in: For unidirectional access control.</p> <p><i>port_control</i> – You can force a specific port to be unconditionally authorized or unauthorized by setting the parameter of port_control to be force_authorized or force_unauthorized. Besides, the controlled port will reflect the outcome of authentication if port_control is auto.</p> <p><i>quiet_period</i> – It is the initialization value of the quietWhile timer. The default value is 60 s and can be any value from 0 to 65535.</p> <p><i>tx_period</i> – It is the initialization value of the txWhen timer. The default value is 30 s and can be any value among 1 to 65535.</p> <p><i>supp_timeout</i> – The initialization value of the aWhile timer when timing out the supplicant. Its default value is 30 s and can be any value among 1 to 65535.</p> <p><i>server_timeout</i> – The initialization value of the aWhile timer when timing out the authentication server. Its default value is 30 and can be any value among 1 to 65535.</p> <p><i>max_req</i> – The maximum number of times that the authentication PAE state machine will retransmit an EAP Request packet to the supplicant. Its default value is 2 and</p>

config 802.1x auth_parameter

can be any number among 1 to 10.
max_users <value 1-128> – Specifies the maximum number of users. The range is 1 to 128 or no_limit. The default is 128 users.
reauth_period – Its a nonzero number of seconds, which is used to be the re-authentication timer. The default value is 3600.
enable_reauth – You can enable or disable the re-authentication mechanism for a specific port.

Restrictions Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the parameters that control the operation of the authenticator associated with the ports:

```
DGS-3700-12:5#config 802.1x auth_parameter ports 1-2 direction both
Command: config 802.1x auth_parameter ports 1-2 direction both

Success.

DGS-3700-12:5#
```

config 802.1x auth_mode

Purpose	Used to configure 802.1X authentication mode.
Syntax	config 802.1x auth_mode [port_based mac_based]
Description	This command is used to configure the authentication mode.
Parameters	<i>port_based</i> – Configure the authentication as port based mode. <i>mac_based</i> – Configure the authentication as MAC based mode.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the authentication mode:

```
DGS-3700-12:5#config 802.1x auth_mode port_based
Command: config 802.1x auth_mode port_based

Success.

DGS-3700-12:5#
```

config 802.1x init

Purpose	Used to initialize the authentication state machine of some or all ports.
Syntax	config 802.1x init [port_based ports [<portlist> all] mac_based [ports] [<portlist> all] {mac_address <macaddr>}]
Description	This command is used to initialize the authentication state machine of some or all.
Parameters	<i>port_based</i> – This instructs the Switch to init 802.1X functions based only on the port number. Ports approved for init can then be specified <i>mac_based</i> – This instructs the Switch to init 802.1X functions based only on the MAC address. MAC addresses approved for init can then be specified. <i>portlist</i> – Specifies a range of ports to be configured. <i>all</i> – Specifies all of ports to be configured. <i>mac_address</i> – MAC address of client

config 802.1x init

Restrictions	Only Administrator and Operator-level users can issue this command.
---------------------	---

Example usage:

To initialize the authentication state machine of all the ports:

```
DGS-3700-12:5#config 802.1x init port_based ports all
Command: config 802.1x init port_based ports all

Success.

DGS-3700-12:5#
```

config 802.1x reauth

Purpose	Used to configure the 802.1X re-authentication feature of the Switch.
Syntax	config 802.1x reauth [port_based ports [<portlist> all] mac_based [ports] [<portlist> all] {mac_address <macaddr>}]
Description	This command is used to re-authenticate a previously authenticated device based on port number.
Parameters	<p><i>port_based</i> – This instructs the Switch to re-authorize 802.1X functions based only on the port number. Ports approved for re-authorization can then be specified.</p> <p><i>mac_based</i> – This instructs the Switch to re-authorize 802.1X functions based only on the MAC address. MAC addresses approved for re-authorization can then be specified.</p> <p><i>ports</i> <portlist> – Specifies a port or range of ports to be re-authorized.</p> <p><i>all</i> – Specifies all of the ports on the Switch.</p> <p><i>mac_address</i> <macaddr> – Enter the MAC address to be re-authorized.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure 802.1X reauthentication for ports 1 to 8:

```
DGS-3700-12:5#config 802.1x reauth port_based ports 1-8
Command: config 802.1x reauth port_based ports 1-8

Success.

DGS-3700-12:5#
```

config 802.1x authorization attributes radius

Purpose	To configure the 802.1X authorization network state.
Syntax	config 802.1x authorization attributes radius [enable disable]
Description	This command is used to configure the 802.1X authorization network state.
Parameters	<p><i>enable</i> - Enable the 802.1X authorization network state.</p> <p><i>disable</i> - Disable the 802.1X authorization network state.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the 802.1X authorization network state:

```
DGS-3700-12:5#config 802.1x authorization attributes radius enable
Command: config 802.1x authorization attributes radius enable

Success.

DGS-3700-12:5#
```

create 802.1x guest_vlan

Purpose	Used to configure a pre-existing VLAN as a 802.1X Guest VLAN.
Syntax	create 802.1x guest_vlan <vlan_name 32>
Description	This command is used to configure a pre-defined VLAN as a 802.1X Guest VLAN. 802.1X Guest VLAN clients are those who have not been authorized for 802.1X or they haven't yet installed the necessary 802.1X software, yet would still have limited access rights on the Switch.
Parameters	<vlan_name 32> – Enter an alphanumeric string of no more than 32 characters to define a pre-existing VLAN as a 802.1X Guest VLAN. This VLAN must have first been created with the create vlan command mentioned earlier in this manual.
Restrictions	Only Administrator and Operator-level users can issue this command. The VLAN is supported for both port-based 802.1X and mac-based 802.1X and must have already been previously created using the create vlan command. Only one VLAN can be set as the 802.1X Guest VLAN.

Example usage:

To configure a previously created VLAN as a 802.1X Guest VLAN for the Switch.

```
DGS-3700-12:5#create 802.1x guest_vlan Trinity
Command: create 802.1x guest_vlan Trinity

Success.

DGS-3700-12:5#
```

config 802.1x guest_vlan ports

Purpose	Used to configure ports for a pre-existing 802.1X guest VLAN.
Syntax	config 802.1x guest_vlan ports [<portlist> all] state [enable disable]
Description	This command is used to configure ports to be enabled or disabled for the 802.1X guest VLAN.
Parameters	<portlist> – Specify a port or range of ports to be configured for the 802.1X Guest VLAN. all – Specify this parameter to configure all ports for the 802.1X Guest VLAN. state [enable disable] – Use these parameters to enable or disable port listed here as enabled or disabled for the 802.1X Guest VLAN.
Restrictions	Only Administrator and Operator-level users can issue this command. The VLAN is supported for both port-based 802.1X and mac-based 802.1X and must have already been previously created using the create vlan command. If the specific port state changes from an enabled state to a disabled state, these ports will return to the original VLAN.

Example usage:

To configure the ports for a previously created 802.1X Guest VLAN as enabled.

```
DGS-3700-12:5#config 802.1x guest_vlan ports 1-5 state enable
Command: config 802.1x guest_vlan ports 1-5 state enable

Success.

DGS-3700-12:5#
```

show 802.1x guest_vlan

Purpose	Used to view the configurations for a 802.1X Guest VLAN.
Syntax	show 802.1x guest_vlan
Description	This command is used to display the settings for the VLAN that has been enabled as an 802.1X Guest VLAN. 802.1X Guest VLAN clients are those who have not been authorized for 802.1X or they haven't yet installed the necessary 802.1X software, yet would still have limited access rights on the Switch.
Parameters	None.
Restrictions	The VLAN is supported for both port-based 802.1X and mac-based 802.1X and must have already been previously created using the create vlan command. Only one VLAN can be set as the 802.1X Guest VLAN.

Example usage:

To show 802.1X Guest VLAN.

```
DGS-3700-12:5#show 802.1x guest_vlan
Command: show 802.1x guest_vlan

Guest VLAN Setting
-----
Guest VLAN : Trinity
Enable guest VLAN ports: 5-8

Success.

DGS-3700-12:5#
```

delete 802.1x guest_vlan

Purpose	Used to delete an 802.1X Guest VLAN.
Syntax	delete 802.1x guest_vlan <vlan_name 32>
Description	This command is used to delete an 802.1X Guest VLAN. 802.1X Guest VLAN clients are those who have not been authorized for 802.1X or they haven't yet installed the necessary 802.1X software, yet would still have limited access rights on the Switch.
Parameters	<vlan_name 32> – Enter the VLAN name of the 802.1X Guest VLAN to be deleted.
Restrictions	Only Administrator and Operator-level users can issue this command. The VLAN is supported for both port-based 802.1X and mac-based 802.1X and must have already been previously created using the create vlan command. Only one VLAN can be set as the 802.1X Guest VLAN.

Example usage:

To delete a previously created 802.1X Guest VLAN.

```
DGS-3700-12:5#delete 802.1x guest_vlan Trinity
Command: delete 802.1x guest_vlan Trinity

Success.

DGS-3700-12:5#
```

config radius add

Purpose	Used to configure the settings the Switch will use to communicate with a RADIUS server.
Syntax	config radius add <server_index 1-3> [<server_ip> <ipv6addr>] key <passwd 32> [default { auth_port <udp_port_number 1-65535 > acct_port <udp_port_number 1-65535 > timeout <int 1-255> retransmit <int 1-20>}]
Description	This command is used to configure the settings the Switch will use to communicate with a RADIUS server.
Parameters	<p><server_index 1-3> – Assigns a number to the current set of RADIUS server settings. Up to three groups of RADIUS server settings can be entered on the Switch.</p> <p><server_ip> – The IP address of the RADIUS server.</p> <p><ipv6addr> – The IPv6 address of the RADIUS server.</p> <p>key – Specifies that a password and encryption key will be used between the Switch and the RADIUS server.</p> <p><passwd 32> – The shared-secret key used by the RADIUS server and the Switch. Up to 32 characters can be used.</p> <p>default – Uses the default UDP port number in both the “auth_port” and “acct_port” settings.</p> <p>auth_port <udp_port_number 1-65535> – The UDP port number for authentication requests. The default is 1812.</p> <p>acct_port <udp_port_number 1-65535> – The UDP port number for accounting requests. The default is 1813.</p> <p>timeout <int 1-255> – The time in second for waiting for a server reply. Default value is 5 seconds.</p> <p>retransmit <int 1-20> – The count for re-transmit. Default value is 2.</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To configure the RADIUS server communication settings:

```
DGS-3700-12:5#config radius add 1 10.48.74.121 key dlink default
Command: config radius add 1 10.48.74.121 key dlink default

Success.

DGS-3700-12:5#
```

config radius delete

Purpose	Used to delete a previously entered RADIUS server configuration.
Syntax	config radius delete <server_index 1-3>
Description	This command is used to delete a previously entered RADIUS server configuration.
Parameters	<p><server_index 1-3> – Assigns a number to the current set of RADIUS server settings. Up to 3 groups of RADIUS server settings can be entered on the Switch.</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To delete a previously entered RADIUS server communication settings:

```
DGS-3700-12:5#config radius delete 1
Command: config radius delete 1

Success.

DGS-3700-12:5#
```

config radius

Purpose	Used to configure the Switch's RADIUS settings.
Syntax	config radius <server_index 1-3> {ipaddress[<server_ip> <ipv6addr>] key <passwd 32> auth_port <udp_port_number 1-65535 > acct_port <udp_port_number 1-65535 > timeout <int 1-255> retransmit <int 1-20>}
Description	This command is used to configure the Switch's RADIUS settings.
Parameters	<p><server_index 1-3> – Assigns a number to the current set of RADIUS server settings. Up to three groups of RADIUS server settings can be entered on the Switch.</p> <p>ipaddress <server_ip> – The IP address of the RADIUS server.</p> <p><ipv6addr> – The IPv6 address of the RADIUS server.</p> <p>key – Specifies that a password and encryption key will be used between the Switch and the RADIUS server.</p> <p><passwd 32> – The shared-secret key used by the RADIUS server and the Switch. Up to 32 characters can be used.</p> <p>auth_port <udp_port_number 1-65535> – The UDP port number for authentication requests. The default is 1812.</p> <p>acct_port <udp_port_number 1-65535> – The UDP port number for accounting requests. The default is 1813.</p> <p>timeout <int 1-255> – The time in second for waiting for a server reply. Default value is 5 seconds.</p> <p>retransmit <int 1-20> – The count for re-transmit. Default value is 2.</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To configure the RADIUS settings:

```
DGS-3700-12:5#config radius 1 ipaddress 10.48.74.121 key dlink_default
Command: config radius 1 ipaddress 10.48.74.121 key dlink_default

Success.

DGS-3700-12:5#
```

show radius

Purpose	Used to display the current RADIUS configurations on the Switch.
Syntax	show radius
Description	This command is used to display the current RADIUS configurations on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To display RADIUS settings on the Switch:

```
DGS-3700-12:5#show radius
Command: show radius

Index 1
  IP Address      : 10.48.74.121
  Auth-Port      : 1812
  Acct-Port      : 1813
  Timeout        : 5
  Retransmit     : 2
  Key            : dlink_default

DGS-3700-12:5#
```

show auth_statistics

Purpose	Used to display authenticator statistics information.
Syntax	show auth_statistics {ports [<portlist> all]}
Description	This command is used to display authenticator statistics information.
Parameters	<i>portlist</i> – Specifies a range of ports to be displayed. <i>all</i> – All ports.
Restrictions	None.

Example usage:

To display authenticator statistics information from port 1:

```
DGS-3700-12:5#show auth_statistics ports 1
Command: show auth_statistics ports 1

Port Number : 1

EapolFramesRx           0
EapolFramesTx           0
EapolStartFramesRx     0
EapolReqIdFramesTx     0
EapolLogoffFramesRx    0
EapolReqFramesTx       0
EapolRespIdFramesRx    0
EapolRespFramesRx      0
InvalidEapolFramesRx   0
EapLengthErrorFramesRx 0

LastEapolFrameVersion   0
LastEapolFrameSource    00-00-00-00-00-00

CTRL+C  ESC  q  Quit  SPACE  n  Next Page  p  Previous Page  r  Refresh
```

show auth_diagnostics

Purpose	Used to display authenticator diagnostics information
Syntax	show auth_diagnostics {ports [<portlist> all]}
Description	This command is used to display authenticator diagnostics information
Parameters	<i>portlist</i> – Specifies a range of ports to be displayed. <i>all</i> – All ports.

show auth_diagnostics

Restrictions	None.
---------------------	-------

Example usage:

To display authenticator diagnostics information from port 1:

```
DGS-3700-12:5#show auth_diagnostics ports 1
Command: show auth_diagnostics ports 1

Port Number: 1

EntersConnecting                0
EapLogoffsWhileConnecting      0
EntersAuthenticating           0
SuccessWhileAuthenticating     0
TimeoutsWhileAuthenticating    0
FailWhileAuthenticating        0
ReauthsWhileAuthenticating     0
EapStartsWhileAuthenticating   0
EapLogoffWhileAuthenticating   0
ReauthsWhileAuthenticated     0
EapStartsWhileAuthenticated    0
EapLogoffWhileAuthenticated    0
BackendResponses               0
BackendAccessChallenges        0
BackendOtherRequestsToSupplicant 0
BackendNonNakResponsesFromSupplicant 0
BackendAuthSuccesses          0
BackendAuthFails               0

CTRL+C  ESC  q  Quit  SPACE  n  Next Page  p  Previous Page  r  Refresh
```

show auth_session_statistics

Purpose	Used to display authenticator session statistics information
Syntax	show auth_session_statistics {ports [<portlist> all]}
Description	This command is used to display authenticator session statistics information
Parameters	<i>portlist</i> – Specifies a range of ports to be displayed. <i>all</i> – Specifies all the ports to be displayed.
Restrictions	None.

Example usage:

To display authenticator session statistics information from port 1:

```
DGS-3700-12:5#show auth_session_statistics ports 1
Command: show auth_session_statistics ports 1

Port number : 1

SessionOctetsRx           0
SessionOctetsTx           0
SessionFramesRx           0
SessionFramesTx           0
SessionId
SessionAuthenticMethod    Remote Authentication Server
SessionTime                0
SessionTerminateCause     SupplicantLogoff
SessionUserName

CTRL+C  ESC  q  Quit  SPACE  n  Next Page  p  Previous Page  r  Refresh
```

show auth_client

Purpose	Used to display authentication client information
Syntax	show auth_client
Description	This command is used to display authentication client information
Parameters	None.
Restrictions	None.

Example usage:

To display authentication client information:

```
DGS-3700-12:5#show auth_client
Command: show auth_client

radiusAuthClient ==>
radiusAuthClientInvalidServerAddresses    0
radiusAuthClientIdentifier

radiusAuthServerEntry ==>
radiusAuthServerIndex :1

radiusAuthServerAddress                    0.0.0.0
radiusAuthClientServerPortNumber          0
radiusAuthClientRoundTripTime             0
radiusAuthClientAccessRequests            0
radiusAuthClientAccessRetransmissions     0
radiusAuthClientAccessAccepts             0
radiusAuthClientAccessRejects             0
radiusAuthClientAccessChallenges          0
radiusAuthClientMalformedAccessResponses  0
radiusAuthClientBadAuthenticators         0
radiusAuthClientPendingRequests           0
radiusAuthClientTimeouts                  0
radiusAuthClientUnknownTypes              0
radiusAuthClientPacketsDropped            0

CTRL+C  ESC  q  Quit  SPACE  n  Next Page  p  Previous Page  r  Refresh
```

show acct_client	
Purpose	Used to display account client information.
Syntax	show acct_client
Description	This command is used to display account client information
Parameters	None.
Restrictions	None.

Example usage:

To display account client information:

```
DGS-3700-12:5#show acct_client
Command: show acct_client

radiusAcctClient ==>
radiusAcctClientInvalidServerAddresses    0
radiusAcctClientIdentifier

radiusAuthServerEntry ==>
radiusAccServerIndex : 1

radiusAccServerAddress                    0.0.0.0
radiusAccClientServerPortNumber          0
radiusAccClientRoundTripTime              0
radiusAccClientRequests                   0
radiusAccClientRetransmissions            0
radiusAccClientResponses                  0
radiusAccClientMalformedResponses         0
radiusAccClientBadAuthenticators          0
radiusAccClientPendingRequests            0
radiusAccClientTimeouts                   0
radiusAccClientUnknownTypes               0
radiusAccClientPacketsDropped             0

CTRL+C  ESC  q  Quit  SPACE  n  Next Page  p  Previous Page  r  Refresh
```

config accounting service	
Purpose	Used to configure the state of the specified RADIUS accounting service.
Syntax	config accounting service [network shell system] (1) state [enable disable]
Description	This command is used to enable or disable the specified RADIUS accounting service.
Parameters	<p><i>network</i> – Accounting service for 802.1X port access control. By default, the service is disabled.</p> <p><i>shell</i> – Accounting service for shell events: When user login or logout the switch (via the console, Telnet, or SSH) and when timeout occurs, accounting information will be collected and sent to RADIUS server. By default, the service is disabled.</p> <p><i>system</i> – Accounting service for system events: reset, reboot. By default, the service is disabled.</p> <p><i>enable</i> – Enable the specified accounting service.</p> <p><i>disable</i> – Disable the specified accounting service.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the accounting service:

```
DGS-3700-12:5#config accounting service shell state enable
Command: config accounting service shell state enable

Success.

DGS-3700-12:5#
```

show accounting service

Purpose	Used to show the RADIUS accounting services' status.
Syntax	show accounting service
Description	This command is used to show the state for radius accounting service.
Parameters	None.
Restrictions	None.

Example usage:

To show accounting service:

```
DGS-3700-12:5#show accounting service
Command: show accounting service

Accounting Service
-----
Network   : Enabled
Shell     : Enabled
System    : Enabled

DGS-3700-12:5#
```

ACCESS AUTHENTICATION CONTROL COMMANDS

Back to Section Header

The TACACS / XTACACS / TACACS+ / RADIUS commands allows secure access to the Switch using the TACACS / XTACACS / TACACS+ / RADIUS protocols. When a user logs in to the Switch or tries to access the administrator level privilege, he or she is prompted for a password. If TACACS / XTACACS / TACACS+ / RADIUS authentication is enabled on the Switch, it will contact a TACACS / XTACACS / TACACS+ / RADIUS server to verify the user. If the user is verified, he or she is granted access to the Switch.

There are currently three versions of the TACACS security protocol, each a separate entity. The Switch's software supports the following versions of TACACS:

- TACACS (Terminal Access Controller Access Control System) —Provides password checking and authentication, and notification of user actions for security purposes utilizing via one or more centralized TACACS servers, utilizing the UDP protocol for packet transmission.
- Extended TACACS (XTACACS) — An extension of the TACACS protocol with the ability to provide more types of authentication requests and more types of response codes than TACACS. This protocol also uses UDP to transmit packets.
- TACACS+ (Terminal Access Controller Access Control System plus) — Provides detailed access control for authentication for network devices. TACACS+ is facilitated through Authentication commands via one or more centralized servers. The TACACS+ protocol encrypts all traffic between the Switch and the TACACS+ daemon, using the TCP protocol to ensure reliable delivery.

The Switch also supports the RADIUS protocol for authentication using the Access Authentication Control commands. RADIUS or Remote Authentication Dial In User Server also uses a remote server for authentication and can be responsible for receiving user connection requests, authenticating the user and returning all configuration information necessary for the client to deliver service through the user. RADIUS may be facilitated on this Switch using the commands listed in this section.

In order for the TACACS / XTACACS / TACACS+ / RADIUS security function to work properly, a TACACS / XTACACS / TACACS+ / RADIUS server must be configured on a device other than the Switch, called a server host and it must include usernames and passwords for authentication. When the user is prompted by the Switch to enter usernames and passwords for authentication, the Switch contacts the TACACS / XTACACS / TACACS+ / RADIUS server to verify, and the server will respond with one of three messages:

- a) The server verifies the username and password, and the user is granted normal user privileges on the Switch.
- b) The server will not accept the username and password and the user is denied access to the Switch.
- c) The server doesn't respond to the verification query. At this point, the Switch receives the timeout from the server and then moves to the next method of verification configured in the method list.

The Switch has four built-in server groups, one for each of the TACACS, XTACACS, TACACS+ and RADIUS protocols. These built-in server groups are used to authenticate users trying to access the Switch. The users will set server hosts in a preferable order in the built-in server group and when a user tries to gain access to the Switch, the Switch will ask the first server host for authentication. If no authentication is made, the second server host in the list will be queried, and so on. The built-in server group can only have hosts that are running the specified protocol. For example, the TACACS server group can only have TACACS server hosts.

The administrator for the Switch may set up five different authentication techniques per user-defined method list (TACACS / XTACACS / TACACS+ / RADIUS / local / none) for authentication. These techniques will

be listed in an order preferable, and defined by the user for normal user authentication on the Switch, and may contain up to eight authentication techniques. When a user attempts to access the Switch, the Switch will select the first technique listed for authentication. If the first technique goes through its *server hosts* and no authentication is returned, the Switch will then go to the next technique listed in the server group for authentication, until the authentication has been verified or denied, or the list is exhausted.

Please note that user granted access to the Switch will be granted normal user privileges on the Switch. To gain access to admin level privileges, the user must enter the **enable admin** command, which is only available for logging in the Switch from the three versions of the TACACS server, and then enter a password, which was previously configured by the administrator of the Switch.



NOTE: TACACS, XTACACS and TACACS+ are separate entities and are not compatible. The Switch and the server must be configured exactly the same, using the same protocol. (For example, if the Switch is set up for TACACS authentication, so must be the host server.)

The Access Authentication Control commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
enable authen_policy	
disable authen_policy	
show authen_policy	
create authen_login method_list_name	<string 15>
config authen_login	[default method_list_name <string 15>] method {tacacs xtacacs tacacs+ radius server_group <string 15> local none}
delete authen_login method_list_name	<string 15>
show authen_login	[default method_list_name <string 15> all]
create authen_enable method_list_name	<string 15>
config authen_enable	[default method_list_name <string 15>] method {tacacs xtacacs tacacs+ radius server_group <string 15> local_enable none}
delete authen_enable method_list_name	<string 15>
show authen_enable	[default method_list_name <string 15> all]
config authen application	[console telnet ssh http all] [login enable] [default method_list_name <string 15>]
show authen application	
create authen server_group	<string 15>
config authen server_group	[tacacs xtacacs tacacs+ radius <string 15>] [add delete] server_host <ipaddr> protocol [tacacs xtacacs tacacs+ radius]
delete authen server_group	<string 15>
show authen server_group	{<string 15>}
create authen server_host	<ipaddr> protocol [tacacs xtacacs tacacs+ radius] {port <int 1-65535> key [<key_string 254> none] timeout <int 1-255> retransmit <int 1-20>}
config authen server_host	<ipaddr> protocol [tacacs xtacacs tacacs+ radius] {port <int 1-65535> key [<key_string 254> none] timeout <int 1-255> retransmit <int

COMMAND	PARAMETERS
	1-20>}
delete authen server_host	<ipaddr> protocol [tacacs xtacacs tacacs+ radius]
show authen server_host	
config authen parameter response_timeout	<int 0-255>
config authen parameter attempt	<int 1-255>
show authen parameter	
enable admin	
config admin local_enable	

Each command is listed, in detail, in the following sections.

enable authen_policy	
Purpose	Used to enable system access authentication policy.
Syntax	enable authen_policy
Description	This command will enable an administrator-defined authentication policy for users trying to access the Switch. When enabled, the device will check the method list and choose a technique for user authentication upon login.
Parameters	None.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To enable the system access authentication policy:

```
DGS-3700-12:5#enable authen_policy
Command: enable authen_policy

Success.

DGS-3700-12:5#
```

disable authen_policy	
Purpose	Used to disable system access authentication policy.
Syntax	disable authen_policy
Description	This command will disable the administrator-defined authentication policy for users trying to access the Switch. When disabled, the Switch will access the local user account database for username and password verification. In addition, the Switch will now accept the local enable password as the authentication for normal users attempting to access administrator level privileges.
Parameters	None.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To disable the system access authentication policy:

```
DGS-3700-12:5#disable authen_policy
Command: disable authen_policy

Success.

DGS-3700-12:5#
```

show authen_policy

Purpose	Used to display the system access authentication policy status on the Switch.
Syntax	show authen_policy
Description	This command will show the current status of the access authentication policy on the Switch.
Parameters	None.
Restrictions	Only Administrator-level users can issue this command.

Example usage:
To display the system access authentication policy:

```
DGS-3700-12:5#show authen_policy
Command: show authen_policy

Authentication Policy: Enabled

DGS-3700-12:5#
```

create authen_login method_list_name

Purpose	Used to create a user defined method list of authentication methods for users logging on to the Switch.
Syntax	create authen_login method_list_name <string 15>
Description	This command is used to create a list for authentication techniques for user login. The Switch can support up to eight method lists, but one is reserved as a default and cannot be deleted. Multiple method lists must be created and configured separately.
Parameters	<string 15> – Enter an alphanumeric string of up to 15 characters to define the given <i>method list</i> .
Restrictions	Only Administrator-level users can issue this command.

Example usage:
To create the method list “Trinity.”:

```
DGS-3700-12:5#create authen_login method_list_name Trinity
Command: create authen_login method_list_name Trinity

Success.

DGS-3700-12:5#
```

config authen_login

Purpose	Used to configure a user-defined or default method list of authentication methods for user login.
Syntax	config authen_login [default method_list_name <string 15>] method {tacacs xtacacs tacacs+ radius server_group <string 15> local none}
Description	This command is used to configure a user-defined or default method list of

config authen_login	
	<p>authentication methods for users logging on to the Switch. The sequence of methods implemented in this command will affect the authentication result. For example, if a user enters a sequence of methods like <i>tacacs – xtacacs – local</i>, the Switch will send an authentication request to the first <i>tacacs</i> host in the server group. If no response comes from the server host, the Switch will send an authentication request to the second <i>tacacs</i> host in the server group and so on, until the list is exhausted. At that point, the Switch will restart the same sequence with the following protocol listed, <i>xtacacs</i>. If no authentication takes place using the <i>xtacacs</i> list, the <i>local</i> account database set in the Switch is used to authenticate the user. When the local method is used, the privilege level will be dependant on the local account privilege configured on the Switch.</p> <p>Successful login using any of these methods will give the user a “user” privilege only. If the user wishes to upgrade his or her status to the administrator level, the user must implement the enable admin command, followed by a previously configured password. (See the enable admin part of this section for more detailed information, concerning the enable admin command.)</p>
Parameters	<p><i>default</i> – The default method list for access authentication, as defined by the user. The user may choose one or a combination of up to four of the following authentication methods:</p> <p><i>tacacs</i> – Adding this parameter will require the user to be authenticated using the TACACS protocol from the remote TACACS <i>server hosts</i> of the TACACS <i>server group</i> list.</p> <p><i>xtacacs</i> – Adding this parameter will require the user to be authenticated using the XTACACS protocol from the remote XTACACS <i>server hosts</i> of the XTACACS <i>server group</i> list.</p> <p><i>tacacs+</i> – Adding this parameter will require the user to be authenticated using the TACACS+ protocol from the remote TACACS+ <i>server hosts</i> of the TACACS+ <i>server group</i> list.</p> <p><i>radius</i> – Adding this parameter will require the user to be authenticated using the RADIUS protocol from the remote RADIUS <i>server hosts</i> of the RADIUS <i>server group</i> list.</p> <p><i>server_group</i> <string 15> – Adding this parameter will require the user to be authenticated using a user-defined server group previously configured on the Switch.</p> <p><i>local</i> – Adding this parameter will require the user to be authenticated using the local <i>user account</i> database on the Switch.</p> <p><i>none</i> – Adding this parameter will require no authentication to access the Switch.</p> <p><i>method_list_name</i> – Enter a previously implemented method list name defined by the user. The user may add one, or a combination of up to four of the following authentication methods to this method list:</p> <p><i>tacacs</i> – Adding this parameter will require the user to be authenticated using the TACACS protocol from a remote TACACS server.</p> <p><i>xtacacs</i> – Adding this parameter will require the user to be authenticated using the XTACACS protocol from a remote XTACACS server.</p> <p><i>tacacs+</i> – Adding this parameter will require the user to be authenticated using the TACACS+ protocol from a remote TACACS+ server.</p> <p><i>radius</i> – Adding this parameter will require the user to be authenticated using the RADIUS protocol from a remote RADIUS server.</p> <p><i>server_group</i> <string 15> – Adding this parameter will require the user to be authenticated using a user-defined server group previously configured on the</p>

config_authen_login

Switch.
local – Adding this parameter will require the user to be authenticated using the local *user account* database on the Switch.
none – Adding this parameter will require no authentication to access the Switch.



NOTE: Entering *none* or *local* as an authentication protocol will override any other authentication that follows it on a method list or on the default method list.

Restrictions Only Administrator-level users can issue this command.

Example usage:

To configure the user defined method list “Trinity” with authentication methods TACACS, XTACACS and local, in that order.

```
DGS-3700-12:5#config_authen_login_method_list_name Trinity method tacacs xtacacs local
Command: config_authen_login_method_list_name Trinity method tacacs xtacacs local

Success.

DGS-3700-12:5#
```

Example usage:

To configure the default method list with authentication methods XTACACS, TACACS+ and local, in that order:

```
DGS-3700-12:5#config_authen_login_default_method xtacacs tacacs+ local
Command: config_authen_login_default_method xtacacs tacacs+ local

Success.

DGS-3700-12:5#
```

delete_authen_login_method_list_name

Purpose	Used to delete a previously configured user defined method list of authentication methods for users logging on to the Switch.
Syntax	delete_authen_login_method_list_name <string 15>
Description	This command is used to delete a list for authentication methods for user login.
Parameters	<string 15> – Enter an alphanumeric string of up to 15 characters to define the given <i>method list</i> the user wishes to delete.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To delete the method list name “Trinity”:

```
DGS-3700-12:5#delete_authen_login_method_list_name Trinity
Command: delete_authen_login_method_list_name Trinity

Success.

DGS-3700-12:5#
```

show authen_login	
Purpose	Used to display a previously configured user defined method list of authentication methods for users logging on to the Switch.
Syntax	show authen_login [default method_list_name <string 15> all]
Description	This command is used to show a list of authentication methods for user login.
Parameters	<p><i>default</i> – Entering this parameter will display the default method list for users logging on to the Switch.</p> <p><i>method_list_name <string 15></i> – Enter an alphanumeric string of up to 15 characters to define the given method list to view.</p> <p><i>all</i> – Entering this parameter will display all the authentication login methods currently configured on the Switch.</p> <p>The window will display the following parameters:</p> <p><i>Method List Name</i> – The name of a previously configured method list name.</p> <p><i>Priority</i> – Defines which order the method list protocols will be queried for authentication when a user attempts to log on to the Switch. Priority ranges from 1 (highest) to 4 (lowest).</p> <p><i>Method Name</i> – Defines which security protocols are implemented, per method list name.</p> <p><i>Comment</i> – Defines the type of Method. <i>User-defined Group</i> refers to server group defined by the user. <i>Built-in Group</i> refers to the TACACS, XTACACS, TACACS+ and RADIUS security protocols which are permanently set in the Switch. <i>Keyword</i> refers to authentication using a technique INSTEAD of TACACS / XTACACS / TACACS+ / RADIUS which are local (authentication through the user account on the Switch) and none (no authentication necessary to access any function on the Switch).</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To view the authentication login method list named Trinity:

```
DGS-3700-12:5#show authen_login method_list_name Trinity
Command: show authen_login method_list_name Trinity

Method List Name  Priority    Method Name  Comment
-----
Trinity           1          tacacs+      Built-in Group
                  2          tacacs       Built-in Group
                  3          Darren       User-defined Group
                  4          local        Keyword

DGS-3700-12:5#
```

create authen_enable method_list_name	
Purpose	Used to create a user-defined method list of authentication methods for promoting normal user level privileges to Administrator level privileges on the Switch.
Syntax	create authen_enable method_list_name <string 15>
Description	This command is used to promote users with normal level privileges to Administrator level privileges using authentication methods on the Switch. Once a user acquires normal user level privileges on the Switch, he or she must be authenticated by a method on the Switch to gain administrator privileges on the Switch, which is defined by the Administrator. A maximum of eight enable method lists can be

create authen_enable method_list_name	
	implemented on the Switch.
Parameters	<string 15> – Enter an alphanumeric string of up to 15 characters to define the given <i>enable method list</i> to create.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To create a user-defined method list, named “Permit” for promoting user privileges to Administrator privileges:

```
DGS-3700-12:5#create authen_enable method_list_name Permit
Command: create authen_enable method_list_name Permit

Success.

DGS-3700-12:5#
```

config authen_enable	
Purpose	Used to configure a user-defined method list of authentication methods for promoting normal user level privileges to Administrator level privileges on the Switch.
Syntax	config authen_enable [default method_list_name <string 15>] method {tacacs xtacacs tacacs+ radius server_group <string 15> local_enable none}
Description	<p>This command is used to promote users with normal level privileges to Administrator level privileges using authentication methods on the Switch. Once a user acquires normal user level privileges on the Switch, he or she must be authenticated by a method on the Switch to gain administrator privileges on the Switch, which is defined by the Administrator. A maximum of eight enable method lists can be implemented simultaneously on the Switch.</p> <p>The sequence of methods implemented in this command will affect the authentication result. For example, if a user enters a sequence of methods like <i>tacacs – xtacacs – local_enable</i>, the Switch will send an authentication request to the first <i>TACACS</i> host in the server group. If no verification is found, the Switch will send an authentication request to the second <i>TACACS</i> host in the server group and so on, until the list is exhausted. At that point, the Switch will restart the same sequence with the following protocol listed, <i>xtacacs</i>. If no authentication takes place using the <i>xtacacs</i> list, the <i>local_enable</i> password set in the Switch is used to authenticate the user.</p> <p>Successful authentication using any of these methods will give the user an “Admin” level privilege.</p>
Parameters	<p><i>default</i> – The default method list for administration rights authentication, as defined by the user. The user may choose one or a combination of up to four (4) of the following authentication methods:</p> <p><i>tacacs</i> – Adding this parameter will require the user to be authenticated using the <i>TACACS</i> protocol from the remote <i>TACACS server hosts</i> of the <i>TACACS server group</i> list.</p> <p><i>xtacacs</i> – Adding this parameter will require the user to be authenticated using the <i>XTACACS</i> protocol from the remote <i>XTACACS server hosts</i> of the <i>XTACACS server group</i> list.</p> <p><i>tacacs+</i> – Adding this parameter will require the user to be authenticated using the <i>TACACS+</i> protocol from the remote <i>TACACS+ server hosts</i> of the <i>TACACS+ server group</i> list.</p> <p><i>radius</i> – Adding this parameter will require the user to be authenticated using the</p>

config authen_enable	
	<p><i>RADIUS</i> protocol from the remote <i>RADIUS server hosts</i> of the <i>RADIUS server group</i> list.</p> <p><i>server_group</i> <string 15> – Adding this parameter will require the user to be authenticated using a user-defined server group previously configured on the Switch.</p> <p><i>local_enable</i> – Adding this parameter will require the user to be authenticated using the local <i>user account</i> database on the Switch.</p> <p><i>none</i> – Adding this parameter will require no authentication to access the Switch.</p> <p><i>method_list_name</i> – Enter a previously implemented method list name defined by the user (create authen_enable). The user may add one, or a combination of up to four (4) of the following authentication methods to this method list:</p> <p><i>tacacs</i> – Adding this parameter will require the user to be authenticated using the <i>TACACS</i> protocol from a remote <i>TACACS</i> server.</p> <p><i>xtacacs</i> – Adding this parameter will require the user to be authenticated using the <i>XTACACS</i> protocol from a remote <i>XTACACS</i> server.</p> <p><i>tacacs+</i> – Adding this parameter will require the user to be authenticated using the <i>TACACS+</i> protocol from a remote <i>TACACS+</i> server.</p> <p><i>radius</i> – Adding this parameter will require the user to be authenticated using the <i>RADIUS</i> protocol from a remote <i>RADIUS</i> server.</p> <p><i>server_group</i> <string 15> – Adding this parameter will require the user to be authenticated using a user-defined server group previously configured on the Switch.</p> <p><i>local_enable</i> – Adding this parameter will require the user to be authenticated using the local <i>user account</i> database on the Switch. The local enable password of the device can be configured using the “config admin local_enable” command.</p> <p><i>none</i> – Adding this parameter will require no authentication to access the administration level privileges on the Switch.</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To configure the user defined method list “Permit” with authentication methods TACACS, XTACACS and local, in that order.

```
DGS-3700-12:5#config authen_enable method_list_name Trinity method tacacs xtacacs local
Command: config authen_enable method_list_name Trinity method tacacs xtacacs local

Success.

DGS-3700-12:5#
```

Example usage:

To configure the default method list with authentication methods XTACACS, TACACS+ and local, in that order:

```
DGS-3700-12:5#config authen_enable default method xtacacs tacacs+ local
Command: config authen_enable default method xtacacs tacacs+ local

Success.

DGS-3700-12:5#
```

delete authen_enable method_list_name	
Purpose	Used to delete a user-defined method list of authentication methods for promoting normal user level privileges to Administrator level privileges on the Switch.
Syntax	delete authen_enable method_list_name <string 15>
Description	This command is used to delete a user-defined method list of authentication methods for promoting user level privileges to Administrator level privileges.
Parameters	<string 15> – Enter an alphanumeric string of up to 15 characters to define the given <i>enable method list</i> to delete.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To delete the user-defined method list “Permit”

```
DGS-3700-12:5#delete authen_enable method_list_name Permit
Command: delete authen_enable method_list_name Permit

Success.

DGS-3700-12:5#
```

show authen_enable	
Purpose	Used to display the method list of authentication methods for promoting normal user level privileges to Administrator level privileges on the Switch.
Syntax	show authen_enable [default method_list_name <string 15> all]
Description	This command is used to display the method list of authentication methods for promoting normal user level privileges to Administrator level privileges on the Switch.
Parameters	<p><i>default</i> – Entering this parameter will display the default method list for users attempting to gain access to Administrator level privileges on the Switch.</p> <p><i>method_list_name <string 15></i> – Enter an alphanumeric string of up to 15 characters to define the given <i>method list</i> the user wishes to view.</p> <p><i>all</i> – Entering this parameter will display all the authentication login methods currently configured on the Switch.</p> <p>The window will display the following parameters:</p> <p><i>Method List Name</i> – The name of a previously configured method list name.</p> <p><i>Priority</i> – Defines which order the method list protocols will be queried for authentication when a user attempts to log on to the Switch. Priority ranges from 1(highest) to 4 (lowest).</p> <p><i>Method Name</i> – Defines which security protocols are implemented, per method list name.</p> <p><i>Comment</i> – Defines the type of Method. <i>User-defined Group</i> refers to <i>server groups</i> defined by the user. <i>Built-in Group</i> refers to the TACACS, XTACACS, TACACS+ and RADIUS security protocols which are permanently set in the Switch. <i>Keyword</i> refers to authentication using a technique INSTEAD of TACACS/XTACACS/TACACS+/RADIUS which are local (authentication through the <i>local_enable</i> password on the Switch) and none (no authentication necessary to access any function on the Switch).</p>
Restrictions	None.

Example usage:

To display all method lists for promoting user level privileges to administrator level privileges.

```
DGS-3700-12:5#show authen_enable all
Command: show authen_enable all

Method List Name  Priority  Method Name  Comment
-----
Permit            1        tacacs+      Built-in Group
                  2        tacacs       Built-in Group
                  3        Darren       User-defined Group
                  4        local        Keyword

default           1        tacacs+      Built-in Group
                  2        local        Keyword

Total Entries : 2

DGS-3700-12:5#
```

config authen application	
Purpose	Used to configure various applications on the Switch for authentication using a previously configured method list.
Syntax	config authen application [console telnet ssh http all] [login enable] [default method_list_name <string 15>]
Description	This command is used to configure Switch configuration applications (console, telnet, ssh, web) for login at the user level and at the administration level (<i>authen_enable</i>) utilizing a previously configured method list.
Parameters	<p><i>application</i> – Choose the application to configure. The user may choose one of the following five options to configure.</p> <p><i>console</i> – Choose this parameter to configure the command line interface login method.</p> <p><i>telnet</i> – Choose this parameter to configure the telnet login method.</p> <p><i>ssh</i> – Choose this parameter to configure the Secure Shell login method.</p> <p><i>http</i> – Choose this parameter to configure the web interface login method.</p> <p><i>all</i> – Choose this parameter to configure all applications (console, telnet, ssh, web) login method.</p> <p><i>login</i> – Use this parameter to configure an application for normal login on the user level, using a previously configured method list.</p> <p><i>enable</i> – Use this parameter to configure an application for upgrading a normal user level to administrator privileges, using a previously configured method list.</p> <p><i>default</i> – Use this parameter to configure an application for user authentication using the default method list.</p> <p><i>method_list_name <string 15></i> – Use this parameter to configure an application for user authentication using a previously configured method list. Enter a alphanumeric string of up to 15 characters to define a previously configured method list.</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To configure the default method list for the web interface:

```
DGS-3700-12:5#config authen application http login default
Command: config authen application http login default

Success.

DGS-3700-12:5#
```

show authen application

Purpose	Used to display authentication methods for the various applications on the Switch.
Syntax	show authen application
Description	This command will display all of the authentication method lists (login, enable administrator privileges) for Switch configuration applications (console, telnet, SSH, web) currently configured on the Switch.
Parameters	None.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To display the login and enable method list for all applications on the Switch:

```
DGS-3700-12:5#show authen application
Command: show authen application
```

Application	Login Method List	Enable Method List
Console	default	default
Telnet	Trinity	default
SSH	default	default
HTTP	default	default

```
DGS-3700-12:5#
```

create authen server_host

Purpose	Used to create an authentication server host.
Syntax	create authen server_host <ipaddr> protocol [tacacs xtacacs tacacs+ radius] {port <int 1-65535> key [<key_string 254> none] timeout <int 1-255> retransmit < 1-20>}
Description	This command will create an authentication server host for the TACACS/XTACACS/TACACS+/RADIUS security protocols on the Switch. When a user attempts to access the Switch with authentication protocol enabled, the Switch will send authentication packets to a remote TACACS/XTACACS/TACACS+/RADIUS server host on a remote host. The TACACS/XTACACS/TACACS+/RADIUS server host will then verify or deny the request and return the appropriate message to the Switch. More than one authentication protocol can be run on the same physical server host but, remember that TACACS/XTACACS/TACACS+/RADIUS are separate entities and are not compatible with each other. The maximum supported number of server hosts is 16.
Parameters	<i>server_host</i> <ipaddr> – The IP address of the remote server host to add. <i>protocol</i> – The protocol used by the server host. The user may choose one of the following: <i>tacacs</i> – Enter this parameter if the server host utilizes the TACACS protocol. <i>xtacacs</i> – Enter this parameter if the server host utilizes the XTACACS protocol. <i>tacacs+</i> – Enter this parameter if the server host utilizes the TACACS+ protocol.

create authen server_host	
	<p><i>radius</i> – Enter this parameter if the server host utilizes the RADIUS protocol.</p> <p><i>port</i> <int 1-65535> – Enter a number between 1 and 65535 to define the virtual port number of the authentication protocol on a server host. The default port number is 49 for TACACS/XTACACS/TACACS+ servers and 1812 and 1813 for RADIUS servers but the user may set a unique port number for higher security.</p> <p><i>key</i> <key_string 254> – Authentication key to be shared with a configured TACACS+ or RADIUS server only. Specify an alphanumeric string up to 254 characters.</p> <p><i>timeout</i> <int 1-255> – Enter the time in seconds the Switch will wait for the server host to reply to an authentication request. The default value is 5 seconds.</p> <p><i>retransmit</i> <int 1-20> – Enter the value in the retransmit field to change how many times the device will resend an authentication request when the server does not respond.</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To create a TACACS+ authentication server host, with port number 1234, a timeout value of 10 seconds and a retransmit count of 5.

<pre>DGS-3700-12:5#create authen server_host 10.1.1.121 protocol tacacs+ port 1234 timeout 10 retransmit 5 Command: create authen server_host 10.1.1.121 protocol tacacs+ port 1234 timeout 10 retransmit 5 Success. DGS-3700-12:5#</pre>

config authen server_host	
Purpose	Used to configure a user-defined authentication server host.
Syntax	config authen server_host <ipaddr> protocol [tacacs xtacacs tacacs+ radius] {port <int 1-65535> key [<key_string 254> none] timeout <int 1-255> retransmit < 1-20>}
Description	This command will configure a user-defined authentication server host for the TACACS/XTACACS/TACACS+/RADIUS security protocols on the Switch. When a user attempts to access the Switch with the authentication protocol enabled, the Switch will send authentication packets to a remote TACACS/XTACACS/TACACS+/RADIUS server host on a remote host. The TACACS/XTACACS/TACACS+/RADIUS server host will then verify or deny the request and return the appropriate message to the Switch. More than one authentication protocol can be run on the same physical server host but, remember that TACACS/XTACACS/TACACS+/RADIUS are separate entities and are not compatible with each other. The maximum supported number of server hosts is 16.
Parameters	<p><i>server_host</i> <ipaddr> – The IP address of the remote server host the user wishes to alter.</p> <p><i>protocol</i> – The protocol used by the server host. The user may choose one of the following:</p> <p><i>tacacs</i> – Enter this parameter if the server host utilizes the TACACS protocol.</p> <p><i>xtacacs</i> – Enter this parameter if the server host utilizes the XTACACS protocol.</p> <p><i>tacacs+</i> – Enter this parameter if the server host utilizes the TACACS+ protocol.</p> <p><i>radius</i> – Enter this parameter if the server host utilizes the RADIUS protocol.</p>

config authen server_host

port <int 1-65535> – Enter a number between 1 and 65535 to define the virtual port number of the authentication protocol on a server host. The default port number is 49 for TACACS/XTACACS/TACACS+ servers and 1812 and 1813 for RADIUS servers but the user may set a unique port number for higher security.

key <key_string 254> – Authentication key to be shared with a configured TACACS+ or RADIUS server only. Specify an alphanumeric string up to 254 characters or choose none.

timeout <int 1-255> – Enter the time in seconds the Switch will wait for the server host to reply to an authentication request. The default value is 5 seconds.

retransmit <int 1-20> – Enter the value in the retransmit field to change how many times the device will resend an authentication request when the server does not respond. This field is inoperable for the TACACS+ protocol.

Restrictions Only Administrator-level users can issue this command.

Example usage:

To configure a TACACS+ authentication server host, with port number 4321, a timeout value of 12 seconds and a retransmit count of 4.

```
DGS-3700-12:5#config authen server_host 10.1.1.121 protocol tacacs+ port 4321 timeout 12 retransmit 4
Command: config authen server_host 10.1.1.121 protocol tacacs+ port 4321 timeout 12 retransmit 4
```

Success.

DGS-3700-12:5#

delete authen server_host

Purpose Used to delete a user-defined authentication server host.

Syntax **delete authen server_host <ipaddr> protocol [tacacs | xtacacs | tacacs+ | radius]**

Description This command is used to delete a user-defined authentication server host previously created on the Switch.

Parameters

server_host <ipaddr> – The IP address of the remote server host to be deleted.

protocol – The protocol used by the server host the user wishes to delete. The user may choose one of the following:

tacacs – Enter this parameter if the server host utilizes the TACACS protocol.

xtacacs – Enter this parameter if the server host utilizes the XTACACS protocol.

tacacs+ – Enter this parameter if the server host utilizes the TACACS+ protocol.

radius – Enter this parameter if the server host utilizes the RADIUS protocol.

Restrictions Only Administrator-level users can issue this command.

Example usage:

To delete a user-defined TACACS+ authentication server host:

```
DGS-3700-12:5#delete authen server_host 10.1.1.121 protocol tacacs+
Command: delete authen server_host 10.1.1.121 protocol tacacs+
```

Success.

DGS-3700-12:5#

show authen server_host	
Purpose	Used to view a user-defined authentication server host.
Syntax	show authen server_host
Description	<p>This command is used to view user-defined authentication server hosts previously created on the Switch.</p> <p>The following parameters are displayed:</p> <p><i>IP Address</i> – The IP address of the authentication server host.</p> <p><i>Protocol</i> – The protocol used by the server host. Possible results will include TACACS, XTACACS, TACACS+ or RADIUS.</p> <p><i>Port</i> – The virtual port number on the server host. The default value is 49.</p> <p><i>Timeout</i> – The time in seconds the Switch will wait for the server host to reply to an authentication request.</p> <p><i>Retransmit</i> – The value in the retransmit field denotes how many times the device will resend an authentication request when the TACACS server does not respond. This field is inoperable for the tacacs+ protocol.</p> <p><i>Key</i> – Authentication key to be shared with a configured TACACS+ server only.</p>
Parameters	None.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To view authentication server hosts currently set on the Switch:

DGS-3700-12:5#show authen server_host					
Command: show authen server_host					
IP Address	Protocol	Port	Timeout	Retransmit	Key
-----	-----	-----	-----	-----	-----
10.53.13.94	TACACS	49	5	2	No Use
Total Entries : 1					
DGS-3700-12:5#					

create authen server_group	
Purpose	Used to create a user-defined authentication server group.
Syntax	create authen server_group {<string 15>}
Description	<p>This command will create an authentication server group. A server group is a technique used to group TACACS/XTACACS/TACACS+/RADIUS server hosts into user defined categories for authentication using method lists. The user may add up to eight authentication server hosts to this group using the config authen server_group command.</p>
Parameters	<string 15> – Enter an alphanumeric string of up to 15 characters to define the newly created server group.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To create the server group “group_1”:

```
DGS-3700-12:5#create authn server_group group_1
```

```
Command: create authn server_group group_1
```

```
Success.
```

```
DGS-3700-12:5#
```

config authn server_group

Purpose	Used to configure a user-defined authentication server group.
Syntax	config authn server_group [tacacs xtacacs tacacs+ radius <string 15>] [add delete] server_host <ipaddr> protocol [tacacs xtacacs tacacs+ radius]
Description	This command will configure an authentication server group. A server group is a technique used to group TACACS/XTACACS/TACACS+/RADIUS server hosts into user defined categories for authentication using method lists. The user may define the type of server group by protocol or by previously defined server group. Up to eight authentication server hosts may be added to any particular group
Parameters	<p><i>server_group</i> – The user may define the group by protocol groups built into the Switch (TACACS/XTACACS/TACACS+/RADIUS), or by a user-defined group previously created using the create authn server_group command.</p> <p><i>tacacs</i> – Use this parameter to utilize the built-in TACACS server protocol on the Switch. Only server hosts utilizing the TACACS protocol may be added to this group.</p> <p><i>xtacacs</i> – Use this parameter to utilize the built-in XTACACS server protocol on the Switch. Only server hosts utilizing the XTACACS protocol may be added to this group.</p> <p><i>tacacs+</i> – Use this parameter to utilize the built-in TACACS+ server protocol on the Switch. Only server hosts utilizing the TACACS+ protocol may be added to this group.</p> <p><i>radius</i> – Use this parameter to utilize the built-in RADIUS server protocol on the Switch. Only server hosts utilizing the RADIUS protocol may be added to this group.</p> <p><i><string 15></i> – Enter an alphanumeric string of up to 15 characters to define the previously created server group. This group may add any combination of server hosts to it, regardless of protocol.</p> <p><i>add/delete</i> – Enter the correct parameter to add or delete a server host from a server group.</p> <p><i>server_host <ipaddr></i> – Enter the IP address of the previously configured server host to add or delete.</p> <p><i>protocol</i> – Enter the protocol utilized by the server host. There are three options:</p> <p><i>tacacs</i> – Use this parameter to define the protocol if the server host is using the TACACS authentication protocol.</p> <p><i>xtacacs</i> – Use this parameter to define the protocol if the server host is using the XTACACS authentication protocol.</p> <p><i>tacacs+</i> – Use this parameter to define the protocol if the server host is using the TACACS+ authentication protocol.</p> <p><i>radius</i> – Use this parameter to define the protocol if the server host is using the RADIUS authentication protocol.</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To add an authentication host to server group “group_1”:

```
DGS-3700-12:5# config authen server_group group_1 add server_host 10.1.1.121 protocol
tacacs+
Command: config authen server_group group_1 add server_host 10.1.1.121 protocol tacacs+

Success.

DGS-3700-12:5#
```

delete authen server_group

Purpose	Used to delete a user-defined authentication server group.
Syntax	delete authen server_group <string 15>
Description	This command will delete an authentication server group.
Parameters	<string 15> – Enter an alphanumeric string of up to 15 characters to define the previously created server group to be deleted.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To delete the server group “group_1”:

```
DGS-3700-12:5# delete authen server_group group_1
Command: delete authen server_group group_1

Success.

DGS-3700-12:5#
```

show authen server_group

Purpose	Used to view authentication server groups on the Switch.
Syntax	show authen server_group {<string 15>}
Description	This command will display authentication server groups currently configured on the Switch. This command will display the following fields: Group Name: The name of the server group currently configured on the Switch, including built in groups and user defined groups. IP Address: The IP address of the server host. Protocol: The authentication protocol used by the server host.
Parameters	<string 15> – Enter an alphanumeric string of up to 15 characters to define the previously created server group to be viewed. Entering this command without the <string> parameter will display all authentication server groups on the Switch.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To view authentication server groups currently set on the Switch.

```
DGS-3700-12:5#show authen server_group
```

```
Command: show authen server_group
```

```
Server Group : mix_1
```

Group Name	IP Address	Protocol
-----	-----	-----
mix_1	10.1.1.222	TACACS+
	10.1.1.223	TACACS
radius	10.1.1.224	RADIUS
tacacs	10.1.1.225	TACACS
tacacs+	10.1.1.226	TACACS+
xtacacs	10.1.1.227	XTACACS

```
Total Entries : 5
```

```
DGS-3700-12:5#
```

config authen parameter response_timeout

Purpose	Used to configure the amount of time the Switch will wait for a user to enter authentication before timing out.
Syntax	config authen parameter response_timeout <int 0-255>
Description	This command will set the time the Switch will wait for a response of authentication from the user.
Parameters	<i>response_timeout</i> <int 0-255> – Set the time, in seconds, the Switch will wait for a response of authentication from the user attempting to log in from the command line interface or telnet interface. Zero means there won't be a time-out. The default value is 0 seconds.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To configure the response timeout for 60 seconds:

```
DGS-3700-12:5# config authen parameter response_timeout 60
```

```
Command: config authen parameter response_timeout 60
```

```
Success.
```

```
DGS-3700-12:5#
```

config authen parameter attempt

Purpose	Used to configure the maximum number of times the Switch will accept authentication attempts.
Syntax	config authen parameter attempt <int 1-255>
Description	This command will configure the maximum number of times the Switch will accept authentication attempts. Users failing to be authenticated after the set amount of attempts will be denied access to the Switch and will be locked out of further authentication attempts. Command line interface users will have to wait 60 seconds before another authentication attempt. Telnet users will be disconnected from the Switch.
Parameters	<i>parameter attempt</i> <int 1-255> – Set the maximum number of attempts the user may try to become authenticated by the Switch, before being locked out. The default setting is 3.

config authen parameter attempt

Restrictions	Only Administrator-level users can issue this command.
---------------------	--

Example usage:

To set the maximum number of authentication attempts at 5:

```
DGS-3700-12:5# config authen parameter attempt 5
Command: config authen parameter attempt 5

Success.

DGS-3700-12:5#
```

show authen parameter

Purpose	Used to display the authentication parameters currently configured on the Switch.
Syntax	show authen parameter
Description	This command will display the authentication parameters currently configured on the Switch, including the response timeout and user authentication attempts. This command will display the following fields: Response timeout – The configured time allotted for the Switch to wait for a response of authentication from the user attempting to log in from the command line interface or telnet interface. User attempts: The maximum number of attempts the user may try to become authenticated by the Switch, before being locked out.
Parameters	None.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To view the authentication parameters currently set on the Switch:

```
DGS-3700-12:5#show authen parameter
Command: show authen parameter

Response Timeout : 30 seconds
User Attempts    : 3

DGS-3700-12:5#
```

enable admin

Purpose	Used to promote user level privileges to administrator level privileges.
Syntax	enable admin
Description	This command is for users who have logged on to the Switch on the normal user level, to become promoted to the administrator level. After logging on to the Switch users will have only user level privileges. To gain access to administrator level privileges, the user will enter this command and will have to enter an authentication password. Possible authentication methods for this function include TACACS, XTACACS, TACACS+, RADIUS, user defined server groups, local enable (local account on the Switch), or no authentication (<i>none</i>). Because XTACACS and TACACS do not support the enable function, the user must create a special account on the server host which has the username “enable”, and a password configured by the administrator that will support the “enable” function. This function becomes inoperable when the authentication policy is disabled.

enable admin	
Parameters	None.
Restrictions	None.

Example usage:

To enable administrator privileges on the Switch:

```
DGS-3700-12:5#enable admin
Password: *****

DGS-3700-12:5#
```

config admin local_enable	
Purpose	Used to configure the local enable password for administrator level privileges.
Syntax	config admin local_enable
Description	This command will configure the locally enabled password for the enable admin command. When a user chooses the local_enable method to promote user level privileges to administrator privileges, he or she will be prompted to enter the password configured here that is set locally on the Switch.
Parameters	<password 15> – After entering this command, the user will be prompted to enter the old password, then a new password in an alphanumeric string of no more than 15 characters, and finally prompted to enter the new password again for confirmation. See the example below.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To configure the password for the “local_enable” authentication method.

```
DGS-3700-12:5#config admin local_enable
Command: config admin local_enable

Enter the old password:
Enter the case-sensitive new password:*****
Enter the new password again for confirmation:*****
Success.

DGS-3700-12:5#
```

IP-MAC-PORT BINDING (IMPB) COMMANDS

Back to Section Header

The IP network layer uses a four-byte address. The Ethernet link layer uses a six-byte MAC address. Binding these two address types together allows the transmission of data between the layers. The primary purpose of IP-MAC binding is to restrict the access to a switch to a number of authorized users. Only the authorized client can access the Switch's port by checking the pair of IP-MAC addresses with the pre-configured database. If an unauthorized user tries to access an IP-MAC binding enabled port, the system will block the access by dropping its packet. The maximum number of IP-MAC binding entries is dependant on chip capability (e.g. the ARP table size) and storage size of the device. For the DGS-3700 Series, the maximum number of IP-MAC Binding entries is 511. The creation of authorized users can be manually configured by CLI or Web. The function is port-based, meaning a user can enable or disable the function on the individual port.

ACL Mode

Due to some special cases that have arisen with the IP-MAC binding, this Switch has been equipped with a special ACL Mode for IP-MAC Binding, which should alleviate this problem for users. When enabled, the Switch will create one entries in the Access Profile Table. The entries may only be created if there are at least one Profile ID available on the Switch. If not, when the ACL Mode is enabled, an error message will be prompted to the user. When the ACL Mode is enabled, the Switch will only accept packets from a created entry in the IP-MAC Binding Setting window. All others will be discarded. The function is port-based, meaning a user can enable or disable the function on the individual port.

The user can enable or disable ACL mode per port, the default mode of all port is ARP. When user configure one port mode to ACL mode, if the HW ACL table has no enough entries, the operation fails, in other words all entries of the port will go back to ARP mode. Because IP-MAC binding entries follow port's mode, for static, if in ACL mode and there is no ACL rules to program new static entries, the operation fails; for dynamic, if in ACL mode and there is no ACL rules to program new dynamic entries, new dynamic entries can't be taken effect. The Switch log under this situation.

NOTE: When configuring the ACL mode function of the IP-MAC-Port Binding function, please pay close attention to previously set ACL entries. Since the ACL mode is enabled, it adds the last available access profile ID to the ACL table, and the first ACL mode entry takes precedence over later entries. This may render some user-defined ACL parameters inoperable due to the overlapping of settings combined with the ACL entry priority (defined by profile ID). For more information on ACL settings, please refer to "Access Control List (ACL) Commands" section in this manual.

NOTE: Once ACL profiles have been created by the Switch through the IP-MAC binding function, the user cannot modify, delete or add ACL rules to these ACL mode access profile entries. Any attempt to modify, delete or add ACL rules will result in a configuration error as seen in the previous figure.

NOTE: When downloading configuration files to the Switch, be aware of the ACL configurations loaded, as compared to the ACL mode access profile entries set by this function, which may cause both access profile types to experience problems.

The IP-MAC Binding commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
config address_binding ip_mac ports	[<portlist> all] { state [enable {[strict loose] [ipv6 all]}] disable {[ipv6 all]}] allow_zeroip [enable disable] forward_dhcppt [enable disable] mode [arp acl] stop_learning_threshold<int 0-500>}
create address_binding ip_mac	[ipaddress < ipaddr > ipv6address <ipv6addr>] mac_address < macaddr > { ports [portlist all] mode [arp acl]}
delete address_binding	[ip_mac [[all ipaddress <ipaddr> mac_address <macaddr>] ipv6address <ipv6addr> mac_address <macaddr> blocked [all vlan_name <vlan_name> mac_address <macaddr>]]
config address_binding ip_mac	[ipaddress < ipaddr > ipv6address <ipv6addr>] mac_address <macaddr> { ports [<portlist> all] mode [arp acl]}
show address_binding	{[ip_mac [all ipaddress <ipaddr> mac_address <macaddr>] ipv6address <ipv6addr> mac_address <macaddr>] blocked [all vlan_name <vlan_name> mac_address <macaddr>] ports{<portlist>}}
enable address_binding dhcp_snoop	{[ipv6 all]}
disable address_binding dhcp_snoop	{[ipv6 all]}
clear address_binding dhcp_snoop binding_entry ports	[<portlist> all] {[ipv6 all]}
show address_binding dhcp_snoop	{[max_entry { ports <portlist> } binding_entry {port <port>}]}
config address_binding dhcp_snoop max_entry ports	[<portlist> all] limit [<value 1-50> no_limit] {ipv6}
enable address_binding trap_log	
disable address_binding trap_log	
enable address_binding arp_inspection	
disable address_binding arp_inspection	
enable address_binding nd_snoop	
disable address_binding nd_snoop	
config address_binding nd_snoop ports	[< portlist > all] max_entry [< value 1-10 > no_limit]
config address_binding recover_learning ports	[<portlist> all]
show address_binding nd_snoop	{ ports <portlist> }
show address_binding nd_snoop binding_entry	{ port < port > }
clear address_binding nd_snoop binding_entry	ports [<portlist> all]

COMMAND	PARAMETERS
config address_binding ip_mac ports	[<portlist> all] { state [enable {[strict loose] [ipv6 all]} disable {[ipv6 all]}] allow_zeroip [enable disable] forward_dhcppt [enable disable] mode [arp acl] stop_learning_threshold<int 0-500>}
debug address_binding	[event dhcp all]
no debug address_binding	

Each command is listed, in detail, in the following sections.

config address_binding ip_mac ports	
Purpose	The config address_binding ip_mac ports command is used to configure per port state of IP-MAC binding in the switch.
Syntax	config address_binding ip_mac ports [<portlist> all] { state [enable {[strict loose] [ipv6 all]} disable {[ipv6 all]}] allow_zeroip [enable disable] forward_dhcppt [enable disable]}
Description	<p>This command is used to configure per port state of IP-MAC binding on the switch. If a port has been configured as a group member of an aggregated link, then it can not enable its ip mac binding function.</p> <p>When the binding check state is enabled, for IP packet and ARP packet received by this port, the switch will check whether the IP address and MAC address match the binding entries, the packet will be dropped if they did not match.</p> <p>For this function, the switch can operate in ACL mode or ARP mode, In ARP mode, only ARP packets are checked for binding, In ACL mode, both ARP packet and IP packets are checked for binding. Therefore, ACL mode provides more strict checks for packets.</p> <p>The configuration of an entry in the ACL mode will consume the resources in the switch controller. An ACL mode entry may not be effective. The status of the entry will display this information. When an entry is not effective, the check for IP packet will not be performed. The check for the ARP packet will still be performed.</p> <p>For the check of ARP packet, both of the ARP request and reply packet will be checked. The packet with source IP address not defined in the source-validity binding entry or with source MAC address not defined in the source-validity binding entry, or if the source IP address and source MAC address do not match the pair defined the source-validity binding entry will be dropped. The ARL entry corresponds to source MAC address in the invalid packet so it will be set to a blocked state.</p> <p>When an ARL entry is set to a blocked state, if correct source IP address occurred with the blocked MAC address, the ARL entry for this MAC address will be recovered.</p> <p>If acl_mode is changed, the switch will add/delete ACL access entries automatically when the configured state is enable/disable. (To deny all ip packets on this port).</p> <p>If the acl pool is full and the switch can not create any new ACL access entry, the switch will show a warning message. At this moment, this port will enter normal address_binding mode.</p>
Parameters	<p><i>state</i> – configure address binding port state to enable or disable. When the state is enabled, the port will perform the binding check.</p> <p><i>ipv6</i> - For “state enable ipv6”, only the IPv6 filter table applied to the driver. For “state enable” without specifying “ipv6”, only the IPv4 filtering table is applied to driver. For “state enable all”, both IPv4 and IPv6 filtering tables are applied to the driver. For example, if IPv6 is enabled, but IPv4 is disabled, only the IPv6 Snooping entry is used to create a HW filtering table, if the FDB is used as the HW</p>

config address_binding ip_mac ports	
	<p>filtering table, and one IPv6 entry is allowed to be forwarded, all IPv4 packets get forwarded.</p> <p><i>strict</i> – This mode provides a more strict way of control. If user chooses it, all packets will be sent to CPU, thus all packets will not be forwarded by the hardware until the S/W learn entries for the port. The port will check ARP packets and IP packets by IP-MAC-PORT Binding entries. The packet is found by the entry, the MAC will be set to dynamic. The packet isn't found by the entry, the MAC will be set to block. Other packets will be dropped. The default mode is strict if not specified.</p> <p><i>loose</i> – This mode provides a more loose way of control. If user chooses loose, ARP packets and IP Broadcast packets will go to the CPU. The packet will still be forwarded by the hardware until a specific source MAC is blocked by the software. The port will check ARP packets and IP Broadcast packets by IP-MAC-PORT Binding entries. The packet is found by the entry, the MAC will be set to dynamic. The packet isn't found by the entry, the MAC will be set to block. Other packets will be bypassed.</p> <p><i>allow_zeroip</i> – Specify whether to allow ARP packet with SIP address 0.0.0.0. Supposed that 0.0.0.0 is not configured in the binding list, when it is set to enabled, the ARP packet with this source IP address 0.0.0.0 is allowed; when it is set to disable the ARP packet with this source IP address 0.0.0.0 is dropped. This option does not affect the IP-MAC-Port binding ACL Mode.</p> <p><i>forward_dhcppkt</i> – By default, the dhcp packet with broadcast DA will be flooded. When set to disabled, the broadcast DHCP packet received by the specified port will not be forwarded. This setting is effective when DHCP snooping is enabled, under which case the DHCP packet which has been trapped to CPU needs to be forwarded by the software. This setting controls the forwarding behaviour under this situation.</p> <p><i><portlist></i> – Specifies a port or range of ports. <i>all</i> – specifies all ports on the switch.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure port 1 enable address_binding:

<pre>DGS-3700-12:5# config address_binding ip_mac ports 1 state enable Command: config address_binding ip_mac ports 1 state enable Success. DGS-3700-12:5#</pre>
--

create address_binding ip_mac ipaddress	
Purpose	To create an address_binding entry.
Syntax	create address_binding ip_mac [ipaddress < ipaddr > ipv6address <ipv6addr>] mac_address <macaddr> { ports [<portlist> all] mode [arp acl]}
Description	<p>This command is used to create an address binding entry.</p> <p>One MAC address can map to multiple ip address</p> <p>If acl mode is enable, the switch will add the according ACL access entries</p>

create address_binding ip_mac ipaddress	
	<p>automatically.</p> <p>If user do not choose acl mode or arp mode, default is arp mode.</p>
Parameters	<p><i>ipaddress</i> – The IP address of the device where the IP-MAC binding is made.</p> <p><i>Ipv6address</i> - The IPv6 address used for the IMPB entry.</p> <p><i>mac_address</i> – The MAC address of the device where the IP-MAC binding is made.</p> <p><i>ports</i> – Specifies a port or range of ports to be configured for address binding.</p> <p><i>all</i> – Specifies that all ports on the switch will be configured for address binding.</p> <p><i>mode</i> – The user may set the mode for this IP-MAC binding settings by choosing one of the following:</p> <p><i>arp</i> – This entry is specified as an arp mode entry. this entry will not be added as access entries. If not specified, the mode is default to ARP mode. If the system is in ARP mode, the arp mode entries and acl mode entries will be effective. If the system is in acl mode, only the acl mode entries will be active.</p> <p><i>acl</i> – This entry is specified as an acl mode entry. If user enable acl mode, this entry will be added as access entry.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create address binding for all ports on the Switch:

```
DGS-3700-12:5#create address_binding ip_mac ipaddress 10.1.1.1 mac_address 00-00-00-00-00-11
Command: create address_binding ip_mac ipaddress 10.1.1.1 mac_address 00-00-00-00-00-11

Success.

DGS-3700-12:5#
```

To create address binding on the Switch to port 1:

```
DGS-3700-12:5#create address_binding ip_mac ipaddress 10.1.1.1 mac_address 00-00-00-00-00-11 ports 1
Command: create address_binding ip_mac ipaddress 10.1.1.1 mac_address 00-00-00-00-00-11 ports 1

Success.

DGS-3700-12:5#
```

To create address binding on the Switch to port 1 and by ACL mode:

```
DGS-3700-12:5#create address_binding ip_mac ipaddress 10.1.1.1 mac_address 00-00-00-00-00-11 ports 1 mode acl
Command: create address_binding ip_mac ipaddress 10.1.1.1 mac_address 00-00-00-00-00-11 ports 1 mode acl

Success.

DGS-3700-12:5#
```

delete address_binding	
Purpose	To delete a address binding entry.

delete address_binding	
Syntax	delete address_binding [all ipaddress <ipaddr> mac_address <macaddr>] ipv6address <ipv6addr> mac_address <macaddr> blocked [all vlan_name <vlan_name> mac_address <macaddr>]]
Description	This command is used to delete an address binding entry. If acl mode is enabled, the switch will delete the according ACL access entries automatically.
Parameters	<i>ip_mac</i> – The database that user create for address binding. <i>blocked</i> – The address database that system auto learned and blocked. <i>ipaddress</i> – The IP address. <i>ipv6address</i> - The IPv6 address of the entry in the database. <i>mac_address</i> – The MAC address. <i>vlan_name</i> – VLAN name (the blocked MAC belongs to).
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete address binding on the Switch:

```
DGS-3700-12:5# delete address_binding ip_mac ipaddress 10.1.1.1 mac_address 00-00-00-00-00-11
Command: delete address_binding ip_mac ipaddress 10.1.1.1 mac_address 00-00-00-00-00-11

Success.

DGS-3700-12:5#
```

config address_binding ip_mac ipaddress	
Purpose	To update a address_binding entry.
Syntax	config address_binding ip_mac [ipaddress < ipaddr > ipv6address <ipv6addr>] mac_address <macaddr> { ports [<portlist> all] mode [acl arp]}
Description	This command is used to update an address binding entry.
Parameters	<i>ipaddress</i> – The IP address of the device where the IP-MAC binding is made. <i>ipv6address</i> - The IPv6 address of the entry being updated. <i>mac_address</i> – The MAC address of the device where the IP-MAC binding is made. <i>ports</i> – Specifies a port or range of ports to be configured for address binding, if no ports are specified it will apply to all ports. <i>arp</i> – This entry is specified as an arp mode entry. this entry will not be added as access entries. If not specified, the mode is default to ARP mode. If the system is in ARP mode, the arp mode entries and acl mode entries will be effective. If the system is in acl mode, only the ACL mode entries will be active; the arp mode entry will no in-effective. <i>acl</i> – This entry is specified as an ACL mode entry. If a user enables ACL mode, this entry will be added as an access entry.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure address_binding with arp mode for all ports on the Switch:

```
DGS-3700-12:5#config address_binding ip_mac ipaddress 10.1.1.1 mac_address 00-00-00-00-00-11
Command: config address_binding ip_mac ipaddress 10.1.1.1 mac_address 00-00-00-00-00-11

Success.

DGS-3700-12:5#
```

To configure address_binding on the Switch to port 1:

```
DGS-3700-12:5#config address_binding ip_mac ipaddress 10.1.1.1 mac_address 00-00-00-00-00-11 ports 1
Command: config address_binding ip_mac ipaddress 10.1.1.1 mac_address 00-00-00-00-00-11 ports 1

Success.

DGS-3700-12:5#
```

To configure address_binding on the Switch to port 1 and by acl mode:

```
DGS-3700-12:5#config address_binding ip_mac ipaddress 10.1.1.1 mac_address 00-00-00-00-00-11 ports 1 mode acl
Command: config address_binding ip_mac ipaddress 10.1.1.1 mac_address 00-00-00-00-00-11 ports 1 mode acl

Success.

DGS-3700-12:5#
```

show address_binding

Purpose	To show address binding entries, blocked MAC entries, and port status.
Syntax	show address_binding {[ip_mac [all ipaddress <ipaddr> mac_address <macaddr>] ipv6address <ipv6addr> mac_address <macaddr> blocked [all vlan_name <vlan_name> mac_address <macaddr>]]ports <portlist> }
Description	This command will display IP-MAC Binding entries. Three different kinds of information can be viewed. <i>ip_mac</i> – Address Binding entries can be viewed by entering the physical and IP addresses of the device. <i>blocked</i> – Blocked address binding entries (bindings between VLAN names and MAC addresses) can be viewed by entering the VLAN name and the physical address of the device. <i>ports</i> – The number of enabled ports on a device.
Parameters	<i>ip_mac</i> – The database that user create for address binding. <i>blocked</i> – The address database that system auto learned and blocked. <i>ipaddress</i> – The IP address of the device where the IP-MAC binding is made. <i>ipv6address</i> - The IPv6 address of the entry in the database. <i>mac_address</i> – The MAC address of the device where the IP-MAC binding is made. <i>vlan_name</i> – The VLAN name of the VLAN that is bound to a MAC address in order to block a specific device on a known VLAN.
Restrictions	None.

Example usage:

To show the address binding global configuration:

```
DGS-3700-12:5#show address_binding
Command: show address_binding

Trap/Log           : Disabled
ARP Inspection     : Disabled
DHCP Snoop(IPv4)  : Disabled
DHCP Snoop(IPv6)  : Disabled
ND Snoop           : Disabled

DGS-3700-12:5#
```

To show address binding entries:

The status will only be displayed when the system is in ACL mode. In ARP mode, all of the binding entries are effective. If the system is in ACL mode, those ACL mode binding entries will be effective, but the ARP mode binding entries will be inactive.

```
DGS-3700-12:5#show address_binding ip_mac all
Command: show address_binding ip_mac all

M(Mode) - D:DHCP,N:ND,S:Static ST(ACL Status) - A:Active I:Inactive

IP Address                MAC Address                M  ST Ports
-----
10.1.1.1                  00-00-00-00-00-11         S  I 1,3,5,7,8
10.1.1.2                  00-00-00-00-00-12         S  A 1
10.1.1.10                 00-00-00-00-00-aa         D  A 1
2001:1111:2222:3333:4444:5555:6666:7777  00-00-00-00-00-02         D  I 2
2001:1111::1              00-00-00-00-00-03         N  I 5

Total Entries : 5

DGS-3700-12:5#
```

To show blocked address binding:

DGS-3700-12:5#show address_binding blocked all

Command: show address_binding blocked all

VID	VLAN Name	MAC Address	Port
----	-----	-----	-----
1	default	00-01-02-03-29-38	7
1	default	00-0C-6E-5C-67-F4	7
1	default	00-0C-F8-20-90-01	7
1	default	00-0E-35-C7-FA-3F	7
1	default	00-0E-A6-8F-72-EA	7
1	default	00-0E-A6-C3-34-BE	7
1	default	00-11-2F-6D-F3-AC	7
1	default	00-50-8D-36-89-48	7
1	default	00-50-BA-00-05-9E	7
1	default	00-50-BA-10-D8-F6	7
1	default	00-50-BA-38-7D-E0	7
1	default	00-50-BA-51-31-62	7
1	default	00-50-BA-DA-01-58	7
1	default	00-A0-C9-01-01-23	7
1	default	00-E0-18-D4-63-1C	7

Total Entries : 15

DGS-3700-12:5#

To display address binding ports:

DGS-3700-12:5#show address_binding ports

Command: show address_binding ports

Port	IPv4 State	IPv6 State	Mode	Zero IP	DHCP Packet	Stop Learning Threshold/Mode
-----	-----	-----	----	-----	-----	-----
1	Disabled	Disabled	ARP	Not Allow	Forward	500/Normal
2	Disabled	Disabled	ARP	Not Allow	Forward	500/Normal
3	Disabled	Disabled	ARP	Not Allow	Forward	500/Normal
4	Disabled	Disabled	ARP	Not Allow	Forward	500/Normal
5	Disabled	Disabled	ARP	Not Allow	Forward	500/Normal
6	Disabled	Disabled	ARP	Not Allow	Forward	500/Normal
7	Disabled	Disabled	ARP	Not Allow	Forward	500/Normal
8	Disabled	Disabled	ARP	Not Allow	Forward	500/Normal
9	Disabled	Disabled	ARP	Not Allow	Forward	500/Normal
10	Disabled	Disabled	ARP	Not Allow	Forward	500/Normal
11	Disabled	Disabled	ARP	Not Allow	Forward	500/Normal
12	Disabled	Disabled	ARP	Not Allow	Forward	500/Normal

DGS-3700-12G:5#

enable address_binding dhcp_snoop

Purpose	To enable address binding auto mode.
Syntax	enable address_binding dhcp_snoop { [ipv6 all] }
Description	By default, DHCP snooping is disabled. If user enables auto mode, all address_binding disabled ports will take as server ports (the switch will learned IP address through server ports (by DHCP OFFER and DHCP ACK packets)).

enable address_binding dhcp_snoop	
	<p>The auto-learned IP-MAC binding entry will be mapped to a specific source port based on the MAC address learning function. This entry will be created as an Auto-mode binding entry for this specific port. Each entry is associated with a lease time. When the lease time expired, the expired entry will be removed from this port. The auto-learned binding entry can be moved from one port to another port if the DHCP snooping function has learned that the MAC address is moved to a different port.</p> <p>Consider the case that a binding entry learned by DHCP snooping is conflict with the statically configured entry. The conflict case means that the binding relation is conflict. For example, if IP A is binded with MAC X by static configuration, supposed that the binding entry learned by DHCP snooping is IP A binded by MAC Y, then it is conflict. When the DHCP snooping learned entry is binded with the static configured entry, then the DHCP snooping learned entry will not be created.</p> <p>Consider the other conflict case when the DHCP snooping learned a binding entry, and the same IP-MAC binding pair has been statically configured. Supposed that the learned information is consistent with the static configured entry, then the auto-learned will not be created. Supposed that the entry is statically configured in ARP mode, then the auto learned entry will not be created. Supposed that the entry is statically configured on one port and the entry is auto-learned on another port, then the auto-learned entry will not be created either.</p>
Parameters	<p><i>ipv6</i> - Enable DHCP Snooping for IPv6. <i>all</i> - Enable IPv4 and IPv6 DHCP Snooping. If no parameter specified, enables IPv4 Snooping.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable address_binding auto_mode on the Switch:

```
DGS-3700-12:5#enable address_binding dhcp_snoop
Command: enable address_binding dhcp_snoop

Success.

DGS-3700-12:5#
```

disable address_binding dhcp_snoop	
Purpose	To disable the address binding auto mode.
Syntax	disable address_binding dhcp_snoop { [ipv6 all] }
Description	When the DHCP snoop function is disabled, all of the auto-learned binding entries will be removed.
Parameters	<p><i>ipv6</i> - Disable IPv6 DHCP Snooping. <i>all</i> - Disable IPv4 and IPv6 DHCP Snooping. If no parameter specified, disables IPv4 Snooping.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable the address binding auto mode:

```
DGS-3700-12:5#disable address_binding dhcp_snoop
```

```
Command: disable address_binding dhcp_snoop
```

```
Success.
```

```
DGS-3700-12:5#
```

clear address_binding dhcp_snoop binding_entry ports

Purpose	To clear the address binding entries learned for the specified ports.
Syntax	clear address_binding dhcp_snoop binding_entry ports [<portlist> all] {[ipv6 all]}
Description	This command is used to clear the address binding entries learned for the specified ports.
Parameters	<i>ports</i> – Specifies the list of ports that you would like to clear the DHCP-snoop learned entry. <i>ipv6</i> - Clear IPv6 DHCP Snooping learned entries. <i>all</i> - Clear both IPv4 and IPv6 DHCP Snooping learned entries.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To clear address binding DHCP snooping binding entries on ports 1-3:

```
DGS-3700-12:5#clear address_binding dhcp_snoop binding_entry ports 1-3
```

```
Command: clear address_binding dhcp_snoop binding_entry ports 1-3
```

```
Success.
```

```
DGS-3700-12:5#
```

show address_binding dhcp_snoop

Purpose	To show address binding auto learning database.
Syntax	show address_binding dhcp_snoop {[max_entry { ports <portlist>} binding_entry {port <port>}}}
Description	This command is used to show all auto-learning database.
Parameters	<i>max_entry</i> – Displays the max number of entries which can be learned by dhcp snoop on the specified ports. <i>binding_entry</i> – Displays the address binding entries learned for the specified port.
Restrictions	None.

Example usage:

To show the DHCP Snooping state:

```
DGS-3700-12:5#show address_binding dhcp_snoop
```

```
Command: show address_binding dhcp_snoop
```

```
DHCP_Snoop(IPv4) : Disabled
```

```
DHCP_Snoop(IPv6) : Disabled
```

```
DGS-3700-12:5#
```

To show address binding DHCP snoop by entry:

```
DGS-3700-12:5#show address_binding dhcp_snoop binding_entry
Command: show address_binding dhcp_snoop binding_entry

LT(Lease Time)  ST(Status) - A:Active I:Inactive

IP Address                MAC Address            LT(sec)   Port  ST
-----
10.62.58.35               00-0B-5D-05-34-0B    35964    1     A
10.33.53.82               00-20-c3-56-b2-ef    2590     2     I
2001:2222:1111:7777:5555:6666:7777:8888  00-00-00-00-00-02    50       5     I
2001::1                   00-00-00-00-03-02    100      6     A

Total Entries : 4

DGS-3700-12:5#
```

To display DHCP Snooping maximum entry configuration on the specified ports:

```
DGS-3700-12:5#show address_binding dhcp_snoop max_entry ports 1-12
Command: show address_binding dhcp_snoop max_entry ports 1-12

Port      Max Entry      Max IPv6 Entry
-----
1         10             10
2         10             10
3         10             30
4         No Limit      50
5         No Limit      10
6         No Limit      No Limit
7         No Limit      No Limit
8         No Limit      No Limit
9         No Limit      No Limit
10        No Limit      No Limit
11        No Limit      No Limit
12        No Limit      No Limit

DGS-3700-12:5#
```

config address_binding dhcp_snoop max_entry

Purpose	Specifies the max number of entries which can be learned by the specified ports.
Syntax	config address_binding dhcp_snoop max_entry ports [<portlist> all] limit [<value 1-50> no_limit] { ipv6 }
Description	This command specifies the max number of entries which can be learned by the specified ports. By default, per port max entry is no limit.
Parameters	<i>ports</i> – Specifies the list of ports that you would like to config for the max number of dhcp-snoop learned entries, which can be learned. <i>limit</i> – Specifies the max number. <i>ipv6</i> - Specifies the configuration is for IPv6 DHCP Snooping.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To set the max number of entries that ports 1 to 3 can learn, up to 10:

```
DGS-3700-12:5#config address_binding dhcp_snoop max_entry ports 1-3 limit 10
Command: config address_binding dhcp_snoop max_entry ports 1-3 limit 10

Success.

DGS-3700-12:5#
```

enable address_binding trap_log

Purpose	Used to enable address_binding trap/log.
Syntax	enable address_binding trap_log
Description	This command is used to send trap and log when address binding module detects illegal ip and mac address.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To enable address binding trap/log:

```
DGS-3700-12:5#enable address_binding trap_log
Command: enable address_binding trap_log

Success.

DGS-3700-12:5#
```

disable address_binding trap_log

Purpose	Used to disable address binding trap/log.
Syntax	disable address_binding trap_log
Description	This command is used to disable address binding trap/log.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To disable address binding trap/log:

```
DGS-3700-12:5#disable address_binding trap_log
Command: disable address_binding trap_log

Success.

DGS-3700-12:5#
```

enable address_binding arp_inspection

Purpose	Used to enable ARP inspection on IMPB enabled ports.
Syntax	enable address_binding arp_inspection
Description	By default, ARP inspection is disabled. When ARP inspection is enabled, the switch will validate the ARP request or ARP reply packets by retrieving the sender's (MAC, IP) from an ARP packet payload. If the (IP, MAC) are in IMPB list, the ARP packets will be forwarded, otherwise the ARP packet will be discarded. When ARP inspection and ASP (ARP Spoofing Prevention) are enabled on the same port, the ARP packets which match ASP entries will be forwarded according to the

enable address_binding arp_inspection

	ASP's behavior. The unknown ARP packets will be checked by IMPB. When IMPB enabled ports works on strict mode, ARP inspection will be enabled, otherwise, ARP inspection will be disabled.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable IMPB ARP inspection:

```
DGS-3700-12G:5# enable address_binding arp_inspection
Command: enable address_binding arp_inspection

Success.

DGS-3700-12G:5#
```

disable address_binding arp_inspection

Purpose	Used to disable ARP inspection on IMPB enabled ports.
Syntax	disable address_binding arp_inspection
Description	This command can be used to disable ARP inspection on IMPB enabled ports. When IMPB enabled ports works on strict mode, ARP inspection will be enabled, otherwise, ARP inspection will be disabled.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable ARP inspection on IMPB enabled ports:

```
DGS-3700-12G:5# disable address_binding arp_inspection
Command: disable address_binding arp_inspection

Success.

DGS-3700-12G:5#
```

enable address_binding nd_snoop

Purpose	This command is used to enable ND Snooping on the switch.
Syntax	enable address_binding nd_snoop
Description	This command allows the user to enable ND Snooping on switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable ND Snooping function on the switch:

```
DGS-3700-12G:5# enable address_binding nd_snoop
Command: enable address_binding nd_snoop

Success.

DGS-3700-12G:5#
```

disable address_binding nd_snoop

Purpose	This command is used to disable ND Snooping on the switch.
Syntax	disable address_binding nd_snoop
Description	This command allows the user to disable ND Snooping on switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To disable DHCPv6 Snooping function on the switch:

```
DGS-3700-12G:5# disable address_binding nd_snoop
Command: disable address_binding nd_snoop

Success.

DGS-3700-12G:5#
```

config address_binding nd_snoop ports

Purpose	This command is used to specify the maximum number of entries which can be learned with ND Snooping.
Syntax	config address_binding nd_snoop ports [< portlist > all] max_entry [< value 1-10 > no_limit]
Description	By default, per port maximum entry is no limit. This command specifies the maximum number of entries which can be learned by the specified ports.
Parameters	<i>ports</i> - Specifies the list of ports that you would like to set the maximum number of entries which can be learned. <i>all</i> - Indicates all the ports on the Switch. <i>max_entry</i> - Specifies the maximum number. <i>no_limit</i> - Specifies that the maximum number of learned entries is unlimited.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To set the maximum number of entries that port 1–3 can learned to 10:

```
DGS-3700-12G:5# config address_binding nd_snoop ports 1-3 max_entry 10
Command: config address_binding nd_snoop ports 1-3 max_entry 10

Success.

DGS-3700-12G:5#
```

config address_binding recover_learning ports

Purpose	This command is used to recover IMPB checking.
Syntax	config address_binding recover_learning ports [<portlist> all]

config address_binding recover_learning ports

Description	Use this command to recover the IMPB check function, which was previously stopped.
Parameters	<i>ports</i> - Specifies the list of ports that need to recover the IMPB check. <i>all</i> - Indicates all the ports on the Switch.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure address binding recover learning mode on ports 5 to 7

```
DGS-3700-12G:5#config address_binding recover_learning ports 5-7
```

```
Command: config address_binding recover_learning ports 5-7
```

```
Success.
```

```
DGS-3700-12G:5#
```

show address_binding nd_snoop

Purpose	This command is used to display the status of ND Snooping on the switch.
Syntax	show address_binding nd_snoop { ports <portlist> }
Description	This command allows the user to display ND Snooping state on switch.
Parameters	<i>ports</i> - Used to specify the ports that display ND Snooping information. If no ports parameter is specified, it will show the maximum number for all ND Snooping ports. If no parameter specified, show all ND Snooping global state.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To show ND Snooping state:

```
DGS-3700-12G:5# show address_binding nd_snoop
```

```
Command: show address_binding nd_snoop
```

```
ND Snoop      : Enabled
```

```
DGS-3700-12G:5#
```

To show ND Snooping maximum entry:

```
DGS-3700-12G:5#show address_binding nd_snoop ports 1-12
```

```
Command: show address_binding nd_snoop ports 1-12
```

```
Port          Max Entry
-----
1             10
2             10
3             10
4             No Limit
5             No Limit
6             No Limit
7             No Limit
8             No Limit
9             No Limit
10            No Limit
11            No Limit
12            No Limit
```

```
DGS-3700-12G:5#
```

show address_binding nd_snoop binding_entry

Purpose	This command is used to show binding entries of ND Snooping on the switch.
Syntax	show address_binding nd_snoop binding_entry {port <port>}
Description	This command allows the user to display binding entries of ND Snooping on the switch.
Parameters	<i>port</i> - Specify port number If no parameter specified, it will show all ND Snooping binding entries.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To display the ND Snooping binding entry:

Note: "Inactive" indicates that the entry is currently inactive due to port link down.

```
DGS-3700-12G:5#show address_binding nd_snoop binding_entry
```

```
Command: show address_binding nd_snoop binding_entry
```

```
LT(Lease Time)  ST(Status) - A:Active I:Inactive
```

```
IP Address          MAC Address          LT(sec)  Port  ST
-----
2001:2222:1111:7777:5555:6666:7777:8888  00-00-00-00-00-02    I       50   5
2001:::1            00-00-00-00-03-02    A       100  6
```

```
Total Entries : 2
```

```
DGS-3700-12G:5#
```

clear address_binding nd_snoop binding_entry

Purpose	This command is used to clear the ND Snooping entries on specified ports.
Syntax	clear address_binding nd_snoop binding_entry ports [<portlist> all]
Description	To clear the entries learned for the specified ports.
Parameters	<i>ports</i> - Specifies the list of ports that you would like to clear the ND snoop learned entry. <i>all</i> - Clear all ND Snooping learned entries.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To clear ND Snooping entry on ports 1-3:

```
DGS-3700-12G:5# clear address_binding nd_snoop binding_entry ports 1-3
Command: clear address_binding nd_snoop binding_entry ports 1-3

Success.

DGS-3700-12G:5#
```

debug address_binding

Purpose	Start the IMPB debug when the IMPB module receives an ARP/IP packet or a DHCP packet.
Syntax	debug address_binding [event dhcp all]
Description	Use this command to start the IMPB debug when the IMPB module receives an ARP/IP packet or a DHCP packet.
Parameters	<i>event</i> - To display the debug messages when IMPB module receives ARP/IP packets. <i>dhcp</i> - To display the debug messages when the IMPB module receives the DHCP packets. <i>all</i> - Displays all debug messages.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

Start IMPB debug event or DHCP debug event:

```
DGS-3700-12G:5# debug address_binding all
Command: debug address_binding all

Success.

DGS-3700-12G:5#
```

no debug address_binding

Purpose	Stop the IMPB debug starting when the IMPB module receives an ARP/IP packet or a DHCP packet.
Syntax	no debug address_binding
Description	Use this command to stop the IMPB debug starting when the IMPB module receives an ARP/IP packet or a DHCP packet.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

Stop IMPB debug event or DHCP debug event:

```
DGS-3700-12G:5# no debug address_binding
Command: no debug address_binding

Success.

DGS-3700-12G:5#
```

MAC-BASED ACCESS CONTROL COMMANDS

Back to Section Header

The MAC-based Access Control Commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
enable mac_based_access_control	
disable mac_based_access_control	
config mac_based_access_control password	<passwd 16>
config mac_based_access_control method	[local radius]
config mac_based_access_control ports	[<portlist> all] {state [enable disable] mode [port_based host_based] aging_time [infinite <min 1-1440>] block_time <second 0-300> max_users [<value 1-1000> no_limit]}
config mac_based_access_control guest_vlan ports	<portlist>
create mac_based_access_control	[guest_vlan <vlan_name 32> guest_vlanid <vlanid 1-4094>]
delete mac_based_access_control	[guest_vlan <vlan_name 32> guest_vlanid <vlanid 1-4094>]
create mac_based_access_control_local	mac <macaddr> [vlan <vlan_name 32> vlanid <vlanid 1-4094>]
config mac_based_access_control_local	mac <macaddr> [vlan <vlan_name 32> vlanid <vlanid 1-4094> clear_vlan]
delete mac_based_access_control_local	[mac <macaddr> vlan <vlan_name 32> vlanid <vlanid 1-4094>]
show mac_based_access_control	{ports [<portlist> all]}
show mac_based_access_control_local	{[mac <macaddr> vlan<vlan_name 32> vlanid <vlanid 1-4094>]}
clear mac_based_access_control_auth_state	[ports [all <portlist>] mac_addr <macaddr>]
config mac_based_access_control_max_users	[<value 1-1000> no_limit]
config mac_based_access_control_authorization_attributes	{radius [enable disable] local [enable disable]}
show mac_based_access_control_auth_state ports	{<portlist>}
config mac_based_access_control_log	state [enable disable]
config mac_based_access_control_trap	state [enable disable]
config mac_based_access_control_max_users	[<value 1 - 1000> no_limit]

Each command is listed, in detail, in the following sections.

enable mac_based_access_control

Purpose	Used to enable MAC-based Access Control.
----------------	--

enable mac_based_access_control

Syntax	enable mac_based_access_control
Description	This command is used to enable the MAC-based Access Control function.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable MAC-based access control:

```
DGS-3700-12:5#enable mac_based_access_control
Command: enable mac_based_access_control

Success.

DGS-3700-12:5#
```

disable mac_based_access_control

Purpose	Used to disable MAC-based Access Control.
Syntax	disable mac_based_access_control
Description	This command is used to disable the MAC-based Access Control function.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable mac_based_access_control:

```
DGS-3700-12:5#disable mac_based_access_control
Command: disable mac_based_access_control

Success.

DGS-3700-12:5#
```

config mac_based_access_control password

Purpose	Used to configure the password of the MAC-based Access Control.
Syntax	config mac_based_access_control password < passwd 16>
Description	This command will set the password that will be used for authentication via RADIUS server.
Parameters	<passwd 16> – In RADIUS mode, the switch communicate with RADIUS server use the password. The maximum length of the key is 16.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the MAC-based access control password:

```
DGS-3700-12:5#config mac_based_access_control password 123
Command: config mac_based_access_control password 123

Success.

DGS-3700-12:5#
```

config mac_based_access_control method

Purpose	This command is used to configure the mac_based_access_control authentication method
Syntax	config mac_based_access_control method [local radius]
Description	This command is used to specify to authenticate via local database or via RADIUS server.
Parameters	<i>local</i> – Specifies to authenticate via local database. <i>radius</i> – Specifies to authenticate via RADIUS server.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage

To config mac_based_access_control method:

```
DGS-3700-12:5#config mac_based_access_control method local
Command: config mac_based_access_control method local

Success.

DGS-3700-12:5#
```

config mac_based_access_control ports

Purpose	Used to configure the parameter of the MAC-Based Access Control.
Syntax	config mac_based_access_control ports [<portlist> all] {state [enable disable] mode [port_based host_based] aging_time [infinite <min 1-1440>] block_time <second 0-300> max_users [<value 1-1000> no_limit]}
Description	This command is used to configure MAC-Based Access Control setting. If a port is a member of guest VLAN, it only can access either guest VLAN (unauthenticated) or target VLAN /administrative PVID VLAN (authenticated), the original 802.1Q VLAN configuration will not take effect. For MAC_based_access_control enabled port, after enabling the Guest VLAN, it will be removed from all static 1Q VLANs and added to the guest VLAN's untagged member, the port's PVID will be changed to Guest VLAN VID. If the guest VLAN is disabled, the switch will restore the original 802.1Q VLANs for the port and change PVID to administrative PVID.
Parameters	<portlist> - Specifies a range of ports to enable or disable the MAC-based Access Control function. <i>all</i> - Specifies to select all the ports. <i>state</i> - Specifies whether the MAC AC function is enabled or disabled. <i>enable</i> - Enable the MAC-based Access Control function. <i>disable</i> - Disable the MAC-based Access Control function. <i>mode</i> - Either port-based or host-based. <i>port_based</i> - This means that all users connected to a port share the first authentication result. <i>host_based</i> - This means that each user can have its own authentication result. If the switch doesn't support MAC-based VLAN, then the switch will not allow

config mac_based_access_control ports

	<p>the option <code>host_based</code> for ports that are in guest VLAN mode.</p> <p><i>aging_time</i> - A time period during which an authenticated host will be kept in the authenticated state. When the aging time is timed-out, the host will be moved back to unauthenticated state.</p> <p><i>infinite</i> - Specifies an unlimited aging time.</p> <p><i><min 1-440></i> - Specify the age-out time, in minutes, between 1 and 440.</p> <p><i>block_time</i> - Specifies the blocking time, in seconds, between 1 and 300.</p> <p><i>max_users</i> - Specifies the number of maximum users.</p> <p><i><value 1-1000></i> - Specify the maximum number of users between 1 and 1000.</p> <p><i>no_limit</i> - Specifies an unlimited number of users.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage

To config `mac_based_access_control` port state:

```
DGS-3700-12:5#config mac_based_access_control ports 1-8 state enable
Command: config mac_based_access_control ports 1-8 state enable

Success.

DGS-3700-12:5#
```

config mac_based_access_control guest_vlan ports

Purpose	Used to configure the <code>mac_based_access_control guest_vlan</code> membership
Syntax	config mac_based_access_control guest_vlan ports <portlist>
Description	This command puts the specified port in guest-vlan mode. For those ports not contained in the portlist, they are in non-guest VLAN mode. For detailed information for operation of guest VLAN mode, please see the description for configuring <code>mac_based_access_control</code> port command.
Parameters	<i><portlist></i> – When the guest VLAN is configured for a port, the guest VLAN will be enabled, only after <code>MAC_based_access_control</code> and <code>global</code> are both enabled on the same port. This port will be added to the guest VLAN as an untagged member and can access this guest VLAN before being authenticated.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage

To config `mac_based_access_control` port `guest_vlan`:

```
DGS-3700-12G:5#config mac_based_access_control guest_vlan ports 1
Command: config mac_based_access_control guest_vlan ports 1

Success.

DGS-3700-12G:5#
```

create mac_based_access_control guest_vlan

Purpose	Used to assign the guest VLAN.
Syntax	create mac_based_access_control [guest_vlan <vlan_name 32> guest_vlanid <vlanid 1-4094>]
Description	This command is used to assign the guest VLAN.

create mac_based_access_control guest_vlan

Parameters	<p><i>guest_vlan</i> – If the MAC address is unauthorized, the port will be assigned to this VLAN.</p> <p><i>guest_vlanid</i> – guest VLAN ID, if the MAC address is authorized, the port will be assigned to this vlan.</p> <p><vlan_name32> - Specifies the VLAN name.</p> <p><vlanlid 1-4094> - Specifies the VLAN ID.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create MAC-based access control guest VLAN:

```
DGS-3700-12:5#create mac_based_access_control_guest_vlan default
Command: create mac_based_access_control_guest_vlan default

Success.

DGS-3700-12:5#
```

delete mac_based_access_control guest_vlan

Purpose	Used to de-assign the guest VLAN.
Syntax	delete mac_based_access_control [guest_vlan <vlan_name 32> guest_vlanid <vlanid 1-4094>]
Description	This command is used to de-assign the guest VLAN. When the guest VLAN is de-assigned, the guest VLAN function is disabled.
Parameters	<p><i>guest_vlan</i> – Specifies the name of the guest VLAN.</p> <p><i>guest_vlanid</i> – Specifies the VID of the guest VLAN.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To de-assign a guest VLAN:

```
DGS-3700-12:5#delete mac_based_access_control_guest_vlan default
Command: delete mac_based_access_control_guest_vlan default

Success.

DGS-3700-12:5#
```

create mac_based_access_control_local

Purpose	Used to create a local database entry.
Syntax	create mac_based_access_control_local mac <macaddr> [vlan <vlan_name 32> vlanid <vlanid 1-4094>]
Description	This command is used to create a database entry.
Parameters	<p><i>mac</i> – The MAC address that accepts access by local mode.</p> <p><i>vlan</i> – The VLAN name of specified VLAN. If the MAC address is authorized, the port will be assigned to this VLAN.</p> <p><i>vlanid</i> <vlanid 1-4094> – the vlan id of specified VLAN, the range of the VLAN ID is from 1 to 4094. If the MAC address is authorized, the port will be assigned to this VLAN.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create a MAC-based access control local entry:

```
DGS-3700-12:5#create mac_based_access_control_local mac 00-00-00-00-00-01 vlan default
Command: create mac_based_access_control_local mac 00-00-00-00-00-01 vlan default

Success.

DGS-3700-12:5#
```

config mac_based_access_control_local

Purpose	Used to configure the local database entry.
Syntax	config mac_based_access_control_local mac <macaddr> [vlan <vlan_name 32> vlanid <vlanid 1-4094> clear_vlan]
Description	This command is used to modify a database entry.
Parameters	<p><i>mac</i> – The MAC address that accepts access by local mode.</p> <p><i>vlan</i> – If the MAC address is authorized, the port will be assigned to this VLAN.</p> <p><i>vlanid <vlanid 1-4094></i> – the vlan id of specified VLAN,the range of the VLAN ID is from 1 to 4094. If the MAC address is authorized, the port will be assigned to this VLAN.</p> <p><i>clear_vlan</i> – Specifies that the VLAN list will be cleared.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the MAC-based access control local entry:

```
DGS-3700-12:5#config mac_based_access_control_local mac 00-00-00-00-00-01 vlan default
Command: config mac_based_access_control_local mac 00-00-00-00-00-01 vlan default

Success.

DGS-3700-12:5#
```

delete mac_based_access_control_local

Purpose	Used to delete the local database entry.
Syntax	delete mac_based_access_control_local [mac <macaddr> vlan <vlan_name 32> vlanid <vlanid 1-4094>]
Description	This command is used to delete a database entry.
Parameters	<p><i>mac</i> – Delete the database entry by this MAC address.</p> <p><i>vlan</i> – Delete the database entry by this VLAN name.</p> <p><i>vlanid <vlanid 1-4094></i> – Delete the database entry by this VLAN ID.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete MAC-based access control local by MAC address:

```
DGS-3700-12:5#delete mac_based_access_control_local mac 00-00-00-00-00-01
Command: delete mac_based_access_control_local mac 00-00-00-00-00-01

Success.

DGS-3700-12:5#
```

To delete MAC-based access control local by VLAN name:

```
DGS-3700-12:5#delete mac_based_access_control_local vlan default
Command: delete mac_based_access_control_local vlan default

Success.

DGS-3700-12:5#
```

To delete mac_based_access_control_local by VLAN ID:

```
DGS-3700-12G:5# delete mac_based_access_control_local vlanid 2
Command: delete mac_based_access_control_local vlanid 2

Success.

DGS-3700-12G:5#
```

show mac_based_access_control

Purpose	Used to display the MAC-based access control setting.
Syntax	show mac_based_access_control {ports [<portlist> all]}
Description	This command is used to display the MAC-based access control setting.
Parameters	<i>ports</i> – Display the MAC-based access control port state. <portlist> - Specifies the specific MAC-based access control port state. <i>all</i> - Specifies all the MAC-based access control ports state.
Restrictions	None.

Example usage:

To show MAC-based access control:

```
DGS-3700-12G:5#show mac_based_access_control
Command: show mac_based_access_control

MAC Based Access Control
-----
State                : Disabled
Method               : Local
Password             : default
Max User             : No Limit
Guest VLAN           :
Guest VLAN Member Ports:
RADIUS Authorization : Enabled
Local Authorization  : Enabled
Trap State           : Enabled
Log State            : Enabled

DGS-3700-12G:5#
```

To show MAC-based access control port:

```
DGS-3700-12G:5#show mac_based_access_control ports 1-9
Command: show mac_based_access_control ports 1-9
```

Port	State	Aging Time (min)	Block Time (sec)	Auth Mode	Max User
1	Disabled	1440	300	Host-based	128
2	Disabled	1440	300	Host-based	128
3	Disabled	1440	300	Host-based	128
4	Disabled	1440	300	Host-based	128
5	Disabled	1440	300	Host-based	128
6	Disabled	1440	300	Host-based	128
7	Disabled	1440	300	Host-based	128
8	Disabled	1440	300	Host-based	128
9	Disabled	1440	300	Host-based	128

```
DGS-3700-12G:5#
```

show mac_based_access_control_local

Purpose	Used to display the MAC-based Access Control local database.
Syntax	show mac_based_access_control_local {[mac <macaddr> vlan <vlan_name 32> vlanid <vlanid 1-4094>]}
Description	This command is used to display the MAC-based Access Control local database.
Parameters	<i>mac</i> – Display the MAC-based access control local database by this MAC address. <i>vlan</i> <vlan_name 32> – Display mac_based_access_control local database by this VLAN name. <i>vlanid</i> <vlanid 1-4094> – Display mac_based_access_control local database by this VLAN ID.
Restrictions	None.

Example usage:

To show MAC-based access control local:

```
DGS-3700-12:5#show mac_based_access_control_local
Command: show mac_based_access_control_local
```

MAC Address	VID
00-00-00-00-00-05	1
00-00-00-00-00-06	2

```
Total Entries:2
DGS-3700-12:5#
```

To show MAC-based access control local by MAC address:

```
DGS-3700-12:5#show mac_based_access_control_local mac 00-00-00-00-00-05
Command: show mac_based_access_control_local mac 00-00-00-00-00-05

MAC Address                VID
-----
00-00-00-00-00-05        1

Total Entries:1

DGS-3700-12:5#
```

To show MAC-based access control local by VLAN name:

```
DGS-3700-12:5#show mac_based_access_control_local vlan VLAN2
Command: show mac_based_access_control_local vlan VLAN2

MAC Address                VID
-----
00-00-00-00-00-06        2

Total Entries:1

DGS-3700-12:5#
```

To show mac_based_access_control_local by vlan id:

```
DGS-3700-12:5#show mac_based_access_control_local vlanid 1
Command: show mac_based_access_control_local vlanid 1

MAC Address                VID
-----
00-00-00-00-00-05        1

Total Entries:1

DGS-3700-12:5#
```

clear mac_based_access_control auth_state

Purpose	To reset the current state of a user. The re-authentication will be started after the user traffic is received again.
Syntax	clear mac_based_access_control auth_state [ports [all <portlist>] mac_addr <macaddr>]
Description	This command is used to clear the authentication state of a user (or port). The port (or the user) will return to un-authenticated state. All the timers associated with the port (or the user) will be reset.
Parameters	<i>ports</i> - Specify the port range to clear the authentication state. <i>all</i> - Specify all ports. <portlist> - Specify a range of ports. <macaddr> - To clear a specified host authentication state.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage

To clear the authentication state of all ports:

```
DGS-3700-12:5#clear mac_based_access_control auth_state ports all
Command: clear mac_based_access_control auth_state ports all

Success.

DGS-3700-12:5#
```

config mac_based_access_control max_users

Purpose	To configure the MAC-based access control maximum number of authorized users.
Syntax	config mac_based_access_control max_users [<value 1-1000> no_limit]
Description	This command is used to configure the MAC-based access control maximum number of authorized users.
Parameters	<value 1-1000> - Specify the maximum number of authorized users. no_limit - Specify an unlimited number of authorized users.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage

To configure the MAC-based access control maximum number of authorized users:

```
DGS-3700-12:5#config mac_based_access_control max_users 2
Command: config mac_based_access_control max_users 2

Success.

DGS-3700-12:5#
```

config mac_based_access_control authorization attributes

Purpose	To enable or disable the acceptance of an authorized configuration.
Syntax	config mac_based_access_control authorization attributes {radius [enable disable] local [enable disable]}
Description	This command is used to enable or disable the acceptance of an authorized configuration. When authorization is enabled for MAC-based access controls with RADIUS authentication, the authorized attributes (for example VLAN, 802.1p default priority, and ACL) assigned by the RADIUS server will be accepted if the global authorization status is enabled. When authorization is enabled for MAC-based access controls with local authentication, the authorized attributes assigned by the local database will be accepted.
Parameters	<p><i>radius</i> - See below:</p> <p><i>enable</i> - If specified to enable, the authorized attributes (for example VLAN, 802.1p default priority, and ACL) assigned by the RADIUS server will be accepted if the global authorization status is enabled. The default state is enabled.</p> <p><i>disable</i> - If specified to disable, the authorized attributes (for example VLAN, 802.1p default priority, and ACL) assigned by the RADIUS server will not be accepted if the global authorization status is disabled.</p> <p><i>local</i> - See below:</p> <p><i>enable</i> - If specified to enable, the authorized attributes assigned by the local database will be accepted if the global authorization status is enabled. The default state is enabled.</p> <p><i>disable</i> - If specified to disable, the authorized attributes assigned by the local database will not be accepted if the global authorization status is disabled.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage

To disable the configuration authorized from the local database:

```
DGS-3700-12:5#config mac_based_access_control authorization attributes local disable
Command: config mac_based_access_control authorization attributes local disable

Success.

DGS-3700-12:5#
```

show mac_based_access_control auth_state ports

Purpose	To display MAC-based access control authentication MAC information.
Syntax	show mac_based_access_control auth_state ports {<portlist>}
Description	This command is used to display MAC-based access control authentication MAC information.
Parameters	<portlist> - Specify the ports to be displayed.
Restrictions	None.

Example usage

To display MAC-based access control authentication MAC information:

```
DGS-3700-12:5#show mac_based_access_control auth_state ports
Command: show mac_based_access_control auth_state ports

(P):Port based

Port  MAC Address          State          VID  Priority  Aging Time/
-----
Total Authenticating Hosts : 0
Total Authenticated Hosts  : 0
Total Blocked Hosts       : 0

DGS-3700-12:5#
```

config mac_based_access_control log

Purpose	This command is used to enable or disable generating of MAC-based Access Control logs.
Syntax	config mac_based_access_control log state [enable disable]
Description	This command is used to enable or disable generating of MAC-based Access Control logs.
Parameters	<i>enable</i> - Enable log for MAC-based Access Control. The log of MAC-based Access Control will be generated. <i>disable</i> - Disable log for MAC-based Access Control.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage

To disable log state of MAC-based Access Control:

```
DGS-3700-12G:5#config mac_based_access_control log state disable
Command: config mac_based_access_control log state disable

Success.

DGS-3700-12G:5#
```

config mac_based_access_control trap

Purpose	This command is used to enable or disable sending of MAC-based Access Control traps.
Syntax	config mac_based_access_control trap state [enable disable]
Description	This command is used to enable or disable sending of MAC-based Access Control traps.
Parameters	<i>enable</i> - Enable trap for MAC-based Access Control. The trap of MAC-based Access Control will be sent out. <i>disable</i> - Disable trap for MAC-based Access Control.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage

To enable trap state of MAC-based Access Control:

```
DGS-3700-12G:5#config mac_based_access_control trap state enable
Command: config mac_based_access_control trap state enable

Success.

DGS-3700-12G:5#
```

config mac_based_access_control max_users

Purpose	This command is used to configure the maximum number of authorized clients.
Syntax	config mac_based_access_control max_users [<value 1 - 1000> no_limit]
Description	This command is used to configure the maximum number of authorized clients.
Parameters	<i>max_users</i> - Specify to set the maximum number of authorized clients on the whole device. <value 1-1000> - Enter the maximum users here. This value must be between 1 and 1000. <i>no_limit</i> - Specify to not limit the maximum number of users on the system. By default, there is no limit on the number of users.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage

To configure the maximum number of users of the MAC-based Access Control system supports to 128:

```
DGS-3700-12G:5#config mac_based_access_control max_users 128
Command: config mac_based_access_control max_users 128

Success.

DGS-3700-12G:5#
```

COMPOUND AUTHENTICATION COMMANDS

Back to Section Header

The Compound Authentication commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
create authentication guest_vlan	[vlan <vlan_name 32> vlanid <vlanid 1-4094>]
delete authentication guest_vlan	[vlan <vlan_name 32> vlanid <vlanid 1-4094>]
config authentication guest_vlan	[vlan <vlan_name 32> vlanid <vlanid 1-4094>] [add delete] ports [<portlist> all]
config authentication ports	[<portlist> all] {auth_mode [port_based host_based] multi_authen_methods [none any dot1x_impb impb_wac mac_impb]}
show authentication	
show authentication guest_vlan	
show authentication ports	{<portlist>}
enable authorization attributes	
disable authorization attributes	
show authorization	
config authentication server failover	[local permit block]

Each command is listed, in detail, in the following sections.

create authentication guest_vlan	
Purpose	To assign a static VLAN to be a guest VLAN.
Syntax	create authentication guest_vlan [vlan <vlan_name 32> vlanid <vlanid 1-4094>]
Description	This command is used to assign a static VLAN to be a guest VLAN. The specific VLAN which is assigned to be a guest VLAN must already exist. The specific VLAN which is assigned to be a guest VLAN can't be deleted. For further description of this command, please see the description for config authentication guest_vlan ports .
Parameters	<i>vlan</i> - Specify the guest VLAN by VLAN name. <i>vlanid</i> - Specify the guest VLAN by VLAN ID.
Restrictions	Only Administrator and Operator-level users can issue this command.

Usage example:

To assign a static VLAN to be a guest VLAN:

```
DGS-3700-12:5#create authentication guest_vlan vlan guestVLAN
Command: create authentication guest_vlan vlan guestVLAN

Success.

DGS-3700-12:5#
```

delete authentication guest_vlan

Purpose	To delete a guest VLAN configuration.
Syntax	delete authentication guest_vlan [vlan <vlan_name 32> vlanid <vlanid 1-4094>]
Description	This command is used to delete a guest VLAN setting, but not a static VLAN. All ports which are enabled as guest VLANs will move to the original VLAN after deleting the guest VLAN. For further description of this command, please see the description for config authentication guest_vlan ports .
Parameters	<i>vlan</i> - Specify the guest VLAN by VLAN name. <i>vlanid</i> - Specify the guest VLAN by VLAN ID.
Restrictions	Only Administrator and Operator-level users can issue this command.

Usage example:

To delete a guest VLAN setting:

```
DGS-3700-12:5#delete authentication guest_vlan vlan guestVLAN
Command: delete authentication guest_vlan vlan guestVLAN

Success.

DGS-3700-12:5#
```

config authentication guest_vlan

Purpose	To configure security port(s) as specified guest VLAN members.
Syntax	config authentication guest_vlan [vlan <vlan_name 32> vlanid <vlanid 1-4094>] [add delete] ports [<portlist> all]
Description	This command is used to assign or remove ports to or from a guest VLAN.
Parameters	<i>vlan</i> - Assign a VLAN as a guest VLAN. The VLAN must be an existing static VLAN. <i>vlanid</i> - Assign a VLAN as a guest VLAN. The VLAN must be an existing static VLAN. <i>add</i> - Specifies to add a port list to the guest VLAN. <i>delete</i> - Specifies to delete a port list from the guest VLAN. <i>ports</i> - Specifies a port or range of ports to configure. < <i>portlist</i> > - Specifies a range of ports to configure. <i>all</i> - Specifies to configure all ports.
Restrictions	Only Administrator and Operator-level users can issue this command.

Usage example:

To configure authentication for all ports for a guest VLAN called “gv”:

```
DGS-3700-12:5#config authentication guest_vlan vlan gv add ports all
Command: config authentication guest_vlan vlan gv add ports all

Success.

DGS-3700-12:5#
```

config authentication ports

Purpose	To configure security port(s).
Syntax	config authentication ports [<portlist> all] {auth_mode [port_based host_based] multi_authen_methods [none any dot1x_impb impb_wac mac_impb]}
Description	This command is used to configure authorization mode and authentication method on ports.
Parameters	<p><portlist> - Specify a port or range of ports to configure.</p> <p>all - Specify to configure all ports.</p> <p>auth_mode - The authorization mode is port-based or host-based.</p> <p>port-based - If one of the attached hosts pass the authentication, all hosts on the same port will be granted access to the network. If the user fails the authorization, this port will keep trying the next authentication.</p> <p>host-based - Every user can be authenticated individually.</p> <p>multi_authen_methods - Specify the method for multiple authentication.</p> <p>none - Multiple authentication is not enabled.</p> <p>any - If any one of the authentication methods (802.1X, MBAC, and WAC) passes, then pass.</p> <p>dot1x_impb - Dot1x will be verified first, and then IMPB will be verified. Both authentications need to be passed.</p> <p>impb_wac - IMPB will be verified first, and then WAC will be verified. Both authentications need to be passed.</p> <p>mac_impb - MAC-AC will be verified first, and then IMPB will be verified. Both authentications need to be passed.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Usage example:

The following example sets the authentication mode of all ports to host-based:

```
DGS-3700-12:5#config authentication ports all auth_mode host_based
Command: config authentication ports all auth_mode host_based

Success.

DGS-3700-12:5#
```

The following example sets the multi-authentication method of all ports to “any”:

```
DGS-3700-12:5#config authentication ports all multi_authen_methods any
Command: config authentication ports all multi_authen_methods any

Success.

DGS-3700-12:5#
```

show authentication

Purpose	To display the global authentication configuration.
Syntax	show authentication
Description	This command is used to display the global authentication configuration.
Parameters	None.
Restrictions	None.

Usage example:

To display the global authentication configuration:

```
DGS-3700-12:5#show authentication
Command: show authentication

Authentication Server Failover: Block.

DGS-3700-12:5#
```

show authentication guest_vlan

Purpose	To display the guest VLAN setting.
Syntax	show authentication guest_vlan
Description	This command is used to display guest VLAN information.
Parameters	None.
Restrictions	None.

Usage example:

To display the guest VLAN setting:

```
DGS-3700-12:5#show authentication guest_vlan
Command: show authentication guest_vlan

Guest VLAN VID      :
Guest VLAN Member Ports:

Total Entries: 0

DGS-3700-12:5#
```

show authentication ports

Purpose	To display the authentication setting on port(s).
Syntax	show authentication ports {<portlist>}
Description	This command is used to display the authentication method and authorization mode on ports.
Parameters	<portlist> - Specify to display multiple authentication on specific port(s).
Restrictions	None.

Usage example:

To display the authentication settings for ports 1 to 3:

```
DGS-3700-12:5#show authentication ports 1-3
```

```
Command: show authentication ports 1-3
```

Port	Methods	Authorized Mode
1	None	Host_based
2	None	Host_based
3	None	Host_based

```
DGS-3700-12:5#
```

enable authorization attributes

Purpose	To enable the authorization global state.
Syntax	enable authorization attributes
Description	This command is used to enable the authorization global state.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Usage example:

To enable the authorization global state:

```
DGS-3700-12:5#enable authorization attributes
```

```
Command: enable authorization attributes
```

```
Success.
```

```
DGS-3700-12:5#
```

disable authorization attributes

Purpose	To disable the authorization global state.
Syntax	disable authorization attributes
Description	This command is used to disable the authorization global state.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Usage example:

To disable the authorization global state:

```
DGS-3700-12:5#disable authorization attributes
```

```
Command: disable authorization attributes
```

```
Success.
```

```
DGS-3700-12:5#
```

show authorization

Purpose	To display the authorization status.
Syntax	show authorization
Description	This command is used to display the authorization status.
Parameters	None.
Restrictions	None.

Usage example:

To display the authorization status:

```
DGS-3700-12:5#show authorization
Command: show authorization
Authorization for Atributes: Enabled

DGS-3700-12:5#
```

config authentication server failover

Purpose	To configure the authentication server failover function.
Syntax	config authentication server failover [local permit block]
Description	<p>This command is used to configure the authentication server failover function. When authentication server fails, administrator can configure to:</p> <ul style="list-style-type: none"> • Use the local database to authenticate the client. The switch will resort to using the local database to authenticate the client. If the client fails on local authentication, the client is regarded as un-authenticated, otherwise, it authenticated. • Pass authentication. The client is always regarded as authenticated. If guest VLAN is enabled, clients will stay on the guest VLAN, otherwise, they will stay on the original VLAN. • The client will be blocked if it can't pass authentication, otherwise, it will be authenticated.
Parameters	<p><i>local</i> - Specify to use the local database to authenticate the client. <i>permit</i> - Specify that the client is always regarded as authenticated. <i>block</i> - Specifies to block the client in case of authentication failure.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Usage example:

To set the authentication server authentication failover state:

```
DGS-3700-12:5#config authentication server failover local
Command: config authentication server failover local

Success.

DGS-3700-12:5#
```

SSH COMMANDS

Back to Section Header

The steps required to use the Secure Shell (SSH) protocol for secure communication between a remote PC (the SSH Client) and the Switch (the SSH Server), are as follows:

Create a user account with admin-level access using the **create account admin <username> <password>** command. This is identical to creating any other admin-level user account on the Switch, including specifying a password. This password is used to login to the Switch, once secure communication has been established using the SSH protocol.

Configure the user account to use a specified authorization method to identify users that are allowed to establish SSH connections with the Switch using the **config ssh authmode** command. There are three choices as to the method SSH will use to authorize the user, and they are password, publickey and hostbased. Configure the encryption algorithm that SSH will use to encrypt and decrypt messages sent between the SSH Client and the SSH Server.

Finally, enable SSH on the Switch using the **enable ssh** command.

After following the above steps, users can configure an SSH Client on the remote PC and manage the Switch using secure, in-band communication.

The Secure Shell (SSH) commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
enable ssh	
disable ssh	
config ssh authmode	[password publickey hostbased] [enable disable]
show ssh authmode	
config ssh server	{maxsession <int 1-8> contimeout <sec 120-600> authfail <int 2-20> rekey [10min 30min 60min never] port <tcp_port_number 1-65535>}
show ssh server	
config ssh user	<username 15> authmode [hostbased [hostname <domain_name 32> hostname_IP <domain_name 32> [<ipaddr> <ipv6addr>]] password publickey]
show ssh user authmode	
config ssh algorithm	[3DES AES128 AES192 AES256 arcfour blowfish cast128 twofish128 twofish192 twofish256 MD5 SHA1 RSA DSA] [enable disable]
show ssh algorithm	

Each command is listed, in detail, in the following sections.

enable ssh	
Purpose	Used to enable SSH.
Syntax	enable ssh
Description	This command allows users to enable SSH on the Switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Usage example:

To enable SSH:

```
DGS-3700-12G:5#enable ssh
```

```
Command: enable ssh
```

```
TELNET will be disabled when enable SSH.
```

```
Success.
```

```
DGS-3700-12G:5#
```

disable ssh

Purpose	Used to disable SSH.
Syntax	disable ssh
Description	This command allows users to disable SSH on the Switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Usage example:

To disable SSH:

```
DGS-3700-12:5#disable ssh
```

```
Command: disable ssh
```

```
Success.
```

```
DGS-3700-12:5#
```

config ssh authmode

Purpose	Used to configure the SSH authentication mode setting.
Syntax	config ssh authmode [password publickey hostbased] [enable disable]
Description	This command is used to configure the SSH authentication mode for users attempting to access the Switch.
Parameters	<p><i>password</i> – This parameter may be chosen if the administrator wishes to use a locally configured password for authentication on the Switch.</p> <p><i>publickey</i> – This parameter may be chosen if the administrator wishes to use a publickey configuration set on a SSH server, for authentication.</p> <p><i>hostbased</i> – This parameter may be chosen if the administrator wishes to use a host computer for authentication. This parameter is intended for Linux users requiring SSH authentication techniques and the host computer is running the Linux operating system with a SSH program previously installed.</p> <p><i>[enable disable]</i> – This allows users to enable or disable SSH authentication on the Switch.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable the SSH authentication mode by password:

```
DGS-3700-12:5#config ssh authmode password enable
Command: config ssh authmode password enable

Success.

DGS-3700-12:5#
```

show ssh authmode

Purpose	Used to display the SSH authentication mode settings.
Syntax	show ssh authmode
Description	This command is used to display the current SSH authentication set on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To view the current authentication mode set on the Switch:

```
DGS-3700-12:5#show ssh authmode
Command: show ssh authmode

The SSH Authmode:
-----
Password      : Enabled
Publickey     : Enabled
Hostbased     : Enabled

DGS-3700-12:5#
```

config ssh server

Purpose	Used to configure the SSH server.
Syntax	config ssh server {maxsession <int 1-8> contimeout <sec 120-600> authfail <int 2-20> rekey [10min 30min 60min never] port <tcp_port_number 1-65535>}
Description	This command is used to configure the SSH server.
Parameters	<p><i>maxsession <int 1-8></i> – Allows the user to set the number of users that may simultaneously access the Switch. The default setting is 8.</p> <p><i>contimeout <sec 120-600></i> – Allows the user to set the connection timeout. The user may set a time between 120 and 600 seconds. The default is 120 seconds.</p> <p><i>authfail <int 2-20></i> – Allows the administrator to set the maximum number of attempts that a user may try to logon utilizing SSH authentication. After the maximum number of attempts is exceeded, the Switch will be disconnected and the user must reconnect to the Switch to attempt another login.</p> <p><i>rekey [10min 30min 60min never]</i> – Sets the time period that the Switch will change the security shell encryptions.</p> <p><i>port <tcp_port_number 1-65535></i> - Specifies the tcp port number used to listen connection request from ssh client.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Usage example:

To configure the SSH server:

```
DGS-3700-12:5#config ssh server maxsession 2 contimeout 300 authfail 2
Command: config ssh server maxsession 2 contimeout 300 authfail 2

Success.

DGS-3700-12:5#
```

show ssh server

Purpose	Used to display the SSH server setting.
Syntax	show ssh server
Description	This command is used to display the current SSH server setting.
Parameters	None.
Restrictions	None.

Usage example:
To display the SSH server:

```
DGS-3700-12:5#show ssh server
Command: show ssh server

The SSH Server Configuration
Max Session           : 8
Connection Timeout   : 120
Authfail Attempts    : 2
Rekey Timeout        : Never

DGS-3700-12:5#
```

config ssh user

Purpose	Used to configure the SSH user.
Syntax	config ssh user <username 15> authmode [hostbased [hostname <domain_name 32> hostname_IP <domain_name 32> [<ipaddr> <ipv6addr>]] password publickey]
Description	This command is used to configure the SSH user authentication method.
Parameters	<p><i><username 15></i> – Enter a username of no more than 15 characters to identify the SSH user.</p> <p><i>authmode</i> – Specifies the authentication mode of the SSH user wishing to log on to the Switch. The administrator may choose between:</p> <p><i>hostbased</i> – This parameter should be chosen if the user wishes to use a remote SSH server for authentication purposes. Choosing this parameter requires the user to input the following information to identify the SSH user.</p> <p><i>hostname <domain_name 32></i> – Enter an alphanumeric string of up to 32 characters identifying the remote SSH user.</p> <p><i>hostname_IP <domain_name 32> [<ipaddr> <ipv6addr>]</i> – Enter the hostname and the corresponding IP address of the SSH user.</p> <p><i>password</i> – This parameter should be chosen to use an administrator defined password for authentication.</p> <p><i>publickey</i> – This parameter should be chosen to use the publickey on a SSH server for authentication.</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To configure the SSH user:

```
DGS-3700-12:5#config ssh user Trinity authmode password
Command: config ssh user Trinity authmode password

Success.

DGS-3700-12:5#
```

show ssh user authmode

Purpose	Used to display the SSH user setting.
Syntax	show ssh user authmode
Description	This command is used to display the current SSH user setting.
Parameters	None.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To display the SSH user:

```
DGS-3700-12:5#show ssh user authmode
Command: show ssh user authmode

Current Accounts:
Username      AuthMode      HostName      HostIP
-----
123          Password

Total Entries : 1

DGS-3700-12:5#
```



Note: To configure the SSH user, the administrator must create a user account on the Switch. For information concerning configuring a user account, please see the section of this manual entitled Basic Switch Commands and then the command, **create account**.

config ssh algorithm

Purpose	Used to configure the SSH algorithm.
Syntax	config ssh algorithm [3DES AES128 AES192 AES256 arcfour blowfish cast128 twofish128 twofish192 twofish256 MD5 SHA1 RSA DSA] [enable disable]
Description	This command is used to configure the desired type of SSH algorithm used for authentication encryption.
Parameters	<p><i>3DES</i> – This parameter will enable or disable the Triple_Data Encryption Standard encryption algorithm.</p> <p><i>AES128</i> – This parameter will enable or disable the Advanced Encryption Standard AES128 encryption algorithm.</p> <p><i>AES192</i> – This parameter will enable or disable the Advanced Encryption Standard AES192 encryption algorithm.</p> <p><i>AES256</i> – This parameter will enable or disable the Advanced Encryption Standard</p>

config ssh algorithm

	<p>AES256 encryption algorithm.</p> <p><i>arcfour</i> – This parameter will enable or disable the Arcfour encryption algorithm.</p> <p><i>blowfish</i> – This parameter will enable or disable the Blowfish encryption algorithm.</p> <p><i>cast128</i> – This parameter will enable or disable the Cast128 encryption algorithm.</p> <p><i>twofish128</i> – This parameter will enable or disable the twofish128 encryption algorithm.</p> <p><i>twofish192</i> – This parameter will enable or disable the twofish192 encryption algorithm.</p> <p><i>MD5</i> – This parameter will enable or disable the MD5 Message Digest encryption algorithm.</p> <p><i>SHA1</i> – This parameter will enable or disable the Secure Hash Algorithm encryption.</p> <p><i>RSA</i> – This parameter will enable or disable the RSA encryption algorithm.</p> <p><i>DSA</i> – This parameter will enable or disable the Digital Signature Algorithm encryption.</p> <p><i>[enable disable]</i> – This allows the user to enable or disable algorithms entered in this command, on the Switch.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Usage example:

To configure SSH algorithm:

```
DGS-3700-12:5#config ssh algorithm blowfish enable
Command: config ssh algorithm blowfish enable

Success.

DGS-3700-12:5#
```

show ssh algorithm

Purpose	Used to display the SSH algorithm setting.
Syntax	show ssh algorithm
Description	This command is used to display the current SSH algorithm setting status.
Parameters	None.
Restrictions	None.

Usage Example:

To display SSH algorithms currently set on the Switch:

```
DGS-3700-12:5#show ssh algorithm
```

```
Command: show ssh algorithm
```

```
Encryption Algorithm
```

```
-----
```

```
3DES      : Enabled  
AES128    : Enabled  
AES192    : Enabled  
AES256    : Enabled  
Arcfour   : Enabled  
Blowfish  : Enabled  
Cast128   : Enabled  
Twofish128 : Enabled  
Twofish192 : Enabled  
Twofish256 : Enabled
```

```
Data Integrity Algorithm
```

```
-----
```

```
MD5       : Enabled  
SHA1      : Enabled
```

```
Public Key Algorithm
```

```
-----
```

```
RSA       : Enabled  
DSA       : Enabled
```

```
CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All
```

SSL COMMANDS

Back to Section Header

Secure Sockets Layer or SSL is a security feature that will provide a secure communication path between a host and client through the use of authentication, digital signatures and encryption.

These security functions are implemented through the use of a *ciphersuite*, which is a security string that determines the exact cryptographic parameters, specific encryption algorithms and key sizes to be used for an authentication session and consists of three levels:

1. **Key Exchange:** The first part of the ciphersuite string specifies the public key algorithm to be used. This Switch utilizes the Rivest Shamir Adleman (RSA) public key algorithm and the Digital Signature Algorithm (DSA), specified here as the *DHE_DSS* Diffie-Hellman (DHE) public key algorithm. This is the first authentication process between client and host as they “exchange keys” in looking for a match and therefore authentication to be accepted to negotiate encryptions on the following level.
2. **Encryption:** The second part of the ciphersuite that includes the encryption used for encrypting the messages sent between client and host. The Switch supports two types of cryptology algorithms:
 - a. **Stream Ciphers** – There are two types of stream ciphers on the Switch, RC4 with 40-bit keys and RC4 with 128-bit keys. These keys are used to encrypt messages and need to be consistent between client and host for optimal use.
 - b. **CBC Block Ciphers** – CBC refers to Cipher Block Chaining, which means that a portion of the previously encrypted block of encrypted text is used in the encryption of the current block. The Switch supports the 3DES_EDE encryption code defined by the Data Encryption Standard (DES) to create the encrypted text.
3. **Hash Algorithm:** This part of the ciphersuite allows the user to choose a message digest function which will determine a Message Authentication Code. This Message Authentication Code will be encrypted with a sent message to provide integrity and prevent against replay attacks. The Switch supports two hash algorithms, *MD5* (Message Digest 5) and *SHA* (Secure Hash Algorithm).

These three parameters are uniquely assembled in four choices on the Switch to create a three layered encryption code for secure communication between the server and the host. The user may implement any one or combination of the ciphersuites available, yet different ciphersuites will affect the security level and the performance of the secured connection. The information included in the ciphersuites is not included with the Switch and requires downloading from a third source in a file form called a certificate.

This function of the Switch cannot be executed without the presence and implementation of the certificate file and can be downloaded to the Switch by utilizing a TFTP server. The Switch supports SSLv3 and TLSv1. Other versions of SSL may not be compatible with this Switch and may cause problems upon authentication and transfer of messages from client to host.

COMMAND	PARAMETERS
enable ssl	{ciphersuite {RSA_with_RC4_128_MD5 RSA_with_3DES_EDE_CBC_SHA DHE_DSS_with_3DES_EDE_CBC_SHA RSA_EXPORT_with_RC4_40_MD5}}
disable ssl	{ciphersuite {RSA_with_RC4_128_MD5 RSA_with_3DES_EDE_CBC_SHA DHE_DSS_with_3DES_EDE_CBC_SHA RSA_EXPORT_with_RC4_40_MD5}}
config ssl cachetimeout	<value 60-86400>
show ssl	{certificate}
show ssl cachetimeout	

COMMAND	PARAMETERS
download ssl certificate	<ipaddr> certfilename <path_filename 64> keyfilename <path_filename 64>

Each command is listed, in detail, in the following sections.

enable ssl	
Purpose	To enable the SSL function on the Switch.
Syntax	enable ssl {ciphersuite {RSA_with_RC4_128_MD5 RSA_with_3DES_EDE_CBC_SHA DHE_DSS_with_3DES_EDE_CBC_SHA RSA_EXPORT_with_RC4_40_MD5}}
Description	This command will enable SSL on the Switch by implementing any one or combination of listed ciphersuites on the Switch. Entering this command without a parameter will enable the SSL status on the Switch. Enabling SSL will disable the web-manager on the Switch.
Parameters	<p><i>ciphersuite</i> – A security string that determines the exact cryptographic parameters, specific encryption algorithms and key sizes to be used for an authentication session. The user may choose any combination of the following:</p> <p><i>RSA_with_RC4_128_MD5</i> – This ciphersuite combines the RSA key exchange, stream cipher RC4 encryption with 128-bit keys and the MD5 Hash Algorithm.</p> <p><i>RSA_with_3DES_EDE_CBC_SHA</i> – This ciphersuite combines the RSA key exchange, CBC Block Cipher 3DES_EDE encryption and the SHA Hash Algorithm.</p> <p><i>DHE_DSS_with_3DES_EDE_CBC_SHA</i> – This ciphersuite combines the DSA Diffie Hellman key exchange, CBC Block Cipher 3DES_EDE encryption and SHA Hash Algorithm.</p> <p><i>RSA_EXPORT_with_RC4_40_MD5</i> – This ciphersuite combines the RSA Export key exchange, stream cipher RC4 encryption with 40-bit keys.</p> <p>The ciphersuites are enabled by default on the Switch, yet the SSL status is disabled by default. Enabling SSL with a ciphersuite will not enable the SSL status on the Switch.</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To enable SSL on the Switch for all ciphersuites:

<pre>DGS-3700-12:5#enable ssl Command: enable ssl Note: Web will be disabled if SSL is enabled. Success. DGS-3700-12:5#</pre>



NOTE: Enabling SSL on the Switch will enable all ciphersuites. To utilize a particular ciphersuite, the user must eliminate other ciphersuites by using the **disable ssl** command along with the appropriate ciphersuites.



NOTE: Enabling the SSL function on the Switch will disable the port for the web manager (port 80). To log on to the web based manager, the entry of the URL must begin with *https://*. (ex. *https://10.90.90.90*)

disable ssl	
Purpose	To disable the SSL function on the Switch.
Syntax	disable ssl {ciphersuite {RSA_with_RC4_128_MD5 RSA_with_3DES_EDE_CBC_SHA DHE_DSS_with_3DES_EDE_CBC_SHA RSA_EXPORT_with_RC4_40_MD5}}
Description	This command will disable SSL on the Switch and can be used to disable any one or combination of listed ciphersuites on the Switch.
Parameters	<p><i>ciphersuite</i> – A security string that determines the exact cryptographic parameters, specific encryption algorithms and key sizes to be used for an authentication session. The user may choose any combination of the following:</p> <p><i>RSA_with_RC4_128_MD5</i> – This ciphersuite combines the RSA key exchange, stream cipher RC4 encryption with 128-bit keys and the MD5 Hash Algorithm.</p> <p><i>RSA_with_3DES_EDE_CBC_SHA</i> – This ciphersuite combines the RSA key exchange, CBC Block Cipher 3DES_EDE encryption and the SHA Hash Algorithm.</p> <p><i>DHE_DSS_with_3DES_EDE_CBC_SHA</i> – This ciphersuite combines the DSA Diffie Hellman key exchange, CBC Block Cipher 3DES_EDE encryption and SHA Hash Algorithm.</p> <p><i>RSA_EXPORT_with_RC4_40_MD5</i> – This ciphersuite combines the RSA Export key exchange, stream cipher RC4 encryption with 40-bit keys.</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To disable the SSL status on the Switch:

```
DGS-3700-12:5#disable ssl
Command: disable ssl

Success.

DGS-3700-12:5#
```

To disable ciphersuite RSA_EXPORT_with_RC4_40_MD5 only:

```
DGS-3700-12:5#disable ssl ciphersuite RSA_EXPORT_with_RC4_40_MD5
Command: disable ssl ciphersuite RSA_EXPORT_with_RC4_40_MD5

Success.

DGS-3700-12:5#
```

config ssl cachetimeout	
Purpose	Used to configure the SSL cache timeout.
Syntax	config ssl cachetimeout timeout <value 60-86400>
Description	This command will set the time between a new key exchange between a client and a host using the SSL function. A new SSL session is established every time the client and host go through a key exchange. Specifying a longer timeout will allow the

config ssl cachetimeout	
	SSL session to reuse the master key on future connections with that particular host, therefore speeding up the negotiation process.
Parameters	<i>timeout</i> <value 60-86400> – Enter a timeout value between 60 and 86400 seconds to specify the total time an SSL key exchange ID stays valid before the SSL module will require a new, full SSL negotiation for connection. The default cache timeout is 600 seconds
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To set the SSL cachetimeout for 7200 seconds:

```
DGS-3700-12:5#config ssl cachetimeout 7200
Command: config ssl cachetimeout 7200

Success.

DGS-3700-12:5#
```

show ssl cachetimeout	
Purpose	Used to show the SSL cache timeout.
Syntax	show ssl cachetimeout
Description	This command is used to view the SSL cache timeout currently implemented on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To view the SSL cache timeout on the Switch:

```
DGS-3700-12:5#show ssl cachetimeout
Command: show ssl cachetimeout

Cache timeout is 600 second(s).

DGS-3700-12:5#
```

show ssl	
Purpose	Used to view the SSL status and the certificate file status on the Switch.
Syntax	show ssl {certificate}
Description	This command is used to view the SSL or certificate file status on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To view the SSL status on the Switch:

```
DGS-3700-12:5#show ssl
Command: show ssl

SSL status           Enabled
RSA_WITH_RC4_128_MD5 Enabled
RSA_WITH_3DES_EDE_CBC_SHA Enabled
DHE_DSS_WITH_3DES_EDE_CBC_SHA Enabled
RSA_EXPORT_WITH_RC4_40_MD5 Enabled
```

```
DGS-3700-12:5#
```

download ssl certificate

Purpose	Used to download a certificate file for the SSL function on the Switch.
Syntax	download ssl certificate <ipaddr> certfilename <path_filename 64> keyfilename <path_filename 64>
Description	This command is used to download a certificate file for the SSL function on the Switch from a TFTP server. The certificate file is a data record used for authenticating devices on the network. It contains information on the owner, keys for authentication and digital signatures. Both the server and the client must have consistent certificate files for optimal use of the SSL function. The Switch only supports certificate files with .der file extensions.
Parameters	<p><i><ipaddr></i> – Enter the IP address of the TFTP server.</p> <p><i>certfilename <path_filename 64></i> – Enter the path and the filename of the certificate file users wish to download.</p> <p><i>keyfilename <path_filename 64></i> – Enter the path and the filename of the key exchange file users wish to download.</p> <p><i>path_filename</i> – Private key file path respect to tftp server root path, and input characters max to 64 octets.</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To download a certificate file and key file to the Switch:

```
DGS-3700-12:5# DGS-3700-12:5# download ssl certificate 10.55.47.1 certfilename cert.der
keyfilename pkey.der
Command: download ssl certificate 10.55.47.1 certfilename cert.der keyfilename pkey.der
```

Success.

```
DGS-3700-12:5#
```

WEB-BASED ACCESS CONTROL COMMANDS

Back to Section Header

The Web-based Access Control commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
enable wac	
disable wac	
config wac authorization attributes	{radius [enable disable] local [enable disable]}
config wac ports	[<portlist> all] {state [enable disable] aging_time [infinite <min 1-1440>] idle_time [infinite <min 1-1440>] block_time [<sec 0-300>] }
config wac method	[local radius]
config wac default_redirpath	<string 128>
config wac clear_default_redirpath	
config wac virtual_ip	<ipaddr>
config wac switch_http_port	<tcp_port_number 1-65535> { [http https] }
create wac user	<username 15> { [vlan <vlan_name 32> vlanid <vlanid 1-4094>] }
delete wac	[user <username 15> all_users]
config wac user	<username 15> [vlan <vlan_name 32> vlanid <vlanid 1-4094> clear_vlan]
show wac	
show wac ports	{<portlist>}
show wac user	
show wac auth_state ports	{<portlist> } {authenticated authenticating blocked}
clear wac auth_state	[ports [<portlist> all] {authenticated authenticating blocked} macaddr <macaddr> }]

Each command is listed, in detail, in the following sections.

enable wac	
Purpose	Used to enable the Web-based access control function.
Syntax	enable wac
Description	This command is used to enable the WAC function.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable the WAC function:

```
DGS-3700-12:5#enable wac
Command: enable wac

Success.

DGS-3700-12:5#
```

disable wac

Purpose	To disable the WAC function.
Syntax	disable wac
Description	This command is used to disable the WAC function.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable the WAC function:

```
DGS-3700-12:5#disable wac
Command: disable wac

Success.

DGS-3700-12:5#
```

config wac authorization attributes

Purpose	To enable the acceptance of an authorized configuration.
Syntax	config wac authorization attributes {radius [enable disable] local [enable disable]}
Description	This command is used to enable the acceptance of an authorized configuration. When the authorization is enabled for WAC's RADIUS, the authorized data assigned by the RADIUS server will be accepted if the global authorization network is enabled. When the authorization is enabled for WAC's local, the authorized data assigned by the local database will be accepted.
Parameters	<p><i>radius</i> - If specified to enable, the authorized data assigned by the RADIUS server will be accepted if the global authorization network is enabled. The default state is enabled.</p> <p><i>enable</i> - Enable authorized data assigned by the RADIUS server to be accepted.</p> <p><i>disable</i> - Disable authorized data assigned by the RADIUS server to be accepted.</p> <p><i>local</i> - If specified to enable, the authorized data assigned by the local database will be accepted if the global authorization network is enabled. The default state is enabled.</p> <p><i>enable</i> - Enable authorized data assigned by the local database to be accepted.</p> <p><i>disable</i> - Disable authorized data assigned by the local database to be accepted.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable the acceptance of an authorized configuration:

```
DGS-3700-12:5#config wac authorization attributes local disable
Command: config wac authorization attributes local disable

Success.

DGS-3700-12:5#
```

config wac ports

Purpose	To configure the WAC port parameters.
Syntax	config wac ports [<portlist> all] {state [enable disable] aging_time [infinite <min 1-1440>] idle_time [infinite <min 1-1440>] block_time [<sec 0-300>] }
Description	This command is used to configure the WAC port parameters.
Parameters	<p><portlist> - Specifies a range of ports to be configured.</p> <p><i>all</i> - Specifies to configure all ports.</p> <p><i>state</i> - Specifies to enable or disable the WAC state.</p> <p><i>enable</i> - Enable the WAC state.</p> <p><i>disable</i> - Disable the WAC state.</p> <p><i>aging_time</i> - A time period during which an authenticated host will be kept in authenticated state. The default value is 24 hours.</p> <p><i>infinite</i> - Indicates the authenticated host on the port will not ageout.</p> <p><min 1-1440> - Set the ageout between 1 and 1440 minutes.</p> <p><i>idle_time</i> - A time period after which an authenticated host will be moved to un-authenticated state if there is no traffic during that period.</p> <p>The default value is infinite.</p> <p><i>infinite</i> - Indicates the host will not be removed from the authenticated state due to idle of traffic.</p> <p><min 1-1440> - Set the idle time between 1 and 1440 minutes.</p> <p><i>block_time</i> - If a host fails to pass the authentication, it will be blocked for this period of time before it can be re-authenticated..The default value is 60 seconds.</p> <p><sec-0-300> - Set the block time between 0 and 300 seconds</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the WAC port state:

```
DGS-3700-12:5#config wac ports 1-8 state enable
Command: config wac ports 1-8 state enable

Success.

DGS-3700-12:5#
```

To configure the WAC port aging time:

```
DGS-3700-12:5#config wac ports 1-5 aging_time 200
Command: config wac ports 1-5 aging_time 200

Success.

DGS-3700-12:5#
```

config wac method	
Purpose	To configure the WAC method.
Syntax	config wac method [local radius]
Description	This command is used to allow specification of the RADIUS protocol used by WAC to complete RADIUS authentication. WAC shares other RADIUS configuration with 802.1X. When using this command to set the RADIUS protocol, users must make sure the RADIUS server added by the config radius command supports the protocol.
Parameters	<i>local</i> - The authentication will be done via the local database. <i>radius</i> - The authentication will be done via the RADIUS server.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the WAC authentication method:

```
DGS-3700-12:5#config wac method radius
Command: config wac method radius

Success.

DGS-3700-12:5#
```

config wac default_redirpath	
Purpose	To configure the WAC default redirect path.
Syntax	config wac default_redirpath <string 128>
Description	This command is used to configure the WAC default redirect path. If default redirect path is configured, the user will be redirected to the default redirect path after successful authentication. When the string is cleared, the client will be redirected to logout page after successful authentication.
Parameters	<string 128> - Specify the URL that the client will be redirected to after successful authentication. By default, the redirected path is cleared
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure WAC default redirect path:

```
DGS-3700-12:5#config wac default_redirpath http://www.dlink.com
Command: config wac default_redirpath http://www.dlink.com

Success.

DGS-3700-12:5#
```

config wac clear_default_redirpath	
Purpose	To clear WAC default redirect path.
Syntax	config wac clear_default_redirpath
Description	This command is used to clear a WAC default redirect path. When the string is cleared, the client will be redirected to logout page after successful authentication.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To clear a WAC default redirect path:

```
DGS-3700-12:5#config wac clear_default_redirpath
Success.

DGS-3700-12:5#
```

config wac virtual_ip

Purpose	To configure the WAC virtual IP address used to accept authentication requests from unauthenticated hosts.
Syntax	config wac virtual_ip <ipaddr>
Description	This command is used to configure the WAC virtual IP address. When virtual IP is specified, the TCP packets sent to the virtual IP will get a reply. If virtual IP is enabled, TCP packets sent to the virtual IP or physical IPIF's IP address will both get the reply. When virtual IP is set 0.0.0.0, the virtual IP will be disabled. By default, the virtual IP is 0.0.0.0. The virtual IP will not respond to any ARP requests or ICMP packets. To make this function work properly, the virtual IP should not be an existing IP address. It also cannot be located on an existing subnet.
Parameters	<ipaddr> - Specify the IP address of the virtual IP.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the WAC virtual IP address used to accept authentication requests from unauthenticated hosts:

```
DGS-3700-12:5#config wac virtual_ip 1.1.1.1
Command: config wac virtual_ip 1.1.1.1

Success.

DGS-3700-12:5#
```

config wac switch_http_port

Purpose	To configure the TCP port which the WAC switch listens to.
Syntax	config wac switch_http_port <tcp_port_number 1-65535> { [http https] }
Description	This command is used to configure the TCP port which the WAC switch listens to. The TCP port for HTTP or HTTPS is used to identify the HTTP or HTTPS packets that will be trapped to CPU for authentication processing, or to access the login page. If not specified, the default port number for HTTP is 80, and the default port number for HTTPS is 443. If no protocol is specified, the protocol is HTTP.
Parameters	<tcp_port_number 1-65535> - Specifies a TCP port which the WAC switch listens to and uses to finish the authenticating process. <i>http</i> - Specifies that WAC runs HTTP protocol on this TCP port. <i>https</i> - Specifies that WAC runs HTTPS protocol on this TCP port.
Restrictions	The HTTP cannot run at TCP port 443, and the HTTPS cannot run at TCP port 80. Only Administrator and Operator-level users can issue this command.

Example usage:

To configure a TCP port which the WAC switch listens to:

```
DGS-3700-12:5#config wac switch_http_port 8888 http
Command: config wac switch_http_port 8888 http

Success.

DGS-3700-12:5#
```

create wac user

Purpose	This command is used to create a local WAC user.
Syntax	create wac user <username 15> { [vlan <vlan_name 32> vlanid <vlanid 1-4094>] }
Description	This command is used to create accounts for Web-based Access Control. This user account is independent of the login user account. If VLAN is not specified, the user will not get a VLAN assigned after the authentication.
Parameters	<i><username 15></i> - Specify the user account for Web-based Access Control. <i>vlan</i> - Specify the authentication VLAN name. <i>vlanid</i> - Specify the authentication VLAN ID number.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create a WAC account:

```
DGS-3700-12:5#create wac user vlan 123
Command: create wac user vlan 123
Enter a case-sensitive new password:**
Enter the new password again for confirmation:**
Success.

DGS-3700-12:5#
```

delete wac

Purpose	This command is used to delete a local WAC user.
Syntax	delete wac [user <username 15> all_users]
Description	This command is used to delete an account.
Parameters	<i>user</i> - Specify the user account for Web-based Access Control. <i>all_users</i> - Select this option to delete all current WAC users.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete a WAC account:

```
DGS-3700-12:5#delete wac user duhon
Command: delete wac user duhon

Success.

DGS-3700-12:5#
```

config wac user

Purpose	To configure the VLAN ID of the user account.
Syntax	config wac user <username 15> [vlan <vlan_name 32> vlanid <vlanid 1-4094> clear_vlan]

config wac user	
Description	This command is used to change the VLAN associated with a user.
Parameters	<username 15> - Specify the name of user account which will change its VID. vlan - Specify the authentication VLAN name. vlanid - Specify the authentication VLAN ID. clear_vlan - Choose to clear the specified VLAN.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the user's VLAN:

```
DGS-3700-12:5#config wac user vlanid 100
Command: config wac user vlanid 100

Success.

DGS-3700-12:5#
```

show wac	
Purpose	To display the WAC global setting.
Syntax	show wac
Description	This command is used to display the WAC global setting.
Parameters	None.
Restrictions	None.

Example usage:

To show WAC:

```
DGS-3700-12:5#show wac
Command: show wac

Web-Base Access Control
-----
State                : Disabled
Method               : Local
Redirect Path        :
Virtual IP           : 0.0.0.0
Switch HTTP Port    : 80 (HTTP)
RADIUS Authorization : Enabled
Local Authorization  : Enabled

DGS-3700-12:5#
```

show wac ports	
Purpose	To display WAC port information.
Syntax	show wac ports {<portlist>}
Description	This command is used to display WAC port information.
Parameters	<portlist> - Specify a range of member ports to display the status.
Restrictions	None.

Example usage:

To display WAC ports 1 to 3:

```
DGS-3700-12:5#show wac ports 1-3
Command: show wac ports 1-3

Port          State          Aging Time      Idle Time        Block Time
-----          -
1             Disabled       1440            Infinite         60
2             Disabled       1440            Infinite         60
3             Disabled       1440            Infinite         60

DGS-3700-12:5#
```

show wac user

Purpose	This command is used to display a WAC local user.
Syntax	show wac user
Description	This command is used to display WAC user accounts.
Parameters	None.
Restrictions	None.

Example usage:
 To show Web authentication user accounts:

```
DGS-3700-12:5#show wac user
Command: show wac user
Username      Password      VID
-----
123          *****      1000

Total Entries : 1

DGS-3700-12:5#
```

show wac auth_state ports

Purpose	This command is used to display the WAC authentication state.
Syntax	show wac auth_state ports {<portlist> } {authenticated authenticating blocked}
Description	This command is used to display the authentication state for ports.
Parameters	<p><i><portlist></i> - Specify the list of ports whose WAC authentication state will be displayed.</p> <p><i>authenticated</i> - Specifies the ports' users whose WAC authentication state are authenticated.</p> <p><i>authenticating</i> - Specifies the ports's users whose WAC authentication state are authenticating.</p> <p><i>blocked</i> - Specifies the ports' users whose WAC authentication state are blocked.</p>
Restrictions	None.

Example usage:
 To display the WAC authentication status:

```
DGS-3700-12:5#show wac auth_state ports
Command: show wac auth_state ports

P:Port-Based   Pri:Priority

Port  MAC Address          Original  State          VID  Pri Aging Time/  Idle
      RX VID              -----
-----
9     00-05-5D-F9-16-76    1        Authenticated  2    -   1440          -

Total Authenticating Hosts : 0
Total Authenticated Hosts  : 1
Total Blocked Hosts       : 0

DGS-3700-12:5#
```

clear wac auth_state

Purpose	To clear the WAC authentication state of a port.
Syntax	clear wac auth_state [ports [<portlist> all] {authenticated authenticating blocked} macaddr <macaddr> }]
Description	This command is used to clear the authentication state of a port. The port will return to un-authenticated state. All the timer associated with the port will be reset.
Parameters	<p><i>ports</i> - Specify the list of ports whose WAC state will be cleared.</p> <p><i><portlist></i> - Specify a range of ports.</p> <p><i>all</i> - Specify to clear all ports.</p> <p><i>authenticated</i> - Specify to clear all authenticated users for a port.</p> <p><i>authenticating</i> - Specify to clear all authenticating users for a port.</p> <p><i>blocked</i> - Specify to clear all blocked users for a port.</p> <p><i>macaddr</i> - Specify to clear a specific user.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
 To clear the WAC authentication state of ports 1 to 5:

```
DGS-3700-12:5#clear wac auth_state ports 1-5
Command: clear wac auth_state ports 1-5

Success.

DGS-3700-12:5#
```

NETWORK APPLICATION SECTION

10

Table of Contents

Next Section

Previous Section

DHCP LOCAL RELAY COMMANDS

Back to Section Header

The DHCP local relay commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
config dhcp_local_relay vlan	<vlan_name 32> state [enable disable]
enable dhcp_local_relay	
disable dhcp_local_relay	
show dhcp_local_relay	

Each command is listed in detail in the following sections.

config dhcp_local_relay vlan	
Purpose	To enable or disable the DHCP local relay function for a specific VLAN.
Syntax	config dhcp_local_relay vlan <vlan_name 32> state [enable disable]
Description	This command is used to enable or disable the DHCP local relay function for a specified VLAN. When DHCP local relay is enabled for the VLAN, the DHCP packet will be relayed as a broadcast without changing the source MAC address and gateway address. DHCP option 82 will be automatically added.
Parameters	<i>vlan</i> - The name of the VLAN to be enabled for DHCP local relay. <i>state</i> - Enable or disable DHCP local relay for a specified VLAN. <i>enable</i> - Enable DHCP local relay for a specified VLAN. <i>disable</i> - Disable DHCP local relay for a specified VLAN.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To enable DHCP local relay for a default VLAN:

```
DGS-3700-12:5#config dhcp_local_relay vlan default state enable
Command: config dhcp_local_relay vlan default state enable

Success.

DGS-3700-12:5#
```

enable dhcp_local_relay	
Purpose	To enable DHCP local relay.
Syntax	enable dhcp_local_relay
Description	This command is used to enable the DHCP local relay function on the switch.
Parameters	None.

enable dhcp_local_relay

Restrictions	Only Administrator-level users can issue this command.
---------------------	--

Example usage:

To enable the DHCP local relay function:

```
DGS-3700-12:5#enable dhcp_local_relay
Command: enable dhcp_local_relay

Success.

DGS-3700-12:5#
```

disable dhcp_local_relay

Purpose	To disable the DHCP local relay function.
Syntax	disable dhcp_local_relay
Description	This command is used to globally disable the DHCP local relay function on the switch.
Parameters	None.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To disable the DHCP local relay function:

```
DGS-3700-12:5#disable dhcp_local_relay
Command: disable dhcp_local_relay

Success.

DGS-3700-12:5#
```

show dhcp_local_relay

Purpose	To display the current DHCP local relay configuration.
Syntax	show dhcp_local_relay
Description	This command is used to display the current DHCP local relay configuration on the switch.
Parameters	None.
Restrictions	None.

Example usage:

To display the local DHCP relay status:

```
DGS-3700-12:5#show dhcp_local_relay
Command: show dhcp_local_relay

DHCP/BOOTP Local Relay Status      : Disabled
DHCP/BOOTP Local Relay VID List    : 1,3-4

DGS-3700-12:5#
```


DHCP RELAY COMMANDS

Back to Section Header

The DHCP relay commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
config dhcp_relay	{hops <value 1-16> time <sec 0-65535>}
config dhcp_relay add ipif	<ipif_name 12> <ipaddr>
config dhcp_relay delete ipif	<ipif_name 12> <ipaddr>
config dhcp_relay option_60 add	string <mutiword 255> relay <ipaddr> [exact-match partial-match]
config dhcp_relay option_60 delete	[string <mutiword 255> {relay <ipaddr>} ipaddress <ipaddr> all default {<ipaddr>}]
show dhcp_relay option_60	{[string<mutiword 255> ipaddress <ipaddr> default]}
config dhcp_relay option_60 default	[relay <ipaddr> mode [relay drop]]
config dhcp_relay option_60 state	[enable disable]
config dhcp_relay option_61 add	[mac_address <macaddr> string <desc_long 255>] [relay <ipaddr> drop]
show dhcp_relay option_61	
config dhcp_relay option_61 delete	[mac_address <macaddr> string <desc_long 255> all]
config dhcp_relay option_61 default	[relay <ipaddr> drop]
config dhcp_relay option_61 state	[enable disable]
config dhcp_relay option_82 state	[enable disable]
config dhcp_relay option_82 check	[enable disable]
config dhcp_relay option_82 remote_id	[default user_define <desc 32>]
config dhcp_relay option_82 policy	[replace drop keep]
show dhcp_relay	{ipif <ipif_name 12>}
enable dhcp_relay	
disable dhcp_relay	
config dhcpv6_relay hop_count	<value 1-32>
config dhcpv6_relay	[add delete] ipif <ipif_name 12> <ipv6addr>
config dhcpv6_relay ipif	[<ipif_name 12> all] state [enable disable]
show dhcpv6_relay	{ipif <ipif_name 12>}
enable dhcpv6_relay	
disable dhcpv6_relay	

Each command is listed in detail in the following sections.

config dhcp_relay	
Purpose	Used to configure the DHCP/BOOTP relay feature of the switch.
Syntax	config dhcp_relay {hops <value 1-16> time <sec 0-65535>}
Description	This command is used to configure the DHCP/BOOTP relay feature.
Parameters	<i>hops</i> <value 1-16> – Specifies the maximum number of relay agent hops that the

config dhcp_relay	
	DHCP packets can cross. <i>time</i> <sec 0-65535> – If this time is exceeded, the Switch will relay the DHCP packet.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To config DHCP relay:

```
DGS-3700-12:5#config dhcp_relay hops 2 time 23
Command: config dhcp_relay hops 2 time 23

Success.

DGS-3700-12:5#
```

config dhcp_relay add ipif	
Purpose	Used to add an IP destination address to the switch's DHCP/BOOTP relay table.
Syntax	config dhcp_relay add ipif <ipif_name 12> <ipaddr>
Description	This command adds an IP address as a destination to forward (relay) DHCP/BOOTP relay packets to.
Parameters	<ipif_name 12> – The name of the IP interface in which DHCP relay is to be enabled. <ipaddr> – The DHCP server IP address.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To add an IP destination to the DHCP relay table:

```
DGS-3700-12:5#config dhcp_relay add ipif System 10.58.44.6
Command: config dhcp_relay add ipif System 10.58.44.6

Success.

DGS-3700-12:5#
```

config dhcp_relay delete ipif	
Purpose	Used to delete one or all IP destination addresses from the Switch's DHCP/BOOTP relay table.
Syntax	config dhcp_relay delete ipif <ipif_name 12> <ipaddr>
Description	This command is used to delete an IP destination addresses in the Switch's DHCP/BOOTP relay table.
Parameters	<ipif_name 12> – The name of the IP interface that contains the IP address below. <ipaddr> – The DHCP server IP address.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete an IP destination from the DHCP relay table:

```
DGS-3700-12:5#config dhcp_relay delete ipif System 10.58.44.6
Command: config dhcp_relay delete ipif System 10.58.44.6

Success.

DGS-3700-12:5#
```

config dhcp_relay option_60 state

Purpose	This command is used to configure the state of DHCP relay agent information option 60 of the switch.
Syntax	config dhcp_relay option_60 state [enable disable]
Description	This command decides whether dhcp_relay will process the DHCP option 60 or not. When option_60 is enabled, if the packet does not have option 60, then the relay servers cannot be determined based on option 60. The relay servers will be determined based on either option 61 or per IPIF configured servers. If the relay servers are determined based on option 60 or option 61, then per IPIF configured servers will be ignored. If the relay servers are not determined either by option 60 or option 61, then per IPIF configured servers will be used to determine the relay servers.
Parameters	<i>enable</i> – Enables the fuction. <i>disable</i> – Disables the fuction.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To configure DHCP relay option 60 state:

```
DGS-3700-12:5#config dhcp_relay option_60 state enable
Command: config dhcp_relay option_60 state enable

Success.

DGS-3700-12:5#
```

config dhcp_relay option_60 add

Purpose	This command is used to add a entry for dhcp_relay option_60
Syntax	config dhcp_relay option_60 add string <mutiword 255> relay <ipaddr> [exact-match partial-match]
Description	This command configures the option 60 relay rules. Note that different strings can be specified with the same relay server, and the same string can be specified with multiple relay servers. The system will relay the packet to all the matching servers.
Parameters	<i>exact-match</i> – The option 60 string in the packet must fully match the specified string. <i>partial-match</i> – The option 60 string in the packet only need partial match with the specified string. <i>string</i> – The specified string. <i>ipaddress</i> – Specify a relay server IP address.
Restrictions	Only Administrator can issue this command.

Example usage:

To configure a new dhcp relay with option 60:

```
DGS-3700-12:5#config dhcp_relay option_60 add string "abc" relay 10.90.90.1 exact-match
Command: config dhcp_relay option_60 add string "abc" relay 10.90.90.1 exact-match

Success.

DGS-3700-12:5#
```

config dhcp_relay option_60 default

Purpose	This command is used to configure dhcp_relay option_60 default relay servers
Syntax	config dhcp_relay option_60 default [relay <ipaddr> mode[relay drop]]
Description	When there are no matching servers found for the packet, based on option 60, the relay servers will be determined by the default relay server settings. When drop is specified, the packet with no matching rules found will be dropped without further process. If the setting states no- drop, then the packet will be processed further based on option 61. The final relay servers will be the union of option 60 default relay servers and the relay servers determined by option 61.
Parameters	<i>relay</i> – The specified ipaddress for dhcp_relay forward. Specifies a relay server IP for the packet that has mathcing option 60 rules. <i>drop</i> – Specify to drop the packet that has no matching option 60 rules. <i>relay</i> – The packet will be relayed based on the relay rules.
Restrictions	Only Administrator can issue this command.

Example usage:

To configure the DHCP relay default option 60:

```
DGS-3700-12:5#config dhcp_relay option_60 default mode drop
Command: config dhcp_relay option_60 default mode drop

Success.

DGS-3700-12:5#
```

config dhcp_relay option_60 delete

Purpose	This command is used to delete dhcp_relay option_60 entry.
Syntax	config dhcp_relay option_60 delete [string <mutiword 255> {relay <ipaddr>} ipaddress <ipaddr> all default {<ipaddr>}]
Description	This command can delete the entry specified by user. When all is specified, all rules excluding the default rules are deleted
Parameters	<i>ipaddress</i> – Deletes any entry whose ipaddress is equal to the specified ipaddress. <i>default</i> – Deletes any default relay ipaddress if ipaddress is not specified. <i>relay</i> – Deletes the entry, whose string and IP address are equal to the string and IP address specified by the user. <i>all</i> – Deletes all entries, however default relay servers are excluded. <i>string</i> – Deletes all the entries whose string is equal to the string specified if the ipaddress is not specified
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To delete the DHCP relay option 60:

```
DGS-3700-12:5#config dhcp_relay option_60 delete all
Command: config dhcp_relay option_60 delete all

Success.

DGS-3700-12:5#
```

show dhcp_relay option_60

Purpose	This command is used to show dhcp_relay option_60 entry.
Syntax	show dhcp_relay option_60 {[string <mutiword 255> ipaddress <ipaddr> default]}
Description	This command will display the dhcp_relay option_60 entry by the user specified.
Parameters	<i>ipaddress</i> – Shows the entry whose ipaddress is equal to the specified ipaddress. <i>default</i> – Shows the default behaviour of dhcp_relay option60. <i>string</i> – Shows the entry whose string is equal to the string of a specified user.
Restrictions	None.

Example usage:

To display the DHCP relay option 60:

```
DGS-3700-12:5#show dhcp_relay option_60
Command: show dhcp_relay option_60

Default Processing Mode: Drop

Default Servers:

Matching Rules:

String                Match Type            IP Address
-----                -
abc                    Exact Match           10.90.90.1

Total Entries : 1

DGS-3700-12:5#
```

config dhcp_relay option_61 state

Purpose	This command is used to configure the DHCP relay option 61 state.
Syntax	config dhcp_relay option_61 state [enable disable]
Description	This command decides whether dhcp_relay will process the DHCP option 61 or not. When option_61 is enabled, if the packet does not have option 61, then the relay servers cannot be determined based on option 61. If the relay servers are determined based on option 60 or option 61, then per IPIF configured servers will be ignored. If the relay servers are not determined either by option 60 or option 61, then per IPIF configured servers will be used to determine the relay servers.
Parameters	<i>enable</i> – Enables the fuction dhcp_relay use option_61 ruler to relay dhcp packet. <i>disable</i> – Disables the fuction dhcp_relay use option_61 ruler to relay dhcp packet.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To configure the state of DHCP relay option 61:

```
DGS-3700-12:5#config dhcp_relay option_61 state enable
Command: config dhcp_relay option_61 state enable

Success.

DGS-3700-12:5#
```

config dhcp_relay option_61 add

Purpose	This command is used to add a rule for dhcp_relay option_61.
Syntax	config dhcp_relay option_61 add [mac_address <macaddr> string <desc 255>] [relay <ipaddr> drop]
Description	This command adds a rule to determine the relay server based on option 61. The matched rule can be based on either the MAC address or a user-specified string. Only one relay server can be specified for a MAC-address or a string. If the relay servers are determined based on option 60, and one relay server is determined based on option 61, the final relay servers will be the union of these two sets of the servers.
Parameters	<i>mac_address</i> – The client’s client-ID which is the hardware address of client. <i>string</i> – The client’s client-ID, which is specified by administrator. <i>relay</i> – Specify to relay the packet to a IP address. <i>drop</i> – Specify to drop the packet.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To configure the DHCP relay option 61:

```
DGS-3700-12:5#config dhcp_relay option_61 add mac_address 00-01-22-33-44-55 drop
Command: config dhcp_relay option_61 add mac_address 00-01-22-33-44-55 drop

Success.

DGS-3700-12:5#
```

config dhcp_relay option_61 default

Purpose	This command is used to determine the default ruler for option 61.
Syntax	config dhcp_relay option_61 default [relay <ipaddr> drop]
Description	This command is used to determine the rule to process those packets that have no option 61 matching rules. The default default-rule is drop.
Parameters	<i>relay</i> – Specifies to relay the packet that has no option 61 matching rules to an IP address. <i>drop</i> – Specifies to drop the packet that has no option 61 matching rules.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To configure the DHCP relay option 61 default:

```
DGS-3700-12:5#config dhcp_relay option_61 default drop
Command: config dhcp_relay option_61 default drop

Success.

DGS-3700-12:5#
```

config dhcp_relay option_61 delete

Purpose	This command is used to delete an option 61 rule.
Syntax	config dhcp_relay option_61 delete [mac_address <macaddr> string <desc 255> all]
Description	This command is used to delete an option 61 rule.
Parameters	<i>mac_address</i> – The entry with the specified MAC address will be deleted. <i>string</i> – The entry with the specified string will be deleted. <i>all</i> – All rules excluding the default rule will be deleted.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To delete the DHCP relay option 61 rules:

```
DGS-3700-12:5# config dhcp_relay option_61 delete mac_address 00-11-22-33-44-55
Command: config dhcp_relay option_61 delete mac_address 00-11-22-33-44-55

Success

DGS-3700-12:5#
```

show dhcp_relay option_61

Purpose	This command displays DHCP relay option 61.
Syntax	show dhcp_relay option_61
Description	This command displays DHCP relay option 61.
Parameters	None.
Restrictions	None.

Example usage:

To display the DHCP relay option 61:

```
DGS-3700-12:5#show dhcp_relay option_61
Command: show dhcp_relay option_61

Default Relay Rule:Drop

Matching Rules:

Client-ID                               Type                               Relay Rule
-----                               -
00-01-22-33-44-55                       MAC Address                       Drop

Total Entries : 1

DGS-3700-12:5#
```

config dhcp_relay option_82 state

config dhcp_relay option_82 state	
Purpose	Used to configure the state of DHCP relay agent information option 82 of the switch.
Syntax	config dhcp_relay option_82 state [enable disable]
Description	This command is used to configure the state of DHCP relay agent information option 82 of the switch.
Parameters	<p><i>enable</i> – When this field is toggled to <i>Enabled</i> the relay agent will insert and remove DHCP relay information (option 82 field) in messages between DHCP server and client. When the relay agent receives the DHCP request, it adds the option 82 information, and the IP address of the relay agent (if the relay agent is configured), to the packet. Once the option 82 information has been added to the packet it is sent on to the DHCP server. When the DHCP server receives the packet, if the server is capable of option 82, it can implement policies like restricting the number of IP addresses that can be assigned to a single remote ID or circuit ID. Then the DHCP server echoes the option 82 field in the DHCP reply. The DHCP server unicasts the reply to the back to the relay agent if the request was relayed to the server by the relay agent. The switch verifies that it originally inserted the option 82 data. Finally, the relay agent removes the option 82 field and forwards the packet to the switch port that connects to the DHCP client that sent the DHCP request.</p> <p><i>disable</i> – If the field is toggled to <i>disable</i> the relay agent will not insert and remove DHCP relay information (option 82 field) in messages between DHCP servers and clients, and the check and policy settings will have no effect.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure DHCP relay option 82 state:

```
DGS-3700-12:5#config dhcp_relay option_82 state enable
Command: config dhcp_relay option_82 state enable

Success.

DGS-3700-12:5#
```

config dhcp_relay option_82 check	
Purpose	Used to configure the checking mechanism of DHCP relay agent information option 82 of the switch.
Syntax	config dhcp_relay option_82 check [enable disable]
Description	This command is used to configure the checking mechanism of DHCP/BOOTP relay agent information option 82 of the switch.
Parameters	<p><i>enable</i> – When the field is toggled to <i>enable</i>, the relay agent will check the validity of the packet's option 82 field. If the switch receives a packet that contains the option 82 field from a DHCP client, the switch drops the packet because it is invalid. In packets received from DHCP servers, the relay agent will drop invalid messages.</p> <p><i>disable</i> – When the field is toggled to <i>disable</i>, the relay agent will not check the validity of the packet's option 82 field.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure DHCP relay option 82 check:

```
DGS-3700-12:5#config dhcp_relay option_82 check enable
Command: config dhcp_relay option_82 check enable

Success.

DGS-3700-12:5#
```

config dhcp_relay option_82 remote_id

Purpose	Used to configure the remote ID of DHCP relay agent information option 82 of the switch.
Syntax	config dhcp_relay option_82 remote_id [default user_define <desc 32>]
Description	This command is used to configure the remote ID of DHCP/BOOTP relay agent information option 82 of the switch.
Parameters	<i>default</i> – Specifies to use the default configuration for the option 82 remote ID. <i>user_define</i> – Specifies to use the user defined configuration for the option 82 remote ID.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the default remote ID of the DHCP relay agent.

```
DGS-3700-12G:5#config dhcp_relay option_82 remote_id default
Command: config dhcp_relay option_82 remote_id default

Success.

DGS-3700-12G:5#
```

config dhcp_relay option_82 policy

Purpose	Used to configure the reforwarding policy of relay agent information option 82 of the switch.
Syntax	config dhcp_relay option_82 policy [replace drop keep]
Description	This command is used to configure the reforwarding policy of DHCP relay agent information option 82 of the switch.
Parameters	<i>replace</i> – The option 82 field will be replaced if the option 82 field already exists in the packet received from the DHCP client. <i>drop</i> – The packet will be dropped if the option 82 field already exists in the packet received from the DHCP client. <i>keep</i> – The option 82 field will be retained if the option 82 field already exists in the packet received from the DHCP client.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure DHCP relay option 82 policy:

```
DGS-3700-12:5#config dhcp_relay option_82 policy replace
Command: config dhcp_relay option_82 policy replace

Success.

DGS-3700-12:5#
```

show dhcp_relay	
Purpose	Used to display the current DHCP/BOOTP relay configuration.
Syntax	show dhcp_relay {ipif <ipif_name 12>}
Description	This command will display the current DHCP relay configuration for the Switch, or if an IP interface name is specified, the DHCP relay configuration for that IP interface.
Parameters	<i>ipif</i> – The name of the IP interface for which to display the current DHCP relay configuration.
Restrictions	None.

Example usage:

To show the DHCP relay configuration:

```
DGS-3700-12G:5#show dhcp_relay
Command: show dhcp_relay

DHCP/Bootp Relay Status      : Disabled
DHCP/Bootp Hops Count Limit  : 4
DHCP/Bootp Relay Time Threshold : 0
DHCP Vendor Class Identifier Option 60 State: Disabled
DHCP Client Identifier Option 61 State: Disabled
DHCP Relay Agent Information Option 82 State : Disabled
DHCP Relay Agent Information Option 82 Check : Disabled
DHCP Relay Agent Information Option 82 Policy : Replace
DHCP Relay Agent Information Option 82 Remote ID : 00-21-91-AF-3C-07

Interface      Server 1      Server 2      Server 3      Server 4
-----
DGS-3700-12G:5#
```

Example usage:

To show a single IP destination of the DHCP relay configuration:

```
DGS-3700-12G:5#show dhcp_relay ipif System
Command: show dhcp_relay ipif System

DHCP/Bootp Relay Status      : Disabled
DHCP/Bootp Hops Count Limit  : 4
DHCP/Bootp Relay Time Threshold : 0
DHCP Vendor Class Identifier Option 60 State: Disabled
DHCP Client Identifier Option 61 State: Disabled
DHCP Relay Agent Information Option 82 State : Disabled
DHCP Relay Agent Information Option 82 Check : Disabled
DHCP Relay Agent Information Option 82 Policy : Replace
DHCP Relay Agent Information Option 82 Remote ID : 00-21-91-AF-3C-07

Interface      Server 1      Server 2      Server 3      Server 4
-----
DGS-3700-12G:5#
```

enable dhcp_relay	
Purpose	Used to enable the DHCP/BOOTP relay function on the Switch.
Syntax	enable dhcp_relay

enable dhcp_relay

Description	This command is used to enable the DHCP/BOOTP relay function on the Switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable DHCP relay:

```
DGS-3700-12:5#enable dhcp_relay
```

```
Command: enable dhcp_relay
```

```
Success.
```

```
DGS-3700-12:5#
```

disable dhcp_relay

Purpose	Used to disable the DHCP/BOOTP relay function on the Switch.
Syntax	disable dhcp_relay
Description	This command is used to disable the DHCP/BOOTP relay function on the Switch.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable DHCP relay:

```
DGS-3700-12:5#disable dhcp_relay
```

```
Command: disable dhcp_relay
```

```
Success.
```

```
DGS-3700-12:5#
```

config dhcpv6_relay hop_count

Purpose	Configure the DHCPv6 relay hop_count of the switch.
Syntax	config dhcpv6_relay hop_count <value 1-32>
Description	The command configures the DHCPv6 relay hop_count of the switch.
Parameters	<i>hop_count</i> - Hop_count is the number of relay agents that have relayed this message. The range is 1 to 32. The default value is 4.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the maximum hops of a DHCPv6 relay packet could be transferred to 4:

```
DGS-3700-12:5#config dhcpv6_relay hop_count 4
```

```
Command: config dhcpv6_relay hop_count 4
```

```
Success.
```

```
DGS-3700-12:5#
```

config dhcpv6_relay	
Purpose	This command is used to add or delete an IP destination address to and from the switch's DHCPv6 relay table.
Syntax	config dhcpv6_relay [add delete] ipif <ipif_name 12> <ipv6addr>
Description	The command could add or delete an IPv6 address which is a destination to forward (relay) DHCPv6 packets.
Parameters	<i>add</i> - Add an IPv6 destination to the DHCPv6 relay table. <i>delete</i> - Delete an IPv6 destination from the DHCPv6 relay table <i>ipif</i> - The name of the IP interface in which DHCPv6 relay is to be enabled. <i>ipv6addr</i> - The DHCPv6 server IP address.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To add a DHCPv6 server to the relay table:

```
DGS-3700-12:5#config dhcpv6_relay add ipif System 2001:DB8:1234:0:218:FEFF:FEFB:CC0E
Command: config dhcpv6_relay add ipif System 2001:DB8:1234:0:218:FEFF:FEFB:CC0E

Success.

DGS-3700-12:5#
```

config dhcpv6_relay ipif	
Purpose	This command is used to configure the DHCPv6 relay state of one specific interface or all interfaces.
Syntax	config dhcpv6_relay ipif [<ipif_name 12> all] state [enable disable]
Description	The command is used to configure the DHCPv6 relay state of one specific interface or all interfaces.
Parameters	<i>ipif</i> - The name of the IP interface. <i>all</i> - Indicates all configured IP interfaces. <i>state</i> - See below: <i>enable</i> - Choose this parameter to enable the DHCPv6 relay state of the interface. <i>disable</i> - Choose this parameter to disable the DHCPv6 relay state of the interface.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the DHCPv6 relay state of the System interface to enable:

```
DGS-3700-12:5# config dhcpv6_relay ipif System state enable
Command: config dhcpv6_relay ipif System state enable

Success.

DGS-3700-12:5#
```

show dhcpv6_relay	
Purpose	This command is used to display the current DHCPv6 relay configuration.
Syntax	show dhcpv6_relay {ipif <ipif_name 12>}
Description	This command will display the current DHCPv6 relay configuration of all interfaces, or if an IP interface name is specified, the DHCPv6 relay configuration for that IP interface.

show dhcpv6_relay

Parameters	<i>ipif</i> - The name of the IP interface for which to display the current DHCPv6 relay configuration. If no IP interface is specified, all configured DHCPv6 relay interfaces are displayed.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To show the DHCPv6 relay configuration of all interfaces:

```
DGS-3700-12:5#show dhcpv6_relay
Command: show dhcpv6_relay

DHCPv6 Relay Global State      : Disabled
DHCPv6 Hops Count Limit       : 4
-----
IP Interface                    : Ipif_1
DHCPv6 Relay Status            : Enabled
Server Address                 : 2001:DB8:1234:1:218:FEFF:FEFB:2

IP Interface                    : Ipif_2
DHCPv6 Relay Status            : Enabled
Server Address                 :

IP Interface                    : System
DHCPv6 Relay Status            : Enabled
Server Address                 : 2001:DB8:1234:0:218:FEFF:FEFB:1
Server Address                 : 3ffe::500
Server Address                 : 3ffe::600
Server Address                 : ff05::1:3%Ipif_1

Total Entries : 3

DGS-3700-12:5#
```

To show the DHCPv6 relay configuration of System interfaces:

```
DGS-3700-12:5#show dhcpv6_relay ipif System
Command: show dhcpv6_relay ipif System

DHCPv6 Relay Global State      : Disabled
DHCPv6 Hops Count Limit       : 4
-----
IP Interface                    : System
DHCPv6 Relay Status            : Disabled
Server Address                 : 2001:DB8:1234:0:218:FEFF:FEFB:1
Server Address                 : 3ffe::500
Server Address                 : 3ffe::600
Server Address                 : ff05::1:3%Ipif_1

DGS-3700-12:5#
```

enable dhcpv6_relay

Purpose	This command is used to enable DHCP version 6 relay.
Syntax	enable dhcpv6_relay
Description	This command is used to enable DHCP version 6 relay.

enable dhcpv6_relay

Parameters	None
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable the DHCPv6 relay option:

```
DGS-3700-12G:5#enable dhcpv6_relay
Command: enable dhcpv6_relay

Success.

DGS-3700-12G:5#
```

disable dhcpv6_relay

Purpose	This command is used to disable DHCP version 6 relay.
Syntax	disable dhcpv6_relay
Description	This command is used to disable DHCP version 6 relay.
Parameters	None
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable the DHCPv6 relay option:

```
DGS-3700-12G:5#disable dhcpv6_relay
Command: disable dhcpv6_relay

Success.

DGS-3700-12G:5#
```

DHCP SERVER COMMANDS

Back to Section Header

The DHCP Server commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
create dhcp excluded_address begin_address	<ipaddr> end_address <ipaddr>
delete dhcp excluded_address	[begin_address <ipaddr> end_address <ipaddr> all]
show dhcp excluded_address	
create dhcp pool	<pool_name 12>
delete dhcp pool	[<pool_name 12> all]
config dhcp pool network_addr	<pool_name 12> <network_address>
config dhcp pool domain_name	<pool_name 12> {<domain_name 64>}
config dhcp pool dns_server	<pool_name 12> {<ipaddr>} {<ipaddr>} {<ipaddr>}
config dhcp pool netbios_name_server	<pool_name 12> {<ipaddr>} {<ipaddr>} {<ipaddr>}
config dhcp pool netbios_node_type	<pool_name 12> [broadcast peer_to_peer mixed hybrid]
config dhcp pool default_router	<pool_name 12> {<ipaddr>} {<ipaddr>} {<ipaddr>}
config dhcp pool lease	<pool_name 12> [<day 0-365> <hour 0-23> <minute 0-59> infinite]
config dhcp pool boot_file	<pool_name 12> {<file_name 64>}
config dhcp pool next_server	<pool_name 12> {<ipaddr>}
config dhcp ping_packets	<number 0-10>
config dhcp ping_timeout	<millisecond 10-2000>
create dhcp pool manual_binding	<pool name 12> <ipaddr> hardware_address <macaddr> {type [Ethernet IEEE802]}
delete dhcp pool manual_binding	<pool_name 12> [<ipaddr> all]
clear dhcp binding	[<pool_name 12> [<ipaddr> all] all]
show dhcp binding	{<pool_name 12>}
show dhcp pool	{<pool_name 12>}
show dhcp pool manual_binding	{<pool_name 12>}
enable dhcp_server	
disable dhcp_server	
show dhcp_server	
clear dhcp conflict_ip	[<ipaddr> all]
show dhcp conflict_ip	{<ipaddr>}

Each command is listed, in detail, in the following sections.

create dhcp excluded_address begin_address

Purpose	Used to create the DHCP Server exclude address.
Syntax	create dhcp excluded_address begin_address <ipaddr> end_address <ipaddr>
Description	This command is used to create a DHCP server exclude address. The DHCP server assumes that all IP addresses in a DHCP pool subnet are available for assigning to DHCP clients. Use this command to specify the IP address that the DHCP server should not assign to clients. This command can be used multiple times in order to define multiple groups of excluded addresses.
Parameters	<i>begin_address</i> - Starting address of the IP address range. <i>end_address</i> - Ending address of the IP address range.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To specify the IP address that DHCP server should not assign to clients:

```
DGS-3700-12:5#create dhcp excluded_address begin_address 10.10.10.1 end_address
10.10.10.10
Command: create dhcp excluded_address begin_address 10.10.10.1 end_address 10.10.10.10

Success.

DGS-3700-12:5#
```

delete dhcp excluded_address

Purpose	Used to delete the DHCP Server exclude address.
Syntax	delete dhcp excluded_address [begin_address <ipaddr> end_address <ipaddr> all]
Description	This command is used to delete a DHCP server exclude address.
Parameters	<i>begin_address</i> - Starting address of the IP address range. <i>end_address</i> - Ending address of the IP address range.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To delete a DHCP server exclude address:

```
DGS-3700-12:5#delete dhcp excluded_address begin_address 10.10.10.1 end_address
10.10.10.10
Command: delete dhcp excluded_address begin_address 10.10.10.1 end_address 10.10.10.10

Success.

DGS-3700-12:5#
```

show dhcp excluded_address

Purpose	Used to display the DHCP Server exclude address.
Syntax	show dhcp excluded_address
Description	This command is used to display the groups of IP addresses which are excluded from being a legal assigned IP address.
Parameters	None.
Restrictions	None.

Example usage:

To display the DHCP server excluded addresses:

```
DGS-3700-12:5#show dhcp excluded_address
Command: show dhcp excluded_address

Index   Begin Address   End Address
-----  -
1       192.168.01     192.168.0.100
2       10.10.10.10    10.10.10.11

Total Entries : 2

DGS-3700-12:5#
```

create dhcp pool

Purpose	Used to create the current DHCP Server pool information.
Syntax	create dhcp pool <pool_name 12>
Description	This command is used to create a DHCP pool by specifying a name. After creating a DHCP pool, use other DHCP pool configuration commands to configure parameters for the pool.
Parameters	<pool_name 12> - Specify the name of the DHCP pool.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To create a DHCP pool:

```
DGS-3700-12:5#create dhcp pool netpool
Command: create dhcp pool netpool

Success.

DGS-3700-12:5#
```

delete dhcp pool

Purpose	Used to delete the current DHCP Server pool information.
Syntax	delete dhcp pool [<pool_name 12> all]
Description	This command is used to delete a DHCP pool.
Parameters	<pool_name 12> - Specify the name of the DHCP pool. all - Specify to delete all the DHCP pools.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To delete a DHCP pool:

```
DGS-3700-12:5#delete dhcp pool netpool
Command: delete dhcp pool netpool

Success.

DGS-3700-12:5#
```

config dhcp pool network_addr	
Purpose	Used to configure the current DHCP Server pool information.
Syntax	config dhcp pool network_addr <pool_name 12> <network_address>
Description	This command is used to specify the network for the DHCP pool. The addresses in the network are free to be assigned to the DHCP client. The prefix length specifies the number of bits that comprise the address prefix. The prefix is an alternative way of specifying the network mask of the client. The prefix length must be preceded by a forward slash (/). When the DHCP server receives a request from the client, the server will automatically find a pool to allocate the address. If the request is relayed to the server by the intermediate device, the server will match the gateway IP address carried in the packet against the network of each DHCP pool. The pool which has the longest match will be selected. If the request packet is not through relay, then the server will match the IP address of the IP interface that received the request packet against the network of each DHCP pool.
Parameters	<pool_name 12> - Specify the DHCP pool name. <network_address> - Specify the IP address that the DHCP server may assign to clients.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To configure the address range of the DHCP address pool:

DGS-3700-12:5# config dhcp pool network_addr netpool 10.10.10.0/24 Command: config dhcp pool network_addr netpool 10.10.10.0/24
Success.
DGS-3700-12:5#

config dhcp pool domain_name	
Purpose	Used to configure the current DHCP Server pool information.
Syntax	config dhcp pool domain_name <pool_name 12> {<domain_name 64>}
Description	The domain name configured here will be used as the default domain name by the client. By default, the domain name is empty. If the domain name is empty, the domain name information will not be provided to the client.
Parameters	<pool_name 12> - Specify the DHCP pool name. <domain_name 64> - Specify the domain name of the client.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To configure the domain name option of the DHCP pool:

DGS-3700-12:5# config dhcp pool domain_name netpool name.com Command: config dhcp pool domain_name netpool name.com
Success.
DGS-3700-12:5#

config dhcp pool dns_server	
Purpose	Used to configure the current DHCP Server pool information.

config dhcp pool dns_server	
Syntax	config dhcp pool dns_server <pool_name 12> {<ipaddr>} {<ipaddr>} {<ipaddr>}
Description	If DNS server is not specified, the DNS server information will not be provided to the client. If this command is input twice for the same pool, the second command will overwrite the first command.
Parameters	<pool_name 12> - Specify the DHCP pool name. <ipaddr> - Specify the IP address of the DNS server.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To configure the DNS server's IP address:

DGS-3700-12:5#config dhcp pool dns_server netpool 10.10.10.1 Command: config dhcp pool dns_server netpool 10.10.10.1 Success. DGS-3700-12:5#

config dhcp pool netbios_name_server	
Purpose	Used to configure the current DHCP Server pool information.
Syntax	config dhcp pool netbios_name_server <pool_name 12> {<ipaddr>} {<ipaddr>} {<ipaddr>}
Description	Windows Internet Naming Service (WINS) is a name resolution service that Microsoft DHCP clients use to correlate host names to IP addresses within a general grouping of networks. If a NetBIOS name server is not specified, the NetBIOS name server information will not be provided to the client. If this command is input twice for the same pool, the second command will overwrite the first command.
Parameters	<pool_name> - Specify the DHCP pool name. <ipaddr> - Specify the IP address of the WINS server.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To configure a WINS server IP address:

DGS-3700-12:5#config dhcp pool netbios_name_server netserver 10.10.10.1 Command: config dhcp pool netbios_name_server netserver 10.10.10.1 Success. DGS-3700-12:5#

config dhcp pool netbios_node_type	
Purpose	Used to configure the current DHCP Server pool information.
Syntax	config dhcp pool netbios_node_type <pool_name 12> [broadcast peer_to_peer mixed hybrid]
Description	The NetBIOS node type for Microsoft DHCP clients can be one of four settings: broadcast, peer-to-peer, mixed, or hybrid. Use this command to configure a NetBIOS over TCP/IP device that is described in RFC 1001/1002. By default, the NetBIOS node type is broadcast.
Parameters	<pool_name 12> - Specify the DHCP pool name.

config dhcp pool netbios_node_type

	<p><i>broadcast</i> - Specify the NetBIOS node type for Microsoft DHCP clients as broadcast.</p> <p><i>peer_to_peer</i> - Specify the NetBIOS node type for Microsoft DHCP clients as peer_to_peer.</p> <p><i>mixed</i> - Specify the NetBIOS node type for Microsoft DHCP clients as mixed.</p> <p><i>hybrid</i> - Specify the NetBIOS node type for Microsoft DHCP clients as hybrid.</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To configure the NetBIOS node type:

```
DGS-3700-12:5#config dhcp pool netbios_node_type netserver hybrid
```

```
Command: config dhcp pool netbios_node_type netserver hybrid
```

```
Success.
```

```
DGS-3700-12:5#
```

config dhcp pool default_router

Purpose	Used to configure the current DHCP Server pool information.
Syntax	config dhcp pool default_router <pool_name 12> {<ipaddr>} {<ipaddr>} {<ipaddr>}
Description	After a DHCP client has booted, the client begins sending packets to its default router. The IP address of the default router should be on the same subnet as the client. If the default router is not specified, the default router information will not be provided to the client. If this command is input twice for the same pool, the second command will overwrite the first command. The default router must be within the range the network defined for the DHCP pool.
Parameters	<p><pool_name 12> - Specify the DHCP pool name.</p> <p><ipaddr> - Specify the IP address of the default router.</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To configure the default router:

```
DGS-3700-12:5#config dhcp pool default_router netpool 10.10.10.1
```

```
Command: config dhcp pool default_router netpool 10.10.10.1
```

```
Success.
```

```
DGS-3700-12:5#
```

config dhcp pool lease

Purpose	Used to configure the current DHCP Server pool information.
Syntax	config dhcp pool lease <pool_name 12> [<day 0-365> <hour 0-23> <minute 0-59> infinite]
Description	By default, each IP address assigned by a DHCP server comes with a one-day lease, which is the amount of time that the address is valid.
Parameters	<p><pool_name 12> - Specify the DHCP pool's name.</p> <p><day 0-365> - Specify the number of days of the lease.</p> <p><hour 0-23> - Specify the number of hours of the lease.</p>

config dhcp pool lease

<minute 0-59> - Specify the number of minutes of the lease.
infinite - Specify a lease of unlimited duration.

Restrictions Only Administrator-level users can issue this command.

Example usage:

To configure the lease of a pool:

```
DGS-3700-12:5#config dhcp pool lease netpool infinite
Command: config dhcp pool lease netpool infinite

Success.

DGS-3700-12:5#
```

config dhcp pool boot_file

Purpose Used to configure the current DHCP Server pool information.

Syntax **config dhcp pool boot_file <pool_name 12> {<file_name 64>}**

Description The boot file is used to store the boot image for the client. The boot image is generally the operating system the client uses to load. If this command is input twice for the same pool, the second command will overwrite the first command. If the bootfile is not specified, the boot file information will not be provided to the client.

Parameters *<pool_name 12>* - Specify the DHCP pool name.
<file_name 64> - Specify the file name of the boot image.

Restrictions Only Administrator-level users can issue this command.

Example usage:

To configure the boot file:

```
DGS-3700-12:5#config dhcp pool boot_file engineering boot.had
Command: config dhcp pool boot_file engineering boot.had

Success.

DGS-3700-12:5#
```

config dhcp pool next_server

Purpose Used to configure the current DHCP Server pool information.

Syntax **config dhcp pool next_server <pool_name 12> {<ipaddr>}**

Description This command is used by the DHCP client boot process, typically a TFTP server. If next server information is not specified, it will not be provided to the client. If this command is input twice for the same pool, the second command will overwrite the first command. It is allowed to specify next server but not specify the boot file, or specify the boot file but not specify the next server.

Parameters *<pool_name 12>* - Specify the DHCP pool name.
<ipaddr> - Specify the IP address of the next server.

Restrictions Only Administrator-level users can issue this command.

Example usage:

To configure the next server:

```
DGS-3700-12:5#config dhcp pool next_server engineering 192.168.0.1
Command: config dhcp pool next_server engineering 192.168.0.1

Success.

DGS-3700-12:5#
```

config dhcp ping_packets

Purpose	Used to configure the DHCP Server feature of the switch.
Syntax	config dhcp ping_packets <number 0-10>
Description	By default, the DHCP server pings a pool address twice before assigning the address to a DHCP client. If the ping is unanswered, the DHCP server assumes (with a high probability) that the address is not in use and assigns the address to the requesting client. If the ping is answered, the server will discard the current IP address and try another IP address.
Parameters	<number 0-10> - Specify the number of ping packets. 0 means there is no ping test. The default value is 2.
Restrictions	Only Administrator-level users can issue this command.

Example usage:
To configure ping packets:

```
DGS-3700-12:5#config dhcp ping_packets 4
Command: config dhcp ping_packets 4

Success.

DGS-3700-12:5#
```

config dhcp ping_timeout

Purpose	Used to configure the DHCP Server feature of the switch.
Syntax	config dhcp ping_timeout <millisecond 10-2000>
Description	By default, the DHCP server waits 10 milliseconds before timing out a ping packet.
Parameters	<millisecond 10-2000> - Specify the amount of time the DHCP server must wait before timing out a ping packet. The default value is 100.
Restrictions	Only Administrator-level users can issue this command.

Example usage:
To configure the time out value for ping packets:

```
DGS-3700-12:5#config dhcp ping_timeout 500
Command: config dhcp ping_timeout 500

Success.

DGS-3700-12:5#
```

create dhcp pool manual_binding

Purpose	Used to create the DHCP Server manual binding.
Syntax	create dhcp pool manual_binding <pool_name 12> <ipaddr> hardware_address <macaddr> {type [Ethernet IEEE802]}
Description	An address binding is a mapping between the IP address and MAC address of a client.

create dhcp pool manual_binding	
	The IP address of a client can be assigned manually by an administrator or assigned automatically from a pool by a DHCP server. The dynamic binding entry will be created when an IP address is assigned to the client from the pool network's address. For this command, if the type is not specified, then the type will be Ethernet. For the match operation, the hardware type and the hardware address field in the protocol fields will be used to match against the entry. The IP address specified in the manual binding entry must be in a range within that the network uses for the DHCP pool. If the user specifies a conflict IP address, an error message will be returned. If a number of manual binding entries are created, and the network address for the pool is changed such that conflicts are generated, those manual binding entries which conflict with the new network address will be automatically deleted.
Parameters	<p><pool_name 12> - Specify the DHCP pool name.</p> <p><ipaddr> - Specify the IP address which will be assigned to a specified client.</p> <p>hardware_address - Specify the hardware MAC address.</p> <p>type - See below:</p> <p> Ethernet - Specify Ethernet type.</p> <p> IEEE802 - Specify IEEE802 type.</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To configure manual bindings:

```
DGS-3700-12:5#create dhcp pool manual_binding engineering 10.10.10.1 hardware_address
00-80-C8-02-02-02 type Ethernet
Command: create dhcp pool manual_binding engineering 10.10.10.1 hardware_address 00-80-
C8-02-02-02 type Ethernet

Success.

DGS-3700-12:5#
```

delete dhcp pool manual_binding	
Purpose	Used to delete the DHCP Server manual binding.
Syntax	delete dhcp pool manual_binding <pool_name 12> [<ipaddr> all]
Description	This command is used to delete DHCP server manual binding.
Parameters	<p><pool_name 12> - Specify the DHCP pool name.</p> <p><ipaddr> - Specify the IP address which will be assigned to a specified client.</p> <p>all - Specify to delete all IP addresses.</p>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To delete DHCP server manual binding:

```
DGS-3700-12:5#delete dhcp pool manual_binding engineering 10.10.10.1
Command: delete dhcp pool manual_binding engineering 10.10.10.1

Success.

DGS-3700-12:5#
```

clear dhcp binding	
Purpose	Used to delete the DHCP Server binding.
Syntax	clear dhcp binding [<pool_name 12> [<ipaddr> all] all]
Description	This command is used to clear a binding entry or all binding entries in a pool or clears all binding entries in all pools. Note that this command will not clear the dynamic binding entry which matches a manual binding entry.
Parameters	<pool_name 12> - Specify the DHCP pool name to clear. <ipaddr> - Specify the IP address to clear. all - Specify to clear all IP addresses. all - Specify to clear all DHCP pool names and IP addresses.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To clear dynamic binding entries in the pool named “engineering”:

DGS-3700-12:5#clear dhcp binding engineering 10.20.3.4 Command: clear dhcp binding engineering 10.20.3.4 Success. DGS-3700-12:5#

show dhcp binding	
Purpose	Used to display the current DHCP Server binding.
Syntax	show dhcp binding {<pool_name 12>}
Description	This command is used to display dynamic binding entries.
Parameters	<pool_name 12> - Specify a DHCP pool name.
Restrictions	None.

Example usage:

To display the current DHCP pool information for “engineering”:

DGS-3700-12:5#show dhcp binding engineering Command: show dhcp binding engineering																		
<table border="1"> <thead> <tr> <th>Pool Name</th> <th>IP Addresss</th> <th>Hardware Address</th> <th>Type</th> <th>Status</th> <th>Lifetime</th> </tr> </thead> <tbody> <tr> <td>engineering</td> <td>192.168.0.1</td> <td>00-80-C8-08-13-88</td> <td>Ethernet</td> <td>Manual</td> <td>86400</td> </tr> <tr> <td>engineering</td> <td>192.168.0.2</td> <td>00-80-C8-08-13-99</td> <td>Ethernet</td> <td>Automatic</td> <td>38600</td> </tr> </tbody> </table>	Pool Name	IP Addresss	Hardware Address	Type	Status	Lifetime	engineering	192.168.0.1	00-80-C8-08-13-88	Ethernet	Manual	86400	engineering	192.168.0.2	00-80-C8-08-13-99	Ethernet	Automatic	38600
Pool Name	IP Addresss	Hardware Address	Type	Status	Lifetime													
engineering	192.168.0.1	00-80-C8-08-13-88	Ethernet	Manual	86400													
engineering	192.168.0.2	00-80-C8-08-13-99	Ethernet	Automatic	38600													
Total Entries: 2																		
DGS-3700-12:5#																		

show dhcp pool	
Purpose	Used to display the current DHCP Server pool information.
Syntax	show dhcp pool {<pool_name 12>}
Description	If pool name is not specified, information for all pools will be displayed.
Parameters	<pool_name 12> - Specify a DHCP pool name.
Restrictions	None.

Example usage:

To display dynamic binding entries for “engineering”:

```
DGS-3700-12:5#show dhcp pool engineering
Command: show dhcp pool engineering

Pool Name       : engineering
Network Address  : 10.10.10.0/24
Domain Name     : dlink.com
DNS Server      : 10.10.10.1
NetBIOS Name Server : 10.10.10.1
NetBIOS Node Type : broadcast
Default Router  : 10.10.10.1
Pool Lease      : 10 days, 0 hours, 0 minutes
Boot File       : boot.bin
Next Server     : 10.10.10.2

DGS-3700-12:5#
```

show dhcp pool manual_binding

Purpose	Used to display the current DHCP Server manual binding.
Syntax	show dhcp pool manual_binding {<pool_name 12>}
Description	This command is used to display the configured manual binding entries.
Parameters	<pool_name 12> - Specify a DHCP pool name.
Restrictions	None.

Example usage:

To display the configured manual binding entries:

```
DGS-3700-12:5#show dhcp pool manual_binding
Command: config dhcp pool manual_binding

Pool Name      IP Address      Hardware Address  Type
-----
p1             192.168.0.1     00-80-C8-08-13-88 Ethernet
p1             192.168.0.2     00-80-C8-08-13-99 Ethernet

Total Entries : 2

DGS-3700-12:5#
```

enable dhcp_server

Purpose	Used to enable the DHCP Server function on the switch.
Syntax	enable dhcp_server
Description	If DHCP relay is enabled, DHCP server cannot be enabled. The opposite is also true. For Layer 2 switches, if DHCP client is enabled on the only interface, then DHCP server cannot be enabled. For layer 3 switches, if DHCP client is enabled on an interface, the DHCP server can be enabled. However, DHCP server will not service the packet that is received from this interface.
Parameters	None.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To enable DHCP server:

```
DGS-3700-12:5#enable dhcp_server
Command: enable dhcp_server

Success.

DGS-3700-12:5#
```

disable dhcp_server

Purpose	Used to disable the DHCP Server function on the switch.
Syntax	disable dhcp_server
Description	This command is used to disable the DHCP server function on the switch.
Parameters	None.
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To disable the Switch's DHCP server:

```
DGS-3700-12:5#disable dhcp_server
Command: disable dhcp_server

Success.

DGS-3700-12:5#
```

show dhcp_server

Purpose	To display the status of DHCP server.
Syntax	show dhcp_server
Description	This command is used to display the current DHCP server configuration.
Parameters	None.
Restrictions	None.

Example usage:

To display the DHCP server status:

```
DGS-3700-12:5#show dhcp_server
Command: show dhcp_server

DHCP Server Global State: Disabled
Ping Packet Number       : 2
Ping Timeout              : 100 ms

DGS-3700-12:5#
```

clear dhcp conflict_ip

Purpose	To clear an entry or all entries from the conflict IP database.
Syntax	clear dhcp conflict_ip [<ipaddr> all]
Description	This command is used to clear an entry or all entries from the conflict IP database.
Parameters	<ipaddr> - Specify the IP address to be cleared. all - Specify that all IP addresses will be cleared.

clear dhcp conflict_ip

Restrictions	Only Administrator-level users can issue this command.
---------------------	--

Example usage:

To clear an IP address 10.20.3.4 from the conflict database:

```
DGS-3700-12:5#clear dhcp conflict_ip 10.20.3.4
Command: clear dhcp conflict_ip 10.20.3.4

Success.

DGS-3700-12:5#
```

show dhcp conflict_ip

Purpose	To display the IP address that has been identified as being in conflict.
Syntax	show dhcp conflict_ip {<ipaddr>}
Description	The DHCP server will use ping packet to determine whether an IP address is conflicting with other hosts before binding this IP. The IP address which has been identified in conflict will be moved to the conflict IP database. The system will not attempt to bind the IP address in the conflict IP database unless the user clears it from the conflict IP database.
Parameters	<ipaddr> - Specify the IP address to be displayed.
Restrictions	None.

Example usage:

To display the entries in the DHCP conflict IP database:

```
DGS-3700-12:5#show dhcp conflict_ip
Command: show dhcp conflict_ip

IP Address      Detection Method  Detection Time
-----
172.16.1.32    Ping             2007/08/30 17:06:59
172.16.1.32    Gratuitous ARP   2007/09/10 19:38:01

DGS-3700-12:5#
```

OBJECT ACCESS METHOD (OAM) SECTION

11

Table of Contents

Next Section

Previous Section

CFM EXTENSION (ITU-T Y.1731)

Back to Section Header

The CFM Extension commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
config cfm ais	md <string 22> ma <string 22> mepid <int 1-8191> { period [1sec 1min] level <int 0-7> state [enable disable] }(1)
config cfm lock	md <string 22> ma <string 22> mepid <int 1-8191> { period [1sec 1min] level <int 0-7> state [enable disable] }(1)
cfm lock	md <string 22> ma <string 22> mepid <int 1-8191> remote_mepid <int 1-8191> action [start stop]
cfm loopback	<macaddr> [mepname <string 32> mepid <int 1-8191> md <string 22> ma <string 22>] { num <int 1-65535> [length <int 0-1500> pattern <string 1500>] pdu_priority <int 0-7> }
show cfm	{ [md <string 22> { ma <string 22> { mepid <int 1-8191> } } mepname <string 32>] }
show cfm fault	{ md <string 22> { ma <string 22> } }

Each command is listed, in detail, in the following sections.

config cfm ais	
Purpose	Used to configure parameters of AIS function.
Syntax	config cfm ais md <string 22> ma <string 22> mepid <int 1-8191> { period [1sec 1min] level <int 0-7> state [enable disable] }(1)
Description	<p>This command is used to configure the parameters of AIS function on a MEP. The default state is disabled.</p> <p>The default period is 1 second.</p> <p>The default client MD level is MD level at which the most immediate client layer MIPs and MEPs exist.</p> <p>Note: This default client MD level is not a fixed value. It may change when creating or deleting higher level MD and MA on the device.</p> <p>When the most immediate client layer MIPs and MEPs do not exist, the default client MD level cannot be calculated. If the default client MD level cannot be calculated and user doesn't designate a client level, the AIS and LCK PDU cannot be transmitted.</p>
Parameters	<p><i>md</i> –Maintenance domain name.</p> <p><i>ma</i> –Maintenance Association name.</p> <p><i>mepid</i> –The MEP ID in the MD which sends AIS frame.</p> <p><i>state</i> – Specifies the MEP AIS state</p> <p><i>enable</i> - AIS function enabled.</p>

config cfm ais	
	<i>disable</i> - AIS function disabled. <i>level</i> -The client level id to which the MEP sends AIS PDU. The default client MD level is MD level at which the most immediate client layer MIPs and MEPs exist.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the AIS function enabled, and client level is 5:

```
DGS-3700-12:5# config cfm ais md op-domain ma op-ma mepid 1 state enable level 5
Command: config cfm ais md op-domain ma op-ma mepid 1 state enable level 5
Success.
DGS-3700-12:5#
```

config cfm lock	
Purpose	Used to configure parameters of LCK function.
Syntax	config cfm lock md <string 22> ma <string 22> mepid <int 1-8191> { period [1sec 1min] level <int 0-7> state [enable disable] }(1)
Description	This command is used to configure the parameters of LCK function on a MEP. The default state is disabled. The default period is 1 second. The default client MD level is MD level at which the most immediate client layer MIPs and MEPs exist. Note: This default client MD level is not a fixed value. It may change when creating or deleting higher level MD and MA on the device. When the most immediate client layer MIPs and MEPs do not exist, the default client MD level cannot be calculated. If the default client MD level cannot be calculated and user doesn't designate a client level, the AIS and LCK PDU cannot be transmitted.
Parameters	<i>md</i> –Maintenance domain name. <i>ma</i> –Maintenance Association name. <i>mepid</i> –The MEP ID in the MD which sends LCK frame. <i>state</i> – Specifies the MEP LCK state <i>enable</i> - LCK function enabled. <i>disable</i> - LCK function disabled. <i>level</i> -The client level id to which the MEP sends LCK PDU. The default client MD level is MD level at which the most immediate client layer MIPs and MEPs exist.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the LCK function enabled, and client level is 5:

```
DGS-3700-12:5# config cfm lock md op-domain ma op-ma mepid 1 state enable level 5
Command: config cfm lock md op-domain ma op-ma mepid 1 state enable level 5
Success.
DGS-3700-12:5#
```

cfm lock	
Purpose	Used to start/stop a management lock.
Syntax	cfm lock md <string 22> ma <string 22> mepid <int 1-8191> remote_mepid <int 1-8191> action [start stop]
Description	This command is used to start/stop cfm management lock. This command will result in the MEP sends a LCK PDU to client level MEP.
Parameters	<i>md</i> –Maintenance domain name. <i>ma</i> –Maintenance Association name. <i>mepid</i> –The MEP ID in the MD which sends LCK frame. <i>remote_mepid</i> –The peer MEP is the target of management action. <i>action</i> - Start/stop management lock.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To start management lock:

```
DGS-3700-12:5# cfm lock md op-domain ma op-ma mepid 1 remote_mepid 2 action start
Command: cfm lock md op-domain ma op-ma mepid 1 remote_mepid 2 action start
Success.
DGS-3700-12:5#
```

cfm loopback	
Purpose	Used to start a CFM loopback test.
Syntax	cfm loopback <macaddr> [mepname <string 32> mepid <int 1-8191> md <string 22> ma <string 22>] {num <int 1-65535> [length <int 0-1500> pattern <string 1500>] pdu_priority <int 0-7>}
Description	You can press Ctrl+C to exit loopback test. The MAC address represents that the destination MEP or MIP which can be reached by this MAC address. The MAC address represents that the destination MEP or MIP which can be reached by this MAC address. If the MAC address is multicast, all remote MEP should reply this message. The MEP represents the source MEP to initiate the loopback message.
Parameters	<i><macaddr></i> – Destination MAC address. Can be unicast or multicast. <i>mepname</i> – MEP name. <i>mepid</i> – MEP MEPID. <i>md</i> – Maintenance domain name. <i>ma</i> – Maintenance association name. <i>num</i> –Number of LBMs to be sent. The default value is 4. <i>length</i> –The payload length of LBM to be sent. The default is 0. <i>pattern</i> –An arbitrary amount of data to be included in a Data TLV, along with an indication whether the Data TLV is to be included. <i>pdu_priority</i> –The 802.1p priority to be set in the transmitted LBMs. If not specified, it will use the same priority as CCMs and LTMs sent by the MA.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure CFM loop-back:

```
DGS-3700-12:5# cfm loopback 01-82-c0-00-00-31 mep mep1
Command: cfm loopback 01-82-c0-00-00-31 mep mep1
Request MPID 52 timed out.
Request MPID 51 timed out.
Reply from MPID 52: bytes=xxx time=xxxms
Request MPID 51 timed out.

CFM loopback statistics for 01-82-c0-00-00-31:
  Remote MPID 52 Packets: Sent=2, Received=1, Lost=1(50% loss).
Remote MPID 51 Packets: Sent=2, Received=0, Lost=2(100% loss).

DGS-3700-12:5#
```

show cfm

Purpose	This command is used to show CFM information.
Syntax	show cfm {[<i>md</i> <string 22> { <i>ma</i> <string 22> { <i>mepid</i> <int 1-8191>}}] <i>mepname</i> <string 32>]}
Description	This command is used to show CFM information.
Parameters	<i>md</i> – Specifies the maintenance domain name. <i>ma</i> – Specifies the maintenance association name. <i>mepid</i> – Specifies the MEP MEPID. <i>mepname</i> – Specifies the MEP name.
Restrictions	None.

Example usage:

To display CFM:

```
DGS-3700-12:5#show cfm
Command: show cfm

Name                : mep1
MEPID               : 1
Port                : 1
Direction           : Inward
CFM Port State      : Enabled
MAC Address         : XX-XX-XX-XX-XX-XX
MEP State           : Enabled
CCM State           : Enabled
PDU Priority        : 7
Fault Alarm         : Mac_status
Alarm Time          : 2 second(s)
Alarm Reset Time    : 10 second(s)
Highest Fault       : Some Remote MEP Down
AIS State           : Enabled
AIS Period          : 1 Second
AIS Client Level    : 5
AIS Status          : Detected
LCK State           : Enabled
LCK Period          : 1 Minute
LCK Client Level    : 5
LCK Status          : Not Detected
Out-of-Sequence CCMs : 0 received
Cross-connect CCMs  : 0 received
Error CCMs         : 0 received
Port Status CCMs   : 0 received
If Status CCMs     : 0 received
CCMs transmitted   : 1234
In-order LBRs      : 0 received
Out-of-order LBRs  : 0 received
Next LTM Trans ID  : 27
Unexpected LTRs    : 0 received
LBMs Transmitted   : 0
AIS PDUs           : 10 received
AIS PDUs Transmitted : 0
LCK PDUs           : 0 received
LCK PDUs Transmitted : 0

Remote
MEPID  MAC Address  Status  RDI  PortSt  IfSt  LCK   Detect Time
-----  -
2      XX-...-XX-XX  OK      Yes  Blocked Up    Yes   2008-01-01 12:00:00
3      XX-...-XX-XX  IDLE    No   No      No    Yes   2008-01-01 12:00:00
4      XX-...-XX-XX  OK      No   Up      Down  No    2008-01-01 12:00:00
8      XX-...-XX-XX  START   No   Up      Up    No    2008-01-01 12:00:00
12     XX-...-XX-XX  FAILED  No   Up      Up    No    2008-01-01 12:00:00
8      XX-...-XX-XX  OK      No   Up      Up    No    2008-01-01 12:00:00

DGS-3700-12:5#
```

show cfm fault

Purpose	This command is used to show fault MEPS.
Syntax	show cfm fault {md <string 22> {ma <string 22>}}
Description	This command is used to display all the fault conditions detected by the MEPS contained in the specified MA or MD. This display provides the overview of fault status by MEPS.

show cfm fault

Parameters	<i>md</i> – Specifies the maintenance domain name. <i>ma</i> – Specifies the maintenance association name.
Restrictions	None.

Example usage:
To display CFM fault:

```
DGS-3700-12:4# show cfm fault
Command: show cfm fault
MD Name      MA Name MEPID Status                AIS Status    LCK Status
-----
op_domain    op1      1      Cross-connect CCM Received    AIS Received  Normal
DGS-3700-12:4#
```

CONNECTIVITY FAULT MANAGEMENT COMMANDS

Back to Section Header

The Connectivity Fault Management commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
create cfm md	<string 22> level <int 0-7>
config cfm md	<string 22> { mip [none auto explicit] sender_id [none chassis manage chassis_manage] }
create cfm ma	<string 22> md <string 22>
config cfm ma	<string 22> md <string 22> { vlanid <vlanid 1-4094> mip [none auto explicit defer] sender_id [none chassis manage chassis_manage defer] ccm_interval [10ms 100ms 1sec 10sec 1min 10min] mepid_list [add delete] <mepid_list> }
create cfm mep	<string 32> mepid <int 1-8191> md <string 22> ma <string 22> direction [inward outward] port <port>
config cfm mep	[mepname <string 32> mepid <int 1-8191> md <string 22> ma <string 22>] { state [enable disable] ccm [enable disable] pdu_priority <int 0-7> fault_alarm [all mac_status remote_ccm error_ccm xcon_ccm none] alarm_time <centisecond 250 -1000> alarm_reset_time <centisecond 250-1000> }
delete cfm mep	[mepname <string 32> mepid <int 1-8191> md <string 22> ma <string 22>]
delete cfm ma	<string 22> md <string 22>
delete cfm md	<string 22>
enable cfm	
disable cfm	
config cfm ports	<portlist> state [enable disable]
show cfm ports	<portlist>
show cfm	{ [md <string 22> { ma <string 22> { mepid <int 1-8191> } }] mepname <string 32> }
show cfm remote_mep	[mepname <string 32> md <string 22> ma <string 22> mepid <int 1-8191>] remote_mepid <int 1-8191>
show cfm fault	{ md <string 22> { ma <string 22> } }
show cfm port	<port> { level <int 0-7> direction [inward outward] vlanid <vlanid 1-4094> }
show cfm mipccm	
show cfm pkt_cnt	{ [ports <portlist> { rx tx }] rx tx ccm }
clear cfm pkt_cnt	{ [ports <portlist> { rx tx }] rx tx ccm }
cfm loopback	<macaddr> [mepname <string 32> mepid <int 1-8191> md <string 22> ma <string 22>] { num <int 1-65535> [length <int 0-1500> pattern <string 1500>] pdu_priority <int 0-7> }
cfm linktrace	<macaddr> [mepname <string 32> mepid <int 1-8191> md <string 22> ma <string 22>] { ttl <int 2-255> pdu_priority <int 0-7> }
show cfm linktrace	[mepname <string 32> mepid <int 1-8191> md <string 22> ma <string 22>] { trans_id <uint> }
delete cfm linktrace	{ [md <string 22> { ma <string 22> { mepid <int 1-8191> } }] mepname <string 32> }

COMMAND	PARAMETERS
config cfm ccm_fwd	[software hardware]
show cfm ccm_fwd	
config cfm mp_ltr_all	[enable disable]
show cfm mp_ltr_all	

Each command is listed, in detail, in the following sections.

create cfm md	
Purpose	Used to create a maintenance domain.
Syntax	create cfm md <string 22> level <int 0-7>
Description	Different maintenance domains should have different names.
Parameters	<i>md</i> – Specifies the maintenance domain name. <i>level</i> – Specifies the maintenance domain level.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create a CFM maintenance domain.

DGS-3700-12:5# create cfm md op_domain level 2 Command: create cfm md op_domain level 2
Success.
DGS-3700-12:5#

config cfm md	
Purpose	Used to configure parameters of a maintenance domain.
Syntax	config cfm md <string 22> {mip [none auto explicit] sender_id [none chassis manage chassis_manage]}
Description	Creation of MIPs on a MA is useful for tracing the link MIP by MIP. It also allows the user to perform loop-back from MEP to an MIP.
Parameters	<i>md</i> – Specifies the maintenance domain name. <i>mip</i> – Specifies and controls the creation of MIPs. <i>none</i> – Specifies that MIPs will not be created. This is the default value. <i>auto</i> – MIPs can always be created on any ports in this MD, if that port is not configured with a MEP of this MD. For the intermediate switch in a MA, the setting must be auto in order for the MIPs to be created on this device. <i>explicit</i> – MIPs can be created on any ports in this MD, only if the existing lower level has an MEP configured on that port, and that port is not configured with an MEP of this MD.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure CFM on a maintenance domain:

```
DGS-3700-12:5#config cfm md op_domain mip explicit
Command: config cfm md op_domain mip explicit

Success.

DGS-3700-12:5#
```

create cfm ma

Purpose	Used to create a maintenance association.
Syntax	create cfm ma <string 22> md <string 22>
Description	Different MAs in a MD must have different MA Names. Different MAs in different MDs may have the same MA Name.
Parameters	<i>md</i> – Specifies the maintenance domain name. <i>ma</i> – Specifies the maintenance association name.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create a CFM maintenance association:

```
DGS-3700-12:5#create cfm ma op1 md op_domain
Command: create cfm ma op1 md op_domain

Success.

DGS-3700-12:5#
```

config cfm ma

Purpose	Used to configure a maintenance association.
Syntax	config cfm ma <string 22> md <string 22> {vlanid <vlanid 1-4094> mip [none auto explicit defer] sender_id [none chassis manage chassis_manage defer] ccm_interval [10ms 100ms 1sec 10sec 1min 10min] mepid_list [add delete] <mepid_list>}
Description	The MEP list specified for a MA can be located in different devices. MEPs must be created on ports of these devices explicitly. An MEP will transmit CCM packets periodically across the MA. The receiving MEP will verify these received CCM packets from other MEPs against this MEP list for the configuration integrity check.
Parameters	<i>md</i> – Specifies the maintenance domain name. <i>ma</i> – Specifies the maintenance association name. <i>vlanid</i> – Specifies the VLAN Identifier. Different MAs must be associated with different VLANs. <i>mip</i> – Specifies the control creation of MIPs. <i>none</i> – No MIPs will be created. <i>auto</i> – MIPs can always be created on any ports in this MA, if that port is not configured with an MEP of that MA. <i>explicit</i> – MIP can be created on any ports in this MA, only if the next existent lower level has a MEP configured on that port, and that port is not configured with a MEP of this MA. <i>defer</i> – Inherit the settings configured for the maintenance domain that this MA is associated with. This is the default value. <i>ccm_interval</i> – Specifies the CCM interval.

config cfm ma	
	<p><i>10ms</i> – 10 milliseconds. Not recommended. For test purposes.</p> <p><i>100ms</i> – 100 milliseconds. Not recommended. For test purposes.</p> <p><i>1sec</i> – One second.</p> <p><i>10sec</i> – Ten seconds. This is the default value.</p> <p><i>1min</i> – One minute.</p> <p><i>10min</i> – Ten minutes.</p> <p><i>mepid</i> – Specify the MEPIDs contained in the maintenance association. The range of MEPID is 1-8191.</p> <p><i>add</i> – Add MEPID(s).</p> <p><i>delete</i> – Specifies to delete MEPID(s).</p> <p>By default, there's no MEPID in a newly created maintenance association.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure CFM maintenance association:

<pre>DGS-3700-12:5#config cfm ma op1 md op_domain vlanid 1 ccm_interval 1sec Command: config cfm ma op1 md op_domain vlanid 1 ccm_interval 1sec Success. DGS-3700-12:5#</pre>

create cfm mep	
Purpose	Used to create a cfm MEP.
Syntax	create cfm mep <string 32> mepid <int 1-8191> md <string 22> ma <string 22> direction [inward outward] port <port>
Description	<p>Different MEP in the same MA must have different MEP ID. MD name, MA name, and MEP ID together can identify a MEP.</p> <p>Different MEP on the same device must have a different MEP name.</p> <p>Before an MEP is created, its MEPID should be configured in MA's MEPID list.</p>
Parameters	<p><i>mep</i> – Specifies the MEP name. It's unique among all MEPs configured on the device.</p> <p><i>mepid</i> – Specifies the MEP MEPID. It should be configured in MA's MEPID list.</p> <p><i>md</i> – Specifies the maintenance domain name.</p> <p><i>ma</i> – Specifies the maintenance association name.</p> <p><i>direction</i> – Specifies the MEP direction.</p> <p><i>inward</i> – Specifies the inward facing (up) MEP.</p> <p><i>outware</i> – Specifies the outward facing (down) MEP.</p> <p><i>port</i> – Specifies the port number. This port should be a member of the MA's associated VLAN.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To create a CFM MEP.

```
DGS-3700-12:5#create cfm mep mep1 mepid 1 md op_domain ma opl direction
inward port 2
Command: create cfm mep mep1 mepid 1 md op_domain ma opl direction inward port 2

Success.

DGS-3700-12:5#
```

config cfm mep

Purpose	Used to configure parameters of a MEP.
Syntax	config cfm mep [mepname <string 32> mepid <int 1-8191> md <string 22> ma <string 22>] {state [enable disable] ccm [enable disable] pdu_priority <int 0-7> fault_alarm [all mac_status remote_ccm error_ccm xcon_ccm none] alarm_time <centisecond 250 -1000> alarm_reset_time <centisecond 250-1000>}
Description	An MEP may generate 5 types of Fault Alarms, as shown below by their priorities from high to low: Cross-connect CCM Received: priority 5 Error CCM Received: priority 4 Some Remote MEP Down: priority 3 Some Remote MEP MAC Status Error: priority 2 Some Remote MEP Defect Indication: priority 1 If multiple types of faults occur on a MEP, only the fault of the highest priority will be alarmed.
Parameters	<p><i>mepname</i> – Specifies the MEP name. It's unique among all MEPs configured on the device.</p> <p><i>mepid</i> – Specifies the MEP MEPID. It should be configured in MA's MEPID list.</p> <p><i>md</i> – Specifies the maintenance domain name.</p> <p><i>ma</i> – Specifies the maintenance association name.</p> <p><i>state</i> – Specifies the MEP administrative state.</p> <p><i>enable</i> – MEP is enabled.</p> <p><i>disable</i> – MEP is disabled. This is the default value.</p> <p><i>ccm</i> – Specifies the CCM transmission state.</p> <p><i>enable</i> – CCM transmission enabled.</p> <p><i>disable</i> – CCM transmission disabled. This is the default value.</p> <p><i>pdu_priority</i> – Specifies the 802.1p priority to be set in CCMs and LTMs messages transmitted by the MEP. The default value is 7.</p> <p><i>fault_alarm</i> – Control types of fault alarms sent by the MEP.</p> <p><i>all</i> – Specifies that all types of fault alarms will be sent.</p> <p><i>mac_status</i> – Only Fault Alarms whose priority is equal to or higher than “Some Remote MEP MAC Status Error” will be sent.</p> <p><i>remote_ccm</i> – Only Fault Alarms whose priority is equal to or higher than “Some Remote MEP Down” will be sent.</p> <p><i>error_ccm</i> – Only Fault Alarms whose priority is equal to or higher than “Error CCM Received” will be sent.</p> <p><i>xcon_ccm</i> – Only Fault Alarms whose priority is equal to or higher than “Cross-connect CCM Received” will be sent.</p> <p><i>none</i> – No fault alarm is sent. This is the default value.</p> <p><i>alarm_time</i> – The time that a defect must last before the fault alarm can be sent. The default value is 2 seconds.</p> <p><i>alarm_reset_time</i> – The timer must be clear of any alarm defects before the fault can</p>

config cfm mep	
	be re-alarmed. The default value is 10 seconds
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the CFM mep:

<pre>GS-3700-12:5#config cfm mep mepid 1 md 1 ma 1 state enable ccm enable Command: config cfm mep mepid 1 md 1 ma 1 state enable ccm enable Success. DGS-3700-12:5#</pre>
--

delete cfm mep	
Purpose	Used to delete a created MEP.
Syntax	delete cfm mep [mepname <string 32> mepid <int 1-8191> md <string 22> ma <string 22>]
Description	This command is used to delete a created MEP.
Parameters	<p><i>mepname</i> – Specifies the MEP name. It's unique among all MEPs configured on the device.</p> <p><i>mepid</i> – Specifies the MEP MEPID. It should be configured in MA's MEPID list.</p> <p><i>md</i> – Specifies the maintenance domain name.</p> <p><i>ma</i> – Specifies the maintenance association name.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete CFM mep:

<pre>DGS-3700-12:5#delete cfm mep mepname mep1 Command: delete cfm mep mepname mep1 Success. DGS-3700-12:5#</pre>

delete cfm ma	
Purpose	Used to delete a created maintenance association.
Syntax	delete cfm ma <string 22> md <string 22>
Description	All MEPs created in the maintenance association will be deleted automatically.
Parameters	<p><i>md</i> – Specifies the maintenance domain name.</p> <p><i>ma</i> – Specifies the maintenance association name.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete a CFM ma:

```
DGS-3700-12:5#delete cfm ma opl md 3
```

```
Command: delete cfm ma opl md 3
```

```
Success.
```

```
DGS-3700-12:5#
```

delete cfm md

Purpose	Used to delete a created maintenance domain.
Syntax	delete cfm md <string 22>
Description	All MEPs and maintenance associations created in the maintenance domain will be deleted automatically.
Parameters	md – Specifies the maintenance domain name.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To delete a CFM md:

```
DGS-3700-12:5#delete cfm md 3
```

```
Command: delete cfm md 3
```

```
Success.
```

```
DGS-3700-12:4#
```

enable cfm

Purpose	This command is used to enable CFM globally.
Syntax	enable cfm
Description	This command is used to enable CFM globally.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable CFM:

```
DGS-3700-12:5#enable cfm
```

```
Command: enable cfm
```

```
Success.
```

```
DGS-3700-12:5#
```

disable cfm

Purpose	Used to disable CFM globally.
Syntax	disable cfm
Description	This command is used to disable CFM globally.
Parameters	None.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To disable CFM:

```
DGS-3700-12:4# disable cfm
Command: disable cfm

Success.

DGS-3700-12:4#
```

config cfm ports

Purpose	Used to enable or disable CFM function on per-port basis.
Syntax	config cfm ports <portlist> state [enable disable]
Description	By default, CFM function is disabled on all ports. If CFM is disabled on a port: MIPs are never created on that port. MEPs can still be created on that port, and the configuration can be saved. MEPs created on that port can never generate or process CFM PDUs. If the user issues a Loop-back or Linktrace test on those MEPs, it will prompt user that The MEP does not exist.
Parameters	<i>ports</i> – Specifies the logical port list. <i>state</i> – Is used to enable or disable CFM function.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:
To configure CFM ports:

```
DGS-3700-12:5#config cfm ports 2-5 state enable
Command: config cfm ports 2-5 state enable

Success.

DGS-3700-12:5#
```

show cfm ports

Purpose	This command is used to show cfm state of specified ports.
Syntax	show cfm ports <portlist>
Description	This command is used to display CFM state of specified ports.
Parameters	<i>ports</i> – Specifies the logical port list.
Restrictions	None.

Example usage:
To display CFM ports:

DGS-3700-12:5#show cfm ports 3-6

Command: show cfm ports 3-6

```
Port      State
-----  -
3         Enabled
4         Enabled
5         Enabled
6         Disabled
```

DGS-3700-12:5#

show cfm

Purpose	This command is used to show CFM information.
Syntax	show cfm {[<i>md</i> <string 22> { <i>ma</i> <string 22> { <i>mepid</i> <int 1-8191>}}] <i>mepname</i> <string 32>]}
Description	This command is used to show CFM information.
Parameters	<i>md</i> – Specifies the maintenance domain name. <i>ma</i> – Specifies the maintenance association name. <i>mepid</i> – Specifies the MEP MEPID. <i>mepname</i> – Specifies the MEP name.
Restrictions	None.

Example usage:

To display CFM:

DGS-3700-12:5# show cfm mep mep1

Command: show cfm mep mep1

```
Name                : mep1
MEPID               : 1
Port                : 1
Direction           : Inward
CFM Port Status     : Disabled
MAC Address         : 00-21-91-AF-3C-08
MEP State           : Disabled
CCM State           : Disabled
PDU Priority        : 7
Fault Alarm         : Disabled
Alarm Time          : 250 centisecond((1/100)s)
Alarm Reset Time    : 1000 centisecond((1/100)s)
Highest Fault       : None
AIS State           : Disabled
AIS Period          : 1 Second
AIS Client Level    : Invalid
AIS Status          : Not Detected
LCK State           : Disabled
LCK Period          : 1 Second
LCK Client Level    : Invalid
LCK Status          : Not Detected
Out-of-Sequence CCMs: 0 received
CTRL+C  ESC  q  Quit  SPACE  n  Next Page  ENTER  Next Entry  a  All
```

Example usage:

To display CFM md:

```
DGS-3700-12:5#show cfm md op_domain
Command: show cfm md op_domain

MD Level      : 2
MIP Creation: Explicit
SenderID TLV: None
VID   MA Name
----  -
1     op1

DGS-3700-12:5#
```

Example usage:

To display CFM mepname:

```
show cfm mepname mep1
```

Command: show cfm mepname mep1

```
Name                : mep1
MEPID               : 1
Port                : 1
Direction           : Inward
CFM Port Status     : Disabled
MAC Address         : 00-21-91-AF-3C-08
MEP State           : Disabled
CCM State           : Disabled
PDU Priority        : 7
Fault Alarm         : Disabled
Alarm Time          : 250 centisecond((1/100)s)
Alarm Reset Time    : 1000 centisecond((1/100)s)
Highest Fault       : None
AIS State           : Disabled
AIS Period          : 1 Second
AIS Client Level    : Invalid
AIS Status          : Not Detected
LCK State           : Disabled
LCK Period          : 1 Second
LCK Client Level    : Invalid
LCK Status          : Not Detected
Out-of-Sequence CCMs: 0 received
Cross-connect CCMs : 0 received
Error CCMs          : 0 received
Normal CCMs         : 0 received
Port Status CCMs   : 0 received
If Status CCMs     : 0 received
CCMs transmitted   : 0
In-order LBRs      : 0 received
Out-of-order LBRs  : 0 received
Next LTM Trans ID  : 0
Unexpected LTRs    : 0 received
LBMs Transmitted   : 0
AIS PDUs           : 0 received
AIS PDUs Transmitted: 0
LCK PDUs           : 0 received
LCK PDUs Transmitted: 0
```

DGS-3700-12G:5#

show cfm fault

Purpose	This command is used to show fault MEPs.
Syntax	show cfm fault {md <string 22> {ma <string 22>}}
Description	This command is used to display all the fault conditions detected by the MEPs contained in the specified MA or MD. This display provides the overview of fault status by MEPs.
Parameters	<i>md</i> – Specifies the maintenance domain name. <i>ma</i> – Specifies the maintenance association name.
Restrictions	None.

Example usage:

To display CFM fault:

DGS-3700-12G:5#show cfm fault

Command: show cfm fault

```

MD Name      MA Name      MEPID  Status      AIS Status  LCK Status
-----
DGS-3700-12G:5#
    
```

show cfm port

Purpose	This command is used to show MEPs and MIPs created on a port.
Syntax	show cfm port <port> {level <int 0-7> direction [inward outward] vlanid <vlanid 1-4094>}
Description	This command is used to show MEPs and MIPs created on a port.
Parameters	<p><i>port</i> – Specifies the port number.</p> <p><i>level</i> – Specifies the MD Level. If not specified, all levels are shown.</p> <p><i>direction</i> – Specifies the MEP direction.</p> <p><i>inward</i> – Inward facing MEP.</p> <p><i>outward</i> – Outward facing MEP.</p> <p>If not specified, both directions and MIPs are shown.</p> <p><i>Vlanid</i> – VLAN identifier. If not specified, all VLANs are shown.</p>
Restrictions	None.

Example usage:

To display CFM ports:

DGS-3700-12:4#show cfm port 1

Command: show cfm port 1

MAC Address: 10:10:90:08:8g:12

```

MD Name      MA Name      MEPID  Level  Direction  VID
-----
op_domain    op1          1      2      inward     2
cust_domain  cust1        8      4      inward     2
serv_domain  serv2        MIP    3
    
```

DGS-3700-12:4#

show cfm mipccm

Purpose	This command is used to show MIPCCM database entries.
Syntax	show cfm mipccm
Description	This command is used to display all entries in the MIPCCM. The MIPCCM entry is similar to FDB which keeps the forwarding port information for a MAC entry.
Parameters	None.
Restrictions	None.

Example usage:

To display the MIPCCM database entries:

```
DGS-3700-12:5#show cfm mipccm
```

```
Command: show cfm mipccm
```

MA	VID	MAC Address	Port
-----	----	-----	-----
opma	1	00-01-02-03-04-05	2
opma	1	00-01-02-03-04-05	3

```
Total: 2
```

```
DGS-3700-12:5#
```

cfm linktrace

Purpose	This command is used to issue a CFM linktrack message.
Syntax	cfm linktrace <macaddr> [mepname <string 32> mepid <int 1-8191> md <string 22> ma <string 22>] {ttl <int 2-255> pdu_priority <int 0-7>}
Description	This command is used to issue a CFM linktrack message.
Parameters	<p><macaddr> – Specifies the destination MAC address.</p> <p>mepname – Specifies the MEP name.</p> <p>mepid – Specifies the MEP MEPID.</p> <p>md – Specifies the maintenance domain name.</p> <p>ma – Specifies the maintenance association name.</p> <p>ttl – Specifies the linktrace message TTL value. The default value is 64.</p> <p>pdu_priority – The 802.1p priority to be set in the transmitted LTM. If not specified, it uses the same priority as CCMs sent by the MA.</p>
Restrictions	None.

Example usage:

To create a CFM linktrace:

```
DGS-3700-12:4#cfm linktrace 00-01-02-03-04-05 mep mep1
```

```
Command: cfm linktrace 00-01-02-03-04-05 mep mep1
```

```
Transaction ID: 26
```

```
Success.
```

```
DGS-3700-12:4#
```

show cfm linktrace

Purpose	Used to show linktrace responses.
Syntax	show cfm linktrace [mepname <string 32> mepid <int 1-8191> md <string 22> ma <string 22>] {trans_id <uint>}
Description	The maximum linktrace responses a device can hold is 64.
Parameters	<p><macaddr> – Specifies the destination MAC address.</p> <p>mepname – Specifies the MEP name.</p> <p>mepid – MEP MEPID.</p> <p>md – Specifies the maintenance domain name.</p> <p>ma – Specifies the maintenance association name.</p> <p>trans_id – Specifies the identifier of the transaction to show.</p>
Restrictions	None.

Example usage:

To display the CFM linktrace:

```
DGS-3700-12:5#show cfm linktrace mep mep1
Command: show cfm linktrace mep mep1

Trans ID   Source MEP       Destination
-----
26         mep1            00-01-02-03-04-05

DGS-3700-12:5#show cfm linktrace mep mep1 trans_id 26
Command: show cfm linktrace mep mep1 trans_id 26

Transaction ID: 26
From MEP mep1 to 00-01-02-03-04-05
Start Time 2008-01-01 12:00:00

Hop MEPID MAC Address      Forwarded Relay Action
---
-      00-01-02-03-04-05 Yes      FDB
-      00-01-02-03-04-05 Yes      MPDB
8100   00-01-02-03-04-05 No       Hit

DGS-3700-12:5#
```

delete cfm linktrace	
Purpose	This command is used to delete received linktrace responses.
Syntax	delete cfm linktrace {[md <string 22> {ma <string 22> {mepid <int 1-8191>}} mepname <string 32>]}
Description	This command deletes the stored link trace response data that is initiated by the specified MEP.
Parameters	<i>mepname</i> – Specifies the MEP name. <i>mepid</i> – Specifies the MEP MEPID. <i>md</i> – Specifies the maintenance domain name. <i>ma</i> – Specifies the maintenance association name.
Restrictions	None.

Example usage:

To delete a CFM linktrace:

```
DGS-3700-12:5#delete cfm linktrace mep mep1
Command: delete cfm linktrace mep mep1

Success.

DGS-3700-12:5#
```

config cfm ccm_fwd	
Purpose	This command is used to configure CCM PDUs forwarding mode.
Syntax	config cfm ccm_fwd [software hardware]
Description	This command is for test purposes. For ordinary user, it is not suggested to use this command.

config cfm ccm_fwd	
	By default, the CCM message is handled and forwarded by software. The software can handle the packet based on behaviour defined by the standard. Under a strict environment, there may be substantial amount of CCM packets, and it will consume substantial amount of CPU resource. To meet the performance requirement, the handling of CCM can be changed to hardware mode. This function is especially useful for domain's intermediate device since they only have MIPS. Note that this command can only be used under assistance of technical personnel.
Parameters	<i>software</i> – Specifies to forward by software. <i>hardware</i> – Specifies to forward by hardware.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the CFM ccm forwarding mode:

DGS-3700-12:5# <code>config cfm ccm_fwd_mode hardware</code> Command: <code>config cfm ccm_fwd_mode hardware</code>
Success.
DGS-3700-12:5#

cfm loopback	
Purpose	Used to show MEPs and MIPs created on a port.
Syntax	<code>cfm loopback <macaddr> [mepname <string 32> mepid <int 1-8191> md <string 22> ma <string 22>] {num <int 1-65535> [length <int 0-1500> pattern <string 1500>] pdu_priority <int 0-7>}</code>
Description	The MAC address represents that the destination MEP or MIP which can be reached by this MAC address. The MEP represents the source MEP to initiate the loop-back message. You can press Ctrl+C to exit loop-back test.
Parameters	<i><macaddr></i> – Specifies the destination MAC address. <i>mepname</i> – Specifies the MEP name. <i>mepid</i> – Specifies the MEP MEPID. <i>md</i> – Specifies the maintenance domain name. <i>ma</i> – Specifies the maintenance association name. <i>num</i> – Specifies the number of LBMs to be sent. The default value is 4. <i>length</i> – Specifies the payload length of LBM to be sent. The default is 0. <i>pattern</i> – Specifies an arbitrary amount of data to be included in a Data TLV, along with an indication of whether the Data TLV is to be included. <i>pdu_priority</i> – The 802.1p priority to be set in the transmitted LBMs. If not specified, it uses the same priority as CCMs and LTMs sent by the MA.
Restrictions	None.

Example usage:

To configure CFM loop-back:

```
DGS-3700-12:4#cfm loopback 00-01-02-03-04-05 mep mep1
Command: cfm loopback 00-01-02-03-04-05 mep mep1

Request timed out.
Request timed out.
Reply from MPID 52: bytes=xxx time=xxxms
Request timed out.

CFM loopback statistics for 00-01-02-03-04-05:
  Packets: Sent=4, Received=1, Lost=3(75% loss).

DGS-3700-12:4#
```

show cfm pkt_cnt

Purpose	Used to show CFM packet RX/TX counters.
Syntax	show cfm pkt_cnt {[ports <portlist> {[rx tx]} [rx tx] ccm]}
Description	This command is used to display CFM packet counters.
Parameters	<p><i>ports</i> – Specifies which ports' counter to show. If not specified, all ports will be shown.</p> <p><i>{rx tx}</i> – Shows RX or TX packet counter. If none is specified, both of them are shown.</p> <p><i>ccm</i> - Shows the CCM transmission state.</p>
Restrictions	None.

Example usage:

The following example displays the statistics for CFM packets.

VidDrop: The packets dropped due to invalid VID.

OpcDrop: The packets dropped due to unrecognized CFM opcode.

DGS-3700-12:5#show cfm counter packet

Command: show cfm counter packet

CFM RX Statistics

Port	CCM	LBR	LBM	LTR	LTM	VidDrop	OpcoDrop	Sum
1	0	0	0	0	0	0	0	0
2	254	0	0	0	0	0	0	254
3	0	0	0	0	0	0	0	0
4	0	0	0	0	0	0	0	0
5	0	0	0	0	0	0	0	0
6	0	0	0	0	0	0	0	0
7	0	0	0	0	0	0	0	0
8	0	0	0	0	0	0	0	0
9	0	3	0	0	0	0	0	3
10	0	0	0	0	0	0	0	0
11	0	0	0	0	0	0	0	0
12	0	0	0	0	0	0	0	0
Total	254	3	0	0	0	0	0	257

CFM TX Statistics

Port	CCM	LBR	LBM	LTR	LTM	Sum
1	0	0	0	0	0	0
2	284	0	0	0	4	292
3	578	0	0	0	0	578
4	578	0	0	0	0	578
5	578	0	0	0	0	578
6	578	0	0	0	0	578

clear cfm pkt_cnt

Purpose	Used to clear the CFM packet RX/TX counters.
Syntax	clear cfm pkt_cnt {[ports <portlist>{rx tx}] rx tx ccm}
Description	This command clears CFM packet counters.
Parameters	<p><i>ports</i> – Specifies which ports’ counter to show. If not specified, all ports will be shown.</p> <p><i>{rx tx}</i> – Shows RX or TX packet counter. If none is specified, both of them are shown.</p> <p><i>ccm</i> - Shows the CCM transmission state.</p>
Restrictions	None.

Example usage:

To clear the CFM packet RX/TX counters:

DGS-3700-12:5#clear cfm pkt_cnt ports 2 rx

Command: clear cfm pkt_cnt ports 2 rx

Success.

DGS-3700-12:4#

config cfm mp_ltr_all	
Purpose	To configure the CFM mp linktrace on the switch.
Syntax	config cfm mp_ltr_all [enable disable]
Description	This command is used to configure the CFM mp linktrace on the switch.
Parameters	<i>enable</i> – Used to enable the CFM mp linktrace. <i>disable</i> – Used to disable the CFM mp linktrace.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure CFM mp linktrace:

```
DGS-3700-12:5#config cfm mp_ltr_all enable
Command: config cfm mp_ltr_all enable

Success.

DGS-3700-12:4#
```

show cfm mp_ltr_all	
Purpose	To display the CFM mp linktrace settings on the switch.
Syntax	show cfm mp_ltr_all
Description	This command is used to display the CFM mp linktrace settings on the switch.
Parameters	None.
Restrictions	None.

Example usage:

To show the CFM mp linktrace on the Switch:

```
DGS-3700-12:4#show cfm mp_ltr_all
Command: show cfm mp_ltr_all

All MPs reply LTRs: Enabled

DGS-3700-12:4#
```

ETHERNET OAM COMMANDS

Back to Section Header

The Ethernet OAM commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
config ethernet_oam ports mode	[<portlist> all] mode [active passive]
config ethernet_oam ports state	[<portlist> all] state [enable disable]
config ethernet_oam ports link_monitor error_symbol	[<portlist> all] link_monitor error_symbol { threshold < range 0 - 4294967295> window < millisecond 1000-60000> notify_state [enable disable]}
config ethernet_oam ports link_monitor error_frame	[<portlist> all] link_monitor error_frame { threshold < range 0 - 4294967295> window < millisecond 1000-60000> notify_state [enable disable]}
config ethernet_oam ports link_monitor error_frame_period	[<portlist> all] link_monitor error_frame_period { threshold < range 0 - 4294967295> window <number 148810-100000000> notify_state [enable disable]}
config ethernet_oam ports link_monitor error_frame_seconds	[<portlist> all] link_monitor error_frame_seconds { threshold <range 1 - 900> window <millisecond 10000-900000> notify_state [enable disable]}
config ethernet_oam ports critical_link_event	[<portlist> all] critical_link_event { dying_gas critical_event } notify_state [enable disable]
config ethernet_oam ports remote_loopback	[<portlist> all] remote_loopback [start stop]
config ethernet_oam ports received_remote_loopback	[<portlist> all] received_remote_loopback [process ignore]
show ethernet_oam ports status	{<portlist>}
show ethernet_oam ports configuration	{<portlist>}
show ethernet_oam ports statistics	{<portlist>}
clear ethernet_oam ports statistics	[<portlist> all]
show ethernet_oam event_log	{<portlist>} event_log {index <value_list> }
clear ethernet_oam ports event_log	[<portlist> all]
config duld ports	[<portlist> all] {state [enable disable] mode [shutdown normal]} discovery_time <sec 5-65535>}
show duld ports	{<portlist>}

Each command is listed, in detail, in the following sections.

config ethernet_oam ports mode

Purpose	Used to configure Ethernet OAM mode.
Syntax	config ethernet_oam ports [<portlist> all] mode [active passive]
Description	This command is used to configure ports Ethernet OAM to operate in active or passive mode. The following two actions are allowed by ports in active mode, but

config ethernet_oam ports mode	
	disallowed by ports in passive mode. Initiate OAM discovery and Start or stop remote loop-back. Note: When a port is OAM-enabled, changing the OAM mode will cause the OAM discovery to be re-started.
Parameters	<i>portlist</i> – Specifies a range of ports to be configured. Use <i>all</i> to specify all ports. <i>mode</i> – Specifies to operate in either active mode or passive mode. The default mode is active.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure port 1 to OAM mode to passive:

```
DGS-3700-12:5#config ethernet_oam ports 1 mode passive
Command: config ethernet_oam ports 1 mode passive

Success.

DGS-3700-12:5#
```

config ethernet_oam ports state	
Purpose	Used to enable or disable Ethernet OAM.
Syntax	config ethernet_oam ports [<portlist> all] state [enable disable]
Description	This command used to enable or disable the port's Ethernet OAM function. Enabling a port's OAM will cause the port to start OAM discovery. If a port is active, it initiates the discovery otherwise it reacts only to the discovery received from its peer. Disabling a port's OAM will cause the port to send out a dying gasp event to the peer and then disconnect the established OAM link.
Parameters	<i>portlist</i> – Specifies a range of ports to be configured. Use <i>all</i> to specify all ports. <i>state</i> – Specifies to enable or disable the OAM function. The default state is disable.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable Ethernet OAM on port 1:

```
DGS-3700-12:5#config ethernet_oam ports 1 state enable
Command: config ethernet_oam ports 1 state enable

Success.

DGS-3700-12:5#
```

config ethernet_oam ports link_monitor error_symbol	
Purpose	Used to configure Ethernet OAM link monitoring error symbols.
Syntax	config ethernet_oam ports [<portlist> all] link_monitor error_symbol{ threshold < range 0 - 4294967295> window < millisecond 1000-60000> notify_state [enable disable]}
Description	This command is used to configure ports Ethernet OAM link monitoring error symbols. The link monitoring function provides a mechanism to detect and indicate link faults under a variety of conditions. OAM monitors the statistics on the

config ethernet_oam ports link_monitor error_symbol	
	number of frame errors as well as the number of coding symbol errors. When the number of symbol errors is equal to or greater than the specified threshold in a period and the event notification state is enabled, it generates an error symbol period event to notify the remote OAM peer.
Parameters	<p><i>portlist</i> – Specifies a range of ports to be configured. Use <i>all</i> to specify all ports.</p> <p><i>threshold</i> – Specifies the number of symbol errors in the period that is required to be equal to or greater than in order for the event to be generated. The default value of threshold is 1 symbol error.</p> <p><i>window</i> – The range is 1000 to 60000 ms. The default value is 1000ms.</p> <p><i>notify_state</i> – Specifies to enable or disable the event notification. The default state is enable.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the error symbol threshold to 2 and period to 1000ms for port 1:

<pre>DGS-3700-12:5#config ethernet_oam ports 1 link_monitor error_symbol threshold 2 window 1000 notify_state enable Command: config ethernet_oam ports 1 link_monitor error_symbol threshold 2 window 1000 notify_state enable Success. DGS-3700-12:5#</pre>

config ethernet_oam ports link_monitor error_frame	
Purpose	Used to configure Ethernet OAM link monitoring error frame
Syntax	config ethernet_oam ports [<portlist> all] link_monitor error_frame { threshold < range 0 - 4294967295 > window < millisecond 1000-60000> notify_state [enable disable]} (1)
Description	The command used to configure ports Ethernet OAM link monitoring error frames. Link monitoring function provides a mechanism to detect and indicate link faults under a variety of conditions. OAM monitors the counter on the number of frame errors as well as the number of coding symbol errors. When the number of frame errors is equal to or greater than the specified threshold in a period and the event notification state is enabled, it generates an error frame event to notify the remote OAM peer.
Parameters	<p><i>portlist</i> – Specifies a range of ports to be configured. Use <i>all</i> to specify all ports.</p> <p><i>threshold</i> – Specifies the number of frame errors in the period that are required to be equal to or greater than in order for the event to be generated. The default value of threshold is 1 frame error.</p> <p><i>window</i> – The range is 1000 to 60000 ms. The default value is 1000ms.</p> <p><i>notify_state</i> – Specifies to enable or disable the event notification. The default state is enable.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the error frame threshold to 2 and period to 1000 ms for port 1:

```
DGS-3700-12:5#config ethernet_oam ports 1 link_monitor error_frame threshold 2 window
1000 notify_state enable
Command: config ethernet_oam ports 1 link_monitor error_frame threshold 2 window 1000
notify_state enable

Success.

DGS-3700-12:5#
```

config ethernet_oam ports link_monitor error_frame_period

Purpose	Used to configure the Ethernet OAM link monitoring error frame period.
Syntax	config ethernet_oam ports [<portlist> all] link_monitor error_frame_period { threshold <range 0 – 4294967295 > window <number 148810-100000000> notify_state [enable disable]}
Description	This command is used to configure ports Ethernet OAM link monitoring error frame period. The link monitoring function provides a mechanism to detect and indicate link faults under a variety of conditions. OAM monitors the statistics on the number of frame errors as well as the number of coding symbol errors. When the number of error frames are equal to or greater than the specified threshold in a period and the event notification state is enabled, it generates an error frame period event to notify the remote OAM.
Parameters	<p><i>portlist</i> – Specifies a range of ports to be configured. Use <i>all</i> to specify <i>all ports</i>.</p> <p><i>threshold</i> – Specifies the number of error frame seconds in the period that are required to be equal to or greater than in order for the event to be generated. The default value of the threshold is 1 error frame.</p> <p><i>window</i> – Specifies the period of the error frame period event. The period is specified by a number of received frames. The range for this setting is 148 810 to 100 000 000. The default value is 1 488 100 frames.</p> <p><i>notify_state</i> – Specifies to enable or disable the event notification. The default state is enable.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the errored frame threshold to 10 and period to 1000000 for port 1:

```
DGS-3700-12:5#config ethernet_oam ports 1 link_monitor error_frame_period threshold 10
window 1000000 notify_state enable
Command: config ethernet_oam ports 1 link_monitor error_frame_period
threshold 10 window 1000000 notify_state enable

Success.

DGS-3700-12:5#
```

config ethernet_oam ports link_monitor error_frame_seconds

Purpose	Used to configure Ethernet OAM link monitoring error frame seconds.
Syntax	config ethernet_oam ports [<portlist> all] link_monitor error_frame_seconds { threshold <range 1 - 900> window <millisecond 10000 -90000000> notify_state [enable disable]}(1)
Description	<p>This command is used to configure ports Ethernet OAM link monitoring error frame seconds.</p> <p>An error frame second is a one second interval wherein at least one frame error was detected.</p>

config ethernet_oam ports link_monitor error_frame_seconds	
	Link monitoring function provides a mechanism to detect and indicate link faults under a variety of conditions. OAM monitors the counter on the number of frame errors as well as the number of coding symbol errors. When the number of error frame seconds are equal to or greater than the specified threshold in a period and the event notification state is enabled, it generates an error frame second summary event to notify the remote OAM.
Parameters	<p><i>portlist</i> – Specifies a range of ports to be configured. Use <i>all</i> to specify all ports.</p> <p><i>threshold</i> – Specifies the number of error frame seconds in the period that are required to be equal to or greater than in order for the event to be generated. The range is from 1 to 900. The default value of threshold is 1 error frame second.</p> <p><i>window</i> – Specifies the period of error frame seconds summary event. The range is 10000ms-900000ms and the default value is 60000 ms.</p> <p><i>notify_state</i> – Specifies to enable or disable the event notification. The default state is enable.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the error frame seconds threshold to 2 and period to 10000 ms for port 1:

<pre>DES-3528:5#config ethernet_oam ports 1 link_monitor error_frame_seconds threshold 2 window 10000 notify_state enable Command: config ethernet_oam ports 1 link_monitor error_frame_seconds threshold 2 window 10000 notify_state enable Success. DES-3528:5#</pre>

config ethernet_oam ports critical_link_event	
Purpose	Used to configure Ethernet OAM critical link event.
Syntax	config ethernet_oam ports [<portlist> all] critical_link_event [dying_gasp critical_event] notify_state [enable disable]
Description	This command is used to configure the capability of Ethernet OAM critical link event. If the capability for an event is disabled, the port will never send out the corresponding critical link event.
Parameters	<p><i>portlist</i> – Specifies a range of ports to be configured. Use <i>all</i> to specify all ports.</p> <p><i>dying_gasp</i> – An unrecoverable local failure condition has occurred.</p> <p><i>critical_event</i> – An unspecified critical event has occurred.</p> <p><i>Notify_state</i> – Specifies to enable or disable the event notification. The default state is enable.</p>
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure dying_gasp event for port 1:

```
DGS-3700-12:5#config ethernet_oam ports 1 critical_link_event dying_gasp
notify_state enable
Command: config ethernet_oam ports 1 critical_link_event dying_gasp
notify_state enable
```

Success.

```
DGS-3700-12:5#
```

config ethernet_oam ports remote_loopback

Purpose	Used to start or stop Ethernet OAM remote loop-back .
Syntax	config ethernet_oam ports [<portlist> all] remote_loopback [start stop]
Description	This command is used to start or stop the remote peer to enter the Ethernet OAM remote loop-back mode. To start the remote peer to enter the remote loop-back mode, you must ensure the port is in active mode and the OAM connection is established. If the local client is already in remote loop-back mode, then it cannot apply this command.
Parameters	<i>portlist</i> – Specifies a range of ports to be configured. Use <i>all</i> to specify all ports. <i>remote_loopback</i> – If start is specified, it will request the peer to change to the remote loop-back mode. If stop is specified, it will request the peer to change to the normal operation mode.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To start remote loop-back on port 1:

```
DGS-3700-12:5#config ethernet_oam ports 1 remote_loopback stop
Command: config ethernet_oam ports 1 remote_loopback stop
```

Success.

```
DGS-3700-12:5#
```

config ethernet_oam ports received_remote_loopback

Purpose	Used to configure the method to process the received Ethernet OAM remote loop-back command.
Syntax	config ethernet_oam ports [<portlist> all] received_remote_loopback [process ignore]
Description	This command is used to configure the client to process or to ignore the received Ethernet OAM remote loop-back command. In remote loop-back mode, all user traffic will not be processed. Ignoring received remote loop-back command will prevent the port from entering remote loop-back mode.
Parameters	<i>portlist</i> – Specifies a range of ports to be configured. Use <i>all</i> to specify all ports. <i>received_remote_loopback</i> – Specifies whether to process or to ignore the received Ethernet OAM remote loop-back command The default method is "ignore".
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the method of processing the received remote loop-back command as "process" on port 1:

```
DGS-3700-12:5#config ethernet_oam ports 1 received_remote_loopback process
Command: config ethernet_oam ports 1 received_remote_loopback process
```

Success.

```
DGS-3700-12:5#
```

show ethernet_oam ports status

Purpose	Used to show primary controls and status information for Ethernet OAM.
Syntax	show ethernet_oam ports {<portlist>} status
Description	<p>This command is used to show primary controls and status information for Ethernet OAM on specified ports.</p> <p>The information includes:</p> <p>(1) OAM administration status: enabled or disabled</p> <p>(2) OAM operation status. See below values:</p> <p>Disable: OAM is disabled on this port</p> <p>LinkFault: The link has detected a fault and is transmitting OAMPDUs with a link fault indication.</p> <p>PassiveWait: The port is passive and is waiting to see if the peer device is OAM capable.</p> <p>ActiveSendLocal: The port is active and is sending local information</p> <p>SendLocalAndRemote: The local port has discovered the peer but has not yet accepted or rejected the configuration of the peer.</p> <p>SendLocalAndRemoteOk: The local device agrees the OAM peer entity.</p> <p>PeeringLocallyRejected: The local OAM entity rejects the remote peer OAM entity.</p> <p>PeeringRemotelyRejected: The remote OAM entity rejects the local device.</p> <p>Operational: The local OAM entity learns that both it and the remote OAM entity have accepted the peering.</p> <p>NonOperHalfDuplex: Since Ethernet OAM functions are not designed to work completely over half-duplex ports. This value indicates Ethernet OAM is enabled but the port is in half-duplex operation.</p> <p>(3) OAM mode: passive or active</p> <p>(4) Maximum OAMPDU size: The largest OAMPDU that the OAM entity supports. OAM entities exchange maximum OAMPDU sizes and negotiate to use the smaller of the two maximum OAMPDU sizes between the peers.</p> <p>(5) OAM configuration revision: The configuration revision of the OAM entity as reflected in the latest OAMPDU sent by the OAM entity. The config revision is used by OAM entities to indicate that configuration changes have occurred, which might require the peer OAM entity to re-evaluate whether OAM peering is allowed. OAM mode change.</p> <p>(6) OAM Functions Supported: The OAM functions supported on this port. These functions include:</p> <p>Unidirectional: It indicates that the OAM entity supports the transmission of OAMPDUs on links that are operating in unidirectional mode (traffic flowing in one direction only).</p> <p>Loopback: It indicates that the OAM entity can initiate and respond to loop-back commands.</p> <p>Link Monitoring: It indicates that the OAM entity can send and receive Event Notification OAMPDUs.</p> <p>Variable: It indicates that the OAM entity can send and receive variable requests to monitor the attribute value as described in the IEEE 802.3 Clause 30 MIB</p>

show ethernet_oam ports status

	At present, only loop-back, link monitoring, and unidirectional are supported.
Parameters	<i>portlist</i> – Specifies a range of ports to display.
Restrictions	None

Example usage:

To show OAM control and status information on port 1-2:

```
DGS-3700-12:5#show ethernet_oam ports 1-2 status
DGS-3700-12:5#show ethernet_oam ports 1-2 status
```

Port 1

Local Client

```
-----
OAM                : Enabled
Mode                : Passive
Max OAMPDU          : 1518 Bytes
Remote Loopback     : Support
Unidirection        : Not Supported
Link Monitoring     : Support
Variable Request    : Not Supported
PDU Revision        : 1
Operation Status    : LinkFault
Loopback Status     : No Loopback
```

There is no peer entry information exist !

Port 2

Local Client

```
-----
OAM                : Disabled
Mode                : Active
Max OAMPDU          : 1518 Bytes
Remote Loopback     : Support
Unidirection        : Not Supported
```

CTRL+C **ESC** **q** Quit **SPACE** **n** Next Page **ENTER** Next Entry **a** All

show ethernet_oam ports configuration

Purpose	Used to display Ethernet OAM configuration.
Syntax	show ethernet_oam ports {<portlist>} configuration
Description	The command is used to show port's Ethernet OAM configurations.
Parameters	<i>portlist</i> – Specifies a range of ports to display.
Restrictions	None.

Example usage:

To show Ethernet OAM configuration on port 1-2:

DGS-3700-12:5#show ethernet_oam ports 1-2 configuration

Command: show ethernet_oam ports 1-2 configuration

Port 1

```
-----
OAM                : Enabled
Mode               : Passive
Dying Gasp        : Enabled
Critical Event    : Enabled
Remote Loopback OAMPDU : Processed
```

```
Symbol Error
  Notify State      : Enabled
  Window:           : 1000 milliseconds
  Threshold         : 2 Errored Symbol
```

```
Frame Error
  Notify State      : Enabled
  Window:           : 1000 milliseconds
  Threshold         : 2 Errored Frame
```

```
Frame Period Error
  Notify State      : Enabled
  Window:           : 1000000 Frames
  Threshold         : 10 Errored Frame
```

CTRL+C **ESC** **q** Quit **SPACE** **n** Next Page **ENTER** Next Entry **a** All

show ethernet_oam ports statistics

Purpose	This command is used to show Ethernet OAM statistics.
Syntax	show ethernet_oam ports {<portlist>} statistics
Description	This command is used to show ports Ethernet OAM statistics information.
Parameters	<i>portlist</i> – Specifies a range of ports to display.
Restrictions	None.

Example usage:

To show port 1 OAM statistics:

DGS-3700-12:5#show ethernet_oam ports 1 statistics

Command: show ethernet_oam ports 1 statistics

Port 1

```

-----
Information OAMPDU Tx           : 0
Information OAMPDU Rx           : 0
Unique Event Notification OAMPDU Tx : 0
Unique Event Notification OAMPDU Rx : 0
Duplicate Event Notification OAMPDU Tx: 0
Duplicate Event Notification OAMPDU Rx: 0
Loopback Control OAMPDU Tx      : 0
Loopback Control OAMPDU Rx      : 0
Variable Request OAMPDU Tx      : 0
Variable Request OAMPDU Rx      : 0
Variable Response OAMPDU Tx     : 0
Variable Response OAMPDU Rx     : 0
Organization Specific OAMPDU Tx : 0
Organization Specific OAMPDU Rx : 0
Unsupported OAMPDU Tx           : 0
Unsupported OAMPDU Rx           : 0
Frames Lost Due To OAM         : 0
    
```

DGS-3700-12:5#

Show Ethernet OAM event_log

Purpose	Used to show the Ethernet OAM event log.
Syntax	show ethernet_oam {<portlist>} event_log {index <value_list> }
Description	This command is used to show ports Ethernet OAM event log information. The switch can buffer 1000 event logs. The event log is different from sys-log. It provides more detailed information than sys-log. Each OAM event will be recorded in both OAM event log and syslog. You can specify an index to show a range of events.
Parameters	<i>portlist</i> – Specifies a range of ports to display. <i>index</i> – Specifies an index range to display.
Restrictions	None.

Example usage:

To show port 1 external OAM event:

DGS-3700-12:5#show ethernet_oam ports 1 event_log

Command: show ethernet_oam ports 1 event_log

Port 1

Event Listing

Index	Type	Location	Time Stamp

Local Event Statistics

Error Symbol Event	: 0
Error Frame Event	: 0
Error Frame Period Event	: 0
Errored Frame Seconds Event	: 0
Dying Gasp	: 0
Critical Event	: 0

Remote Event Statistics

Error Symbol Event	: 0
Error Frame Event	: 0
Error Frame Period Event	: 0
Errored Frame Seconds Event	: 0
Dying Gasp	: 0
Critical Event	: 0

CTRL+C **ESC** **q** Quit **SPACE** **n** Next Page **ENTER** Next Entry **a** All

clear ethernet_oam ports statistics

Purpose	Used to clear Ethernet OAM statistics.
Syntax	clear ethernet_oam ports [<portlist> all] statistics
Description	This command is used to clear ports Ethernet OAM statistics information.
Parameters	<i>portlist</i> – Specifies a range of ports to clear the statistics.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To clear port 1 OAM statistics:

DGS-3700-12:5#clear ethernet_oam ports 1 statistics

Command: clear ethernet_oam ports 1 statistics

Success.

DGS-3700-12:5#

clear ethernet_oam ports event_log

Purpose	Used to clear Ethernet OAM event log
Syntax	clear ethernet_oam ports [<portlist> all] event_log
Description	This command is used to clear ports Ethernet OAM event log information.
Parameters	<i>portlist</i> – Specifies a range of ports to clear the event log.
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To clear port 1 OAM event:

```
DGS-3700-12:5#clear ethernet_oam ports 1 event_log
```

```
Command: clear ethernet_oam ports 1 event_log
```

```
Success.
```

```
DGS-3700-12:5#
```

config duld ports

Purpose	Used to configure unidirectional link detection on port.
Syntax	config duld ports [<portlist> all] {state [enable disable] mode [shutdown normal]} discovery_time <sec 5-65535>}
Description	The command used to configure unidirectional link detection on ports. Unidirectional link detection provides discovery mechanism based on 802.3ah to discover its neighbor. If the OAM discovery can complete in configured discovery time, it concludes the link is bidirectional. Otherwise, it starts detecting task to detect the link status.
Parameters	<i>portlist</i> – Specifies a range of ports to be configured. Use <i>all</i> to specify all ports. <i>state</i> –Specifies these ports unidirectional link detection status.The default state is disabled <i>mode</i> – shutdown: if any unidirectional link is detected, disable the port and log an event. <i>normal</i> - only log an event when a unidirectional link is detected. <i>discovery_time</i> – Specifies these ports neighbor discovery time. If the discovery is timeout, the unidirectional link detection will start.The default discovery time is 5 seconds
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To enable unidirectional link detection on port 1

```
DES-3528:5# config duld ports 1 state enable mode shutdown discovery_time 10
```

```
Command: config duld ports 1 state enable mode shutdown discovery_time 10
```

```
Success.
```

```
DES-3528:5#
```

show duld ports

Purpose	Used to show unidirectional link detection information
Syntax	show duld ports { <portlist> }
Description	The command used to show ports unidirectional link information including: Admin state: port’s unidirectional link detection configuration state. Discovery Time: the neighbor discovery timer. Link Status: port’s link detection result. It maybe <ul style="list-style-type: none"> (1)Unknown: either local or remote do not support OAM or unidirectional detection. (2)Bidirectional (3)TX Fault (4) RX Fault (5) Link Down Oper Status: indicates the detection is operational or not. <ul style="list-style-type: none"> (1) Enabled: the port supports OAM and unidirectional detection and discover

show duld ports

remote peer supporting this detection capability.
 (2) Disabled: either local or remote do not support OAM or unidirectional detection.
 So we should enable OAM when we need to detect the unidirectional link.

Parameters *portlist* – Specifies a range of ports to be configured. Use *all* to specify all ports.

Restrictions None.

Example usage:

To show ports 1-4 unidirectional link detection information:

```
DES-3528:5# show duld ports 1-4
Commands: show duld ports 1-4
port      Admin State   Oper Status   Mode           Link Status    Discovery
Time(Sec)
-----
1         Enabled       Enabled       Shutdown      Bidirectional   5
2         Enabled       Enabled       Normal        RX Fault        5
3         Enabled       Enabled       Normal        TX Fault        5
4         Disabled      Disabled      Normal        Unknown         5

DES-3528:5#
```

MONITORING SECTION

Table of Contents

Next Section

Previous Section

EXTERNAL ALARM COMMANDS

Back to Section Header

The external alarm commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

COMMAND	PARAMETERS
show external_alarm	
config external_alarm	channel <value 1-4> message <sentence 1-128>

Each command is listed, in detail, in the following sections.

show external_alarm

Purpose	Used to display the current external alarm status on the Switch.
Syntax	show external_alarm
Description	This command is used to display the current external alarm status on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To display the current external alarm on the Switch:

```
DGS-3700-12:5#show external_alarm
Command: show external_alarm

  Channel      Status      Alarm Message
-----
  1            Normal      External Alarm 1 Occurred!
  2            Normal      External Alarm 2 Occurred!
  3            Normal      External Alarm 3 Occurred!
  4            Normal      External Alarm 4 Occurred!

CTRL+C  ESC  q  Quit  SPACE  n  Next Page  p  Previous Page  r  Refresh
```

config external_alarm

Purpose	Used to configure the external alarm prompt messages on the Switch.
Syntax	config external_alarm channel <value 1-4> message <sentence 1-128>
Description	This command is used to set the message to be displayed on console when external alarm occurs.
Parameters	<i>channel</i> – used to select one of the 4 channels <i>message</i> – prompt message
Restrictions	Only Administrator and Operator-level users can issue this command.

Example usage:

To configure the external alarm on channel 1:

```
DGS-3700-12:5#config external_alarm channel 1 message Channel 1 alarm occurs
Command: config external_alarm channel 1 message Channel 1 alarm occurs

Success.

DGS-3700-12:5#
```

APPENDIX SECTION

Table of Contents
Previous Section

APPENDIX A

Back to Section Header

MITIGATING ARP SPOOFING ATTACKS USING PACKET CONTENT ACL

HOW ADDRESS RESOLUTION PROTOCOL WORKS

Address Resolution Protocol (ARP) is the standard method for finding a host’s hardware address (MAC address) when only its IP address is known. However, this protocol is vulnerable because crackers can spoof the IP and MAC information in the ARP packets to attack a LAN (known as ARP spoofing). This document is intended to introduce the ARP protocol, ARP spoofing attacks, and the countermeasures brought by D-Link’s switches to thwart ARP spoofing attacks.

In the process of ARP, PC A will first issue an ARP request to query PC B’s MAC address. The network structure is shown in Figure 1.

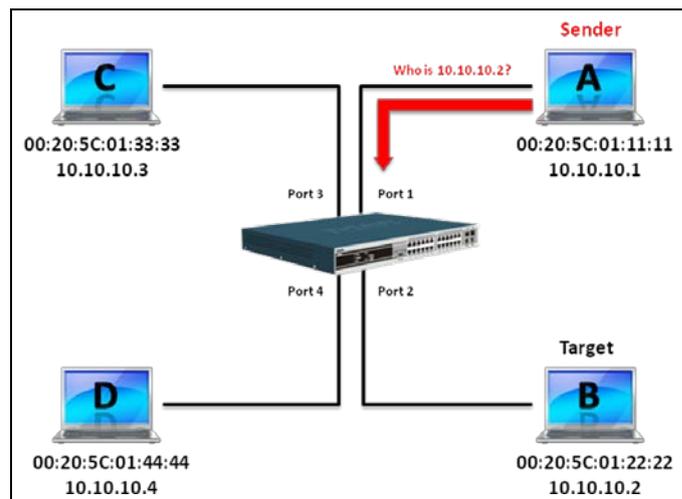


Figure 1

In the meantime, PC A’s MAC address will be written into the “Sender H/W Address” and its IP address will be written into the “Sender Protocol Address” in the ARP payload. As PC B’s MAC address is unknown, the “Target H/W Address” will be “00-00-00-00-00-00,” while PC B’s IP address will be written into the “Target Protocol Address,” shown in Table 1.

H/W Type	Protocol Type	H/W Address Length	Protocol Address Length	Operation	Sender H/W Address	Sender Protocol Address	Target H/W Address	Target Protocol Address
				ARP request	00-20-5C-01-11-11	10.10.10.1	00-00-00-00-00-00	10.10.10.2

Table 1. ARP Payload

The ARP request will be encapsulated into an Ethernet frame and sent out. As can be seen in Table 2, the “Source Address” in the Ethernet frame will be PC A’s MAC address. Since an ARP request is sent via broadcast, the “Destination address” is in a format of Ethernet broadcast (FF-FF-FF-FF-FF-FF).

Destination Address	Source Address	Ether-Type	ARP	FCS
FF-FF-FF-FF-FF-FF	00-20-5C-01-11-11			

Table 2. Ethernet Frame Format

When the switch receives the frame, it will check the “Source Address” in the Ethernet frame’s header. If the address is not in its Forwarding Table, the switch will learn PC A’s MAC and the associated port into its Forwarding Table.

Forwarding Table Port 1 (00-20-5C-01-11-11)

In addition, when the switch receives the broadcasted ARP request, it will flood the frame to all ports except the source port, port 1 (see Figure 2).

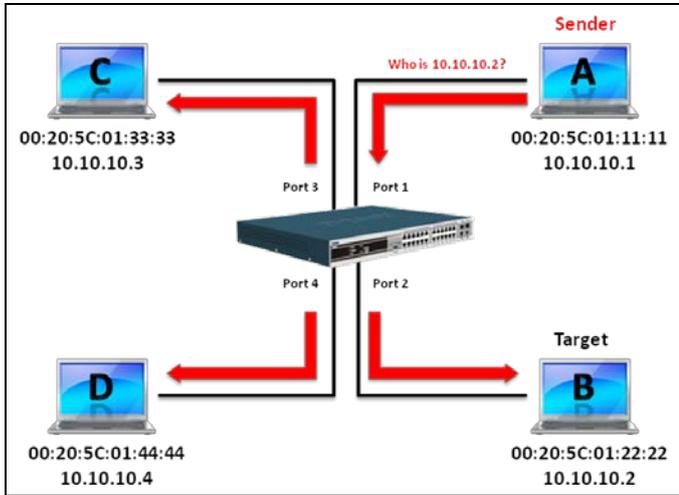


Figure 2

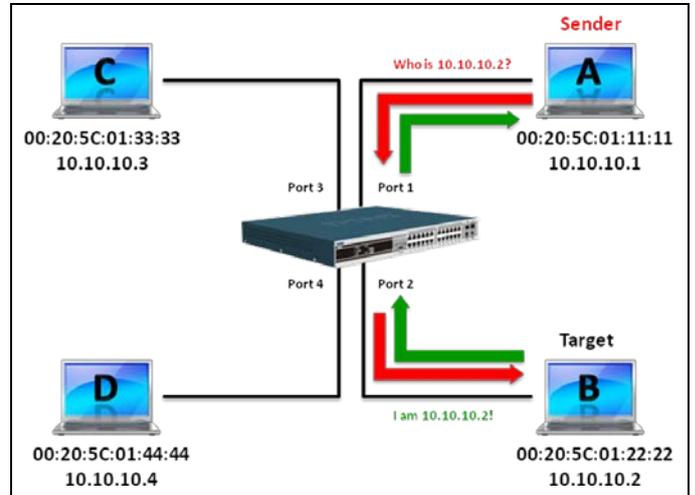


Figure 3

When PC B replies to the ARP request, its MAC address will be written into “Target H/W Address” in the ARP payload shown in Table 3. The ARP reply will be then encapsulated into an Ethernet frame again and sent back to the sender. The ARP reply is in a form of Unicast communication.

H/W Type	Protocol Type	H/W Address Length	Protocol Address Length	Operation	Sender H/W Address	Sender Protocol Address	Target H/W Address	Target Protocol Address
				ARP reply	00-20-5C-01-11-11	10.10.10.1	00-20-5C-01-22-22	10.10.10.2

Table 3. ARP Payload

When PC B replies to the query, the “Destination Address” in the Ethernet frame will be changed to PC A’s MAC address. The “Source Address” will be changed to PC B’s MAC address (see Table 4).

Destination Address <i>00-20-5C-01-11-11</i>	Source Address <i>00-20-5C-01-22-22</i>	Ether-Type	ARP	FCS
---	--	------------	-----	-----

Table 4. Ethernet Frame Format

The switch will also examine the “Source Address” of the Ethernet frame and find that the address is not in the Forwarding Table. The switch will learn PC B’s MAC and update its Forwarding Table.

Forwarding Table Port 1 (00-20-5C-01-11-11) Port 2 (00-20-5C-01-22-22)

HOW ARP SPOOFING ATTACKS A NETWORK

ARP spoofing, also known as ARP poisoning, is a method to attack an Ethernet network which may allow an attacker to sniff data frames on a LAN, modify the traffic, or stop the traffic altogether (known as a Denial of Service – DoS attack). The principle of ARP spoofing is to send the fake, or spoofed ARP messages to an Ethernet network. Generally, the aim is to associate the attacker's or random MAC address with the IP address of another node (such as the default gateway). Any traffic meant for that IP address would be mistakenly re-directed to the node specified by the attacker.

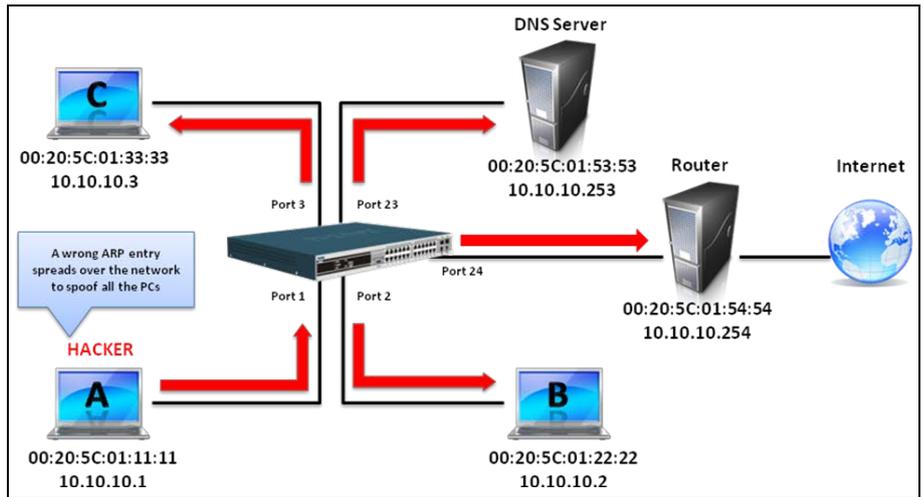


Figure 4

IP spoofing attack is caused by Gratuitous ARP that occurs when a host sends an ARP request to resolve its own IP address. Figure-4 shows a hacker within a LAN to initiate ARP spoofing attack.

In the Gratuitous ARP packet, the “Sender protocol address” and “Target protocol address” are filled with the same source IP address itself. The “Sender H/W Address” and “Target H/W address” are filled with the same source MAC address itself. The destination MAC address is the Ethernet broadcast address (FF-FF-FF-FF-FF-FF). All nodes within the network will immediately update their own ARP table in accordance with the sender’s MAC and IP address. The format of Gratuitous ARP is shown in the following table.

Ethernet Header				Gratuitous ARP							
Destination Address	Source Address	Ethernet Type	H/W Type	Protocol Type	H/W Address Length	Protocol Address Length	Operation	Sender H/W Address	Sender Protocol Address	Target H/W Address	Target Protocol Address
(6-byte)	(6-byte)	(2-byte)	(2-byte)	(2-byte)	(1-byte)	(1-byte)	(2-byte)	(6-byte)	(4-byte)	(6-byte)	(4-byte)
FF-FF-FF-FF-FF-FF	00-20-5C-01-11-11	0806					ARP relay	00-20-5C-01-11-11	10.10.10.254	00-20-5C-01-11-11	10.10.10.254

A common DoS attack today can be done by associating a nonexistent or any specified MAC address to the IP address of the network’s default gateway. The malicious attacker only needs to broadcast one Gratuitous ARP to the network claiming it is the gateway so that the whole network operation will be turned down as all packets to the Internet will be directed to the wrong node.

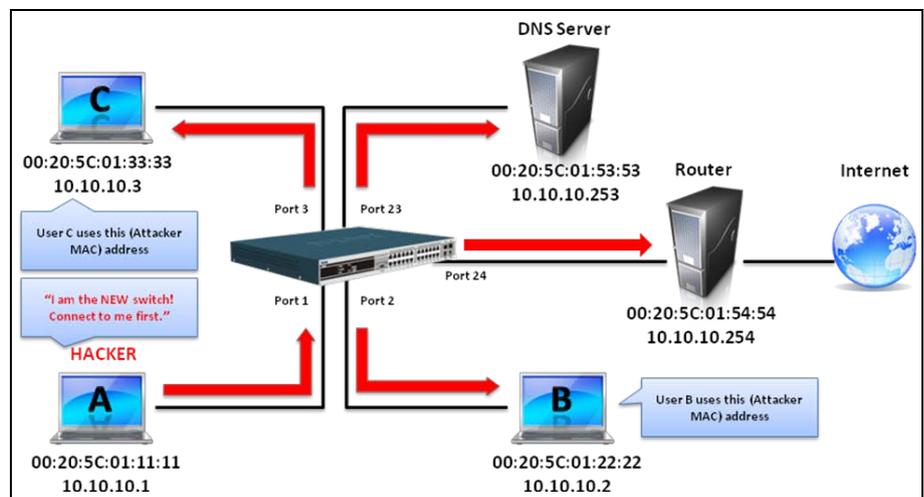


Figure 5


Likewise, the attacker can either choose to forward the traffic to the actual default gateway (passive sniffing)

or modify the data before forwarding it (man-in-the-middle attack). The hacker cheats the victim PC that it is a router and cheats the router that it is the victim. As can be seen in Figure 5 all traffic will be then sniffed by the hacker but the users will not discover.

PREVENT ARP SPOOFING VIA PACKET CONTENT ACL

D-Link managed switches can effectively mitigate common DoS attacks caused by ARP spoofing via a unique Package Content ACL.

For the reason that basic ACL can only filter ARP packets based on packet type, VLAN ID, Source, and Destination MAC information, there is a need for further inspections of ARP packets. To prevent ARP spoofing attack, we will demonstrate here via using Packet Content ACL on the Switch to block the invalid ARP packets which contain faked gateway's MAC and IP binding.

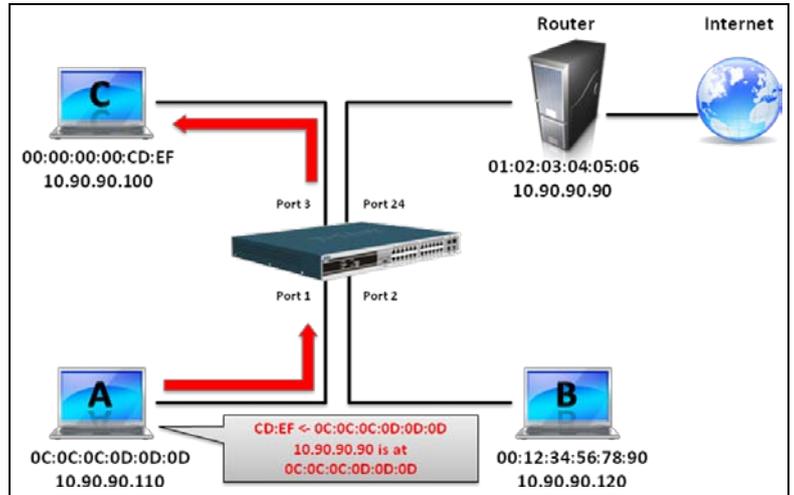

CONFIGURATION

The configuration logic is as follows:

1. Only if the ARP matches Source MAC address in Ethernet, Sender MAC address and Sender IP address in ARP protocol can pass through the switch. (In this example, it is the gateway's ARP.)
2. The switch will deny all other ARP packets which claim they are from the gateway's IP.

The design of Packet Content ACL on the Switch enables users to inspect any offset chunk. An offset chunk is a 4-byte block in a HEX format, which is utilized to match the individual field in an Ethernet frame. Each profile is allowed to contain up to a maximum of four offset chunks. Furthermore, only one single profile of Packet Content ACL can be supported per switch. In other words, up to 16 bytes of total offset chunks can be applied to each profile and a switch. Therefore, a careful consideration is needed for planning and configuration of the valuable offset chunks.

In Table 6, you will notice that the Offset_Chunk0 starts from the 127th byte and ends at the 128th byte. It also can be found that the offset chunk is scratched from 1 but not zero.

Offset Chunk	Offset Chunk0	Offset Chunk1	Offset Chunk2	Offset Chunk3	Offset Chunk4	Offset Chunk5	Offset Chunk6	Offset Chunk7	Offset Chunk8	Offset Chunk9	Offset Chunk10	Offset Chunk11	Offset Chunk12	Offset Chunk13	Offset Chunk14	Offset Chunk15
Byte	127	3	7	11	15	19	23	27	31	35	39	43	47	51	55	59
Byte	128	4	8	12	16	20	24	28	32	36	40	44	48	52	56	60
Byte	1	5	9	13	17	21	25	29	33	37	41	45	49	53	57	61
Byte	2	6	10	14	18	22	26	30	34	38	42	46	50	54	58	62

Offset Chunk	Offset Chunk16	Offset Chunk17	Offset Chunk18	Offset Chunk19	Offset Chunk20	Offset Chunk21	Offset Chunk22	Offset Chunk23	Offset Chunk24	Offset Chunk25	Offset Chunk26	Offset Chunk27	Offset Chunk28	Offset Chunk29	Offset Chunk30	Offset Chunk31
Byte	63	67	71	75	79	83	87	91	95	99	103	107	111	115	119	123
Byte	64	68	72	76	80	84	88	92	96	100	104	108	112	116	120	124
Byte	65	69	73	77	81	85	89	93	97	101	105	109	113	117	121	125
Byte	66	70	74	78	82	86	90	94	98	102	106	110	114	118	122	126

Table 6. Chunk and Packet Offset

The following table indicates a completed ARP packet contained in Ethernet frame which is the pattern for the calculation of packet offset.

Ethernet Header			ARP									
Destination Address	Source Address	Ethernet Type	H/W Type	Protocol Type	H/W Address Length	Protocol Address Length	Operation	Sender H/W Address	Sender Protocol Address	Target H/W Address	Target Protocol Address	
(6-byte)	(6-byte) 01 02 03 04 05 06	(2-byte) 0806	(2-byte)	(2-byte)	(1-byte)	(1-byte)	(2-byte)	(6-byte)	(4-byte) 0a5a5a5a (10.90.90.90)	(6-byte)	(4-byte)	

Table 7. A Completed ARP Packet Contained in an Ethernet Frame

COMMAND	DESCRIPTION
---------	-------------

Step 1:	create access_profile profile_id 1 profile_name 1 ethernet source_mac FF-FF-FF-FF-FF-FF ethernet_type	<ul style="list-style-type: none"> • Create access profile 1 to match Ethernet Type and Source MAC address.
Step 2:	config access_profile profile_id 1 add access_id 1 ethernet source_mac 01-02-03-04-05-06 ethernet_type 0x806 port 1-12 permit	<ul style="list-style-type: none"> • Configure access profile 1 • Only if the gateway's ARP packet that contains the correct Source MAC in the Ethernet frame can pass through the switch.
Step 3:	create access_profile profile_id 2 profile_name 2 packet_content_mask offset_chunk_1 3 0x0000FFFF offset_chunk_2 7 0x0000FFFF offset_chunk_3 8 0xFFFF0000	<ul style="list-style-type: none"> • Create access profile 2 • The first chunk starts from Chunk 3 mask for Ethernet Type. (Blue in Table 6, 13th and 14th bytes) • The second chunk starts from Chunk 7 mask for Sender IP in ARP packet. (Green in Table 6, 29th and 30th bytes) • The third chunk starts from Chunk 8 mask for Sender IP in ARP packet. (Brown in Table 6, 31st and 32nd bytes)
Step 4:	config access_profile profile_id 2 add access_id 1 packet_content offset_chunk_1 0x00000806 offset_chunk_2 0x00000A5A offset_chunk_3 0x5A5A0000 port 1-12 deny	<ul style="list-style-type: none"> • Configure access profile 2. • The rest of the ARP packets whose Sender IP claim they are the gateway's IP will be dropped.
Step 5:	save	<ul style="list-style-type: none"> • Save configuration.

APPENDIX B

Back to Section Header

PASSWORD RECOVERY PROCEDURE

This document describes the procedure for resetting passwords on D-Link Switches.

Authenticating any user who tries to access networks is necessary and important. The basic authentication method used to accept qualified users is through a local login, utilizing a Username and Password. Sometimes, passwords get forgotten or destroyed, so network administrators need to reset these passwords. This document will explain how the Password Recovery feature can help network administrators reach this goal.

The following steps explain how to use the Password Recovery feature on D-Link devices to easily recover passwords.

Complete these steps to reset the password:

1. For security reasons, the Password Recovery feature requires the user to physically access the device. Therefore this feature is only applicable when there is a direct connection to the console port of the device. It is necessary for the user needs to attach a terminal or PC with terminal emulation to the console port of the switch.
2. Power on the Switch. After the UART init is loaded to 100%, the Switch will allow 2 seconds for the user to press the hotkey [^] (Shift + 6) to enter the “Password Recovery Mode.” Once the Switch enters the “Password Recovery Mode,” all ports on the Switch will be disabled.

```

Boot Procedure                                     V1.00.B002
-----
Power On Self Test ..... 100%

MAC Address   : 00-19-5B-EC-32-15
H/W Version   : A1

Please Wait, Loading V2.00.B023 Runtime Image ..... 100 %
.  UART init ..... 100 %
    
```

```

Password Recovery Mode
>
    
```

3. In the “Password Recovery Mode” only the following commands can be used.

COMMAND	PARAMETERS
reset config	The reset config command resets the whole configuration back to the default values.
reboot	The reboot command exits the Reset Password Recovery Mode and restarts the switch. A confirmation message will be displayed to allow the user to save the current settings.
reset account	The reset account command deletes all the previously created accounts.
reset password {<username>}	The reset password command resets the password of the specified user. If a username is not specified, the passwords of all users will be reset.

show account

The **show account** command displays all previously created accounts.