

DAP-2690

Version 3.0

AirPremier[®] N

Simultaneous Dual Band PoE Access Point



User Manual

Business Class Networking

Table of Contents

Product Overview.....	4	VLAN Add/Edit.....	34
Package Contents.....	4	PVID Setting.....	35
System Requirements.....	4	Intrusion.....	36
Introduction.....	5	Schedule.....	37
Features and Benefits.....	6	AP Array.....	38
Wireless Basics.....	7	Web Redirection.....	39
Installation.....	9	Internal RADIUS Server.....	40
Installation Considerations.....	9	DHCP Server.....	41
Four Operational Modes.....	10	Dynamic Pool Settings.....	41
Connect to your Network.....	11	Static Pool Setting.....	43
Configuration.....	13	Current IP Mapping List.....	44
Wireless Settings.....	15	Filters.....	45
Access Point Mode.....	15	Wireless MAC ACL.....	45
WDS with AP Mode.....	17	WLAN Partition.....	46
WDS Mode.....	19	Traffic Control.....	47
Wireless Client Mode.....	21	Uplink/Downlink Setting.....	47
WPA-Personal Authentication.....	23	QoS.....	48
WPA-Enterprise Authentication.....	24	Traffic Manager.....	49
802.1X authentication.....	25	Status.....	50
LAN.....	26	Device Information.....	50
IPv6.....	27	Client Information.....	51
Advanced Settings.....	28	WDS Information.....	52
Performance.....	28	Channel Analyze.....	53
Multi-SSID.....	30	Stats.....	54
VLAN Settings.....	32	Ethernet.....	54
VLAN Port List.....	33	Wireless Traffic Stats.....	55

Log	56	Troubleshooting	77
View Log.....	56	Technical Specifications	80
Log Settings.....	57		
Maintenance	58		
Administrator Settings.....	58		
Limit Administrator	58		
System Name Settings	58		
Login Settings	59		
Console Settings	59		
SNMP Settings	60		
Ping Control Setting	60		
Firmware and SSL Certification Upload.....	61		
Configuration File	62		
Time and Date.....	63		
Configuration.....	64		
Save and Activate	64		
Discard Changes	64		
System	65		
System Settings.....	65		
Help	66		
Using the AP Array.....	67		
Simple WLAN Management Tool	67		
Easy Deployment and Management.....	68		
AP Roles in an Array.....	71		
AP Array Easy Configuration.....	71		
Supported in all D-Link 11n Business APs	73		
Reliable WLAN Management Tool	73		
Using the Console Port.....	74		

Package Contents

- DAP-2690 AirPremier N Simultaneous Dual Band PoE Access Point
- Power Adapter
- PoE Base Unit
- CD with manual and warranty
- Ethernet Cable
- Mounting Plate
- Mounting Hardware
- Console Cable
- Install Guide

Warning: Using a power adapter with different specifications than the one included with the DAP-2690 will cause damage and void the warranty for this product. If any of the above items are missing, please contact your reseller.

System Requirements

Network Requirements	<ul style="list-style-type: none">• IEEE 802.11n/g wireless clients (AP/bridge modes)• IEEE 802.11n/g wireless router or access point (client mode)
Web-based Configuration Utility Requirements	<p>Computer with the following:</p> <ul style="list-style-type: none">• Windows®, Macintosh, or Linux-based operating system <p>Browser Requirements:</p> <ul style="list-style-type: none">• Internet Explorer 6 or higher• Safari 4 or higher• Firefox• Chrome <p>Windows® Users: Make sure you have the latest version of Java installed. Visit www.java.com to download the latest version.</p>

Introduction

D-Link, an industry pioneer in wireless networking, introduces a solution for businesses seeking to deploy next generation draft 802.11n LANs. D-Link unveils its new AirPremier N Simultaneous Dual Band PoE Access Point (DAP-2690), designed specifically for business-class environments such as large or enterprise corporations to provide secure and manageable dual band wireless LAN options for network administrators.

Versatile Access Point

The AirPremier N Simultaneous Dual Band PoE Access Point allows network administrators to deploy a highly manageable and extremely robust dual band wireless network. All three dual band antennas are detachable and can provide optimal wireless coverage in either 2.4GHz (802.11g and 802.11n) or 5GHz (802.11a and 802.11n) bands. Enclosed in a plenum-rated metal chassis, the AirPremier N Simultaneous Dual Band PoE Access Point adheres to strict fire codes for placement in air passageways. For advanced installations, this new high-speed Access Point has integrated 802.3af Power over Ethernet (PoE) support, allowing installation of this device in areas where power outlets are not readily available.

Enhanced Performance

The AirPremier N Simultaneous Dual Band PoE Access Point delivers reliable wireless performance with maximum wireless signal rates of up to 300Mbps in either the 2.4GHz or 5GHz wireless band. This, coupled with support for Wi-Fi Multimedia™ (WMM) Quality of Service features, makes it an ideal access point for audio, video, and voice applications. Additionally, the DAP-2690 supports load balance features to ensure maximum performance.

Security

To help maintain a secure wireless network, the AirPremier N Simultaneous Dual Band PoE Access Point provides the latest in wireless security technologies by supporting both Personal and Enterprise versions of WPA and WPA2 (802.11i) with support for RADIUS server backend. To further protect your wireless network, MAC Address Filtering, Wireless LAN segmentation, Disable SSID Broadcast, Rogue AP Detection, and Wireless Broadcast Scheduling are also included.

The AirPremier N Simultaneous Dual Band PoE Access Point includes support for up to 16 VLANs for implementing multiple SSIDs to further help segment users on the network. The DAP-2690 also includes a wireless client isolation mechanism, which limits direct client-to-client communication.

Features and Benefits

- Four different operation modes - Capable of operating in one of four different operation modes to meet your wireless networking needs: Access Point, WDS with AP, WDS, or Wireless Client.
- Faster wireless networking with the 802.11n standard to provide a maximum wireless signal rate of up to 300 Mbps*.
- Compatible with the 802.11b standard to provide a wireless data rate of up to 11 Mbps, allowing you to migrate your system to the 802.11n and 802.11g standards on your own schedule without sacrificing connectivity.
- Compatible with the 802.11g standard to provide a wireless data rate of up to 54 Mbps in the 2.4 GHz frequency range.
- Compatible with the 802.11a standard to provide a wireless data rate of up to 54 Mbps in the 5 GHz frequency range.
- Better security with WPA - The DAP-2690 can securely connect wireless clients on the network using WPA (Wi-Fi Protected Access) to provide a much higher level of security for your data and communications than its previous versions.
- AP Manager II management software - The real-time display of the network's topology and AP's information makes network configuration and management quick and simple.
- SNMP for management - The DAP-2690 is not just fast, but also supports SNMP v.3 for better network management. Superior wireless AP manager software is bundled with the DAP-2690 for network configuration and firmware upgrade. Systems administrators can also set up the DAP-2690 easily with the Web-based configuration. A D-Link D-View 6.0 module will be downloadable for network administration and real-time network traffic monitoring with D-Link D-View 6.0 software.
- Utilizes OFDM technology (Orthogonal Frequency Division Multiplexing).
- Supports 802.3af Power over Ethernet.
- Includes one 10/100/1000 Ethernet port.
- Operates in the 2.4~2.5 GHz or 5.15~5.85 GHz** frequency ranges.
- Web-based interface for managing and configuring.

*Maximum wireless signal rate derived from IEEE Standard 802.11g, 802.11a and 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range.

**Please note that operating frequency ranges vary depending on the regulations of individual countries and jurisdictions. The DAP-2690 isn't supported in the 5.25~5.35 GHz and 5.47 ~ 5.725 GHz frequency ranges in some regions.

Wireless Basics

D-Link wireless products are based on industry standards to provide high-speed wireless connectivity that is easy to use within your home, business or public access wireless networks. D-Link wireless products provides you with access to the data you want, whenever and wherever you want it. Enjoy the freedom that wireless networking can bring to you.

WLAN use is not only increasing in both home and office environments, but in public areas as well, such as airports, coffee shops and universities. Innovative ways to utilize WLAN technology are allowing people to work and communicate more efficiently. Increased mobility and the absence of cabling and other types of fixed infrastructure have proven to be beneficial to many users.

Wireless adapter cards used on laptop and desktop systems support the same protocols as Ethernet adapter cards, allowing wireless users to use the same applications as those used on a wired network.

People use WLAN technology for many different purposes:

Mobility - Productivity increases when people can have access to data in any location within the operating range of their WLAN. Management decisions based on real-time information can significantly improve the efficiency of a worker.

Low implementation costs - WLANs are easy to set up, manage, change and relocate. Networks that frequently change can benefit from WLAN's ease of implementation. WLANs can operate in locations where installation of wiring may be impractical.

Installation and network expansion - By avoiding the complications of troublesome cables, a WLAN system can be fast and easy during installation, especially since it can eliminate the need to pull cable through walls and ceilings. Wireless technology provides more versatility by extending the network beyond the home or office.

Inexpensive solution - Wireless network devices are as competitively priced as conventional Ethernet network devices. The DAP-2690 saves money by providing users with multi-functionality configurable in four different modes.

Scalability - Configurations can be easily changed and range from Peer-to-Peer networks, suitable for a small number of users to larger Infrastructure networks to accommodate hundreds or thousands of users, depending on the number of wireless devices deployed.

Standards-Based Technology

The DAP-2690 Wireless Access Point utilizes the 802.11a, 802.11b, 802.11g, and 802.11n standards.

The IEEE 802.11n standard is an extension of the 802.11a, 802.11b, and 802.11g standards that came before it. It increases the maximum wireless signal rate up to 300 Mbps* within both the 2.4 GHz and the 5 GHz bands, utilizing OFDM technology.

This means that in most environments - within the specified range of this device - you will be able to transfer large files quickly, or even watch a movie in MPEG format over your network without noticeable delays. This technology works by transmitting high-speed digital data over a radio wave utilizing OFDM (Orthogonal Frequency Division Multiplexing) technology. OFDM works by splitting the radio signal into multiple smaller sub-signals that are then simultaneously transmitted at different frequencies to the receiver. OFDM reduces the amount of crosstalk (interference) in signal transmissions.

The D-Link DAP-2690 will automatically sense the best possible connection speed to ensure the greatest possible speed and range.

Note: *802.11n offers the most advanced network security features available today, including WPA.*

*Maximum wireless signal rate derived from IEEE Standard 802.11g, 802.11a and 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range.

Installation

Installation Considerations

The D-Link wireless device lets you access your network using a wireless connection from virtually anywhere within the operating range of your wireless network. Keep in mind, however, that the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through, may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

1. Keep the number of walls and ceilings between the D-Link device and other network devices to a minimum - each wall or ceiling can reduce your adapter's range from 3-90 feet (1-30 meters.) Position your devices so that the number of walls or ceilings is minimized.
2. Be aware of the direct line between network devices. A wall that is 1.5 feet thick (.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick! Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
3. Building Materials make a difference. A solid metal door or aluminum studs may have a negative effect on range. Try to position access points, wireless routers, and computers so that the signal passes through drywall or open doorways. Materials and objects such as glass, steel, metal, walls with insulation, water (fish tanks), mirrors, file cabinets, brick, and concrete will degrade your wireless signal.
4. Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that generate RF noise.
5. If you are using 2.4GHz cordless phones or X-10 (wireless products such as ceiling fans, lights, and home security systems), your wireless connection may degrade dramatically or drop completely. Make sure your 2.4GHz phone base is as far away from your wireless devices as possible. The base transmits a signal even if the phone is not in use.

Four Operational Modes

Operation Mode (Only supports 1 mode at a time)	Function
Access Point (AP)	Create a wireless LAN
WDS with AP	Wirelessly connect multiple networks while still functioning as a wireless AP
WDS	Wirelessly connect multiple networks
Wireless Client	AP acts as a wireless network adapter for your Ethernet enabled device

Connect to your Network

To power the access point, you can use one of the following 3 methods:

Method 1 - Use if you have a PoE switch.

Method 2 - Use if you do not have a PoE switch and do not have a power outlet near the location of the access point.

Method 3 - Use if you do not have a PoE switch and have a power outlet near the location of the access point.


Method 1

1. Connect one end of your Ethernet cable into the LAN (PoE) port on the DAP-2690 and then connect the other end to your PoE switch.




Method 2

1. Connect one end of an Ethernet cable into the **Data In** port on the PoE base unit and the other end into one port on your switch, router, or computer.
2. Connect one end of an Ethernet cable into the **P+Data Out** port on the PoE base unit and the other end into the **LAN (PoE)** port on the DAP-2690 access point.
3. Use the supplied power adapter. Connect the power adapter to the **Power In** receptor on the PoE adapter.
4. Connect the power cable to the power adapter and then connect the other end into a power outlet.

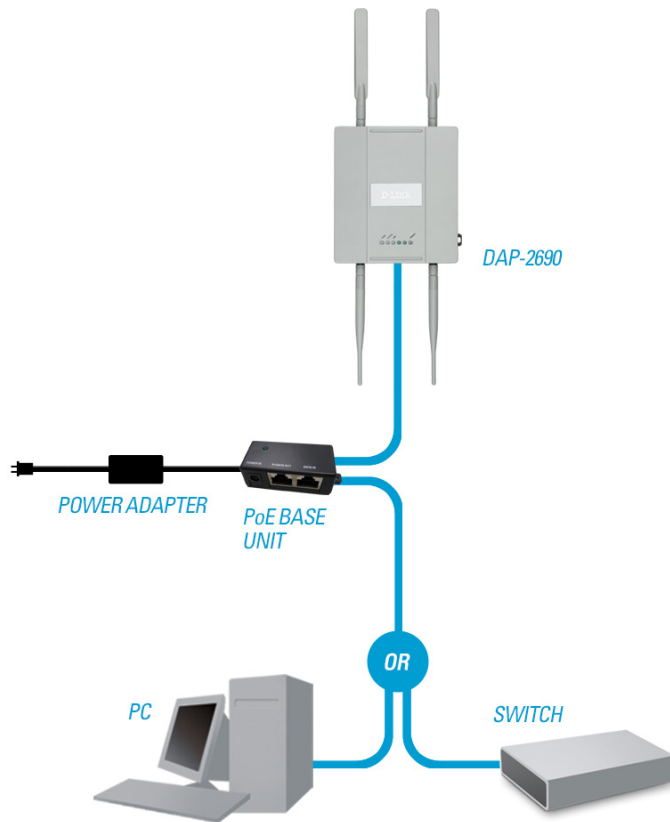

Method 3

1. Connect one end of your Ethernet cable into the **LAN (PoE)** port on the DAP-2690 and then connect the other end to a switch, router, or computer.
2. Use the supplied power adapter. Connect the power adapter to the Power receptor on the DAP-2690 access point.
3. Connect the power cable to the power adapter and then connect the other end into a power outlet.

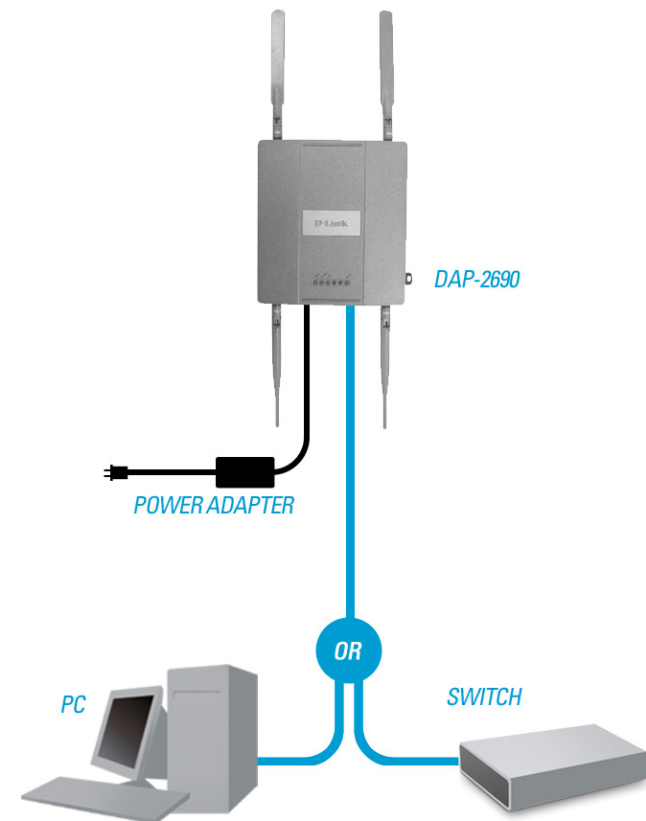

Configuration


To configure the DAP-2690, use a computer that is connected to the DAP-2690 with an Ethernet cable.

Step 1 - Disable the **Access the Internet using a proxy server** function. To disable this function, go to **Control Panel > Internet Options > Connections > LAN Settings** and uncheck the enable box.

Step 2 - Open your web browser.


Step 3 - Type the IP address of the DAP-2690 in the address field (**http://192.168.0.50**) and press **Enter**. Make sure that the IP addresses of the DAP-2690 and your computer are in the same subnet.

Note: *If you have changed the default IP address assigned to the DAP-2690, make sure to enter the correct IP address.*

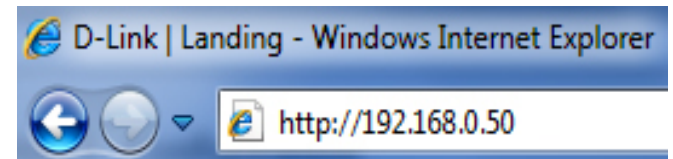

Step 4 - Enter admin for the User Name and then click **Login**. By default the password is blank.


Note: *If you have changed the password, make sure to enter the correct password.*

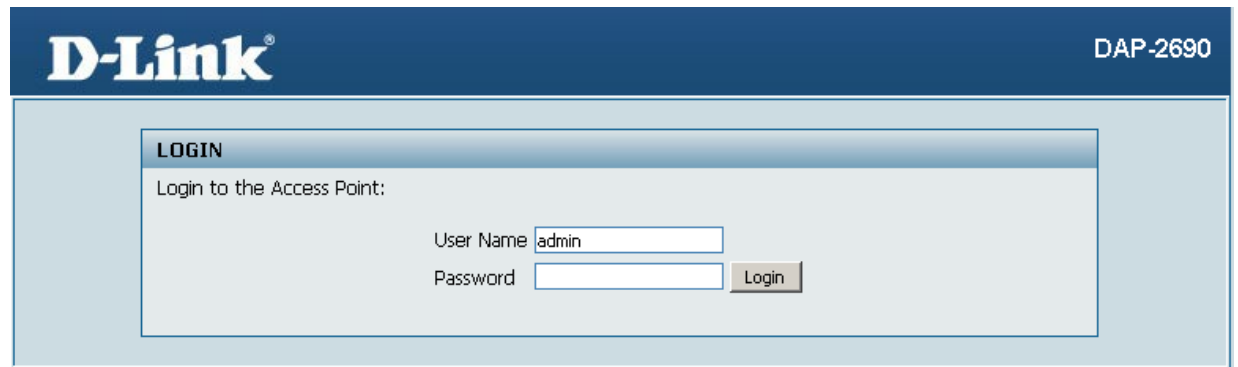

Section 3 - Configuration

After successfully logging into the DAP-2690 the following window will appear:


When making changes on most of the configuration windows in this section, use either the **Apply** button or the **Save** button to save your configuration changes.

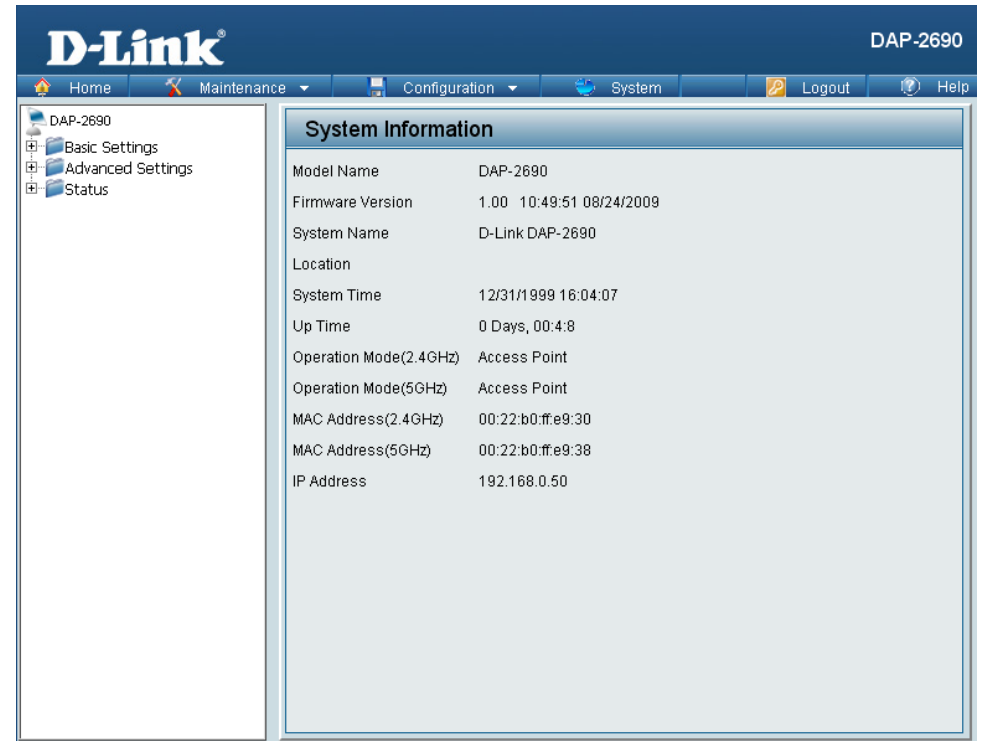

 Click the **Apply** button to configure changes.

 Click the **Save** button to configure changes.

Alternatively, click the **Save and Activate** option on the Configuration drop-down menu at the top of each DAP-2690 window. This will cause the DAP-2690 to save and reboot.

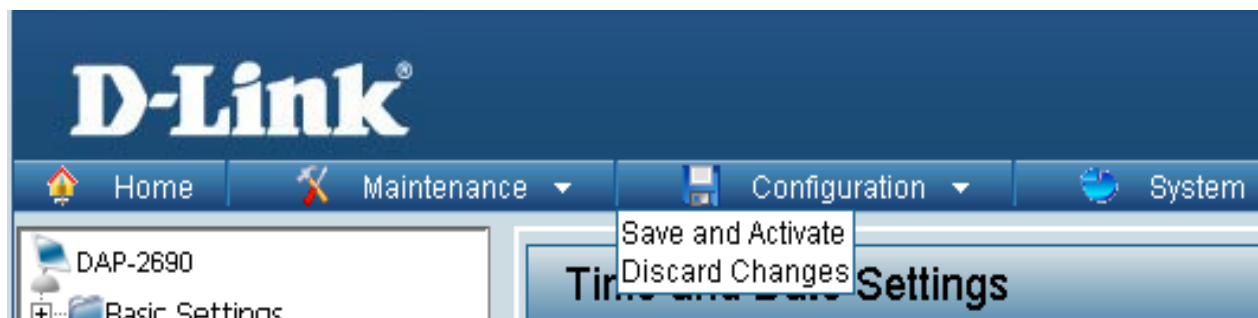

Wireless Settings

Access Point Mode

In Access Point mode, the DAP-2690 functions as a wireless AP. After configuring the desired settings, click the **Save** button.

Wireless Band: Select either **2.4 GHz** or **5 GHz** from the drop-down menu.

Mode: Select **Access Point** from the drop-down menu. The other three choices are **WDS with AP**, **WDS**, and **Wireless Client**.

Network Name (SSID): Service Set Identifier (SSID) is the name designated for a specific wireless local area network (WLAN). The SSID's default setting is **dlink**. The SSID can easily be changed to connect to an existing wireless network or to establish a new wireless network. The SSID can be up to 32 characters and is case-sensitive.

SSID Visibility: **Enable** or **Disable** SSID visibility. Enabling this feature broadcasts the SSID across the network, thus making it visible to all network users.

Auto Channel Selection: Enabling this feature automatically selects the channel that provides the best wireless performance. **Enable** is set by default. The channel selection process only occurs when the AP is booting up.

Channel: All devices on the network must share the same channel. To change the channel, first toggle the Auto Channel Selection setting to **Disable**, and then use the drop-down menu to make the desired selection.

Note: *The wireless adapters will automatically scan and match the wireless settings.)*

Channel Width: Allows selection of the channel width you would like to operate in. **20 MHz** and **Auto 20/40 MHz** allow both 802.11n and non-802.11n wireless devices on your network when the wireless mode is Mixed 802.11 b/g/n in 2.4G and Mixed 802.11 a/n in 5G. When the channel width is set to **Auto 20/40 MHz**, then 802.11n wireless devices are allowed to transmit data using 40 MHz.

The screenshot displays the 'Wireless Settings' page for a D-Link DAP-2690 device in Access Point mode. The interface includes a navigation menu on the left with options like Basic Settings, Wireless, LAN, IPv6, Advanced Settings, and Status. The main content area is divided into several sections: Wireless Band (2.4GHz), Mode (Access Point), Network Name (SSID) (radius), SSID Visibility (Enable), Auto Channel Selection (Enable), Channel (6), Channel Width (Auto 20/40 MHz), Authentication (WPA-Enterprise), RADIUS Server Settings (WPA Mode: WPA2 Only, Cipher Type: Auto, Group Key Update Interval: 1800), Network Access Protection (Disable), RADIUS Server Mode (Internal), Primary RADIUS Server Setting (RADIUS Server, RADIUS Port 1812), Backup RADIUS Server Setting (Optional) (RADIUS Server, RADIUS Port 1812), Primary Accounting Server Setting (Accounting Mode: Disable, Accounting Server, Accounting Port 1813), and Backup Accounting Server Setting (Optional) (Accounting Server, Accounting Port 1813). A 'Save' button is located at the bottom right of the settings area.

Authentication: Select **Open System** to communicate the key across the network.

Select **Shared Key** to limit communication to only those devices that share the same WEP settings. If multi-SSID is enabled, this option is not available.

Select **WPA-Personal** to secure your network using a password and dynamic key changes. No RADIUS server is required.

Select **WPA-Enterprise** to secure your network with the inclusion of a RADIUS server.

Select **802.1X** if your network is using port-based Network Access Control.

For more information about the different types of Authentication offered on the DAP-2690 and the respective settings of each, please go to the first page of the "Authentication" explanations, which begins on page 23.

WDS with AP Mode

In WDS with AP mode, the DAP-2690 wirelessly connects multiple networks while still functioning as a wireless AP. After completing the desired settings, click the **Save** button to let your changes take effect.

Wireless Band: Select either **2.4 GHz** or **5 GHz** from the drop-down menu.

Mode: Select **WDS with AP** mode from the drop-down menu.

Network Name (SSID): Service Set Identifier (SSID) is the name designated for a specific wireless local area network (WLAN). The SSID's factory default setting is **dlink**. The SSID can easily be changed to connect to an existing wireless network or to establish a new wireless network. The SSID can be up to 32 characters and is case-sensitive.

SSID Visibility: **Enable** or **Disable** SSID visibility. Enabling this feature broadcasts the SSID across the network, thus making it visible to all network users.

Auto Channel Selection: Enabling this feature automatically selects the channel that provides the best wireless performance. **Enable** is set by default. The channel selection process only occurs when the AP is booting up.

Channel: All devices on the network must share the same channel. To change the channel, first toggle the *Auto Channel Selection* setting to **Disable**, and then use the drop-down menu to make the desired selection. **Note:** *The wireless adapters will automatically scan and match the wireless settings.*

Channel Width: Allows selection of the channel width you would like to operate in. **20 MHz** and **Auto 20/40 MHz** allow both 802.11n and non-802.11n wireless devices on your network when the wireless mode is Mixed 802.11 b/g/n in 2.4G and Mixed 802.11 a/n in 5G. When the channel width is set to **Auto 20/40 MHz**, then 802.11n wireless devices are allowed to transmit data using 40 MHz.

The screenshot shows the D-Link DAP-2690 web interface. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view with Basic Settings, Wireless, LAN, IPv6, Advanced Settings, and Status. The main content area is titled "Wireless Settings" and contains the following fields:

- Wireless Band: 2.4GHz
- Mode: WDS with AP
- Network Name (SSID): radius
- SSID Visibility: Enable
- Auto Channel Selection: Disable
- Channel: 6
- Channel Width: 20 MHz

Below these fields are sections for WDS (Remote AP MAC Address with 8 input fields), Site Survey (with a Scan button and a table with columns CH, RSSI, BSSID, Security, SSID), Authentication (Open System), and Key Settings (Encryption: Disable/Enable, Key Type: HEX, Key Size: 64 Bits, Key Index: 1, Network Key, Confirm Key). A Save button is at the bottom right.

Remote AP MAC Address: Allows selection of the channel width you would like to operate in. **20 MHz** and **Auto 20/40 MHz** allow both 802.11n and non-802.11n wireless devices on your network when the wireless mode is Mixed 802.11 b/g/n in 2.4G and Mixed 802.11 a/n in 5G. 802.11n wireless devices are allowed to transmit data using 40 MHz when the channel width is **Auto 20/40 MHz**.

Site Survey: Manually enter the MAC addresses of the APs on your network that will serve as bridges to wirelessly connect multiple networks. You may also click the **Scan** button to search for available wireless networks, then click on the available network that you want to connect to.

Authentication: Use the drop-down menu to choose **Open System**, **Shared Key**, or **WPA-Personal**.

Select **Open System** to communicate the key across the network.

Select **Shared Key** to limit communication to only those devices that share the same WEP settings. If multi-SSID is enabled, this option is not available.

Select **WPA-Personal** to secure your network using a password and dynamic key changes. No RADIUS server is required.

For more information about the different types of Authentication offered on the DAP-2690 and the respective settings of each, please go to the first page of the "Authentication" explanations, which begins on page 23.

WDS Mode

In WDS mode, the DAP-2690 wirelessly connects multiple networks, without functioning as a wireless AP. After completing the desired settings, click the **Save** button to let your changes take effect.

Wireless Band: Select either **2.4 GHz** or **5 GHz** from the drop-down menu.

Mode: **WDS** is selected from the drop-down menu.

Network Name Service Set Identifier (SSID): is the name designated for a specific wireless local area network (WLAN). The SSID's factory default setting is **dlink**. The SSID can be easily changed to connect to an existing wireless network or to establish a new wireless network.

SSID Visibility: **Enable** or **Disable** SSID visibility. Enabling this feature broadcasts the SSID across the network, thus making it visible to all network users.

Auto Channel Selection: Enabling this feature automatically selects the channel that will provide the best wireless performance. This feature is not supported in WDS mode.

Channel: All devices on the network must share the same channel. To change the channel, use the drop-down menu to make the desired selection.

Channel Width: Allows selection of the channel width you would like to operate in. **20 MHz** and **Auto 20/40 MHz** allow both 802.11n and non-802.11n wireless devices on your network when the wireless mode is Mixed 802.11 b/g/n in 2.4G and Mixed 802.11 a/n in 5G. 802.11n wireless devices are allowed to transmit data using 40 MHz when the channel width is **Auto 20/40 MHz**.

The screenshot displays the 'Wireless Settings' page for a D-Link DAP-2690 device. The interface includes a navigation menu on the left with options like 'Basic Settings', 'Wireless', 'LAN', 'IPv6', 'Advanced Settings', and 'Status'. The main content area is titled 'Wireless Settings' and contains the following configuration options:

- Wireless Band:** 2.4GHz
- Mode:** WDS
- Network Name (SSID):** radius
- SSID Visibility:** Enable
- Auto Channel Selection:** Disable
- Channel:** 6
- Channel Width:** 20 MHz

Below these settings is a section for 'WDS' with 'Remote AP MAC Address' fields numbered 1 through 8. A 'Site Survey' section includes a 'Scan' button and a table with columns: CH, RSSI, BSSID, Security, and SSID. The 'Authentication' section is set to 'Open System'. The 'Key Settings' section includes 'Encryption' (Enable), 'Key Type' (HEX), 'Key Size' (64 Bits), 'Key Index (1~4)' (1), 'Network Key', and 'Confirm Key'. A 'Save' button is located at the bottom right of the page.

Remote AP MAC Address: Enter the MAC addresses of the APs on your network that will serve as bridges to wirelessly connect multiple networks.

Site Survey: Click the **Scan** button to search for available wireless networks, then click on the available network that you want to connect with.

Authentication: Use the drop-down menu to choose **Open System, Shared Key, or WPA-Personal**.

Select **Open System** to communicate the key across the network.

Select **Shared Key** to limit communication to only those devices that share the same WEP settings.

Select **WPA-Personal** to secure your network using a password and dynamic key changes. No RADIUS server is required.

Wireless Client Mode

In Wireless Client mode, the DAP-2690 functions as a wireless client on a wireless network in which an AP already exists. After completing the desired settings, click the **Save** button to let your changes take effect.

Wireless Band: Select either **2.4 GHz** or **5 GHz** from the drop-down menu.

Mode: **Wireless Client** is selected from the drop-down menu.

Network Name (SSID): Service Set Identifier (SSID) is the name designated for a specific wireless local area network (WLAN). The SSID's factory default setting is **dlink**. The SSID can be easily changed to connect to an existing wireless network.

SSID Visibility: This option is unavailable in wireless client mode.

Auto Channel Selection: Enabling this feature automatically selects the channel that will provide the best wireless performance. This feature is not supported in Wireless Client mode.

Channel: The channel used will be displayed, and follow the root AP.

Channel Width: This option is unavailable in wireless client mode.

Site Survey: Click the **Scan** button to search for available wireless networks, then click on the available network that you want to connect with.

Authentication: Use the drop-down menu to choose **Open System** or **WPA Personal**.

Select **Open System** to communicate the key across the network.

Select **WPA-Personal** to secure your network using a password and dynamic key changes. No RADIUS server is required.

For more information about the different types of Authentication offered on the DAP-2690 and the respective settings of each, please go to the first page of the Authentication explanations which begins on page 23.

Wireless MAC Clone

Enable: Click the box to enable the Wireless MAC Clone feature. Enabling this option allows the user to manually assign the source MAC address to packets forwarded by the DAP-2690. If disabled, the packet's source MAC address field will be automatically selected as the DAP-2690's MAC address.

MAC Source: Use the drop-down menu to select either **Auto** or **Manual**.

MAC Address: If you selected **Manual** for the MAC Source above, you can either click the **Scan** button to search for all available devices connected to your DAP-2690's Ethernet port or manually enter a MAC address in the space provided.

WPA-Personal Authentication

WPA Mode: When **WPA-Personal** is selected for Authentication type, you must also select a WPA mode from the drop-down menu: **AUTO (WPA or WPA2)**, **WPA2 Only**, or **WPA Only**. WPA and WPA2 use different algorithms. **AUTO (WPA or WPA2)** allows you to use both WPA and WPA2.

Cipher Type: When you select WPA-Personal, you must also select **AUTO**, **AES**, or **TKIP** from the drop-down menu.

Group Key Update Interval: Select the interval during which the group key will be valid. The default value of **1800** is recommended.

PassPhrase: When you select WPA-Personal, please enter a PassPhrase in the corresponding field.

Confirm

PassPhrase: Retype the Passphrase entered above in the corresponding field.

The screenshot shows the 'Wireless Settings' configuration page. The 'Authentication' dropdown is set to 'WPA-Personal'. Below it, the 'PassPhrase Settings' section is expanded, showing 'WPA Mode' set to 'AUTO (WPA or WPA2)', 'Cipher Type' set to 'Auto', and 'Group Key Update Interval' set to '1800 (Seconds)'. The 'Manual' radio button is selected for key change, and 'Activated From' is set to 'Sun'. The 'Time Interval' is set to '(1~168)hour(s)'. There are empty text input fields for 'PassPhrase' and 'Confirm PassPhrase'. A 'Save' button is located at the bottom right of the settings area.

WPA-Enterprise Authentication

WPA Mode: When **WPA-Enterprise** is selected, you must also select a WPA mode from the drop-down menu: **AUTO (WPA or WPA2)**, **WPA2 Only**, or **WPA Only**. WPA and WPA2 use different algorithms. **AUTO (WPA or WPA2)** allows you to use both WPA and WPA2.

Cipher Type: When WPA-Enterprise is selected, you must also select a cipher type from the drop-down menu: **Auto**, **AES**, or **TKIP**.

Group Key Update Interval: Select the interval during which the group key will be valid. The recommended value is **1800**, as a lower interval may reduce data transfer rates.

Network Access Protection: Enable or disable Microsoft Network Access Protection. Enabling this will make the DAP-2690 a NAP enforcement point if you are running the Network Policy Server (NPS) service in Windows Server 2008.

RADIUS Server: Enter the IP address of the RADIUS server. Click External if the RADIUS server is on your network or Internal if you are using the RADIUS server on the DAP-2690.

RADIUS Port: Enter the RADIUS port (**1812** is the default).

RADIUS Secret: Enter the RADIUS secret.

Accounting Mode: Select if you want to use a different server for accounting.

Accounting Server: Enter the IP address of the Accounting server.

Accounting Port: Enter the Accounting port (**1813** is the default).

Accounting Secret: Enter the Accounting secret.

The screenshot shows the 'Wireless Settings' configuration window. The 'Authentication' dropdown is set to 'WPA-Enterprise'. Under 'RADIUS Server Settings', 'WPA Mode' is set to 'AUTO (WPA or WPA2)', 'Cipher Type' is 'Auto', and 'Group Key Update Interval' is '1800 (Seconds)'. The 'Network Access Protection' section has 'Disable' selected. Under 'RADIUS Server Mode', 'External' is selected. The 'Primary RADIUS Server Setting' and 'Backup RADIUS Server Setting (Optional)' sections both have 'RADIUS Server' and 'RADIUS Secret' fields, with 'RADIUS Port' set to '1812'. The 'Primary Accounting Server Setting' and 'Backup Accounting Server Setting (Optional)' sections both have 'Accounting Server' and 'Accounting Secret' fields, with 'Accounting Port' set to '1813'. A 'Save' button is at the bottom right.

Note: You can input the secondary RADIUS server and accounting server settings if you have a backup RADIUS and accounting server.

802.1X authentication

Key Update Interval: Select the interval (in seconds) during which the key will be valid.

RADIUS Server: Enter the IP address of the RADIUS server. Click **External** if the RADIUS server is on your network or **Internal** if you are using the RADIUS server on the DAP-2690.

RADIUS Port: Enter the RADIUS port (**1812** is the default).

RADIUS Secret: Enter the RADIUS secret.

Accounting Mode: Select if you want to use a different server for accounting.

Accounting Server: Enter the IP address of the Accounting server.

Accounting Port: Enter the Accounting port (**1813** is the default).

Accounting Secret: Enter the Accounting secret.

Note: You can input the secondary RADIUS server and accounting server settings if you have a backup RADIUS and accounting server.

The screenshot shows the 'Wireless Settings' configuration page. The 'Authentication' dropdown is set to '802.1X'. Below this, the 'RADIUS Server Settings' section is expanded, showing a 'Key Update Interval' of 300 seconds. The 'RADIUS Server Mode' is set to 'External'. Under 'Primary RADIUS Server Setting', the 'RADIUS Port' is set to 1812. There is also a 'Backup RADIUS Server Setting (Optional)' section with 'RADIUS Port' set to 1812. The 'Accounting Mode' is set to 'Disable'. Under 'Primary Accounting Server Setting', the 'Accounting Port' is set to 1813. There is also a 'Backup Accounting Server Setting (Optional)' section with 'Accounting Port' set to 1813. A 'Save' button is located at the bottom right of the form.

LAN

LAN is short for Local Area Network. This is considered your internal network. These are the IP settings of the LAN interface for the DAP-2690. These settings may be referred to as private settings. You may change the LAN IP address if needed. The LAN IP address is private to your internal network and cannot be seen on the Internet. After completing the desired LAN settings, click the **Save** button to let your changes take effect.


Get IP From: Select **Static IP (Manual)** if you do not have a DHCP server on your network, or if you wish to assign a static IP address to the DAP-2690. When **Dynamic IP (DHCP)** is selected, the other fields here will be grayed out. Please allow about 2 minutes for the DHCP client to be functional once this selection is made.

IP Address: The default IP address is **192.168.0.50**. Assign a static IP address that is within the IP address range of your network.

Subnet Mask: Enter the subnet mask. All devices in the network must share the same subnet mask.

Default Gateway: Enter the IP address of the gateway in your network. If there is a router/gateway in your network, please enter its IP address.

DNS: Enter a DNS server IP address of your choice. In most cases, enter the LAN IP of your router.

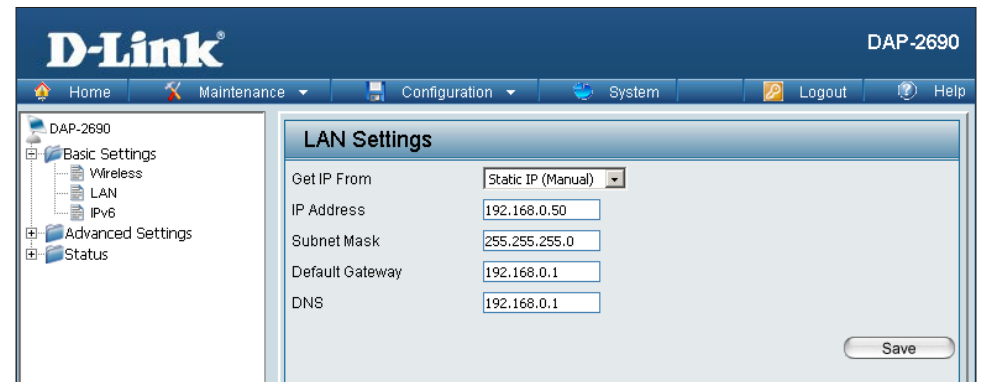

The screenshot shows the D-Link DAP-2690 LAN Settings page. The interface includes a navigation menu on the left with options for Basic Settings (Wireless, LAN, IPv6), Advanced Settings, and Status. The main content area is titled 'LAN Settings' and contains the following fields:

Field	Value
Get IP From	Static IP (Manual)
IP Address	192.168.0.50
Subnet Mask	255.255.255.0
Default Gateway	192.168.0.1
DNS	192.168.0.1

A 'Save' button is located at the bottom right of the settings area.

IPv6

The IPv6 function allows you access DAP-2690 using an IPv6 address.


Enable IPv6: Check this box to enable IPv6.

Get IP From: Select either **Static** to enter your own IP address or **Auto** to be automatically assigned by a DHCP server or IPv6 gateway.

IP Address: Assign an IPv6 IP address.

Prefix: The Prefix is used to determine what subnet an IP address belongs to. It must be 0~128..

Default Gateway: Enter the default gateway address. This is usually the IP address of your router.

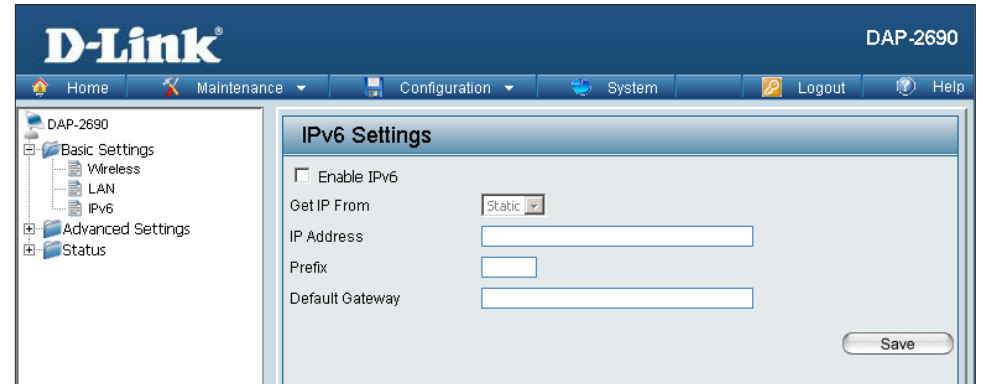

Note: If IPv6 is enabled, AP Array, QoS, and Traffic Manager will all be disabled. Also, AP Client mode will change to AP mode.

Advanced Settings

Performance


The Performance Settings window offers a number of user-controlled settings designed to optimize the performance of the DAP-2690. After completing the desired settings, click the **Save** button to let your changes take effect.

Wireless: Use the drop-down menu to turn the wireless function **On** or **Off**.

Wireless Mode: The different combination of clients that can be supported include **Mixed 802.11n, 802.11g and 802.11b**, **Mixed 802.11g and 802.11b**, and **802.11n Only** in the 2.4 GHz band and **Mixed 802.11n and 802.11a**, **802.11a only**, and **802.11n Only** in the 5 GHz band. Please note that when backwards compatibility is enabled for legacy (802.11a/g/b) clients, degradation of 802.11n wireless performance is expected.

Data Rate: Indicate the base transfer rate of wireless adapters on the wireless LAN. The AP will adjust the base transfer rate depending on the base rate of the connected device. If there are obstacles or interference, the AP will step down the rate. This option is enabled in Mixed 802.11g and 802.11b mode (for 2.4 GHz) and 802.11a only mode (for 5 GHz). The choices available are **Best (Up to 54)**, **54**, **48**, **36**, **24**, **18**, **12**, **9**, and **6** for 5 GHz and **Best (Up to 54)**, **54**, **48**, **36**, **24**, **18**, **12**, **9**, **6**, **11**, **5.5**, **2** and **1** for 2.4 GHz.

Beacon Interval (25-500): Beacons are packets sent by an access point to synchronize a wireless network. Specify a value in milliseconds. The default (**100**) is recommended. Setting a higher beacon interval can help to save the power of wireless clients, while setting a lower one can help a wireless client connect to an access point faster.

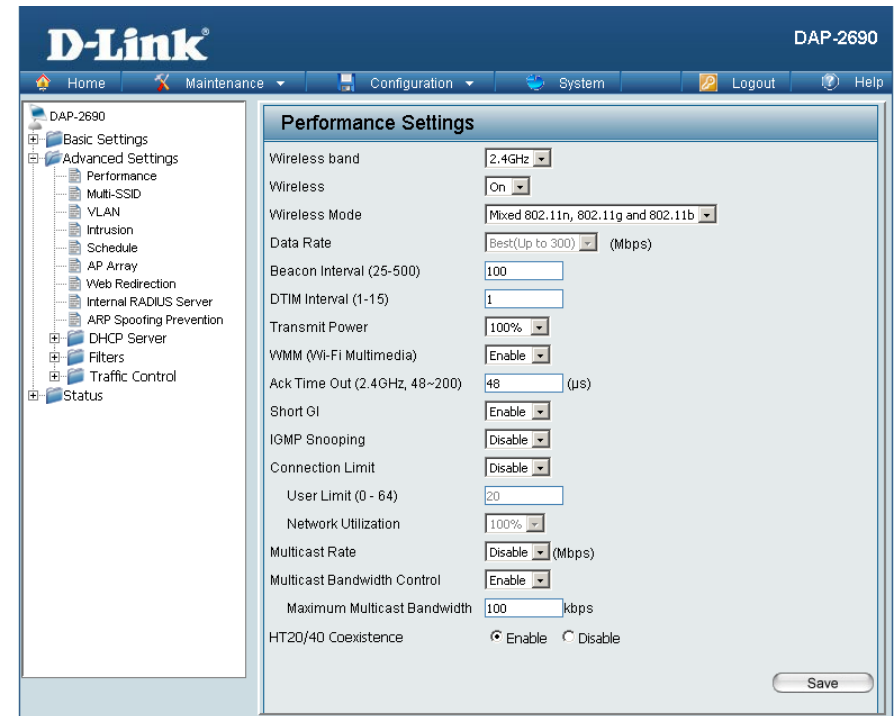

*Maximum wireless signal rate derived from IEEE Standard 802.11g, 802.11a and 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range.

DTIM Interval (1-15): Select a Delivery Traffic Indication Message setting between **1** and **15**. **1** is the default setting. DTIM is a countdown informing clients of the next window for listening to broadcast and multicast messages.

Transmit Power: This setting determines the power level of the wireless transmission. Transmitting power can be adjusted to eliminate overlapping of wireless area coverage between two access points where interference is a major concern. For example, if wireless coverage is intended for half of the area, then select 50% as the option. Use the drop-down menu to select **100%**, **50%**, **25%**, or **12.5%**.

WMM (Wi-Fi Multimedia): WMM stands for Wi-Fi Multimedia. Enabling this feature will improve the user experience for audio and video applications over a Wi-Fi network.

Ack Time Out (2.4

GHZ) or Ack Time Out (5 GHZ): To effectively optimize throughput over long distance links enter a value for Acknowledgement Time Out between **25** and **200** microseconds for 5 GHz or from **48** to **200** microseconds in the 2.4 GHz in the field provided.

Short GI: Select **Enable** or **Disable**. Enabling a short guard interval can increase throughput. However, be aware that it can also increase the error rate in some installations due to increased sensitivity to radio-frequency installations.

IGMP Snooping: Select **Enable** or **Disable**. Internet Group Management Protocol allows the AP to recognize IGMP queries and reports sent between routers and an IGMP host (wireless STA). When IGMP snooping is enabled, the AP will forward multicast packets to an IGMP host based on IGMP messages passing through the AP.

Connection Limit: Select **Enable** or **Disable**. This is an option for load balancing. This determines whether to limit the number of users accessing this device. The exact number is entered in the User Limit field below. This feature allows the user to share the wireless network traffic and the client using multiple APs. If this function is enabled and when the number of users exceeds this value, or the network utilization of this AP exceeds the percentage that has been specified, the DAP-2690 will not allow clients to associate with the AP.

User Limit (0 - 64): Set the maximum amount of users that are allowed access (zero to 64 users). To use this feature, the Connection Limit above must be enabled. For most users, a limit of **10** is recommended. The default setting is **20**.

Network Utilization: Set the maximum utilization of this access point for service. The DAP-2690 will not allow any new clients to associate with the AP if the utilization exceeds the value the user specifies. Select a utilization percentage between **100%**, **80%**, **60%**, **40%**, **20%**, or **0%**. When this network utilization threshold is reached, the device will pause one minute to allow network congestion to dissipate.

Multicast Rate: Adjust the multicast packet data rate here. The multicast rate is supported in **AP mode**, (2.4 GHz and 5 GHz) and **WDS with AP mode**, including Multi-SSIDs.

Multi-SSID

The device supports up to eight multiple Service Set Identifiers. You can set the Primary SSID in the **Basic > Wireless** section. The SSID's factory default setting is **dlink**. The SSID can be easily changed to connect to an existing wireless network or to establish a new wireless network. When the information for the new SSID is finished, click the **Add** button. Click the **Save** button to let your changes take effect.

Enable Multi-SSID: Check to enable support for multiple SSIDs.

Enable Priority: Check to enable the priority feature.

Band: This read-only value is the current band setting.

Index: You can select up to seven multi-SSIDs. With the Primary SSID, you have a total of eight multi-SSIDs.

SSID: Service Set Identifier (SSID) is the name designated for a specific wireless local area network (WLAN). The SSID's factory default setting is **dlink**. The SSID can be easily changed to connect to an existing wireless network.

SSID Visibility: **Enable** or **Disable** SSID visibility. Enabling this feature broadcasts the SSID across the network, thus making it visible to all network users.

Security: The Multi-SSID security can be **Open System**, **WPA-Personal**, **WPA-Enterprise**, or **802.1X**. For a detailed description of the Open System parameters please go to page 23. For a detailed description of the WPA-Personal parameters please go to page 24. For a detailed description of the WPA-Enterprise parameters please go to page 25. For a detailed description of the 802.1X parameters please go to page 26.

D-Link DAP-2690

Home Maintenance Configuration System Logout Help

DAP-2690

- Basic Settings
- Advanced Settings
 - Performance
 - Multi-SSID
 - VLAN
 - Intrusion
 - Schedule
 - AP Array
 - Web Redirection
 - Internal RADIUS Server
 - ARP Spoofing Prevention
- DHCP Server
- Filters
- Traffic Control
- Status

Multi-SSID Settings

Enable Multi-SSID Enable Priority

Wireless Settings

Band: 2.4 GHz

Index: Primary SSID

SSID: radius

SSID Visibility: Enable

Security: WPA-Enterprise

Priority: 0

WMM (Wi-Fi Multimedia): Enable

RADIUS Server Settings

WPA Mode: WPA2 Only

Cipher Type: Auto Group Key Update Interval: 1800 Seconds

RADIUS Server Mode

RADIUS Server: External Internal

Primary RADIUS Server Setting

RADIUS Server: RADIUS Port: 1812

RADIUS Secret:

Backup RADIUS Server Setting (Optional)

RADIUS Server: RADIUS Port: 1812

RADIUS Secret:

Primary Accounting Server Setting

Accounting Mode: Disable

Accounting Server: Accounting Port: 1813

Accounting Secret:

Backup Accounting Server Setting (Optional)

Accounting Server: Accounting Port: 1813

Accounting Secret:

Add

Index	SSID	Band	Encryption	Delete
Primary SSID	radius	2.4 GHz	WPA2-Enterprise	

Save

Priority: When the Enable Priority check box is checked at the top of this window, this drop-down menu is used to select a priority between **0** and **7**.

WMM (Wi-Fi Multimedia): Select **Enable** to provide basic Quality of Service features.

VLAN Settings

The DAP-2690 supports VLANs. VLANs can be created with a Name and VID. Mgmt (TCP stack), LAN, Primary/Multiple SSID, and WDS connection can be assigned to VLANs as they are physical ports. Any packet which enters the DAP-2690 without a VLAN tag will have a VLAN tag inserted with a PVID. Once you have made the desired settings, click the **Save** button to let your changes take effect.

The VLAN List tab displays the current VLANs.

VLAN Status: Click the **Enable** button. Next, go to the **Add/Edit** VLAN tab to add or modify an item on the VLAN List tab.

VLAN Mode: The current VLAN mode is displayed.

The screenshot shows the D-Link DAP-2690 web interface. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view of the configuration menu, with 'VLAN' selected under 'Advanced Settings'. The main content area is titled 'VLAN Settings' and contains the following information:

VLAN Status : Disable Enable

VLAN Mode : Static(2.4G), Static(5G)

VLAN List	Port List	Add/Edit VLAN	PVID Setting	
VID	VLAN Name	Untag VLAN Ports	Tag VLAN Ports	Edit Delete
1	default	Mgmt, LAN, Primary (2.4G), S-1(2.4G), S-2 (2.4G), S-3(2.4G), S-4 (2.4G), S-5(2.4G), S-6 (2.4G), S-7(2.4G), W-1 (2.4G), W-2(2.4G), W-3 (2.4G), W-4(2.4G), W-5 (2.4G), W-6(2.4G), W-7 (2.4G), W-8(2.4G), Primary(5G), S-1(5G), S- 2(5G), S-3(5G), S-4(5G), S-5(5G), S-6(5G), S-7 (5G), W-1(5G), W-2 (5G), W-3(5G), W-4 (5G), W-5(5G), W-6 (5G), W-7(5G), W-8(5G)		

VLAN Port List

The Port List tab displays the current ports. If you want to configure the guest and internal networks on a Virtual LAN (VLAN), the switch and DHCP server you are using must also support VLANs. As a prerequisite step, configure a port on the switch for handling VLAN tagged packets as described in the IEEE 802.1Q standard. Once you have made the desired settings, click the **Save** button to let your changes take effect.

VLAN Status: Click the **Enable** radio button. Next, click the **Add/Edit VLAN** tab to add or modify an item on the VLAN List tab.


VLAN Mode: The current VLAN mode is displayed.

Port Name: The name of the port is displayed in this column.

Tag VID: The Tagged VID is displayed in this column.

Untag VID: The Untagged VID is displayed in this column.

PVID: The Port VLAN Identifier is displayed in this column.

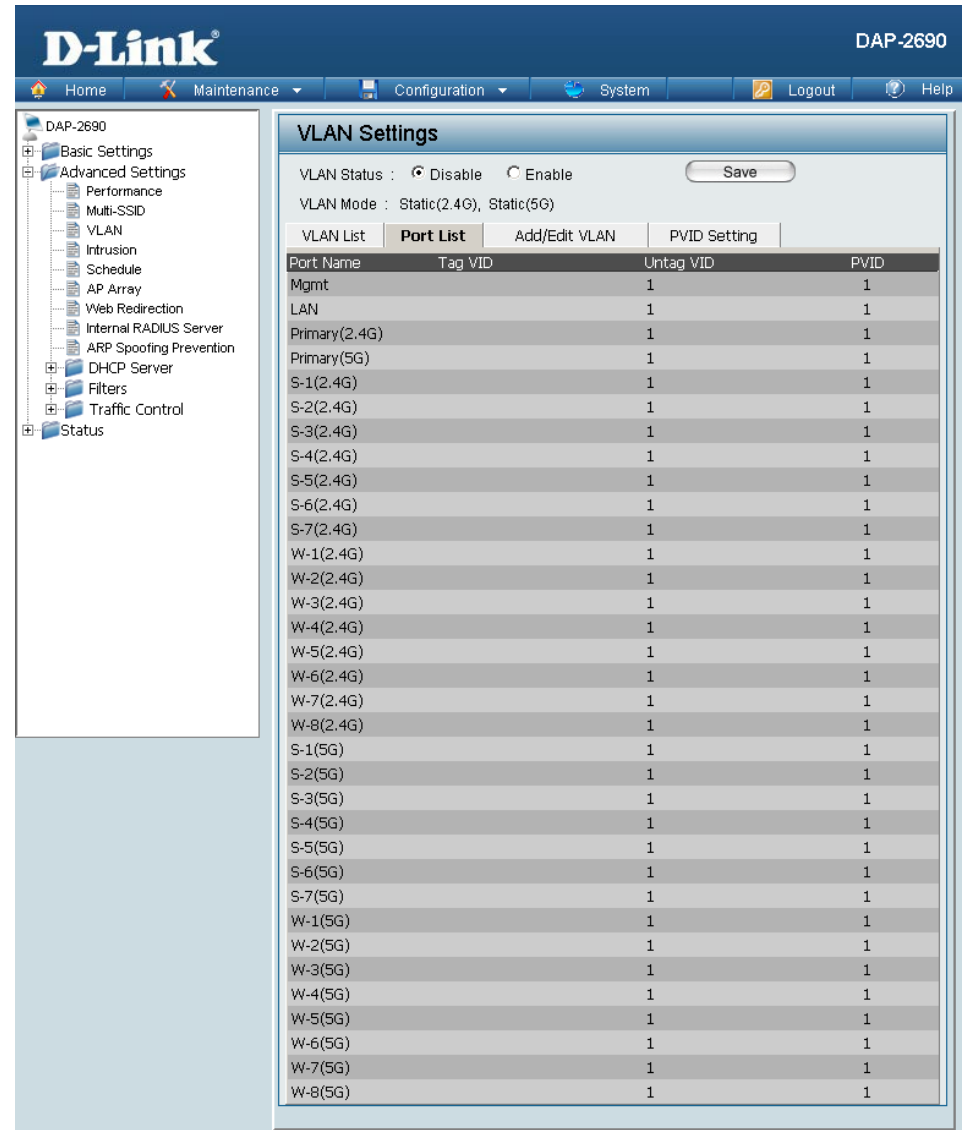

The screenshot shows the D-Link DAP-2690 web interface. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view of settings categories: Basic Settings, Advanced Settings (Performance, Multi-SSID, VLAN, Intrusion, Schedule, AP Array, Web Redirection, Internal RADIUS Server, ARP Spoofing Prevention), DHCP Server, Filters, Traffic Control, and Status.

The main content area is titled "VLAN Settings". It includes the following configuration options:

- VLAN Status: Disable Enable
- VLAN Mode: Static(2.4G), Static(5G)
- Save button

Below these options is a table with four tabs: VLAN List, Port List, Add/Edit VLAN, and PVID Setting. The "Port List" tab is active, displaying a table with the following columns: Port Name, Tag VID, Untag VID, and PVID.

Port Name	Tag VID	Untag VID	PVID
Mgmt		1	1
LAN		1	1
Primary(2.4G)		1	1
Primary(5G)		1	1
S-1(2.4G)		1	1
S-2(2.4G)		1	1
S-3(2.4G)		1	1
S-4(2.4G)		1	1
S-5(2.4G)		1	1
S-6(2.4G)		1	1
S-7(2.4G)		1	1
W-1(2.4G)		1	1
W-2(2.4G)		1	1
W-3(2.4G)		1	1
W-4(2.4G)		1	1
W-5(2.4G)		1	1
W-6(2.4G)		1	1
W-7(2.4G)		1	1
W-8(2.4G)		1	1
S-1(5G)		1	1
S-2(5G)		1	1
S-3(5G)		1	1
S-4(5G)		1	1
S-5(5G)		1	1
S-6(5G)		1	1
S-7(5G)		1	1
W-1(5G)		1	1
W-2(5G)		1	1
W-3(5G)		1	1
W-4(5G)		1	1
W-5(5G)		1	1
W-6(5G)		1	1
W-7(5G)		1	1
W-8(5G)		1	1

VLAN Add/Edit

The Add/Edit VLAN tab is used to configure VLANs. Once you have made the desired settings, click the **Save** button to let your changes take effect.

VLAN Status: Click the **Enable** radio button.

VLAN Mode: The current VLAN mode is displayed.

VLAN ID (VID): Provide a number between **1** and **4094** for the Internal VLAN.

VLAN Name: Enter the VLAN to add or modify.

D-Link DAP-2690

Home Maintenance Configuration System Logout Help

DAP-2690

- Basic Settings
- Advanced Settings
 - Performance
 - Multi-SSID
 - VLAN
 - Intrusion
 - Schedule
 - AP Array
 - Web Redirection
 - Internal RADIUS Server
 - ARP Spoofing Prevention
- DHCP Server
- Filters
- Traffic Control
- Status

VLAN Settings

VLAN Status : Disable Enable

VLAN Mode : Static(2.4G), Static(5G)

VLAN List Port List **Add/Edit VLAN** PVID Setting

VLAN ID (VID) VLAN Name

Port	Select All	Mgmt	LAN
Untag	All	<input type="radio"/>	<input type="radio"/>
Tag	All	<input type="radio"/>	<input type="radio"/>
Not Member	All	<input type="radio"/>	<input type="radio"/>

2.4GHz

MSSID Port	Select All	Primary	S-1	S-2	S-3	S-4	S-5	S-6	S-7
Untag	All	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Tag	All	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Not Member	All	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

WDS Port	Select All	W-1	W-2	W-3	W-4	W-5	W-6	W-7	W-8
Untag	All	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Tag	All	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Not Member	All	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

5GHz

MSSID Port	Select All	Primary	S-1	S-2	S-3	S-4	S-5	S-6	S-7
Untag	All	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Tag	All	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Not Member	All	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

WDS Port	Select All	W-1	W-2	W-3	W-4	W-5	W-6	W-7	W-8
Untag	All	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Tag	All	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Not Member	All	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

PVID Setting

The PVID Setting tab is used to enable/disable the Port VLAN Identifier Auto Assign Status as well as to configure various types of PVID settings. Once you have made the desired settings, click the **Save** button to let your changes take effect.

VLAN Status: Click the **Enable** radio button.

VLAN Mode: The current VLAN mode is displayed.

PVID Auto Assign Status: Use the radio button to toggle PVID auto assign status to Enable.

D-Link DAP-2690

Home Maintenance Configuration System Logout Help

VLAN Settings

VLAN Status : Disable Enable Save

VLAN Mode : Static(2.4G), Static(5G)

VLAN List Port List Add/Edit VLAN **PVID Setting**

PVID Auto Assign Status Disable Enable

Port	Mgmt	LAN
PVID	1	1

2.4GHz

MSSID Port	Primary	S-1	S-2	S-3	S-4	S-5	S-6	S-7
PVID	1	1	1	1	1	1	1	1
WDS Port	W-1	W-2	W-3	W-4	W-5	W-6	W-7	W-8
PVID	1	1	1	1	1	1	1	1

5GHz

MSSID Port	Primary	S-1	S-2	S-3	S-4	S-5	S-6	S-7
PVID	1	1	1	1	1	1	1	1
WDS Port	W-1	W-2	W-3	W-4	W-5	W-6	W-7	W-8
PVID	1	1	1	1	1	1	1	1

Save

Intrusion

The Wireless Intrusion Protection window is used to set APs as All, Valid, Neighborhood, Rogue, and New. Once you have made the desired settings, click the **Save** button to let your changes take effect.

Wireless Band: Select **2.4GHz** or **5GHz**.

Detect: Click this button to initiate a scan of the network.

AP List: The choices include **All**, **Valid**, **Neighbor**, **Rogue**, and **New**.

The screenshot shows the D-Link DAP-2690 configuration interface. The main window is titled "Wireless Intrusion Protection". The "Wireless Band" is set to "2.4GHz". There is a "Detect" button. The "AP List" is set to "All". Below this is a table with the following columns: Type, Band, CH, SSID, BSSID, Last Seen, and Status. The table contains five rows of data, all with a "New" type and "Up" status. Below the table are four buttons: "Set as Valid", "Set as Neighborhood", "Set as Rogue", and "Set as New". There are two radio button options: "Mark All New Access Points as Valid Access Points" (which is selected) and "Mark All New Access Points as Rogue Access Points". A "Save" button is located at the bottom right of the window.

Type	Band	CH	SSID	BSSID	Last Seen	Status
New	G	1	telus045	20:61:12:14:3F:AB	0 Days, 00:12:11	Up
New	G	1		00:24:01:AB:C7:B8	0 Days, 00:12:11	Up
New	G	1	dlink-8ED1	CC:B2:55:D2:8E:D1	0 Days, 00:12:11	Up
New	G	1		5C:D9:98:30:9F:50	0 Days, 00:12:11	Up
New	G	1	controller-lab	FC:75:16:59:C8:73	0 Days, 00:12:11	Up

Schedule

The Wireless Schedule Settings window is used to add and modify scheduling rules on the device. When the information for the new schedule rule is finished, click the **Add** button. To discard the new schedule rule settings, click the **Clear** button. Click the **Save** button to let your changes take effect.

Wireless Schedule: Use the drop-down menu to **Enable** the device's scheduling feature.

Name: Enter a name for the new scheduling rule in the field provided.

Index: Use the drop-down menu to select the desired SSID.

SSID: This read-only field indicates the current SSID in use. To create a new SSID, go to the Wireless Settings window (**Basic Settings > Wireless**).

Day(s): Toggle the radio button between **All Week** and **Select Day(s)**. If the second option is selected, check the specific days you want the rule to be effective on.

All Day(s): Check this box to have settings apply 24 hours a day. If the settings are not to apply 24 hours a day, enter the desired starting and ending times in the next two fields.

Start Time: Enter the beginning hour and minute, using a 24-hour clock.

End Time: Enter the ending hour and minute, using a 24-hour clock.

The screenshot shows the D-Link DAP-2690 configuration interface. The left sidebar contains a tree view with 'Schedule' selected under 'Advanced Settings'. The main content area is titled 'Wireless Schedule Settings'. At the top, there is a 'Wireless Schedule' dropdown menu currently set to 'Disable'. Below this is the 'Add Schedule Rule' section, which includes the following fields and options:

- Name:** A text input field.
- Index:** A dropdown menu showing 'Primary SSID 2.4G'.
- SSID:** A text input field showing 'radius'.
- Day(s):** Radio buttons for 'All Week' (selected) and 'Select Day(s)'. Under 'Select Day(s)', there are checkboxes for Sun, Mon, Tue, Wed, Thu, Fri, and Sat.
- All Day(s):** A checkbox.
- Start Time:** Two input fields for hour and minute, with '(hour:minute, 24 hour time)' as a label.
- End Time:** Two input fields for hour and minute, with '(hour:minute, 24 hour time)' as a label.

Below the 'Add Schedule Rule' section is a 'Schedule Rule List' table with the following columns: Name, SSID Index, SSID, Day(s), Time Frame, Wireless Edit, and DEL. The table is currently empty. At the bottom right of the window, there is a 'Save' button.

AP Array

The AP Array window allows users to create a set of devices on a network that are organized into a single group in order to increase ease of management. Once a user has made the desired settings, click the **Save** button to let the changes take effect.

Enable AP Array: Check this box to enable the AP array function. The three modes that are available are Master, Backup Master, and Slave. APs in the same array will use the same configuration. The configuration will sync the Master AP to the Slave AP and the Backup Master AP when a Slave AP and a Backup Master AP join the AP array.

AP Array Name: Enter a name for the AP array you have created.

AP Array Password: Enter a password that will be used to access the AP array you have created.

Scan AP Array List: Click the button to initiate a scan of all the available APs on the network.

Connection

Status: This displays the status of the current AP array.

The screenshot shows the D-Link DAP-2690 web interface. The main content area is titled "AP Array" and contains the following elements:

- Enable AP Array
- Radio buttons for **Master**, **Backup Master**, and **Slave**.
- AP Array Name:
- AP Array Password:
- Scan AP Array List:
- Connection Status: Disconnect
- AP Array List: A table with columns: Array Name, Master IP, MAC, Master, Backup Master, Slave, Total.
- Current Members: A table with columns: Index, Role, IP Address, MAC Address, Location.
- Synchronized Parameters:
- Wireless Basic Settings
- Wireless Advanced Setting
- Multiple SSID & VLAN
- Advanced Functions
- Administration Settings
-

Web Redirection

Enable Web Redirection: Check this box to enable web redirection.

Web Site: Enter the URL or IP address of the website you want to direct users to.

Enable Web Authentication: Check this box if you want users to enter a user name and password to access the directed web site.

User Name: Create a user name to authenticate user access to the Web Redirection.

Password: Create a password to authenticate user access to the Web Redirection.

Status: Select to enable or disable the account upon creation.

Account List: The newly-created Web Redirection accounts will appear in this list. Click on the user name to edit the account, and use the radio buttons to enable or disable the Web Redirection account, or click the trash can icon in the delete column to remove the account.

The screenshot displays the D-Link DAP-2690 configuration interface. The left sidebar shows a tree view with 'Web Redirection' selected under 'Advanced Settings'. The main panel is titled 'Web Redirection' and contains the following elements:

- Checkboxes for 'Enable Web Redirection' and 'Enable Web Authentication'.
- A 'Web Site' text input field.
- An 'Add Web Redirection Account' section with:
 - 'User Name' text input field.
 - 'Password' text input field.
 - 'Status' dropdown menu with 'Enable' selected.
- A 'Web Redirection Account List' table with the following structure:

User Name	Enable	Disable	Delete
- A 'Save' button at the bottom right.

Internal RADIUS Server

The DAP-2690 features a built-in RADIUS server. Once you have finished adding a RADIUS account, click the **Save** button to let your changes take effect. The newly-created account will appear in this RADIUS Account List. The radio buttons allow the user to enable or disable the RADIUS account. Click the icon in the delete column to remove the RADIUS account. We suggest you limit the number of accounts below 30.

User Name: Enter a name to authenticate user access to the internal RADIUS server.

Password: Enter a password to authenticate user access to the internal RADIUS server. The length of your password should be 8~64.

Status: Select **Enable** or **Disable** from the drop-down menu.

The screenshot displays the D-Link DAP-2690 web interface. The top navigation bar includes 'Home', 'Maintenance', 'Configuration', 'System', 'Logout', and 'Help'. The left sidebar shows a tree view of configuration options, with 'Internal RADIUS Server' selected. The main content area is titled 'Internal RADIUS Server' and contains two sections: 'Add RADIUS Account' and 'RADIUS Account list'. The 'Add RADIUS Account' section has input fields for 'User Name', 'Password', and a 'Status' dropdown menu set to 'Enable'. The 'RADIUS Account list' section shows a table with one entry: 'test(Edit)'. The table has columns for 'User Name', 'Enable', 'Disable', and 'Delete'. The 'Enable' column contains a radio button, and the 'Delete' column contains a trash icon. A 'Save' button is located at the bottom right of the page.

User Name	Enable	Disable	Delete
test(Edit)	<input checked="" type="radio"/>	<input type="radio"/>	

DHCP Server

Dynamic Pool Settings

The DHCP address pool defines the range of the IP address that can be assigned to stations in the network. A Dynamic Pool allows wireless stations to receive an available IP with lease time control. Once a user is finished, click the **Save** button to let the changes take effect.

Function Enable/Disable: Dynamic Host Configuration Protocol (DHCP) assigns dynamic IP addresses to devices on the network. This protocol simplifies network management and allows new wireless devices to receive IP addresses automatically without the need to manually assign new IP addresses. Select **Enable** to allow the DAP-2690 to function as a DHCP server.

IP Assigned From: Input the first IP address available for assignment on your network.

The Range of Pool (1-254): Enter the number of IP addresses available for assignment. IP addresses are increments of the IP address specified in the "IP Assigned From" field.

Subnet Mask: All devices in the network must have the same subnet mask to communicate. Enter the submask for the network here.

Gateway: Enter the IP address of the gateway on the network.

WINS: Specify the Windows Internet Naming Service (WINS) server address for the wireless network. WINS is a system that determines the IP address of a network computer that has a dynamically assigned IP address.

DNS: Enter the IP address of the Domain Name System (DNS) server. The DNS server translates domain names such as www.dlink.com into IP addresses.

D-Link DAP-2690

Home Maintenance Configuration System Logout Help

DAP-2690

- Basic Settings
- Advanced Settings
 - Performance
 - Multi-SSID
 - VLAN
 - Intrusion
 - Schedule
 - AP Array
 - Web Redirection
 - Internal RADIUS Server
 - ARP Spoofing Prevention
 - DHCP Server
 - Dynamic Pool Settings
 - Static Pool Settings
 - Current IP Mapping List
 - Filters
 - Traffic Control
- Status

Dynamic Pool Settings

DHCP Server Control

Function Enable/Disable:

Dynamic Pool Settings

IP Assigned From:

The Range of Pool (1-254):

Subnet Mask:

Gateway:

WINS:

DNS:

Domain Name:

Lease Time (60 - 31536000 sec):

Domain Name: Enter the domain name of the network, if applicable. (An example of a domain name is **www.dlink.com**.)

Lease Time: The lease time is the period of time before the DHCP server will assign new IP addresses.

Static Pool Setting

The DHCP address pool defines the range of IP addresses that can be assigned to stations on the network. A static pool allows specific wireless stations to receive a fixed IP without time control. Once a user is finished, click the **Save** button to let the changes take effect.

Function Enable/Disable: Dynamic Host Configuration Protocol (DHCP) assigns IP addresses to wireless devices on the network. This protocol simplifies network management and allows new wireless devices to receive IP addresses automatically without the need to manually assign IP addresses. Select **Enable** to allow the DAP-2690 to function as a DHCP server.

Host Name: Enter the name of the host computer in this text box.

Assigned IP: Use the Static Pool Settings to assign the same IP address to a device every time you start up. The IP addresses assigned in the Static Pool list must NOT be in the same IP range as the Dynamic Pool. After you have assigned a static IP address to a device via its MAC address, click **Save**; the device will appear in the Assigned Static Pool at the bottom of the window. You can edit or delete the device in this list.

Assigned MAC Address: Enter the MAC address of the device requesting association here.

Subnet Mask: Define the subnet mask of the IP address specified in the "IP Assigned From" field.

Gateway: Specify the Gateway address for the wireless network.

WINS: Specify the Windows Internet Naming Service (WINS) server address for the wireless network. WINS is a system that determines the IP address of a network computer with a dynamically assigned IP address, if applicable.

DNS: Enter the Domain Name System (DNS) server address for the wireless network. The DNS server translates domain names such as www.dlink.com into IP addresses.

Domain Name: Specify the domain name for the network.

The screenshot shows the D-Link DAP-2690 web interface. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view of settings, with DHCP Server > Static Pool Settings selected. The main content area is titled "Static Pool Settings" and contains the following fields:

- DHCP Server Control:** Function Enable/Disable (set to Disable)
- Static Pool Setting:**
 - Host Name: [Text Box]
 - Assigned IP: [Text Box]
 - Assigned MAC Address: [Text Box] : [Text Box] : [Text Box] : [Text Box] : [Text Box] : [Text Box]
 - Subnet Mask: 255.255.255.0
 - Gateway: [Text Box]
 - WINS: [Text Box]
 - DNS: [Text Box]
 - Domain Name: dlink-ap

A "Save" button is located at the bottom right of the settings area. Below the settings is a table with the following columns: Host Name, MAC Address, IP Address, Edit, and Delete. The table is currently empty.

Current IP Mapping List

This window displays information about the current assigned DHCP dynamic and static IP address pools. This information is available when you enable DHCP server on the AP and assign dynamic and static IP address pools.

Current DHCP Dynamic Pools: These are IP address pools the DHCP server has assigned using the dynamic pool setting.

Binding MAC Address: The MAC address of a device on the network that is assigned an IP address from the DHCP dynamic pool.

Assigned IP Address: The current corresponding DHCP-assigned IP address of the device.

Lease Time: The length of time that the dynamic IP address will be valid.

Current DHCP Static Pools: These are the IP address pools of the DHCP server assigned through the static pool settings.

Binding MAC Address: The MAC address of a device on the network that is within the DHCP static IP address pool.

Assigned IP Address: The current corresponding DHCP-assigned static IP address of the device.

The screenshot shows the D-Link DAP-2690 web interface. The top navigation bar includes 'Home', 'Maintenance', 'Configuration', 'System', 'Logout', and 'Help'. The left sidebar shows a tree view of configuration options, with 'Current IP Mapping List' selected under the 'DHCP Server' section. The main content area is titled 'Current IP List' and contains two sections:

- Current DHCP Dynamic Pools:** A table with columns: Host Name, Binding MAC Address, Assigned IP Address, Lease Time. The table is currently empty.
- Current DHCP Static Pools:** A table with columns: Host Name, Binding MAC Address, Assigned IP Address. The table is currently empty.

Filters

Wireless MAC ACL

The DAP-2690 features a wireless MAC Access Control List filter. Once a user is finished with these settings, click the **Save** button to let the changes take effect.

Wireless Band: Displays the current wireless band rate.

Access Control List: Select **Disable** to disable the filters function. Select **Accept** to accept only those devices with MAC addresses in the *Access Control List*. All other devices not on the list will be rejected. Select **Reject** to reject the devices with MAC addresses on the *Access Control List*. All other devices not on the list will be accepted.

MAC Address: Enter each MAC address that you wish to include in your filter list, and click **Add**.

MAC Address List: When a MAC address is entered, it appears in this list. Highlight a MAC address and click the **Delete** icon to remove it from this list.

Current Client Information: This table displays information about all the current connected stations.

The screenshot shows the D-Link configuration web interface for a DAP-2690 device. The main content area is titled "Wireless MAC ACL Settings".

At the top, there is a navigation bar with "Home", "Maintenance", "Configuration", "System", "Logout", and "Help" buttons. The device name "DAP-2690" is displayed in the top right corner.

The left sidebar shows a tree view of configuration options, with "Wireless MAC ACL" selected under the "Filters" category.

The main settings area includes:

- Wireless Band:** A dropdown menu set to "2.4GHz".
- Access Control List:** A dropdown menu set to "Disable".
- MAC Address:** A text input field with a colon separator and an "Add" button.
- MAC Address List:** A table with columns for "ID", "MAC Address", and "Delete". The table is currently empty.
- Current Client Information:** A table with columns for "MAC Address", "SSID", "Band", "Authentication", "Signal", and "Add". The table is currently empty.
- Upload ACL File:** A section with an "Upload File" input field, a "Browse..." button, and an "Upload" button.
- Download ACL File:** A section with a "Load ACL File to Local Hard Driver" input field and a "Download" button.
- Save:** A large "Save" button at the bottom right of the settings area.

WLAN Partition

The DAP-2690 features a wireless partition. Once a user is finished with these settings, click the **Save** button to let the changes take effect.

Wireless Band: Displays the current wireless band.

Link Integrity: Select **Enable** or **Disable**. If the Ethernet connection between the LAN and the AP is disconnected, enabling this feature will cause the wireless segment associated with the AP to be disassociated from the AP.

Ethernet to WLAN Access: The default is **Enable**. When disabled, all data from the Ethernet to associated wireless devices will be blocked. Wireless devices can still send data to the Ethernet.

Internal Station Connection: The default value is **Enable**, which allows stations to intercommunicate by connecting to a target AP. When disabled, wireless stations cannot exchange data on the same Multi-SSID. In Guest mode, wireless stations cannot exchange data with any station on your network.

The screenshot shows the D-Link configuration web interface for a DAP-2690 device. The main navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view of configuration categories: Basic Settings, Advanced Settings (with sub-items: Performance, Multi-SSID, WLAN, Intrusion, Schedule, AP Array, Web Redirection, Internal RADIUS Server, ARP Spoofing Prevention), DHCP Server, Filters (with sub-items: Wireless MAC ACL, WLAN Partition), and Traffic Control. The main content area is titled 'WLAN Partition' and contains the following settings:

- Wireless Band: 2.4GHz
- Link Integrity: Disable
- Ethernet to WLAN Access: Enable
- Internal Station Connection:

SSID	Enable	Disable	Guest mode
Primary SSID	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
Multi-SSID 1	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
Multi-SSID 2	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
Multi-SSID 3	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
Multi-SSID 4	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
Multi-SSID 5	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
Multi-SSID 6	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
Multi-SSID 7	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>

A 'Save' button is located at the bottom right of the configuration area.

Traffic Control

Uplink/Downlink Setting

The uplink/downlink setting allows users to customize the downlink and uplink interfaces including specifying downlink/uplink bandwidth rates in Mbits per second. These values are also used in the QoS and Traffic Manager windows. Once the desired uplink and downlink settings are finished, click the **Save** button to let your changes take effect.

Downlink Bandwidth: The downlink bandwidth in Mbits per second.

Uplink Bandwidth: The uplink bandwidth in Mbits per second.

The screenshot displays the D-Link DAP-2690 web interface. The top navigation bar includes 'Home', 'Maintenance', 'Configuration', 'System', 'Logout', and 'Help'. The left sidebar shows a tree view with 'Traffic Control' expanded to 'Uplink/Downlink Settings'. The main content area is titled 'Uplink and Downlink Setting' and features the following elements:

- Ethernet** section with checkboxes for 'Downlink' and 'Uplink'.
- Frequency tabs for **2.4GHz** and **5GHz**.
- Downlink Interface** section with a grid of checkboxes for Primary-ssid, Multi-ssid1-7, and WDS1-8.
- Uplink Interface** section with an identical grid of checkboxes.
- Input fields for **Downlink Bandwidth(1~150)** and **Uplink Bandwidth(1~150)** in Mb/Sec.
- A **Save** button at the bottom right.

QoS

Quality of Service (QoS) enhances the experience of using a network by prioritizing the traffic of different applications. The DAP-2690 supports four priority levels. Once the desired QoS settings are finished, click the **Save** button to let your changes take effect.

Enable QoS: Check this box to allow QoS to prioritize traffic. Use the drop-down menus to select the four levels of priority. Click the **Save** button when you are finished.

Downlink Bandwidth: The downlink bandwidth in Mbits per second. This value is entered in the Uplink/Downlink Setting window.

Uplink Bandwidth: The uplink bandwidth in Mbits per second. This value is entered in the Uplink/Downlink Setting window.

D-Link DAP-2690

Home Maintenance Configuration System Logout Help

DAP-2690

- Basic Settings
- Advanced Settings
 - Performance
 - Multi-SSID
 - VLAN
 - Intrusion
 - Schedule
 - AP Array
 - Web Redirection
 - Internal RADIUS Server
 - ARP Spoofing Prevention
 - DHCP Server
- Filters
- Traffic Control
 - Uplink/Downlink Settings
 - QoS
 - Traffic Manager
- Status

QoS

Enable QoS

Advanced QoS

Downlink Bandwidth Mbits/sec

Uplink Bandwidth Mbits/sec

ACK/DHCP/ICMP/DNS Priority: Highest Priority Limit 100 % Port 53,67,68,546,547

Web Traffic Priority: Third Priority Limit 100 % Port 80,443,3128,8080

Mail Traffic Priority: Second Priority Limit 100 % Port 25,110,465,995

Ftp Traffic Priority: Low Priority Limit 100 % Port 20,21

User Defined-1 Priority: Highest Priority Limit 100 % Port 0 - 0

User Defined-2 Priority: Second Priority Limit 100 % Port 0 - 0

User Defined-3 Priority: Third Priority Limit 100 % Port 0 - 0

User Defined-4 Priority: Low Priority Limit 100 % Port 0 - 0

Other Traffic Priority: Low Priority Limit 100 %

Save

Traffic Manager


The traffic manager feature allows users to create traffic management rules that specify how to deal with listed client traffic and specify downlink/uplink speed for new traffic manager rules. Click the **Save** button to let your changes take effect.

Traffic Manager: Use the drop-down menu to **Enable** the traffic manager feature.

Unlisted Client Traffic: Select **Deny** or **Forward** to determine how to deal with unlisted client traffic.

Downlink Bandwidth: The downlink bandwidth in Mbits per second. This value is entered in the Uplink/Downlink Setting window.

Uplink Bandwidth: The uplink bandwidth in Mbits per second. This value is entered in the Uplink/Downlink Setting window.

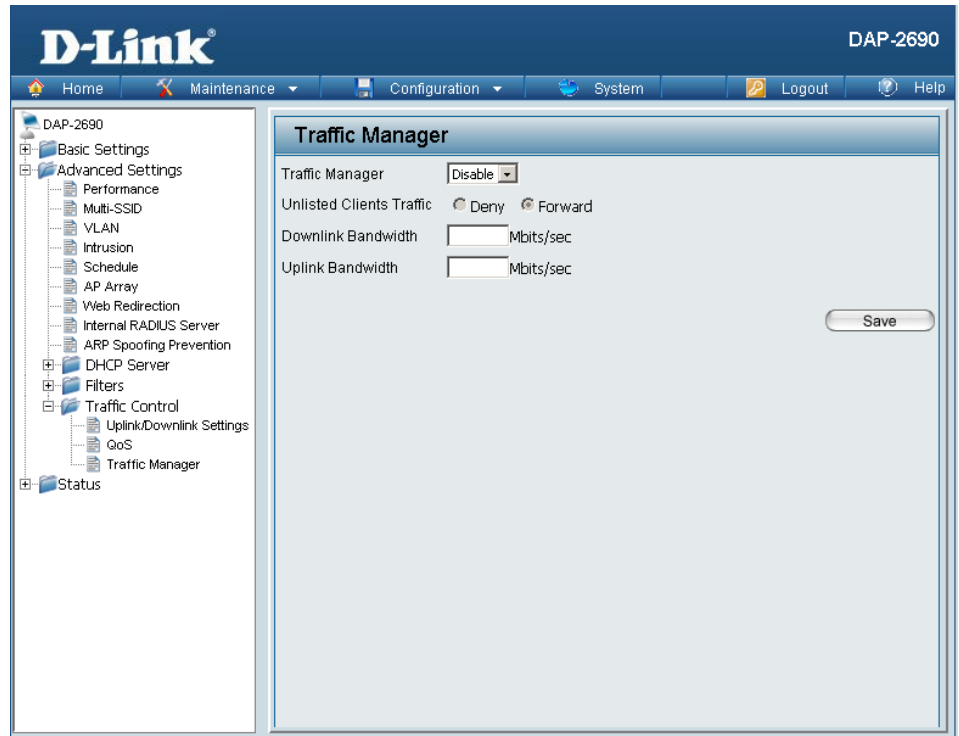

Status

Device Information

Device Information: This read-only window displays the configuration settings of the DAP-2690, including the firmware version and the device's MAC address.



The screenshot shows the D-Link DAP-2690 web interface. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view of configuration options, with 'Status' expanded to show 'Device Information'. The main content area displays the following information:

Device Information	
Firmware Version:2.00	
Ethernet MAC Address:	00:24:01:ab:bf:00
Wireless MAC Address(2.4GHz):	Primary: 00:24:01:ab:bf:00 SSID 1~7: 00:24:01:ab:bf:01 ~ 00:24:01:ab:bf:07
Wireless MAC Address(5GHz):	Primary: 00:24:01:ab:bf:08 SSID 1~7: 00:24:01:ab:bf:09 ~ 00:24:01:ab:bf:0f
Ethernet	
IP Address	192.168.0.50
Subnet Mask	255.255.255.0
Gateway	N/A
Wireless (2.4GHz)	
Network Name (SSID)	radius
Channel	6
Data Rate	Auto
Security	WPA2-Enterprise/ Auto
Wireless (5GHz)	
Network Name (SSID)	dlink
Channel	36
Data Rate	Auto
Security	None
AP Array	
AP Array	d-link
Role	Slave
Location	
Device Status	
CPU Utilization	0%
Memory Utilization	20%

Client Information

Client Information: This window displays the wireless client information for clients currently connected to the DAP-2690.

The following information is available for each client communicating with the DAP-2690.

SSID: Displays the SSID of the client.

MAC: Displays the MAC address of the client.

Band: Displays the wireless band that the client is connected to.

Authentication: Displays the type of authentication being used.

RSSI: Displays the client's signal strength (received signal strength indicator).

Power Saving

Mode: Displays the status of the power saving feature.

The screenshot shows the D-Link DAP-2690 web interface. The left sidebar contains a navigation tree with categories like Basic Settings, Advanced Settings, and Status. The main content area is titled 'Client Information' and shows two tables for station associations. The first table is for 'Station association (2.4GHz) : 0' and the second is for 'Station association(5GHz) : 0'. Both tables have columns for SSID, MAC, Band, Authentication, RSSI, and Power Saving Mode, but they are currently empty.

WDS Information

WDS Information: This window displays the Wireless Distribution System information for clients currently connected to the DAP-2690.

The following information is available for each client communicating with the DAP-2690.

Name: Displays the name of the client.

MAC: Displays the MAC address of the client.

Authentication: Displays the type of authentication being used.

Signal: Displays the WDS link signal strength.

Status: Displays the status of the power saving feature.

The screenshot shows the D-Link DAP-2690 web interface. The left sidebar contains a navigation tree with categories like Basic Settings, Advanced Settings, and Status. The main content area is titled 'WDS Information' and displays two tables of client information.


WDS Information		Channel : 6 (2.437 GHz)		
Name	MAC	Authentication	Signal	Status
WDS Information		Channel : 36 (5.18 GHz)		
Name	MAC	Authentication	Signal	Status

Channel Analyze

Wireless Band: Select either **2.4GHz** or **5GHz**.

Detect: Click the **Detect** button to scan.

AP List: This will list the transmitting channels and quality.

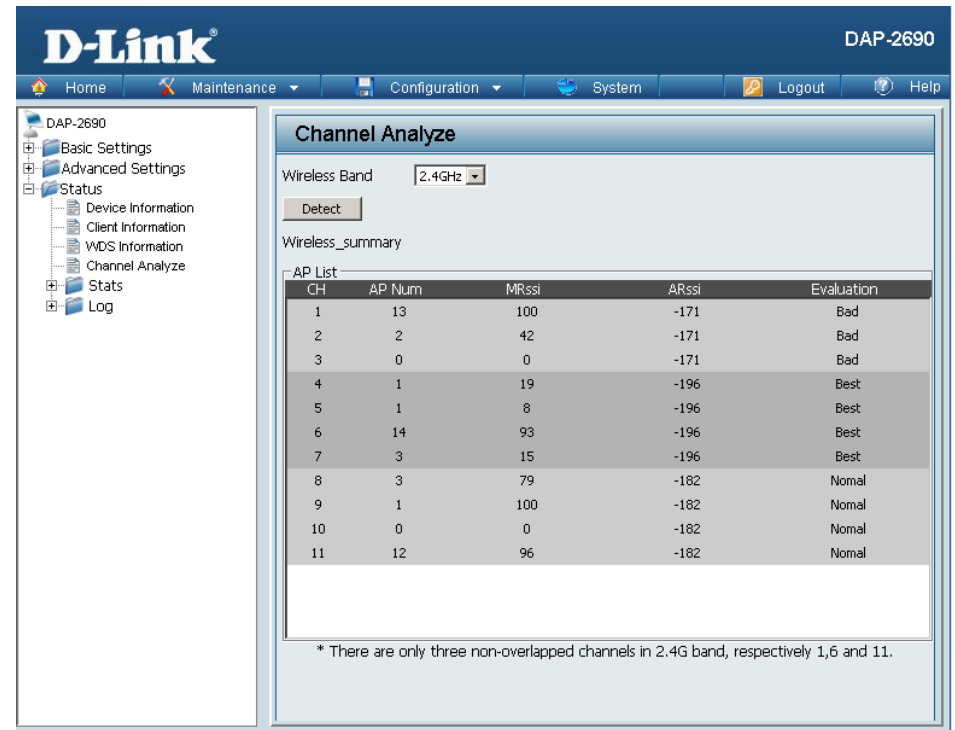

The screenshot shows the D-Link web interface for the DAP-2690 device. The main content area is titled "Channel Analyze". It features a "Wireless Band" dropdown menu set to "2.4GHz" and a "Detect" button. Below this is a "Wireless_summary" section and an "AP List" table. The table has the following data:


CH	AP Num	MRssi	ARssi	Evaluation
1	13	100	-171	Bad
2	2	42	-171	Bad
3	0	0	-171	Bad
4	1	19	-196	Best
5	1	8	-196	Best
6	14	93	-196	Best
7	3	15	-196	Best
8	3	79	-182	Nomal
9	1	100	-182	Nomal
10	0	0	-182	Nomal
11	12	96	-182	Nomal

* There are only three non-overlapped channels in 2.4G band, respectively 1,6 and 11.

Stats

Ethernet

Ethernet Traffic This window displays transmitted and received **Statistics:** count statistics for packets and bytes.

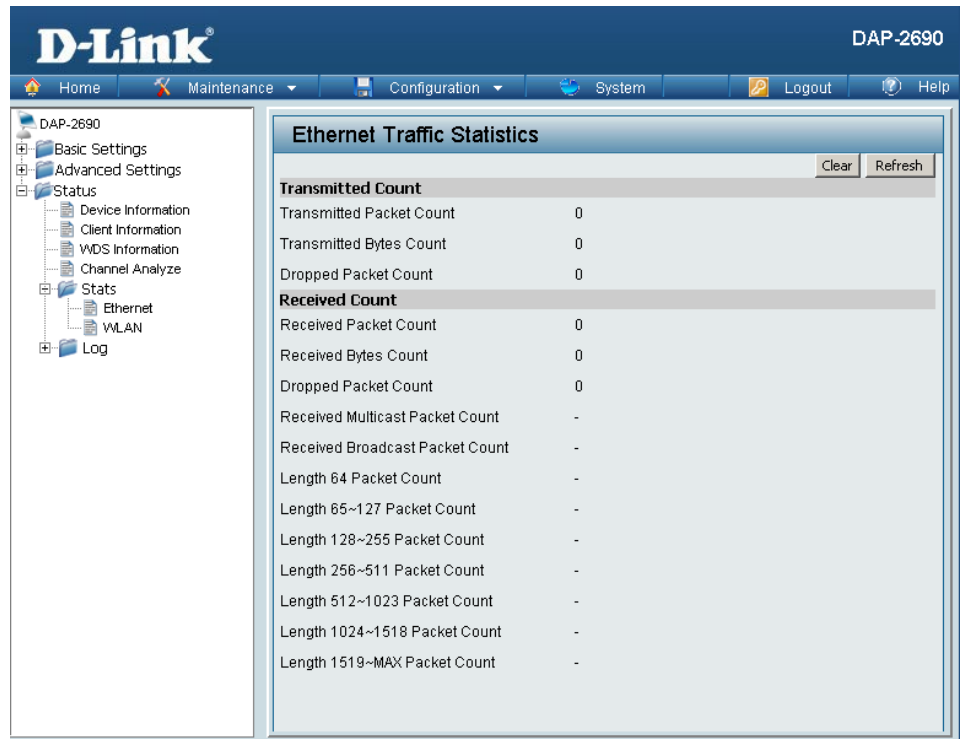


The screenshot shows the D-Link DAP-2690 web interface. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view with categories like Basic Settings, Advanced Settings, Status, Device Information, Client Information, WDS Information, Channel Analyze, Stats, Ethernet, WLAN, and Log. The main content area is titled "Ethernet Traffic Statistics" and contains a table with "Transmitted Count" and "Received Count" sections. The table lists various statistics such as Transmitted Packet Count, Transmitted Bytes Count, Dropped Packet Count, Received Packet Count, Received Bytes Count, Dropped Packet Count, Received Multicast Packet Count, Received Broadcast Packet Count, and Length-based Packet Counts. All values are currently 0 or -.

Transmitted Count	
Transmitted Packet Count	0
Transmitted Bytes Count	0
Dropped Packet Count	0

Received Count	
Received Packet Count	0
Received Bytes Count	0
Dropped Packet Count	0
Received Multicast Packet Count	-
Received Broadcast Packet Count	-
Length 64 Packet Count	-
Length 65~127 Packet Count	-
Length 128~255 Packet Count	-
Length 256~511 Packet Count	-
Length 512~1023 Packet Count	-
Length 1024~1518 Packet Count	-
Length 1519~MAX Packet Count	-

Wireless Traffic Stats

WLAN Traffic This window displays wireless network statistics for data
Statistics: throughput, transmitted and received frames, and frame errors.

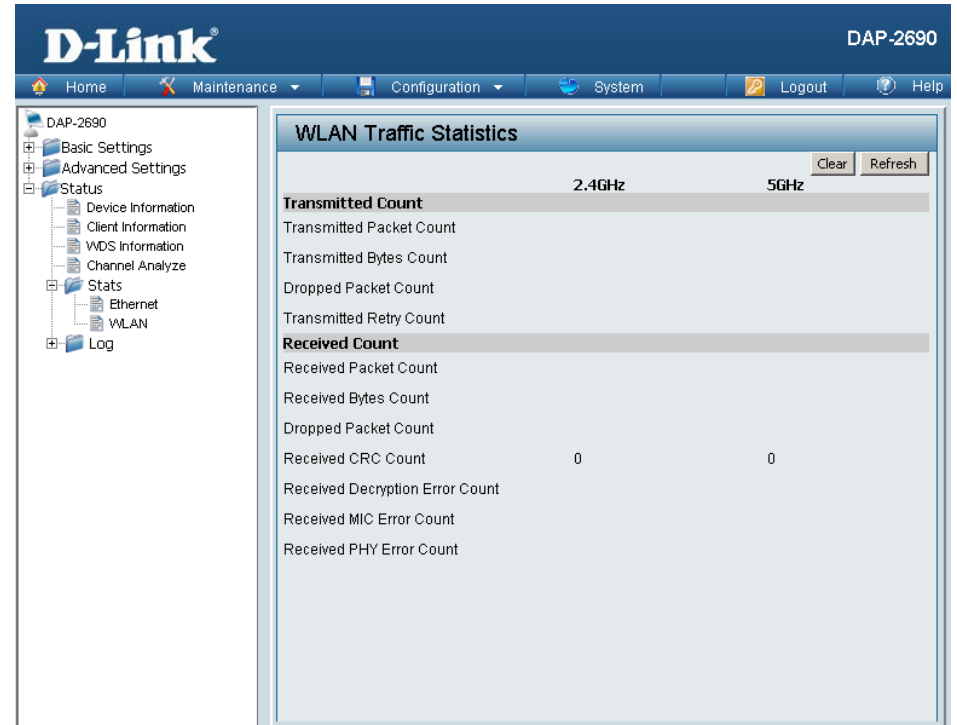


The screenshot shows the D-Link DAP-2690 web interface. The main content area is titled "WLAN Traffic Statistics" and features a table with two columns: "2.4GHz" and "5GHz". The table is divided into two sections: "Transmitted Count" and "Received Count". The "Transmitted Count" section includes rows for Transmitted Packet Count, Transmitted Bytes Count, and Dropped Packet Count. The "Received Count" section includes rows for Received Packet Count, Received Bytes Count, Dropped Packet Count, Received CRC Count (with values 0 for both frequencies), Received Decryption Error Count, Received MIC Error Count, and Received PHY Error Count. The interface also includes a navigation menu on the left and a top navigation bar with options like Home, Maintenance, Configuration, System, Logout, and Help.

	2.4GHz	5GHz
Transmitted Count		
Transmitted Packet Count		
Transmitted Bytes Count		
Dropped Packet Count		
Transmitted Retry Count		
Received Count		
Received Packet Count		
Received Bytes Count		
Dropped Packet Count		
Received CRC Count	0	0
Received Decryption Error Count		
Received MIC Error Count		
Received PHY Error Count		

Log

View Log

View Log: The AP's embedded memory displays system and network messages including a time stamp and message type. The log information includes but is not limited to the following items: cold start AP, upgrading firmware, client associate and disassociate with AP, and web login. The web page holds up to 500 logs.

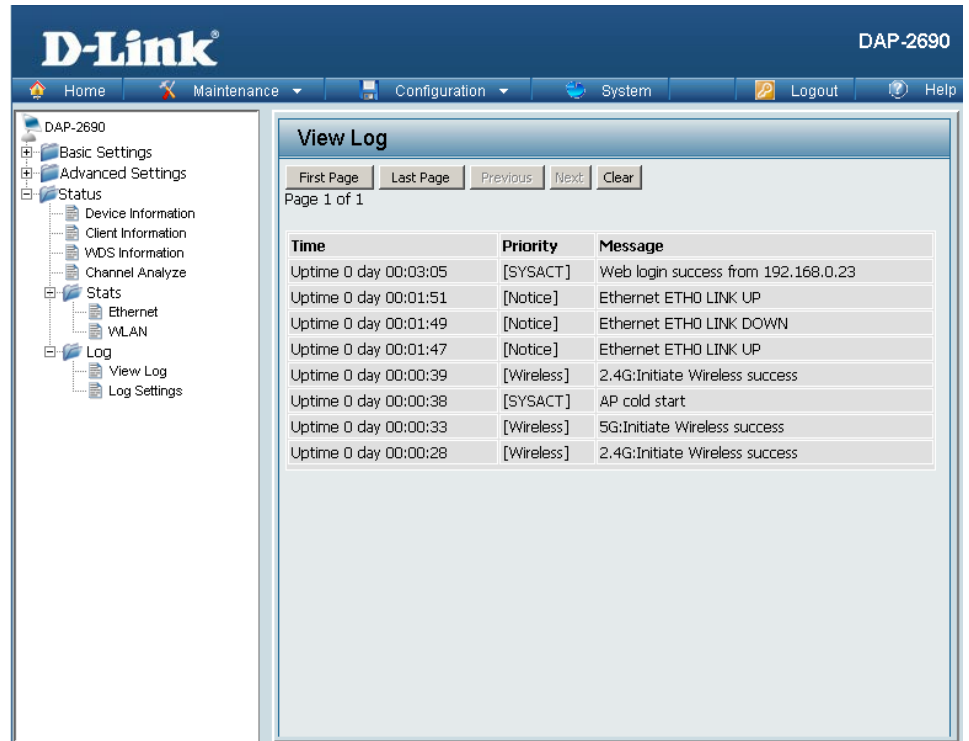

The screenshot shows the D-Link DAP-2690 web interface. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar menu shows the following structure:

- DAP-2690
 - Basic Settings
 - Advanced Settings
 - Status
 - Device Information
 - Client Information
 - WDS Information
 - Channel Analyze
 - Stats
 - Ethernet
 - VLAN
 - Log
 - View Log
 - Log Settings

The main content area is titled "View Log" and displays a table of log entries. The table has three columns: Time, Priority, and Message. The log entries are as follows:

Time	Priority	Message
Uptime 0 day 00:03:05	[SYSACT]	Web login success from 192.168.0.23
Uptime 0 day 00:01:51	[Notice]	Ethernet ETH0 LINK UP
Uptime 0 day 00:01:49	[Notice]	Ethernet ETH0 LINK DOWN
Uptime 0 day 00:01:47	[Notice]	Ethernet ETH0 LINK UP
Uptime 0 day 00:00:39	[Wireless]	2.4G:Initiate Wireless success
Uptime 0 day 00:00:38	[SYSACT]	AP cold start
Uptime 0 day 00:00:33	[Wireless]	5G:Initiate Wireless success
Uptime 0 day 00:00:28	[Wireless]	2.4G:Initiate Wireless success

Log Settings

Log Server/IP Address: Enter the IP address of the server you would like to send the DAP-2690 log to.

Log Type: Check the box for the type of activity you want to log. There are three types: System Activity, Wireless Activity, and Notice.

Email Notification: Check the box to enable Simple Mail Transfer Protocol.

From Email Address: Enter the e-mail address of the e-mail/SMTP sender.

To Email Address: Enter the e-mail address of the e-mail/SMTP recipient.

Email Server Address: Enter the IP address of the e-mail/SMTP server.

SMTP Port: Enter the desired SMTP port number. The default value is 25.

User Name: Enter a user name for the SMTP server.

Password: Enter a password for the SMTP server.

Confirm Password: Confirm the password for the SMTP server by retyping it.

Schedule: Use the drop-down menu to set the e-mail log schedule.

The screenshot shows the D-Link DAP-2690 web interface. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view with categories like Basic Settings, Advanced Settings, Status, Device Information, Client Information, WDS Information, Channel Analyze, Stats, Ethernet, WLAN, Log, View Log, and Log Settings. The main content area is titled 'Log Settings' and contains the following configuration options:

- Log Settings:**
 - Log Server / IP Address: [Text Input]
 - Log Type:
 - System Activity
 - Wireless Activity
 - Notice
- Email Notification:**
 - Email Notification: Enable
 - Outgoing mail server (SMTP): [Internal] (Dropdown)
 - Authentication: Enable
 - SSL/TLS: Enable
 - From Email Address: [Text Input]
 - To Email Address: [Text Input]
 - Email Server Address: [Text Input]
 - SMTP Port: [Text Input]
 - User Name: [Text Input]
 - Password: [Text Input]
 - Confirm Password: [Text Input]
- Email Log Schedule:**
 - Schedule: [0] (Dropdown) hours or when Log is full

A 'Save' button is located at the bottom right of the configuration area.

Maintenance

Administrator Settings

Check one or more of the six main categories to display the various hidden administrator parameters and settings displayed on the next six windows.

Limit Administrator

Limit Administrator Check the box and then enter the specific VLAN ID that the **VLAN ID:** administrator will be allowed to log in from.

Limit Administrator IP: Check to enable the Limit Administrator IP address.

IP Range: Enter the IP address range that the administrator will be allowed to log in from and then click the **Add** button.

System Name Settings

System Name: The name of the device. The default name is **D-Link DAP-2690**.

Location: The physical location of the device, e.g. "office".

The screenshot shows the D-Link DAP-2690 web interface. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view with DAP-2690, Basic Settings, Advanced Settings, and Status. The main content area is titled "Administration Settings" and contains the following sections:

- Limit Administrator** (checked):
 - Limit Administrator VLAN ID: Enable
 - Limit Administrator IP: Enable
 - IP Range: From: To:
 - Table with columns: Item, From, To, Delete
- System Name Settings** (checked):
 - System Name:
 - Location:
- Login Settings** (checked):
 - Login Name:
 - Old Password:
 - New Password:
 - Confirm Password:
- Console Settings** (checked):
 - Status: Enable
 - Console Protocol: Telnet SSH
 - Timeout:
- SNMP Settings** (checked):
 - Status: Enable
 - Public Community String:
 - Private Community String:
 - Trap Status: Enable
 - Trap Server IP:
- Ping Control Setting** (checked):
 - Status: Enable

A "Save" button is located at the bottom right of the page.

Login Settings

User Name: Enter a user name. The default is **admin**.

Old Password: When changing your password, enter the old password here.

New Password: When changing your password, enter the new password here. The password is case-sensitive. "A" is a different character than "a." The length should be between 0 and 12 characters.

Confirm Password: Enter the new password a second time for confirmation purposes.

The screenshot displays two configuration sections. The first section, 'Login Settings', has a blue header and contains four input fields: 'Login Name' with the value 'admin', 'Old Password', 'New Password', and 'Confirm Password'. The second section, 'Console Settings', also has a blue header and contains three settings: 'Status' with a checked 'Enable' checkbox, 'Console Protocol' with radio buttons for 'Telnet' (selected) and 'SSH', and 'Timeout' with a dropdown menu set to '3 Mins'.

Console Settings

Status: Status is enabled by default. Uncheck the box to disable the console port.

Console Protocol: Select the type of protocol you would like to use: **Telnet** or **SSH**.

Timeout: Set to **1 Min**, **3 Mins**, **5 Mins**, **10 Mins**, **15 Mins** or **Never**.

SNMP Settings

Status: Check the box to enable the SNMP functions. This is enabled by default.

Public Community

String: Enter the public SNMP community string.

Private Community

String: Enter the private SNMP community string.

Trap Status: Check the box to enable the trap status.

Trap Server IP: Enter the trap server IP address. This is the IP address of the SNMP manager to receive traps sent from the wireless access point.

The screenshot shows a configuration interface with two sections. The first section is titled "SNMP Settings" and has a checked checkbox. It contains four rows: "Status" with an unchecked "Enable" checkbox, "Public Community String" with a text box containing "public", "Private Community String" with a text box containing "private", and "Trap Status" with an unchecked "Enable" checkbox. The second section is titled "Ping Control Setting" and has a checked checkbox. It contains one row: "Status" with a checked "Enable" checkbox. A "Save" button is located at the bottom right of the interface.

Ping Control Setting


Status: Check the box to enable Ping control. Ping works by sending ICMP "echo request" packets to the target host and listening for ICMP echo response replies. The default is enabled.

Firmware and SSL Certification Upload

Upload Firmware From Local Hard Drive: The current firmware version is displayed above the file location field. After downloading the most recent version of firmware for the DAP-2690 from <http://dlink.com/support> to your local computer, use the **Browse** button to locate the firmware file on your computer. Click **Upload** to update the firmware version. Please don't turn the power off while upgrading.

Language Pack Upgrade: Click **Browse** to locate the language pack upgrade on your local computer. After selecting and opening the file, click **Upload** to upload the file to the DAP-2690.

Upload SSL Certification From Local Hard Drive: Click **Browse** to locate the SSL Certification file on your local computer. After selecting and opening the file, click **Upload** to upload the file to the DAP-2690.

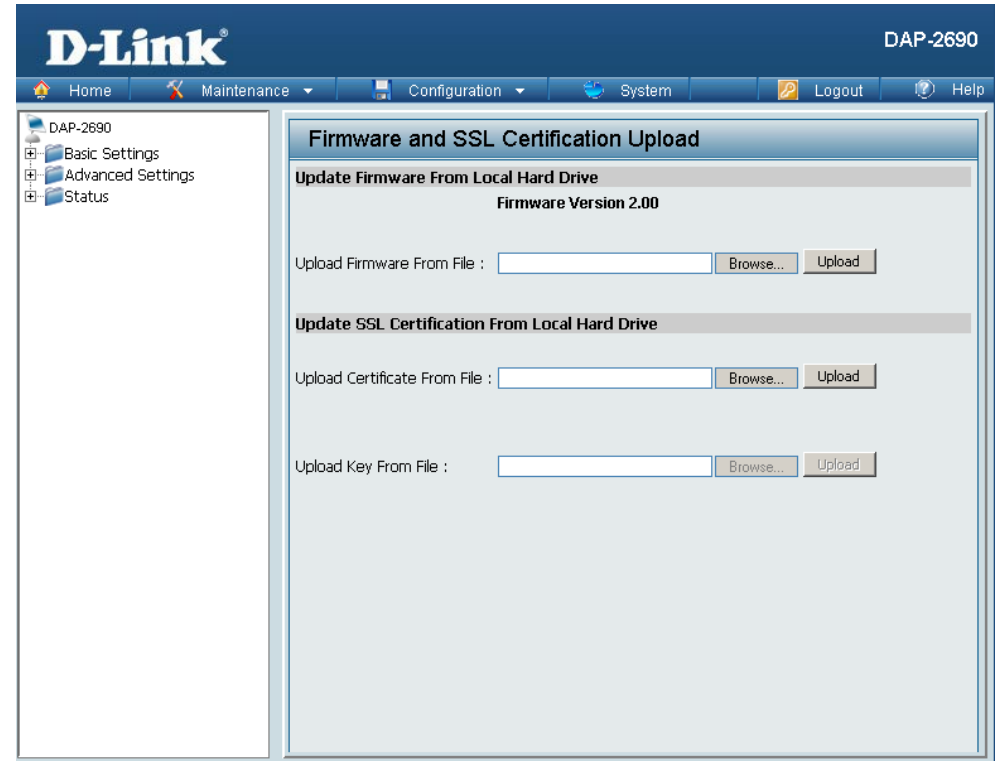

The screenshot displays the D-Link web management interface for a DAP-2690 device. The page title is "Firmware and SSL Certification Upload". The current firmware version is shown as "Firmware Version 2.00". There are three main sections for uploading files from the local hard drive:


- Update Firmware From Local Hard Drive:** Includes a text input field for the file path, a "Browse..." button, and an "Upload" button.
- Update SSL Certification From Local Hard Drive:** Includes a text input field for the certificate file path, a "Browse..." button, and an "Upload" button.
- Upload Key From File:** Includes a text input field for the key file path, a "Browse..." button, and an "Upload" button.

The interface also features a navigation menu with options like Home, Maintenance, Configuration, System, Logout, and Help, and a sidebar with links to Basic Settings, Advanced Settings, and Status.

Configuration File

Upload File: Click the **Browse** button to locate a previously saved configuration file on your local computer. After selecting the file, click **Upload** to apply the configuration settings to the DAP-2690.

Download Configuration File: Click **Download** to save the current DAP-2690 configuration to your local computer. Note that if you save one configuration with the administrator's password now, after resetting your DAP-2690, and then updating to this saved configuration file, the password will be gone.

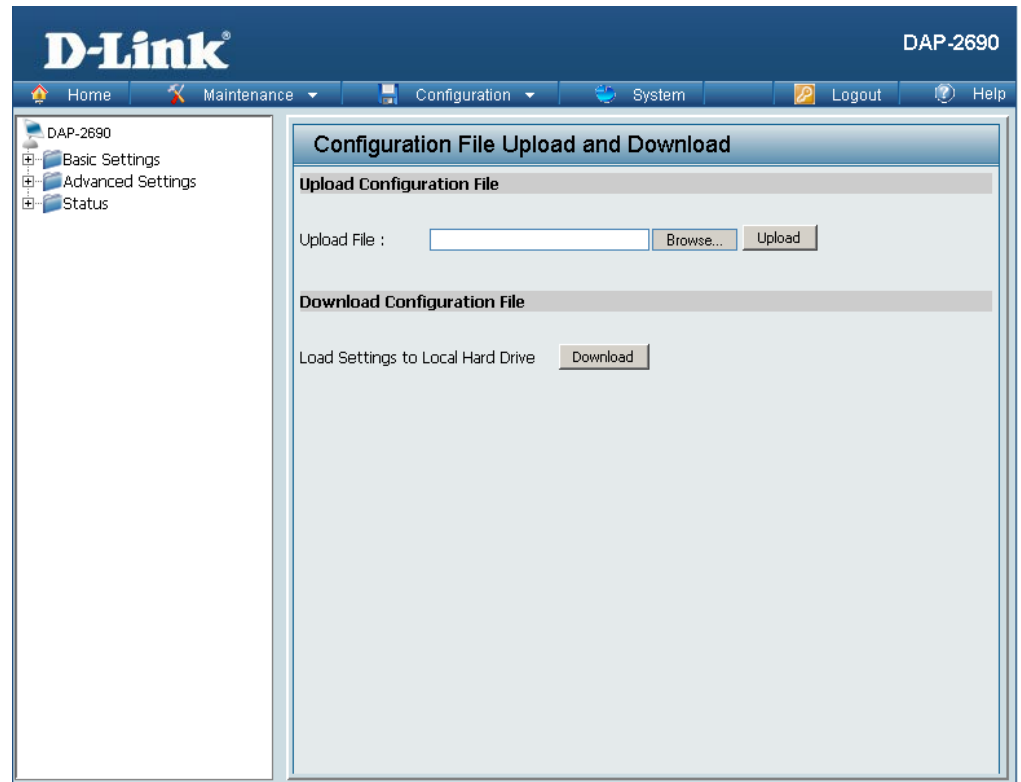

Time and Date

Current Time: Displays the current time and date settings.

Enable NTP Server: Check to enable the AP to get system time from an NTP server from the Internet.

NTP Server: Enter the NTP server IP address.

Time Zone: Use the drop-down menu to select your correct Time Zone.

Enable Daylight

Saving: Check the box to enable Daylight Saving Time.

Daylight Saving Use the drop-down menu to select the correct Daylight

Dates: Saving offset.

Set the Date and Time Manually: A user can either manually set the time for the AP here, or click the **Copy Your Computer's Time Settings** button to copy the time from the computer in use (Make sure that the computer's time is set correctly).

D-Link DAP-2690

Home Maintenance Configuration System Logout Help

DAP-2690
Basic Settings
Advanced Settings
Status

Time and Date Settings

Time Configuration

Current Time 01/01/1970 00:31:38

Automatic Time Configuration

Enable NTP Server

NTP Server

Time Zone (GMT+08:00) Ulaan Bataar

Enable Daylight Saving

Daylight Saving Dates	DST Start	Month	Week	Day of Week	Current Time
DST Start	Jan	1st	Sun	12 am	
DST End	Jan	1st	Sun	12 am	

Set the Date and Time Manually

Date And Time

Year 2012 Month Aug Day 22


Hour 10 Minute 5 Second 48

Copy Your Computer's Time Settings

Save


Configuration

Save and Activate

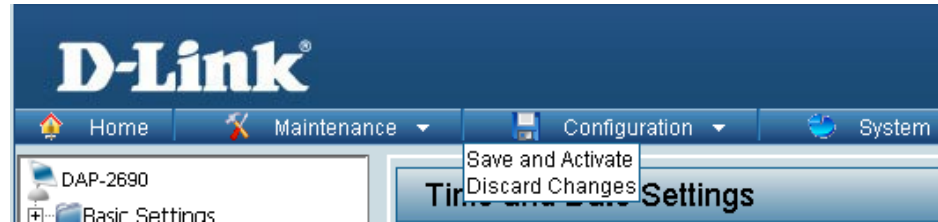


The drop-down Configuration menu allows users to save the current changes and reboot the DAP-2690 by clicking "Save and Activate".

If the "Save and Activate" option is selected, the following window will appear to display how many seconds remain before the save settings and reboot system action is completed.

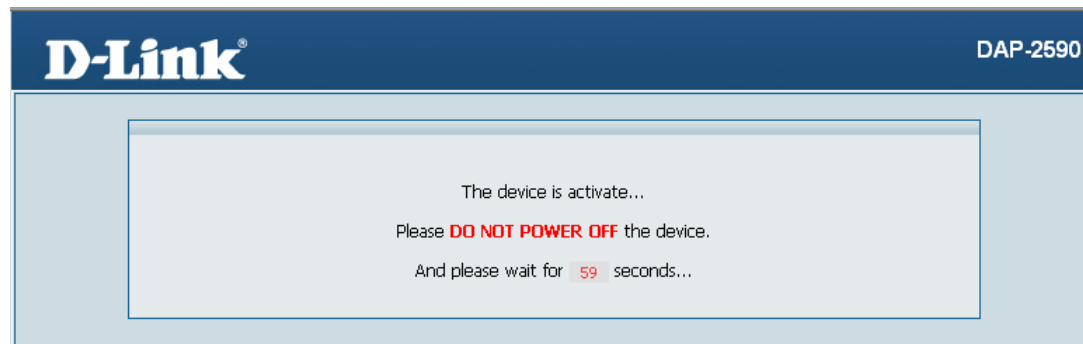

Discard Changes

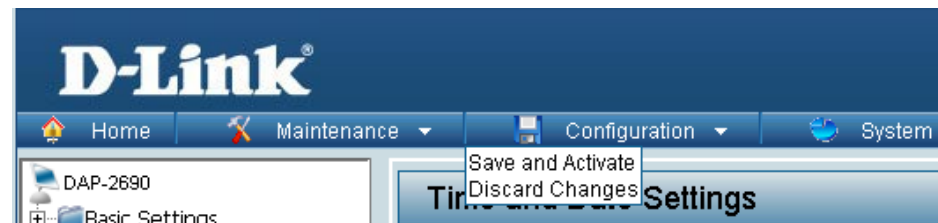


The drop-down Configuration menu allows users to drop the latest changes by clicking "Discard Changes."

System System Settings

Restart the Device: Click **Restart** to restart the DAP-2690.

Restore to Factory Default Settings: Click **Restore** to restore the DAP-2690 back to factory default settings.

Clear Language Pack: Click **Clear** to remove the DAP-2690 language pack.

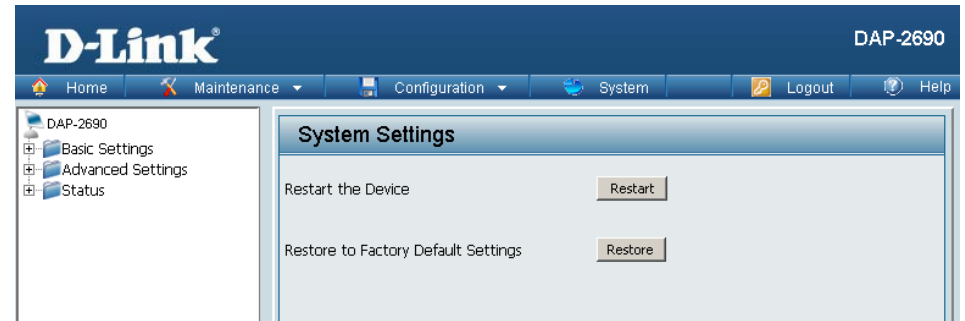

Help

Help: Scroll down the Help page for topics and explanations.

Basic Settings

Wireless Settings

Allow you to change the wireless settings to fit an existing wireless network or to customize your wireless network.

Wireless Band

Operating frequency band. Choose 2.4GHz for visibility to legacy devices and for longer range. Choose 5GHz for least interference; interference can hurt performance. This AP will operate two bands at a time.

Mode

Select a function mode to configure your wireless network. Function modes include Access Point, WDS (Wireless Distribution System) with AP, WDS and Wireless Client. Function modes are designed to support various wireless network topology and applications.

Network Name (SSID)

Also known as the Service Set Identifier, this is the name designated for a specific wireless local area network (WLAN). The factory default setting is "dlink". The SSID can be easily changed to connect to an existing wireless network or to establish a new wireless network.

SSID Visibility

Indicate whether or not the SSID of your wireless network will be broadcasted. The default value of SSID Visibility is set to "Enable," which allow wireless clients to detect the wireless network. By changing this setting to "Disable," wireless clients can no longer detect the wireless network and can only connect if they have the correct SSID entered.

Auto Channel Selection

If you check Auto Channel Scan, everytime when AP is booting up, the AP will automatically find the best channel to use. This is enabled by default.

Channel

Indicate the channel setting for the DAP-2690. By default, the AP is set to Auto Channel Scan. The Channel can be changed to fit the channel setting for an existing wireless network or to customize the wireless network.

Using the AP Array

The deployment of wireless local area network (WLAN) in a small office environment is often hindered by the lack of simplicity, stability and affordability. Multiple access points (APs) will require more effort in configuration and management, and the complexity of security settings adds to the burden. With limited resources in a small office, solutions provided for bigger organizations will be too complicated and not economical.

D-Link's AP Array is an ideal WLAN management tool for the small office. The WLAN management feature is built within the firmware, making configuration for multiple APs an effortless process. All AirPremier 11n Business APs support this tool, which can manage up to eight stand-alone APs. This will make WLAN deployment easier and more affordable.

Simple WLAN Management Tool

When one needs to set up a wireless local area network (WLAN) in a small office with limited IT resources, D-Link's AP Array is the answer. It allows the efficient deployment of a secured WLAN and easier administration from a single point; thus, minimizing the effort to maintain the wireless network.

Easy Deployment and Management

With D-Link's AP Array, deployment and management of APs are made simple. The following steps show how straightforward it is to deploy the array of APs:

Step 1 - Deployment of Master AP:

- Designate one AP as Master
- Set up Array ID & password
- Configure the AP


Step 2 - Deployment of Slave APs:

- Specify Array ID & password of Master in Slave APs.

Step 3 - Settings Are Synchronized:

- Backup Master & all Slave APs will follow configuration from Master automatically.

Up to eight stand-alone APs can be managed in an array. Members in the same AP Array group must be on the same subnet of the same model, and each AP is assigned with a unique IP address.

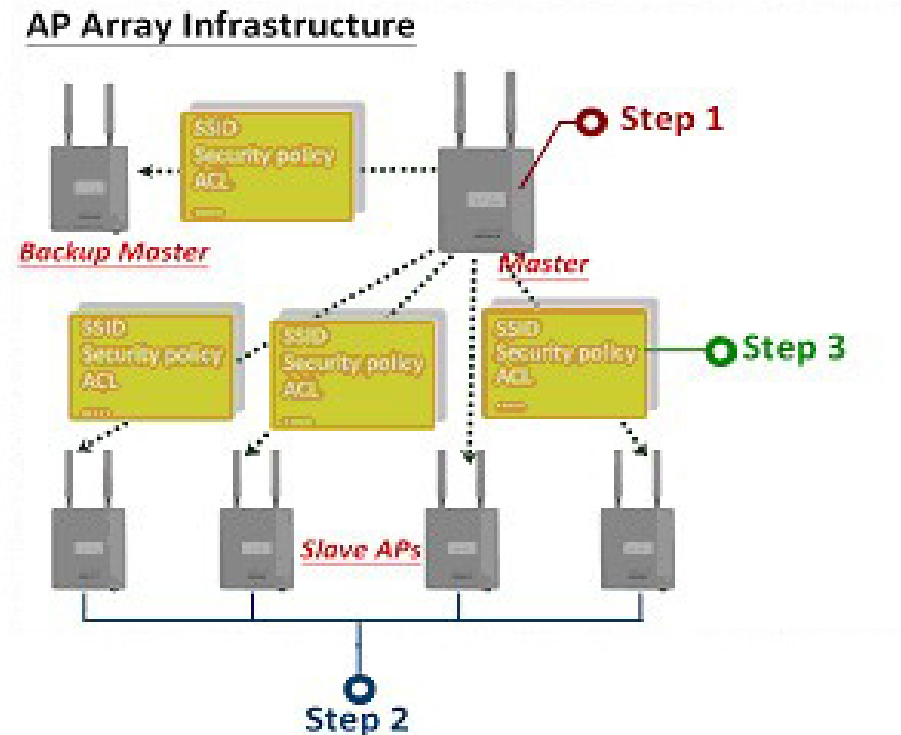

Situations Encountered with the Different Implementations:

- **Multiple Master APs:** If there are two or more Master APs assigned in an array, the AP with the longest run-time will become the Master AP.
Note: The other Master APs will become Backup Master APs.
- **Manually Configured Slave AP:** At intervals of one minute, the Master AP will send out a beacon to check the status of the Slave APs. If any changes are done to the slave APs manually, the Master AP will automatically synchronize its configuration to the slave AP and overwrite it.



- **No Backup Master AP Available:** If the Master AP crashes and there are only Slave APs in the array, the Slave APs will work as stand-alone APs until a new Master joins the array. The administrator may want to configure two Master APs for the array, so that there is always a Backup Master AP available.
- **Master AP Crashed:** In a situation where the Master AP becomes unavailable to the array, the Backup Master AP will take over the Master role and synchronize the configuration to the Slave APs.



Section 4 - Using the AP Array

Whenever the user makes any changes in the Master AP and selects "Save & Activate", the Master AP in an array will automatically synchronize its configuration to all Slave APs.

Settings that can be synchronized are:

- Wireless Settings
- Multiple SSID & VLAN
- WiFi Schedule
- MAC Filter
- WLAN Partition
- DHCP Server
- Log Settings
- Time & Date
- QoS Settings
- Performance Settings
- All Administrator Settings

Settings that are not synchronized are:

- Operation Mode
- Radio Channel
- LAN Settings

If required, settings that are not synchronized will have to be configured individually for each AP.

AP Roles in an Array

There are three modes for the administrator to define the role of each AP.

- **Master AP**
The Master AP can do all the management settings for members in an array. Each array can only have one Master AP.
- **Backup Master AP**
In an event when the Master AP crashes, the Backup Master AP will take over the Master AP function. Each array can have up to two Backup Master APs.
- **Slave AP**
The Slave AP follows all the settings in the Master AP.

AP Array Easy Configuration


The following section shows how simple it is to configure the D-Link AP Array for the different AP roles:

Master AP Role

Click **Advanced Settings > AP Array** to view and edit the information on the AP in an array.

Step 1:

Click **Enable AP Array** and select the **Master** role.

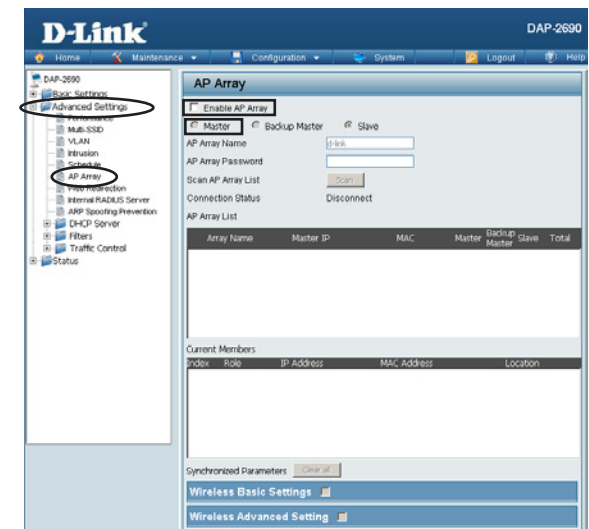


Section 4 - Using the AP Array

Step 2:

Set up the AP Array **name** and **password**. Click the **Save** button located on the lower right hand side.

Note: Remember to select "Save & Activate". The AP will not become master until you select "Save & Activate".

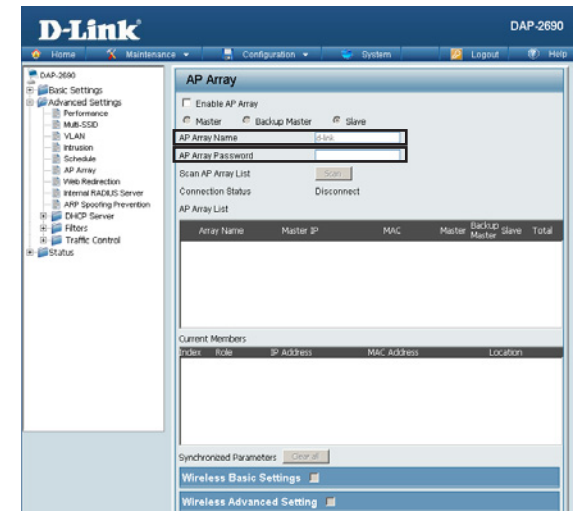


Slave AP Role

Click **Advanced Settings** > **AP Array** to view and edit the information on the AP in an array.

Step 1:


Click **Enable AP Array** and select the **Slave** role.

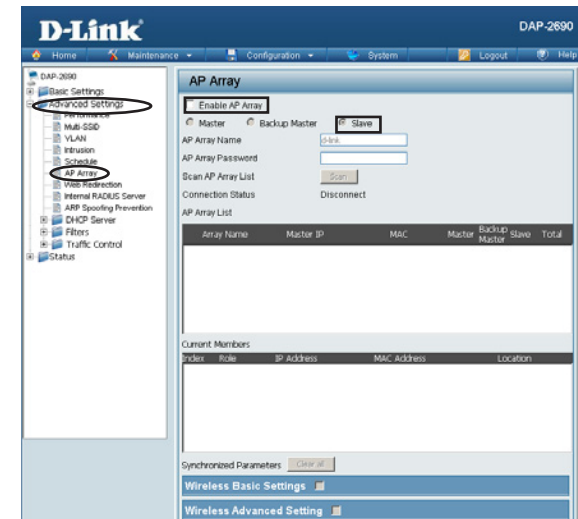

Step 2:

Click the **Scan** button to search for an existing array, and enter the array password to join it. Click the **Save** button located on the lower right hand side.

Note: Remember to select "Save & Activate". The AP will not become slave until you select "Save & Activate".

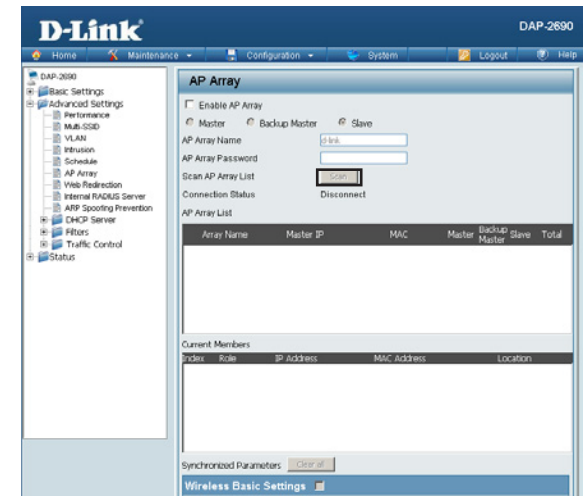

Supported in all D-Link 11n Business APs

D-Link AP Array is supported in all D-Link 11n business APs.

Note: Please refer to your local D-Link website for any new models of D-Link 11n business APs. You may also get the latest AP Array function by doing a firmware update.

Reliable WLAN Management Tool

When you need a reliable WLAN management tool for your small office, the D-Link AP Array will be the ideal choice to provide you with the simplicity to configure and manage an array of APs. Being a free software module that is built in D-Link 11n business APs, it eliminates the need for an extra software or PC.


With auto-synchronization, it means that configuration will only need to be done on the Master AP, and it will automatically be synchronized to the Slave APs.

As AP configuration and management are done within only one Master AP, you will be able to view the deployment of APs as a single wireless network rather than a series of separate wireless devices.

Using the Console Port

You can connect to the DAP-2690 console port to configure device settings via the command line.

1. Connect one end of the provided serial console cable to the console port on the DAP-2690, and the other to an available serial port on the PC you will use to connect to the device.
2. Run HyperTerminal on the PC:
 - Go to the Start Menu
 - Select All Programs
 - Select Accessories
 - Select Communications
 - Select HyperTerminal

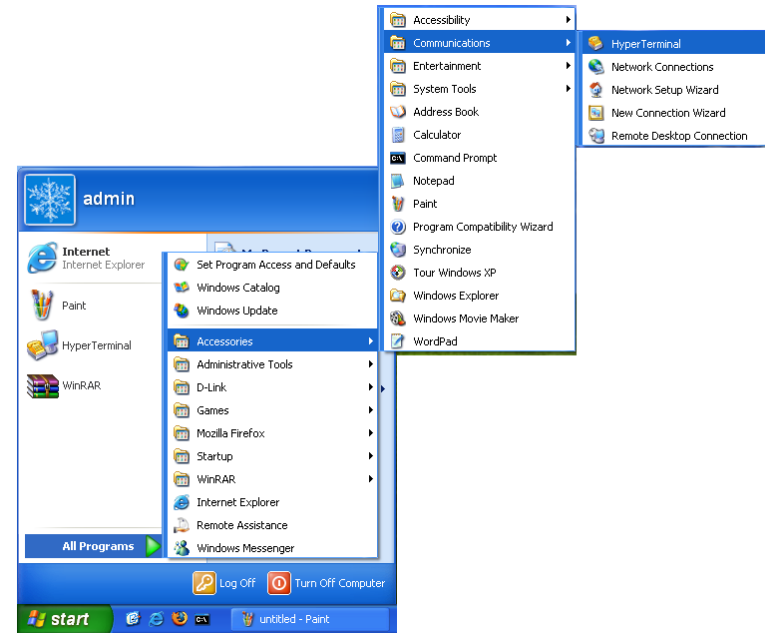


3. Enter a New Connection name:



4. Select the appropriate COM port:



5. Configure the Port Settings:

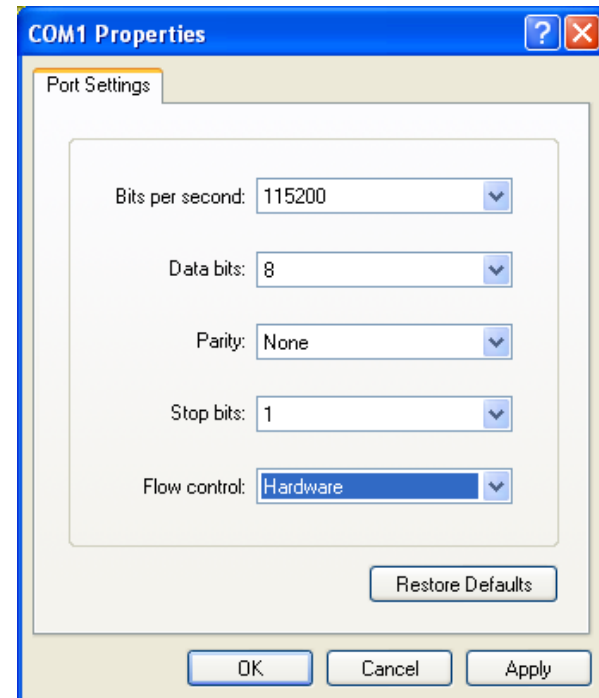


Note: Your terminal emulation must be set to 115200 bits per second.

6. Enter the Login Name and Password:

Once logged in, you will be able to run configuration commands from the command line prompt.

You can type in a letter and press tab to see the available commands.

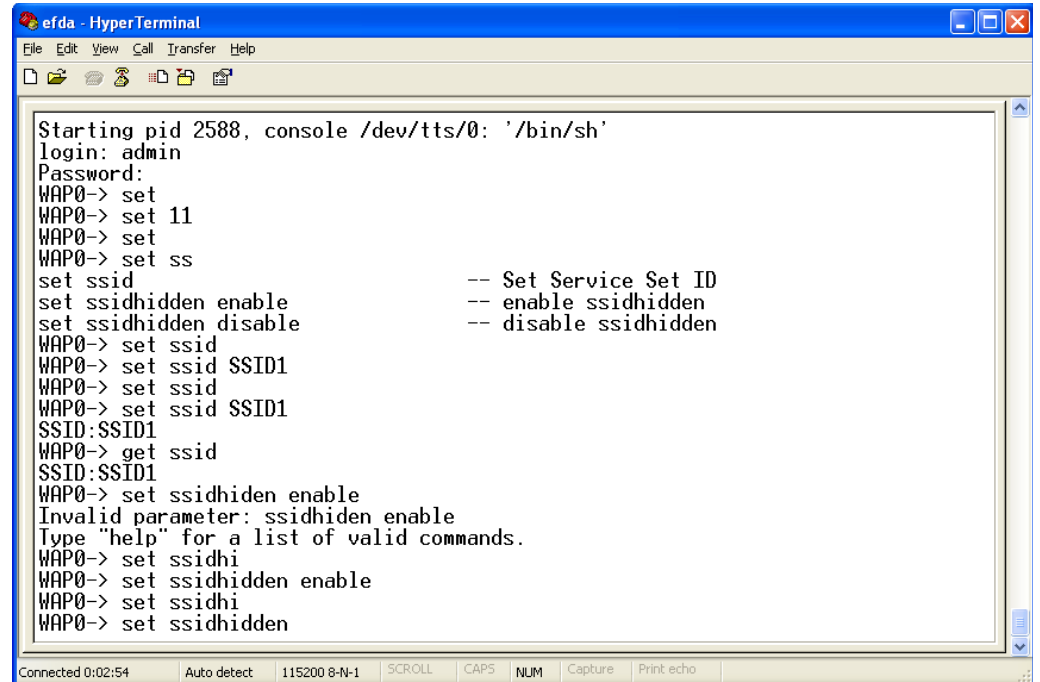

```
efda - HyperTerminal
File Edit View Call Transfer Help
Starting pid 2588, console /dev/tts/0: '/bin/sh'
login: admin
Password:
WAP0-> set
WAP0-> set 11
WAP0-> set
WAP0-> set ss
set ssid -- Set Service Set ID
set ssidhidden enable -- enable ssidhidden
set ssidhidden disable -- disable ssidhidden
WAP0-> set ssid
WAP0-> set ssid SSID1
WAP0-> set ssid
WAP0-> set ssid SSID1
SSID:SSID1
WAP0-> get ssid
SSID:SSID1
WAP0-> set ssidhidden enable
Invalid parameter: ssidhidden enable
Type "help" for a list of valid commands.
WAP0-> set ssidhi
WAP0-> set ssidhidden enable
WAP0-> set ssidhi
WAP0-> set ssidhidden
Connected 0:02:54 Auto detect 115200 8-N-1 SCROLL CAPS NUM Capture Print echo
```

Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the DAP-2690 Wireless Access Point. We will cover various aspects of the network setup, especially the network adapters. Please read the following if you are having any technical difficulties.

Note: *It is recommended that you use an Ethernet connection to configure the DAP-2690.*


1. The computer used to configure the DAP-2690 cannot access the Configuration menu.

- Check if the LAN LED on the DAP-2690 is ON. If the LED is not ON, check if the cable for the Ethernet connection is securely inserted.
- Check if the Ethernet adapter is working properly. Please see item 3 of this Troubleshooting section to check that the drivers for the network adapters are loaded properly.
- Check if the IP address is in the same range and subnet as the DAP-2690.

Note: *The default IP address of the DAP-2690 is 192.168.0.50. All the computers on the network must have a unique IP address in the same range, e.g. 192.168.0.x. Any computers that have identical IP addresses will not be visible on the network. They must all have the same subnet mask, e.g. 255.255.255.0.*

- Perform a Ping test to make sure that the DAP-2690 is responding. Go to **Start > Run**, type **cmd**, and then press **Enter**. At the DOS prompt, type **ping 192.168.0.50**. A successful ping will show four replies.

Note: *If you have changed the default IP address, make sure to ping the correct IP address assigned to the DAP-2690.*

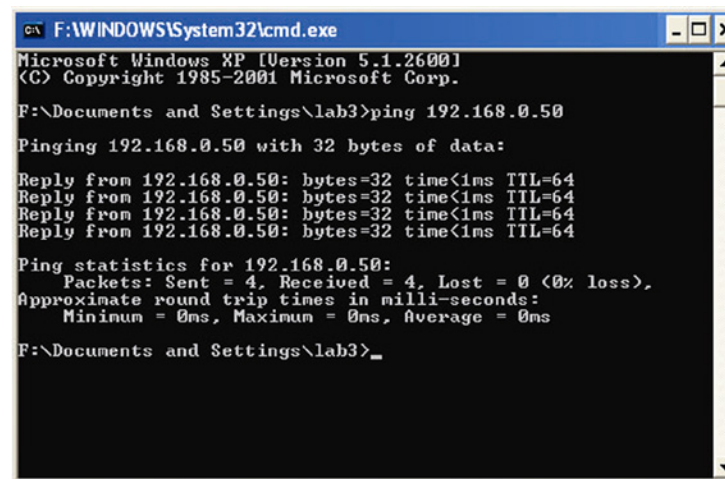

```
cmd F:\WINDOWS\System32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

F:\Documents and Settings\lab3>ping 192.168.0.50

Pinging 192.168.0.50 with 32 bytes of data:


Reply from 192.168.0.50: bytes=32 time<1ms TTL=64
Reply from 192.168.0.50: bytes=32 time<1ms TTL=64
Reply from 192.168.0.50: bytes=32 time<1ms TTL=64
Reply from 192.168.0.50: bytes=32 time<1ms TTL=64

Ping statistics for 192.168.0.50:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

F:\Documents and Settings\lab3>
```

2. The wireless client cannot access the Internet within Infrastructure mode.

Make sure the wireless client is associated and joined with the correct access point. To check this connection, right-click on the *Local Area Connection* icon in the taskbar and select **View Available Wireless Networks**. The *Connect to Wireless Network* screen will appear. Please make sure you have selected the correct available network, as shown in the illustrations below.

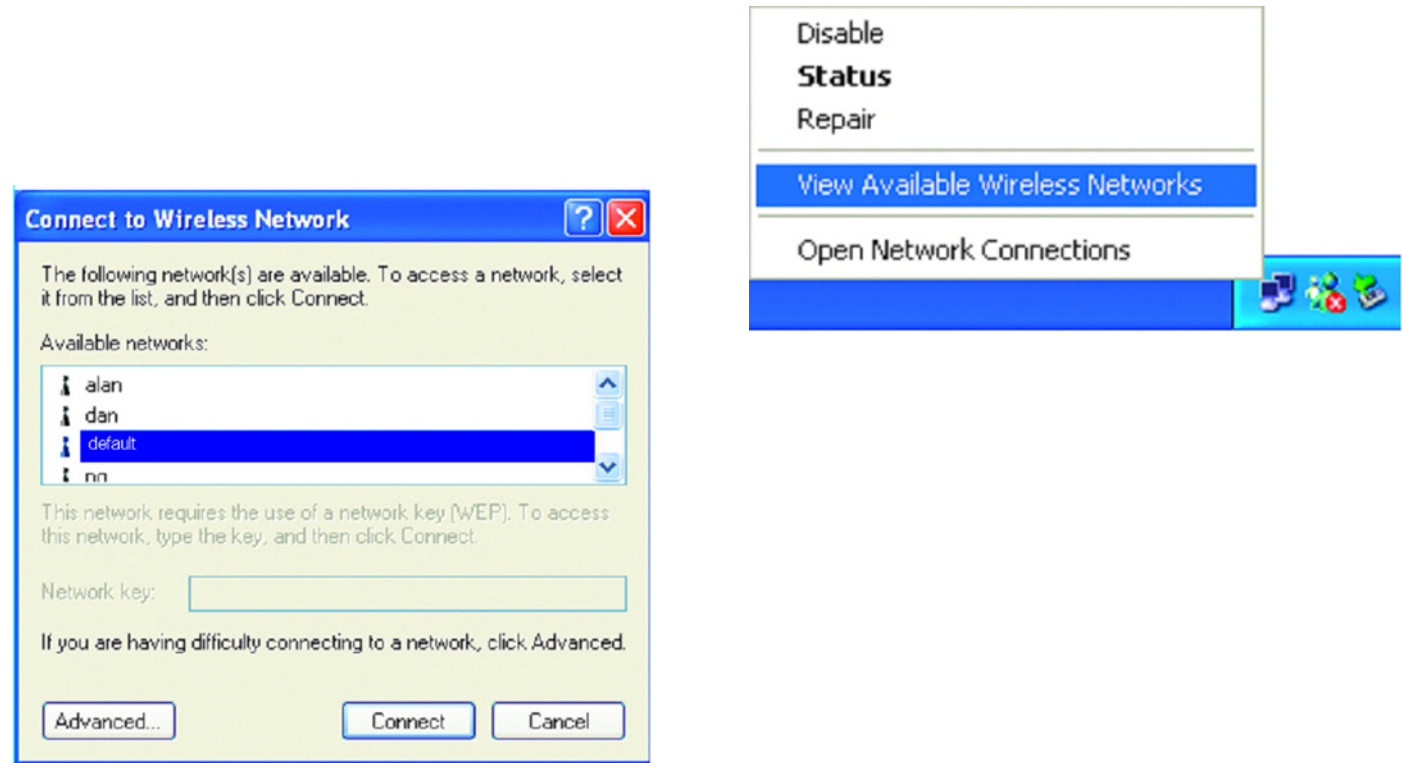

- Check that the IP address assigned to the wireless adapter is within the same IP address range as the access point and gateway. Since the DAP-2690 has an IP address of 192.168.0.50, wireless adapters must have an IP address in the same range, e.g. 192.168.0.x. Each device must have a unique IP address; there may be no two devices with the same IP address. The subnet mask must be the same for all the computers on the network. To check the IP address assigned to the wireless adapter, double-click the Local Area Connection icon in the taskbar, then select the Support tab and the IP address will be displayed.
- If it is necessary to assign a Static IP Address to the wireless adapter. If you are entering a DNS Server address, you must also enter the Default Gateway Address. *Remember that if you have a DHCP-capable router, you will not need to assign a static IP address.*

3. What variables may cause my wireless products to lose reception?

D-Link products let you access your network from virtually anywhere you want, however, the positioning of the products within your environment will affect its wireless range.

4. Why does my wireless connection keep dropping?

- Antenna Orientation - try different antenna orientations for the DAP-2690. Try to keep the antenna at least 6 inches away from the wall or other objects.
- If you are using 2.4 GHz cordless phones, X-10 equipment or other home security systems, ceiling fans, or lights, your wireless connection will degrade dramatically or even drop. Try changing the channel of your router, access point and wireless adapter to a different channel to avoid interference.
- Keep your product away - at least 3-6 feet - from electrical devices that generate RF noise like microwaves, monitors, electric motors, etc.

5. Why can't I get a wireless connection?

If you have enabled encryption on the DAP-2690, you must also enable encryption on all wireless clients in order to establish a wireless connection.

- Make sure that the SSID on the AP and the wireless client are exactly the same. If they are not, wireless connection cannot be established.
- Move the DAP-2690 and the wireless client into the same room and then test the wireless connection.
- Disable all security settings.
- Turn off your DAP-2690 and the client. Turn the DAP-2690 back on again, and then turn on the client.
- Make sure that all devices are set to Infrastructure mode.
- Check that the LED indicators are indicating normal activity. If not, check that the AC power and Ethernet cables are firmly connected.
- Check that the IP address, subnet mask, gateway, and DNS settings are correctly entered for the network.
- If you are using 2.4 GHz cordless phones, X-10 equipment, or other home security systems, ceiling fans, or lights, your wireless connection will degrade dramatically or drop altogether. Try changing the channel on your DAP-2690, and on all the devices in your network to avoid interference.
- Keep your product away - at least 3-6 feet - from electrical devices that generate RF noise like microwaves, monitors, electric motors, etc.

Technical Specifications

Standards

- IEEE 802.11a
- IEEE 802.11b
- IEEE 802.11g
- IEEE 802.11n
- IEEE 802.3
- IEEE 802.3u
- IEEE 802.3ab
- IEEE 802.3af

Network Management

- Web Browser interface
 - HTTP
 - Secure HTTP (HTTPS)
- AP Array
- AP Manager II
- SNMP Support
 - D-View Module
 - Private MIB
- Command Line Interface
 - Telnet
 - Secure SSH Telnet

Data Rates*

For 802.11a:

- 54, 48, 36, 24, 18, 12, 9, and 6 Mbps

For 802.11b:

- 11, 5.5, 2, and 1 Mbps

For 802.11g:

- 54, 48, 36, 24, 18, 12, 9, and 6 Mbps

For 802.11n : HT20/HT40

- 144.4/300, 130/270, 117/243, 104/216, 78/162, 66/135, 58.5/121.5, 52/108, 39/81, 26/54, 19.5/40.5, 12/27, and 6.5/13.5 Mbps

Security

- WPA™ Personal/Enterprise
- WPA2™ Personal/Enterprise
- WEP™ 64-/128-bit
- SSID Broadcast Disable
- MAC Address Access Control

Wireless Frequency Range

- 2.4 to 2.4835 GHz and 5.15 to 5.85 GHz**

Operating Voltage

- 48V 0.4A PoE

Radio and Modulation Type

For 802.11a/g/n:

BPSK, QPSK, 16QAM, and 64QAM with OFDM

For 802.11b:

DQPSK, DBPSK, DSSS, and CCK

Operating Frequency*

For 802.11a:

5.15 ~ 5.85 GHz

For 802.11b/g:

2400 ~ 2483.5 MHz ISM band

For 802.11n:

2.4 GHz Band: 2.4 ~ 2.4835 GHz

5 GHz Band: 5.15 ~ 5.85 GHz

Dipole Antenna

4dBi Gain @2.4 GHz

6dBi Gain @5 GHz

*Maximum wireless signal rate derived from IEEE Standard 802.11g, 802.11a and 802.11n specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range.

**Please note that operating frequency ranges vary depending on the regulations of individual countries and jurisdictions. The DAP-2690 isn't supported in the 5.25~5.35 GHz and 5.47 ~ 5.725 GHz frequency ranges in some regions.

LEDs

- Power
- LAN
- 2.4 GHz
- 5 GHz

Temperature

- Operating: 0°C to 40°C
- Storing: -20°C to 65°C

Humidity

- Operating: 10%~90% (non-condensing)
- Storing: 5%~95% (non-condensing)

Certifications

- FCC
- CE
- IC
- C-Tick
- UL
- WiFi

Dimensions

- L = 197 mm
- W = 190 mm
- H = 35 mm

*Please note that operating frequency ranges vary depending on the regulations of individual countries and jurisdictions. The DAP-2690 isn't supported in the 5.25~5.35 GHz and 5.47 ~ 5.725 GHz frequency ranges in some regions.

Trademarks:

D-Link is a registered trademark of D-Link Corporation/D-Link Systems, Inc. Other trademarks or registered trademarks are the property of their respective owners.

Copyright Statement:

No part of this publication or documentation accompanying this product may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems, Inc., as stipulated by the United States Copyright Act of 1976 and any amendments thereto. Contents are subject to change without prior notice.

Copyright ©2012 by D-Link Corporation/D-Link Systems, Inc. All rights reserved.

CE Mark Warning:

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

If this device is going to be operated in 5.15 ~ 5.25GHz frequency range, then it is restricted in indoor environment only.

IMPORTANT NOTICE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

For detailed warranty information applicable to products purchased outside the United States, please contact the corresponding local D-Link office.

Industry Canada Notice:

DETACHABLE ANTENNA USAGE

This device has been designed to operate with an antenna having a maximum gain of [5.646] dBi. Antenna having a higher gain is strictly prohibited per regulations of Industry Canada. The required antenna impedance is 50 ohms. Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. This radio transmitter (IC: 4216A-AP2690B1 / Model: DAP-2690B1) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Ce dispositif a été conçu pour fonctionner avec une antenne ayant un gain maximal de dBi [5.646]. Une antenne à gain plus élevé est strictement interdite par les règlements d'Industrie Canada. L'impédance d'antenne requise est de 50 ohms. Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante. Le présent émetteur radio (IC: 4216A-AP2690B1 / Modèle: DAP-2690B1) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

APPROVED ANTENNA(S) LIST

Type	Gain	Brand	Manufacturer
Dipole	4.29dBi	WHA YU GROUP	WHA YU GROUP
Dipole	5.646dBi	WHA YU GROUP	WHA YU GROUP

IMPORTANT NOTE:

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This device has been designed to operate with an antenna having a maximum gain of 6 dB. Antenna having a higher gain is strictly prohibited per regulations of Industry Canada. The required antenna impedance is 50 ohms.