



User Manual

HSPA+ Mobile Router

DWR-720

Preface

D-Link reserves the right to revise this publication and to make changes in the content hereof without obligation to notify any person or organization of such revisions or changes.

Manual Revisions

Revision	Date	Description
1.0	10/02/2015	• Initial release

Trademarks

D-Link and the D-Link logo are trademarks or registered trademarks of D-Link Corporation or its subsidiaries in the United States or other countries. All other company or product names mentioned herein are trademarks or registered trademarks of their respective companies.

Copyright © 2015 by D-Link Corporation, Inc.

All rights reserved. This publication may not be reproduced, in whole or in part, without prior expressed written permission from D-Link Corporation, Inc.

Table of Contents

Product Overview	1	Connection	20
Package Contents.....	1	2G/3G Modem	22
System Requirements	2	SIM	23
Introduction	3	PLMN	24
Hardware Overview	4	Network	25
Top Side.....	4	Wi-Fi.....	25
Battery Cover Removed.....	5	DHCP	27
LED Icons	6	NAT.....	29
Installation	7	SMS.....	31
Connect to Your Network	7	Local	31
Insert a microSD Card	8	New Message	31
Driver Installation	9	Wi-Fi.....	32
Wireless Installation Considerations.....	10	Basic.....	32
Configuration	11	Wireless Security	34
Initial Connection to the Router	11	Wired Equivalent Privacy (WEP)	34
Connect via USB.....	11	Wi-Fi Protected Access (WPA).....	35
Connect via Wi-Fi	12	Wi-Fi Protected Setup (WPS)	36
Web-based Configuration	14	MAC Filter	37
Configuration Utility	14	Station Lists.....	38
Home	15	Security	39
Navigation.....	15	Firewall	39
Device Status.....	16	IP Filter	39
Home.....	17	IPv6 Filter	40
Wizard	18	MAC Filter	41
Internet.....	20	DDOS.....	42
		URL Filter	43


Application	44	Regulatory Information	75
About	44		
Configuration	45		
Firmware Upgrade.....	46		
Standby Mode	47		
Remote Control	48		
Password.....	50		
Date and Time	51		
Language.....	53		
System Log.....	54		
Connecting to a Wireless Network	55		
Using Windows 8.1/8.0	55		
Using Windows 7	57		
Configuring Wireless Security	59		
Using Windows Vista™	62		
Configuring Wireless Security	63		
Using Windows® XP	65		
Configure WEP	66		
Configure WPA-PSK.....	68		
Troubleshooting	70		
Networking Basics	72		
Check your IP address.....	72		
Statically Assign an IP address	73		
Technical Specifications	74		

Product Overview

Package Contents



D-Link DWR-720 HSPA+ Mobile Router

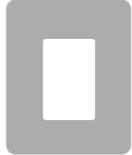

Battery



USB Cable

If any of the above items are missing from your package, please contact your reseller.

System Requirements

Network Requirements	<ul style="list-style-type: none">• A compatible (U)SIM card with mobile data service¹
Web-based Configuration Utility Requirements	<p>Computer with the following:</p> <ul style="list-style-type: none">• Windows®, Macintosh, or Linux-based operating system• An installed Ethernet adapter <p>Browser Requirements:</p> <ul style="list-style-type: none">• Internet Explorer 8 or higher• Firefox 12.0 or higher• Safari 4.0 or higher• Chrome 20.0 or higher <p>Windows® Users: Make sure you have the latest version of Java installed. Visit www.java.com to download the latest version.</p>

¹ Subject to services and service terms available from your carrier.

Introduction

The D-Link DWR-720 HSPA+ Mobile Router lets you share a fast mobile Internet connection with multiple PCs and mobile devices wherever you go. It offers 3G HSPA+ compatibility for fast downlink and uplink data rates, so you get the high-speed upload and download speeds even when you're on the go. Set up a personal mobile network anywhere, anytime allowing you and those around you to access the Internet, and share files.

High-Speed Mobile Internet with 3G Connectivity

The DWR-720 HSPA+ Mobile Router gives you high-speed access to the Internet wherever you are and lets you share it on the go. Using HSPA+ technology, you can achieve download speeds of up to 21.6 Mbps and upload speeds of up to 5.76 Mbps¹. The built-in 3G antenna provides a reliable connection to your 3G service provider, and a separate Wi-Fi antenna gives extended coverage to the computers and mobile devices connected to the DWR-720.

Mobile Internet for All of Your Devices

The HSPA+ Mobile Router lets you share your fast mobile connection over Wi-Fi from a device small enough to fit in your pocket. With the DWR-720, you can get online with your notebook, smartphone, tablet, or any other wireless device using a single 3G mobile connection. The DWR-720 provides high-speed Wireless N coverage to give high-speed wireless access to everybody – whether you are with colleagues on a business trip, or travelling with friends and family.

Built-in Software for Instant Access Anywhere

The DWR-720 is truly plug and play, with drivers built right into the router so you can connect without the need to install anything. Open a browser, connect the router, and you can set up your network right from a web interface. This means that notebooks and netbooks without a CD-ROM drive can connect and get up and running in no time. Once the device is set up, you can simply power it on to start up your portable mobile network, meaning that you can share your mobile Internet connection without even needing a computer.


Designed for True Portability

The DWR-720 HSPA+ Mobile Router is small and slim enough to carry around in your purse, bag, or pocket. It features a microSD card slot for optional removable storage (up to 32 GB), allowing you to always have your files and contacts on hand. The built-in 2000 mAh rechargeable Li-Ion battery can provide up to six hours of mobile usage, meaning that you can share your mobile Internet connection in the car, in the park, or anywhere, and work or play longer without needing to recharge.

¹ All references to speed are for comparison purposes only. Actual speeds will vary depending on a range of factors including mobile network coverage, signal strength, network activity, and environmental conditions.

Hardware Overview


Top Side

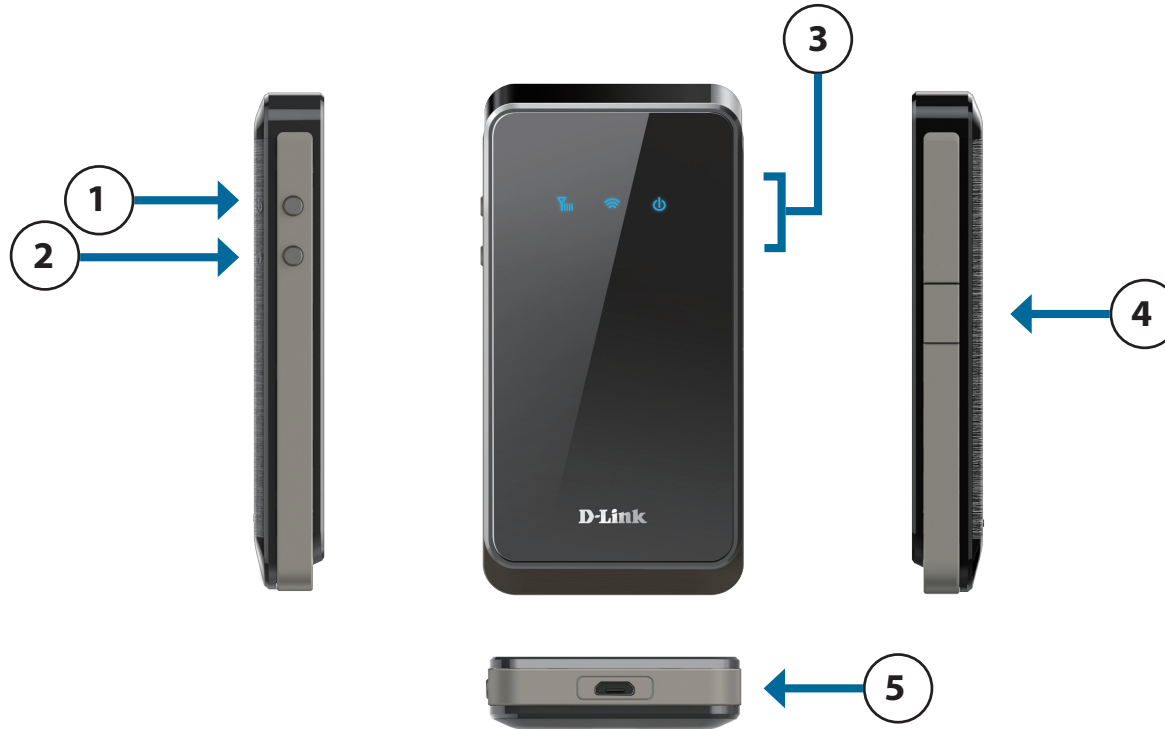

1	Power Button	Press and hold this button for 6 seconds to power on/off the device.
2	WPS Button	Press this button to add new wireless devices quickly and easily using Wi-Fi Protected Setup (WPS).
3	Status LEDs	Please refer to LED Icons on page 6.
4	microSD card slot	If you wish to use the onboard storage functionality, insert a microSD card here.
5	Micro USB port	Use the included cable to connect to a powered USB port to charge the device, or connect to a computer to access the configuration utility.

Hardware Overview


Battery Cover Removed

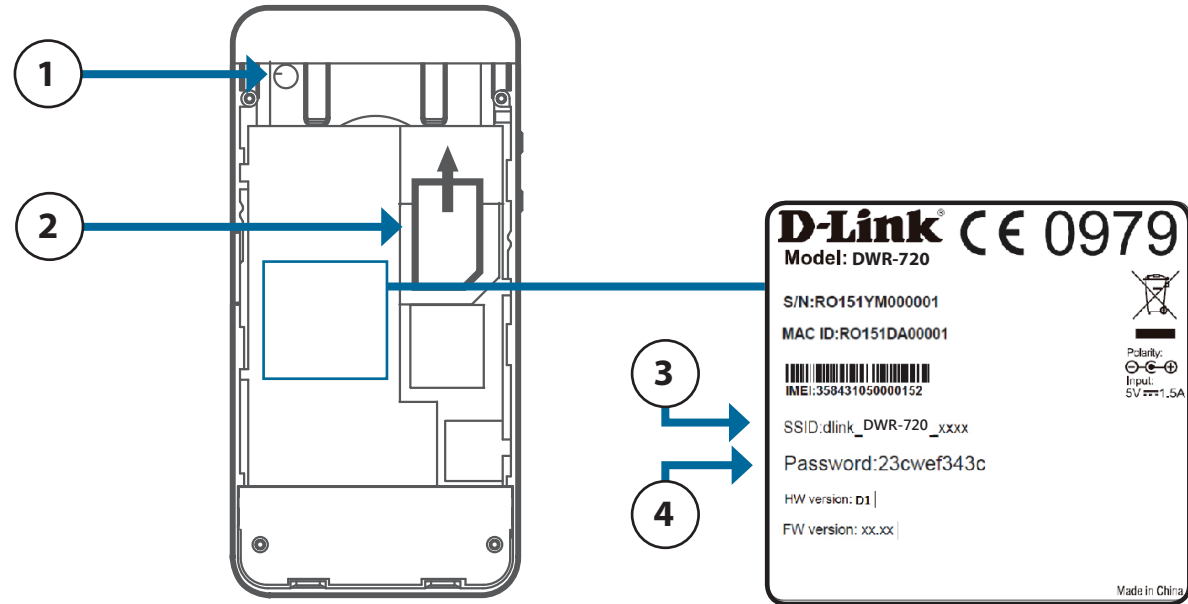

1	Reset Button	Using a paper clip, press and hold this button for 5 seconds to reset the device to factory defaults. Note: Ensure that the battery is inserted and the unit is powered on when pressing the reset button.
2	SIM Card Slot	Insert a SIM card to access the Internet and your SIM card contacts list.
3	Wi-Fi Network (SSID)	The factory default network name (SSID) of the DWR-720 will be displayed here.
4	Network (SSID) Password	The network (SSID) password of the DWR-720 will be displayed here.

Hardware Overview

LED Icons

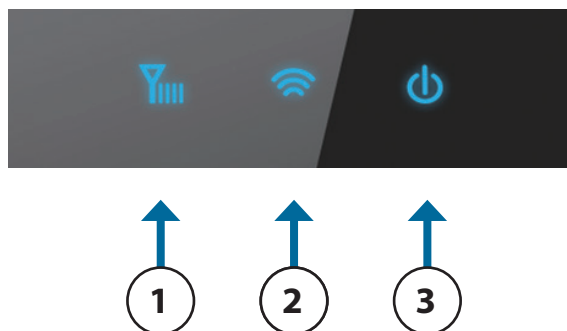

Number	Name	Color	Explanation
1	Signal LED	Blue	Solid: Registering with 3G network Blinking: Connected to 3G network
		Purple	Solid: Registering with 2G network Blinking: Connected to 2G network
		Red	No signal or SIM error
2	Wi-Fi LED	Blue	Solid: Wi-Fi Active Blinking: Transmitting data / WPS active
3	Battery LED	Blue	Battery level greater than 50%
		Amber	Charging
		Green	Battery level 10% - 50%
		Red	Battery Low
		Purple	SMS message received

Installation


This section will guide you through the installation process.

Connect to Your Network

1. Ensure that your DWR-720 Mobile Wi-Fi Hotspot 21 Mbps is powered off.
2. Remove the back cover and take out the battery. Slide your (U)SIM card into the slot provided, ensuring that the alignment is the same as indicated by the logo next to the slot. The gold contacts on the card should be facing downwards.


Caution: Always unplug and turn off the router before installing or removing the SIM card.
Never insert or remove the SIM card while the router is in use.

3. Press and hold the power button on the side of the router.
 - a. The Battery LED will light up green as the router performs its initialization processes.
 - b. After a few moments, the LED icons will show the current status of the router's various functions. For more details on the LED icons, please refer to **LED Icons** on page 6

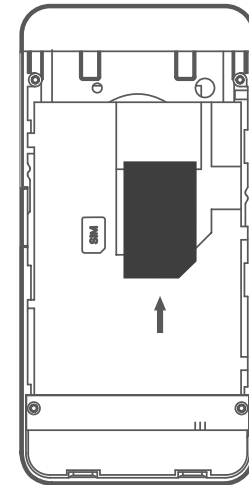

Insert a microSD Card


1. Ensure that your DWR-720 HSPA+ Mobile Router is powered off.
2. Open the cover of the microSD slot on the side of the router.
3. Insert the microSD card into the slot and push it in until it locks into place.
4. Close the cover.

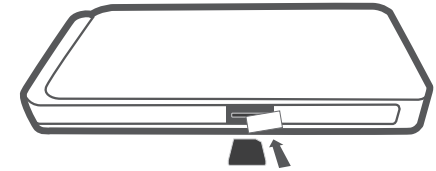

Driver Installation

When you plug the DWR-720 into your computer, any necessary drivers will immediately install. . Your version of Windows may prompt you to confirm the driver installation.

Note: These drivers are Windows-only. Mac and Linux users will still be able to configure the DWR-720 using the web configuration utility described in **Configuration Utility** on page 14.

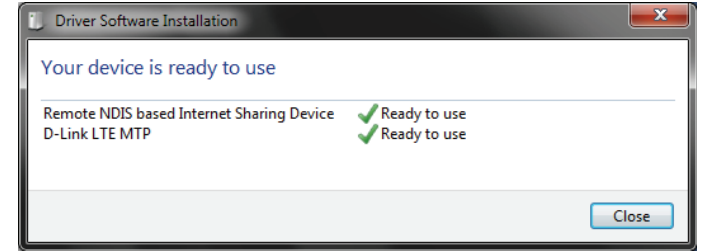

Wireless Installation Considerations

The DWR-720 can be accessed using a wireless connection from anywhere within the operating range of its wireless network. Keep in mind that the quantity, thickness, and location of walls, ceilings, or other objects that the wireless signals must pass through may adversely affect wireless signals. Ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or office. The key to maximizing the wireless range is to follow these basic guidelines:

1. Minimize the number of walls and ceilings between the router and other network devices. Each wall or ceiling can reduce your adapter's range from 3 to 90 feet (1 to 30 meters).
2. Be aware of the direct line between network devices. A wall that is 1.5 feet thick (0.5 meters) appears to be almost 3 feet (1 meter) thick at a 45-degree angle. At a 2-degree angle it appears over 42 feet (14 meters) thick. Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
3. Try to position access points, wireless routers, and computers so that the signal passes through open doorways and drywall. Materials such as glass, metal, brick, insulation, concrete, and water can affect wireless performance. Large objects such as fish tanks, mirrors, file cabinets, metal doors, and aluminum studs may also have a negative effect on range.
4. If you are using a 2.4 GHz cordless phone, make sure that the 2.4 GHz phone base is as far away from your wireless device as possible. The base transmits a signal even if the phone is not in use. In some cases, cordless phones, X-10 wireless devices, and electronic equipment such as ceiling fans, fluorescent lights, and home security systems may dramatically degrade wireless connectivity.

Configuration

This section will show you how to configure your new D-Link mobile router using the web-based configuration utility.

Initial Connection to the Router

By default, the DWR-720 comes configured to work with most 3G SIM cards. Simply connect to it via Wi-Fi or use the included USB to access the SIM's 3G Internet connection. When configuring the router for the first time, you will need to establish a direct connection with the router in order to access the web-based configuration utility. This can be done using the included USB cable, or by connecting wirelessly to the DWR-720. Ensure that the router is powered on and has sufficient battery power before commencing the setup process.

Connect via USB

To connect to the router via USB, plug the provided micro USB cable into the micro USB port on the bottom of the router, and plug the other end into an available USB port on your computer. Your router is now ready for configuration, please refer to **Configuration Utility** on page 14 to continue the setup process.


Connect via Wi-Fi

Note: The following example uses Windows 7's built-in wireless connection utility. If you are using a different operating system, or a third party connection utility, the process may be different. Please refer to the documentation that came with your operating system or wireless client for further information on how to connect to a wireless network.


To connect to the router using Wi-Fi, open your operating system's wireless networking utility and scan for available networks to connect to. By default, the network name (SSID) of the DWR-720 will be in the format **dlink_DWR-720_xxxx**, where "xxxx" represents the last four character's of the router's MAC address.



Once you have located your DWR-720's wireless network, connect to it.

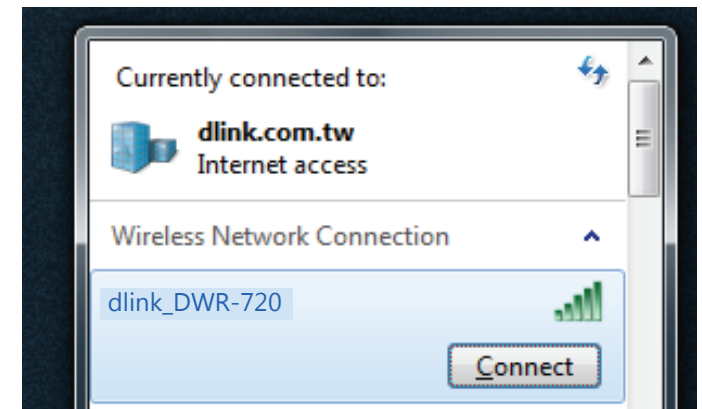


You will then be prompted to enter the network security key for your router. The unique security key for your router will be displayed on a sticker in the router's battery bay. Enter the security key in the box provided and click **OK**. Your wireless connection utility should confirm that the connection is successful, and you can move to the next step to continue to configuration process.

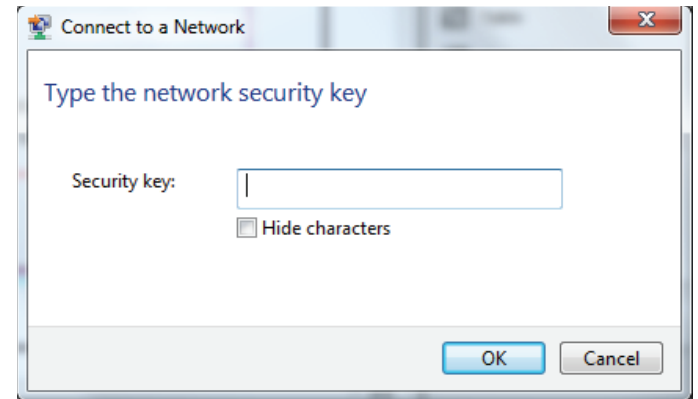

Web-based Configuration

To access the configuration utility, open a web browser (such as Internet Explorer) and enter the IP address of the router, which is **192.168.0.1** by default.



Configuration Utility

Once you have reached the configuration utility through your web browser, you will need to log in. Enter **admin** as the username, and then enter the password. By default, the password is blank. You can also select your language from the drop-down menu.

Click **Login** to continue.

A screenshot of the D-Link login page. The page has a light blue background. On the left, there is a "Login" section with three input fields: "Account", "Password", and "Language". The "Language" field is a drop-down menu currently set to "English". Below these fields is a blue "Login" button. On the right side of the page, the "D-Link" logo is displayed in a large, bold, black font.

Home Navigation

Throughout the interface you will find a menu bar at the top of the page which includes tabs for easy navigation, and a summary bar in the upper right corner with a quick view of essential information.



Home The **Home** tab will return you the home page, where a summary of the system information is shown.

Wizard: Click on this tab to start the setup wizard, which will guide you through the basic setup process.

Internet: The **Internet** tab gives you Internet setup and settings options.

Network: The **Network** tab allows you to configure the network settings for your Local Area Network (LAN).

SMS: From the **SMS** you can view and send SMS messages via your mobile network.


Wi-Fi: The **Wi-Fi** allows you to configure your Wi-Fi network, as well as add new devices using WPS.

Security: The **Security** tab allows you to configure firewall and security settings to protect your network from WAN-side intrusions.

Application: From this tab, you can manage the administrative configuration of your router, such as time and date, firmware, language, and remote management.

Device Status

A summary of the device's current status will be displayed on the information panel at the top of the right-hand side of the navigation bar. The following is a description of the indications, from left to right.

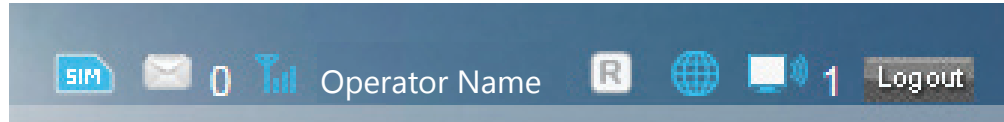

SIM: This icon shows whether or not a compatible (U)SIM card has been inserted into the device.

SMS: The number to the right of this icon indicates the number of unread messages in the SMS inbox.

Signal Strength: Indicates the current strength of the mobile network signal being received.

Operator Name: The name of the mobile network operator to which the device is currently connected.

Roaming: Indicates that the device is connected to a network other than your service provider's home network.

Internet: Indicates that there is an Internet connection present.

Wi-Fi Network: Indicates that the router's Wi-Fi network is currently active. The number to the right of this icon indicates the number of wireless clients currently connected to the router's Wi-Fi network.

Logout: Click this button to log out of the configuration interface.

Home

The **Home** page acts as a dashboard to quickly display your configuration settings and provide a summary of the current status of your network.


System Resources: This area displays the percentage of the router's memory and CPU currently being used by the system.

LAN: This area displays a summary of the current settings for the router's LAN.

2G/3G Modem: This area shows the current status of your 2G or 3G mobile network connection.

WAN: This area displays a summary of the router's current WAN settings. These details will reflect the mobile network connection which is being received from the service provider.

Traffic Statistics: This area shows the amount of data which has been sent (TX) and received (RX) over the mobile network. This information may not reflect the amount recorded by your mobile service provider.

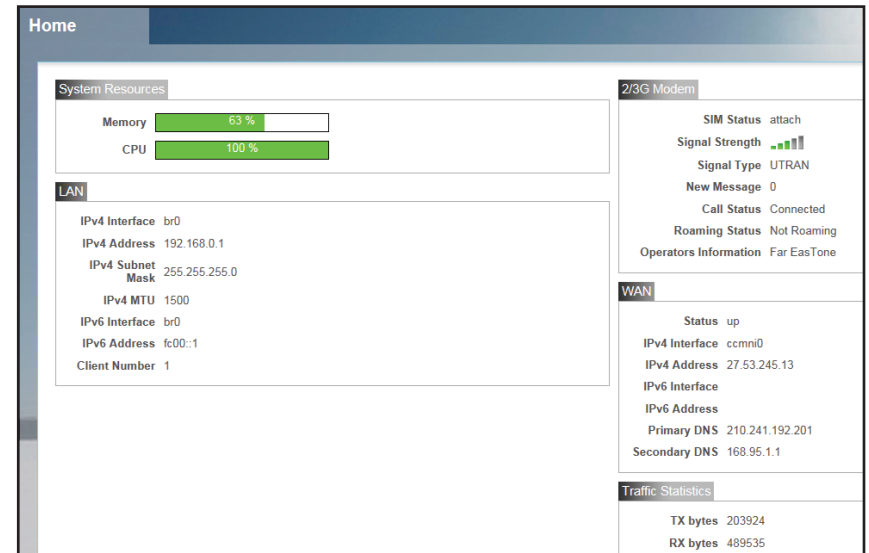

Wizard

The **Wizard** page will guide you through the steps required to configure the basic settings of your router such as the IP address, network name (SSID), and password. Click on the Wizard button on the navigation bar to commence the wizard.

LAN CONFIGURATION

IP Address: If you wish to change the router's IP address, enter the new address here. If you change the IP address from the default, you will need to enter the new address in your Internet browser's address bar in order to access the web-based configuration utility.

IP Subnet Mask: If you wish to change the router's subnet mask, enter it here.

Click **Next** to continue.

Step 1 LAN Settings | Step 2 WAN Settings | Step 3 WIFI Settings

LAN Configuration

IP Address: 192.168.0.5

IP Subnet Mask: 255.255.255.0

Next

2/3G CONFIGURATION

If you wish to change the 2G or 3G service provider or connection type, click on a profile in the list to highlight it, and click **Set** to set that profile as the default.

Click **Next** to continue, or **Back** to return to the previous step.

Step 1 LAN Settings | Step 2 WAN Settings | Step 3 WIFI Settings

Please consult with service provider for these settings. If not sure, leave them with default value.

2/3G Configuration

Type	Pr
2/3G Data Connection	PID-7 <input type="button" value="Set"/>

Profile	Type	Name	APN	User	Password
PID-7	System	遠傳電信(Far EastOne)	internet		
PID-8	System	遠傳電信(Far EastOne)(Fetnet01)	fetnet01		

Total Num : 2

Back | Next


WI-FI CONFIGURATION

Password Setting: Choose a password for your wireless security. Clients will need this password in order to access your network wirelessly. If you are currently connected to the router using Wi-Fi, you will need to reconnect to the router using your new password once the wizard has been completed.


SSID: If you wish to change your wireless network name (SSID), enter a new name in the field provided. If you change the SSID, you may need to re-connect to the router using the new SSID before you can access your network or the configuration utility.

Click **Done** to complete the wizard, or click **Back** to return to the previous page.

After you have clicked **Done**, a confirmation window will appear. Click **OK** to save the configuration.



The screenshot shows a three-step wizard. Step 1 (LAN Settings) and Step 2 (WAN Settings) are in blue, while Step 3 (WiFi Settings) is highlighted in orange. The 'WiFi Configuration' section contains a 'Password Setting' field and an 'SSID' field with the text 'dlink_DWR-730'. At the bottom, there are 'Back' and 'Done' buttons.

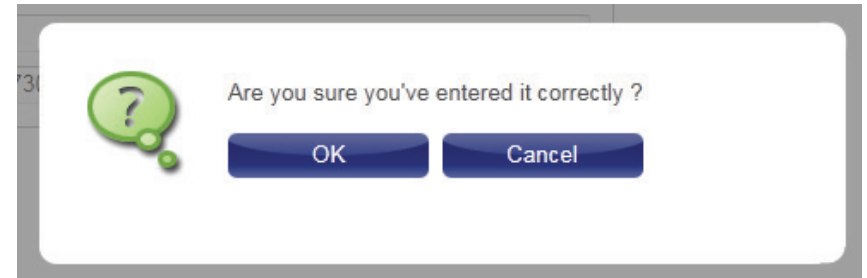

Internet Connection

This page allows you to configure the Internet settings for your mobile network connection. Use the tabs in the left-hand column to navigate through the different settings categories.

CONNECTION OPERATION

Flight Mode: Flight mode turns off all communications so that the device can be powered on safely when in an aircraft. Select whether you want to **Enable** or **Disable** flight mode from the drop-down menu, and click **Change** to effect the change.

Preferred Select your preferred cellular network connection mode:

Cellular Always On Network: The router will automatically connect to your preferred mobile network and remain connected while the device is powered on.

Manual Mode - You must manually connect to the preferred mobile network.

On Demand - The router will connect to the preferred mobile network when Internet access is required.

Click **Change** to effect the change.

Roaming Mode: Select whether you would like to **Enable** or **Disable** mobile network roaming from the drop-down menu.

Caution: Using networks other than the ones provided by your service provider may result in roaming charges.



Connection: Shows the type and status of the current mobile connection. To change the connection profile, select a user profile from the table below and click **Set** to activate the profile. Click **Disconnect** to manually disconnect the current mobile data service.

Profiles: The profiles table shows the details of currently configured user profiles. To add a new user profile, navigate to the **User Profile** tab at the top of this section.

The screenshot shows the mobile connection status at the top, indicating '2/3G Data Connection 1' is 'Connected' with a signal strength indicator and 'PID-7' selected. Below this is a table of configured profiles.

Profile	Type	Name	APN	Protocol	User	Password
PID-7	System	遠傳電信 (Far EasT one)	internet	IPv4		
PID-8	System	遠傳電信 (Far EasT one) (Fetnet01)	fetnet01	IPv4		

Total Num : 2

CONNECTION OPERATION

Name: Click **Add** to add a new user profile.

APN: Enter a name to identify the new user profile.

Enter the Access Point Name (APN) for the connection. If you do not know this information, please contact your service provider.

Protocol:

Select the protocol to be used for the connection from the

User: drop-down menu.

Password: Enter the username to be used for this connection.

Delete: Enter the password to be used for this connection.

Click the delete icon to delete this profile from the list.

Click **OK** to save the profile.

Click **Apply** to apply the profile settings and return to the Internet menu.

The screenshot shows the 'User Profile' configuration form with the following fields:

Profile	Name	APN	Protocol	User	Password
Total Num : 1	<input type="text"/>	<input type="text"/>	IPv4	<input type="text"/>	<input type="text"/>


Buttons: Add, OK, Apply

2G/3G Modem

This section displays information about your 2G or 3G modem connection.

INFORMATION

Information: Displays information about your 2G or 3G modem.

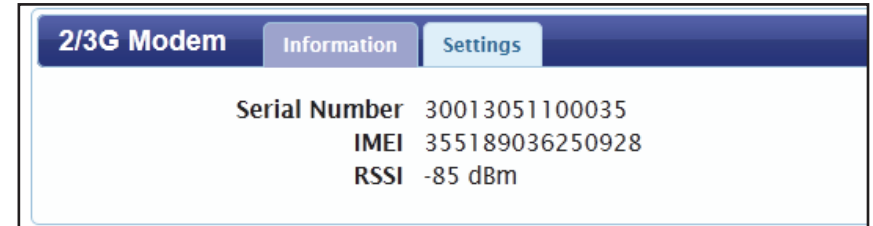

SETTINGS

Network: Select your preferred modem type from the drop-down menu:


Auto - The modem will automatically select the modem type depending on the network it is connected to.

3G Only - The modem will only connect to 3G networks.

2G Only - The modem will only connect to 2G networks.

If you wish to change the modem type, select your new modem type and click **Change** to effect the change. Re-enter the new PIN code.


Click **Apply** to apply the changes.

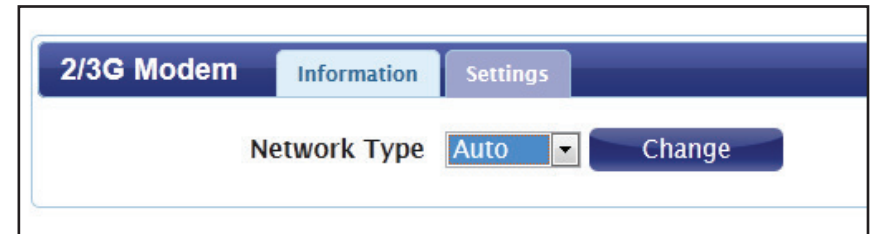

SIM

This section allows you to turn SIM lock on or off for the SIM card which is currently inserted into the router.

PIN Code: Enter the PIN code for the SIM card. Click **Enable** to turn on SIM lock, or click **Disable** to turn off SIM lock.

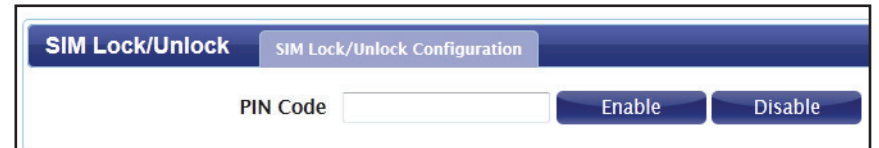

The screenshot shows a web interface for SIM Lock/Unlock Configuration. It features a dark blue header with two tabs: "SIM Lock/Unlock" and "SIM Lock/Unlock Configuration". Below the header, there is a label "PIN Code" followed by a text input field. To the right of the input field are two buttons: "Enable" and "Disable".

PLMN

This page allows you to view available Public Land Mobile Networks (PLMN). This page can also be used to select a preferred network when you are roaming outside of your home network.

Mode: Select **Automatic** to allow the router to automatically connect to the first available network when roaming. Select **Manual** to choose your preferred roaming network from the list below.

If you have selected Manual mode, click on the preferred network to select it, and then click the **Update** button to select that network as the preferred network. Click **Query** to refresh the list of available networks.

Note: You will need to manually disconnect the current mobile data service before selecting a network using PLMN. Please refer to **Connection** on page 20 for further information on how to do this.



The screenshot shows a web interface for PLMN configuration. At the top, there is a tab labeled 'PLMN' and a sub-tab '2/3G Modem'. Below this, there is a 'Mode' dropdown menu currently set to 'Automatic'. Underneath, there is a table with the following columns: 'Status', 'PLMN number', 'Operator Name', and 'Access Technology'. Below the table, it says 'Total Num : 0'. At the bottom right of the interface, there are two buttons: 'Update' and 'Query'.

Network

The **Network** pages allow you to check the current status of your Local Area Network (LAN), and make changes to LAN settings.

Wi-Fi


This section allows you to configure the IP settings for your wireless network.

IPV4

IP Address: Enter the IPv4 address for your Wi-Fi network. If you change this address, you will need to enter the new address in your web browser's address bar in order to access the web-based configuration utility.

IP Subnet Mask: Enter the IPv4 subnet mask for your Wi-Fi network.

Click **Apply** to save the current configuration.

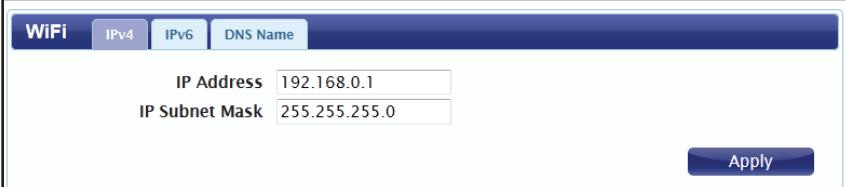

WiFi	IPv4	IPv6	DNS Name
IP Address 192.168.0.1			
IP Subnet Mask 255.255.255.0			
Apply			

IPV6


IPv6 Address: Enter the IPv6 address for your Wi-Fi network.

Prefix for LAN: Enter the prefix to be used to delegate IPv6 addresses to the LAN.

RA Autonomous: Check the box to set the router announcement mode to autonomous.

RA On-Link: Check the box to enable router announcement on-link

Click **Apply** to save the current configuration.

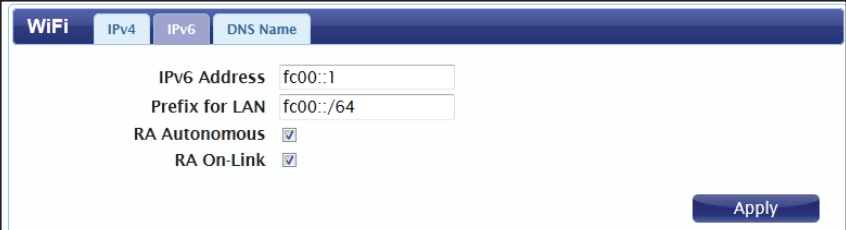


WiFi	IPv4	IPv6	DNS Name
IPv6 Address fc00::1			
Prefix for LAN fc00::/64			
RA Autonomous <input checked="" type="checkbox"/>			
RA On-Link <input checked="" type="checkbox"/>			
Apply			

DNS NAME

DNS Device Name: Enter your router's DNS device name in the field provided.

Click **Apply** to save the current configuration.

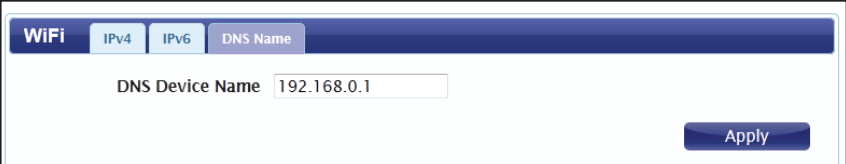

The screenshot shows a web interface for configuring the DNS Name. At the top, there is a navigation bar with tabs for 'WiFi', 'IPv4', 'IPv6', and 'DNS Name'. The 'DNS Name' tab is currently selected. Below the navigation bar, there is a label 'DNS Device Name' followed by a text input field containing the value '192.168.0.1'. To the right of the input field is a blue button labeled 'Apply'.

DHCP

The DWR-720 has a built-in DHCP server which can assign IP addresses to connected clients. This section allows you to configure the DHCP settings.

DHCP SERVER

DHCP Mode: Select **None** from the drop-down menu if you do not wish to enable the DHCP Server. Select **Server** to specify a DHCP server, and enter the information in the fields below.

Start IP: Set the starting address of the IP range.

End IP: Set the ending address of the IP range.

Lease Time: Set the lease time of the IP addresses issued by the DHCP server.

Click **Apply** to save the current configuration.

DHCP			
DHCP Server	DNS Server	Static DHCP	Leased Hosts
DHCP Mode	Server ▼		
Start IP	192.168.0.100		
End IP	192.168.0.199		
Lease Time	1440		

DNS SERVER

First/Second/Third DNS Server: Select **None** from the drop-down menus if you do not wish to specify a first, second, or third DNS server. Select **User Define** to specify a DNS server, and enter the address of the server in the field provided.

Click **Apply** to save the current configuration.

DHCP			
DHCP Server	DNS Server	Static DHCP	Leased Hosts
First DNS Server	None ▼	0.0.0.0	
Second DNS Server	None ▼	0.0.0.0	
Third DNS Server	None ▼	0.0.0.0	

STATIC DHCP

Use this option to specify a DHCP address reservation to a particular device or machine based on MAC address. To add a new reservation, click **Add**.

MAC Address: Enter the MAC address of the device or machine for which you wish to make the DHCP reservation.

IP Address: Enter the IP address that you wish to reserve. This address must be within the DHCP address pool.

Click **OK** to save the reservation.

#	Status	MAC Address	IP Address
Total Num : 0			

LEASED HOSTS

This table shows the details of clients currently assigned a DHCP address from the DHCP server. Click **Refresh** to update the table.

MAC Address: The MAC address of the device or machine assigned an DHCP address.

IP Address: The IP address of the device or machine assigned an DHCP address.

#	Host Name	MAC Address	IP Address	Remaining Time
1	08083PCWIN7E	8C:44:35:07:C9:27	192.168.0.100	23:56:20
Total Num : 1				

NAT

This section allows you to configure functions related to Network Address Translation (NAT) such as port triggering and DMZ.

PORT TRIGGER

Use this option to have inbound traffic automatically forwarded to a dynamic address on the LAN when triggered by outbound traffic. To add a new port triggering rule, click **Add**.

Active: Check the box to activate this rule.

Name: Specify a name to identify the rule.

Trigger Protocol: Select **TCP** or **UDP** as the protocol for the trigger ports from the drop-down menu.

Trigger Port: Enter the starting and ending trigger port for the rule.

Open Protocol: Select **TCP** or **UDP** as the protocol for the ports to be opened from the drop-down menu.

Open Port(s): Enter the starting and ending ports to be opened when the trigger occurs.

Delete: Click the **Delete** icon to delete the rule.

Click **OK** to save the rule. Click **Apply** to apply the current rules and return to the Network page.

#	Active	Name	Trigger Protocol	Trigger Port(s)		Open Protocol	Open Port(s)		
				Start Port	End Port		Start Port	End Port	
Total Num : 0									

10 per page | page 1/1

Add OK Delete All


Apply

DMZ

DMZ is short for Demilitarized Zone. Checking **DMZ Enable** will expose a chosen computer to the outside world by completely disabling all firewalls.

Note: *Only recommend for advanced users, enabling this option will potentially expose your computer to cyber attacks over the Internet.*

DMZ Host: Enter the DMZ host IP address here.

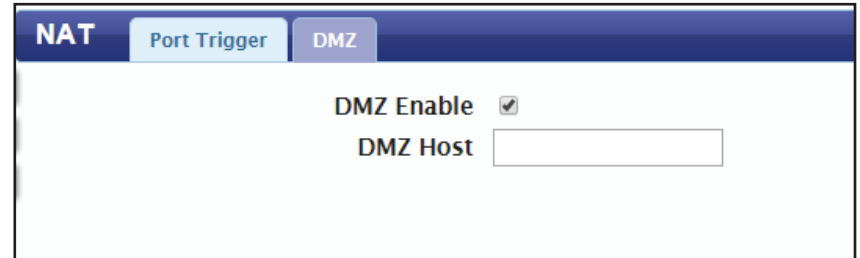

The screenshot shows a web interface for configuring NAT settings. At the top, there is a dark blue header with the text "NAT" on the left and two tabs: "Port Trigger" (highlighted in light blue) and "DMZ" (highlighted in a darker blue). Below the header, the "DMZ" configuration area is visible. It contains two settings: "DMZ Enable" with a checked checkbox, and "DMZ Host" with an empty text input field.

SMS

The DWR-720 can send and receive SMS text messages through the mobile network's SMS function.

New Message

DMZ

Send To: Enter the phone number that you wish to send the message to.

Messages: Enter the body of the message to be sent.

Click **Apply** to save the current configuration.

Local

INBOX

This tab shows a summary of SMS messages in the inbox.

OUTBOX

This tab shows a summary of messages in the outbox which are yet to be sent.

Wi-Fi

The **Wi-Fi** pages allow you to check the current status of your Wi-Fi network, and make changes to Wi-Fi settings.

Basic

This section allows you to configure your Wi-Fi network and specify the wireless security method to be used to secure your network.

Enable Check the box to enable the Wi-Fi function.


Mode: Select the desired 802.11 wireless mode from the drop-down menu. You should make your selection based on the standards supported by the wireless clients which will be connecting to your network.

Channel: To have the router automatically select the optimal wireless channel, select **Auto** from the drop-down menu. If you wish to select a particular channel, select it from the drop-down menu.

802.11N If you are using the 802.11n standard, you can manually select the channel width which best suits your network environment.

TxPower: Select the desired transmission power from the drop-down menu.

Beacon Interval: The beacon interval determines how often information about the wireless network is broadcast. It is recommended that you do not adjust this setting unless instructed to do so.

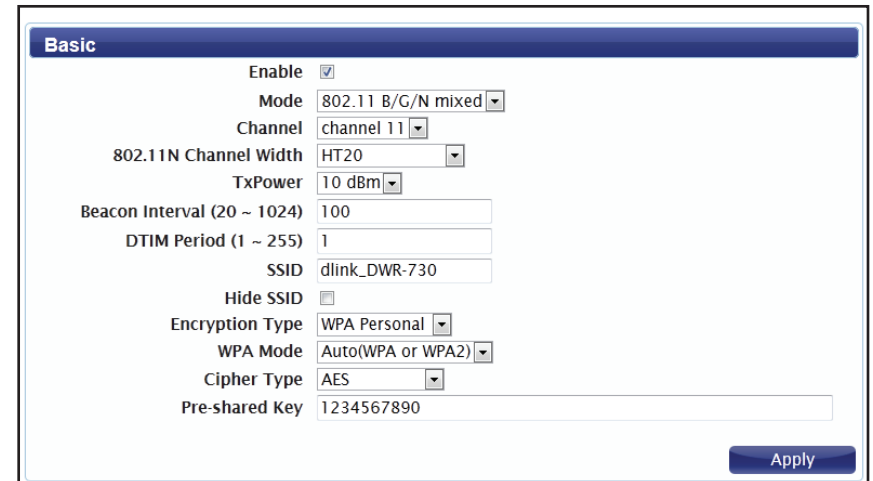

The screenshot shows the 'Basic' configuration page for Wi-Fi. The settings are as follows:

Enable	<input checked="" type="checkbox"/>
Mode	802.11 B/G/N mixed
Channel	channel 11
802.11N Channel Width	HT20
TxPower	10 dBm
Beacon Interval (20 ~ 1024)	100
DTIM Period (1 ~ 255)	1
SSID	dlink_DWR-730
Hide SSID	<input type="checkbox"/>
Encryption Type	WPA Personal
WPA Mode	Auto(WPA or WPA2)
Cipher Type	AES
Pre-shared Key	1234567890

An 'Apply' button is located at the bottom right of the configuration area.

DTIM Period: The Delivery Traffic Indication Message broadcasts information about buffered data to clients that are currently in low-power mode. Enter the desired DTIM period as a number of beacon intervals.

SSID: Enter the SSID (network name) to identify your wireless network.

Hide SSID: Check the box to hide the SSID of your network. If the SSID is hidden, wireless clients must manually enter it in order to connect to your network.

Encryption Type: Select the wireless encryption method that you wish to use from the drop-down menu. Depending on the method that you select, you may need to configure additional settings. For more information regarding wireless encryption and how to configure it, please refer to **Wireless Security** on page 34. If you do not wish to enable wireless security, select **None** from the drop-down menu.

Click **Apply** to save the current settings.

The screenshot shows a configuration window titled "Basic" with the following settings:

Enable	<input checked="" type="checkbox"/>
Mode	802.11 B/G/N mixed
Channel	channel 11
802.11N Channel Width	HT20
TxPower	10 dBm
Beacon Interval (20 ~ 1024)	100
DTIM Period (1 ~ 255)	1
SSID	dlink_DWR-730
Hide SSID	<input type="checkbox"/>
Encryption Type	WPA Personal
WPA Mode	Auto(WPA or WPA2)
Cipher Type	AES
Pre-shared Key	1234567890

An "Apply" button is located at the bottom right of the configuration window.

Wireless Security

It is recommended that you enable wireless security on your router in order to protect your wireless network from unauthorized access. You should select a wireless security protocol that is compatible with the wireless clients which will be accessing your network.

Wired Equivalent Privacy (WEP)

Wired Equivalent Privacy (WEP) is an older wireless security standard, which although providing more protection than no security at all, has some weaknesses which could make it vulnerable to intrusion. It is recommended that you only use WEP if your wireless clients do not support Wi-Fi Protected Access (WPA). WEP is not supported by the 802.11n standard, and therefore you will not be able to achieve 802.11n speeds if using WEP.

Encryption Type: Select **WEP** from the drop-down menu.

Authentication Method: Select the desired authentication method from the drop-down menu:

- Auto** - The router will automatically determine the authentication method based on the client that is connecting to it.
- Open System** - Clients do not require authentication in order to associate with the router. The encryption key will be used to encrypt data packets sent over the network.
- Shared** - The encryption key is used for authentication as well as to encrypt data packets.

WEP Encryption Length: Select the length of the encryption key to be used.

- Length: 64-bit** - A 64-bit key comprises a string of 10 hexadecimal characters, or 5 ASCII characters.
- 128-bit** - A 128-bit key comprises a string of 26 hexadecimal characters, or 13 ASCII characters.

Key 1-4: You can predetermine up to 4 WEP keys. Select the WEP key you wish to use by clicking on the radio buttons next to the keys. Select whether you wish to use **HEX** or **ASCII** characters in your key using the drop-down menu. Enter the desired key in the field provided. Click **Apply** to save the current settings.

Encryption Type	WEP	
Authentication Method	OPEN SYSTEM	
WEP Encryption Length	64-bit	
<input checked="" type="radio"/> Key 1	HEX	●●●●●●●●●●
<input type="radio"/> Key 2	HEX	●●●●●●●●●●
<input type="radio"/> Key 3	HEX	●●●●●●●●●●
<input type="radio"/> Key 4	HEX	●●●●●●●●●●

Wi-Fi Protected Access (WPA)

Wi-Fi Protected Access (WPA) is a newer and more secure encryption protocol which makes significant improvements over WEP. There are two versions of WPA; the original WPA, and the newer WPA2.

Encryption Type: Select **WPA Personal** from the drop-down menu.

WPA Mode: Select the desired authentication method from the drop-down menu:
Auto (WPA or WPA2) - The router will automatically determine the version of WPA to be used based on the client that is connecting to it.
WPA - Clients will only be able to associate with the router using the WPA standard.
WPA2 - Clients will only be able to associate with the router using the WPA2 standard. Clients which do not support WPA2 will not be able to associate with the router.

Cipher Type: Select the desired cipher type from the drop-down menu:
TKIP - This cipher is used by the WPA standard.
AES - A newer cipher used by the WPA2 standard. Use of this cipher type is required in order to achieve 802.11 speeds.

Pre-Shared Key The pre-shared key is the password which clients will require in order to connect to your network. Enter a password of between 8 and 63 characters in length.

Click **Apply** to save the current settings

Encryption Type	WPA Personal ▾
WPA Mode	Auto(WPA or WPA2) ▾
Cipher Type	TKIP and AES ▾
Pre-shared Key	1234567890

Wi-Fi Protected Setup (WPS)

Wi-Fi Protected Setup (WPS) enables you to quickly and securely add compatible devices to your wireless network.

Enable: Check the box to enable the Wi-Fi Protected Setup feature.

Configure State: Select whether you wish to **Configure** or **Unconfigure** the WPS function using the radio buttons.

Configure Method: Select the WPS method that you wish to use. If your device supports Push Button Connection (PBC), simply select this option and click **Apply** to start the connection process. You will then have 120 seconds to press the WPS button on your wireless device in order to initiate the connection. If your device does not support PBC, you can select the PIN method and continue to the next step.

Current PIN: A PIN is a unique number that can be used to add the router to an existing network or to create a new network.

Generate PIN: For extra security, a new PIN can be generated. Click **Generate** to create a new PIN. The current PIN will be shown in the field next to **Current PIN**. This PIN can be used by wireless clients to join your network using the PIN method.

Enrollee PIN: If the device you are trying to add to the network was provided with a PIN number, select this option and enter the device's PIN in the field.

Click **Apply** to commence the connection process.

The screenshot shows the WPS configuration window. It has a title bar labeled 'WPS'. Inside, there are several settings: 'Enable' is checked with a checkbox; 'Configure State' has two radio buttons, 'Unconfigure' is selected and 'Configure' is unselected; 'Configure Method' is a dropdown menu currently set to 'PIN'; 'Current PIN' has a radio button selected and a text input field containing '30332409' with a 'Generate Pin' button to its right; 'Enrollee PIN' has an unselected radio button and an empty text input field. An 'Apply' button is located in the bottom right corner of the window.

MAC Filter

The MAC filtering option allows you to allow or deny access to wireless clients based on their MAC address.

Enable MAC Address Filter: Check the box to enable the MAC filtering feature.

Mode: Select the filtering mode from the drop-down menu. You can choose to **Deny Listed Stations** access to your network, or **Allow Listed Stations** access.

LISTED STATIONS TABLE

To add a new filtering rule, click **Add**.

Active: Check the box to activate the rule.

Name: Enter a name to identify the machine or station which will be filtered.

MAC Address: Enter the MAC address of the machine or station which you wish to filter.

Delete: Click the **Delete** icon to delete the rule from the table.


Click **OK** to save the current rule and add it to the table.

Click **Apply** to save all changes and return to the Wi-Fi page.

#	Active	Name	MAC Address
1	<input checked="" type="checkbox"/>		00:00:00:00:00:00

Station Lists

The Station List tab shows a list of all wireless clients currently connected to your wireless network.

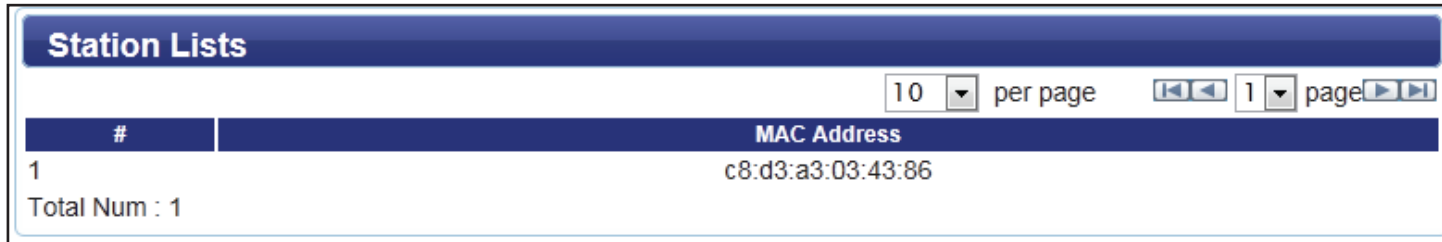

The screenshot shows a web interface titled "Station Lists". At the top right, there are pagination controls: a dropdown menu set to "10", the text "per page", a set of navigation arrows, a dropdown menu set to "1", and the text "page". Below this is a table with two columns: "#" and "MAC Address". The table contains one row with the value "1" in the first column and "c8:d3:a3:03:43:86" in the second column. Below the table, it says "Total Num : 1".

#	MAC Address
1	c8:d3:a3:03:43:86

Total Num : 1

Security

The Security tab allows you to configure your router's firewall settings and enable features to protect your network from outside intrusions and malicious attacks.

Firewall IP Filter

Click **Add** to add a new filtering rule.

Active: Check the box to activate the IP filter rule.

Source IP: Enter the source IP address to be filtered.

Source From Port: Enter the starting port on the source IP.

Source To Port: Enter the ending port on the source IP.

Destination IP: Enter the destination IP address to be filtered.

Destination From Port: Enter the starting port of the destination IP.

Destination To Port: Enter the ending port of the destination IP.

Protocol: Select the protocol for the IP filter rule.

Delete: Click the icon to delete the IP filtering rule.

Click **OK** to save the filtering rule. Click **Apply** to save the current configuration.

#	Active	Source IP	Source From Port	Source to Port	Destination IP	Destination From Port	Destination to Port	Protocol	
1	<input checked="" type="checkbox"/>	0	0	0	0	0	0	TCP	

Total Num : 1

Buttons: Add, OK, Apply

IPv6 Filter

Click **Add** to add a new filtering rule.

Active: Check the box to activate the IP filter rule.

Source IP: Enter the source IP address to be filtered.

Source Port: Enter the port for the source IP.


Destination IP: Enter the destination IP address to be filtered.

Destination Port: Enter the port on the destination IP.

Protocol: Select the protocol for the IP filter rule.

Delete: Click the icon to delete the IP filtering rule.

Click **OK** to save the current filtering rule. Click **Apply** to save the current configuration.

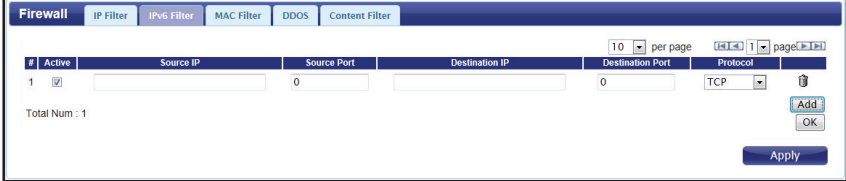

The screenshot shows the IPv6 Filter configuration page. At the top, there are tabs for Firewall, IP Filter, IPv6 Filter, MAC Filter, DDOS, and Content Filter. Below the tabs is a table with columns: #, Active, Source IP, Source Port, Destination IP, Destination Port, Protocol, and an icon column. The table contains one row with the following values: # 1, Active checked, Source IP (empty), Source Port 0, Destination IP (empty), Destination Port 0, Protocol TCP, and a trash icon. Below the table, it says "Total Num : 1". On the right side, there are buttons for "Add", "OK", and "Apply".

#	Active	Source IP	Source Port	Destination IP	Destination Port	Protocol	
1	<input checked="" type="checkbox"/>		0		0	TCP	

Total Num : 1

Buttons: Add, OK, Apply

MAC Filter

The MAC filter lets you to allow or deny access to your wireless network based on a client's MAC address.

Click **Add** to add a new MAC filtering rule.

Blacklist/Whitelist: Select **Blacklist** to deny access to only the MAC addresses listed below. Select **Whitelist** to allow access to only the MAC addresses listed below.

Active: Check the box to activate the MAC filter rule.

Source MAC: Enter the MAC address of the machine or device which you wish to filter packets coming from.

Destination MAC: Enter the MAC address of the machine you wish to filter packets.


Day: Check the box for each day that you wish to activate the MAC filtering rule.

Start Time: Enter the starting time at which you wish to activate the MAC filtering rule each day.

End Time: Enter the ending time at which you wish to deactivate the MAC filtering rule each day.

Delete: Click the icon to delete this MAC filtering rule.

Click **OK** to add the current rule to the rules list. Click **Apply** to save the current configuration.

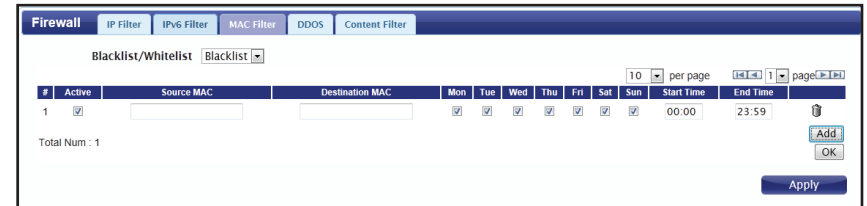


DDOS

This section allows you to enable various security features to protect against Denial of Service (DoS) attacks.

DoS Prevention Check the box next to the rule to enable prevention against
Filters: that specific kind of DoS attack.

Click **Apply** to save the current configuration.

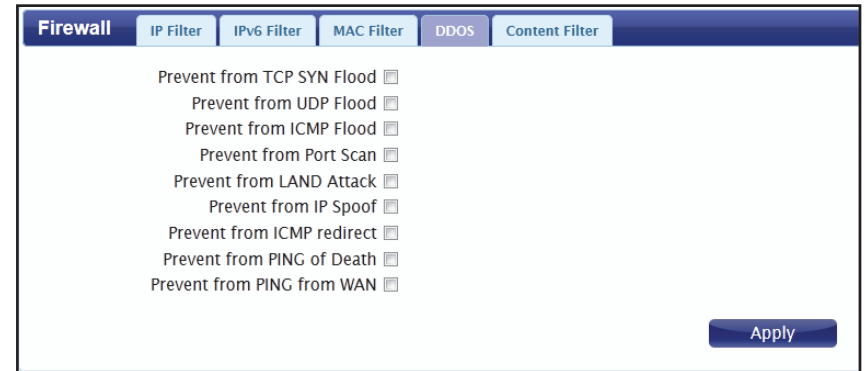

URL Filter

The content filter allows you to allow or deny access to specific URLs.

Enable URL Filter: Check the box to enable URL filtering.

Blacklist/Whitelist: Select **Blacklist** to deny access to only URLs listed in the rule

Whitelist: table. Select **Whitelist** to allow access to only URLs listed in the rule list.

Active: Check the box to activate the URL filtering rule.

URL: Enter the URL that you wish to allow or deny access to. If you enter a domain name, all URLs under this domain will be allowed or denied access.

Delete: Click the icon to delete the rule.

Click **Add** to save the rule and add it to the rule table. Click **Apply** to save the current configuration.

The screenshot shows the Firewall configuration interface with the Content Filter tab selected. The 'Enable URL Filter' checkbox is checked, and the 'Blacklist/Whitelist' dropdown is set to 'Blacklist'. A table below shows one rule with the following details:

#	Active	URL	
1	<input checked="" type="checkbox"/>		


Additional controls include a page size of 10 per page, a page number of 1, and buttons for 'Add', 'OK', and 'Apply'.

Application

This tab allows you to configure the router's administrative functions, such as time & date, remote access, and firmware. You can also access the system log.

About


This tab shows the router's basic information.

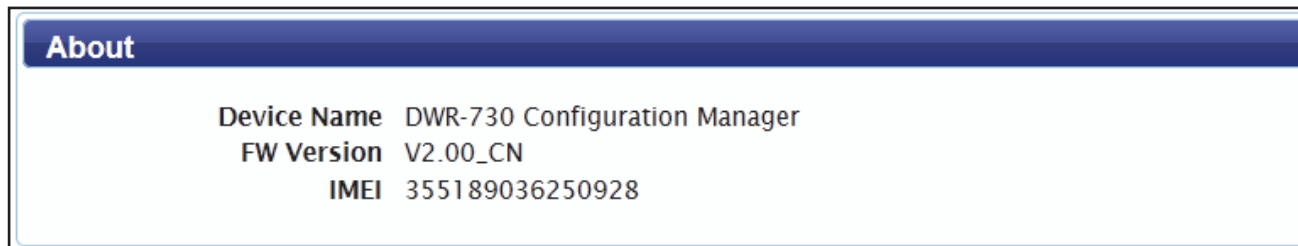

Configuration


BACKUP

Click **Backup** to save the router's current configuration to a file on your computer. You will then be prompted with a "save file" dialogue, where you can choose where to save the configuration file.

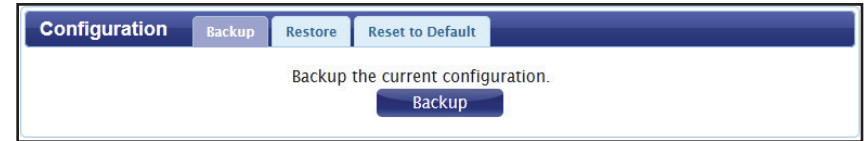

RESTORE


Click **Browse** to locate a previously saved configuration file on your computer. Once you have located the file, click **Restore** to configure the router according to the selected configuration file.

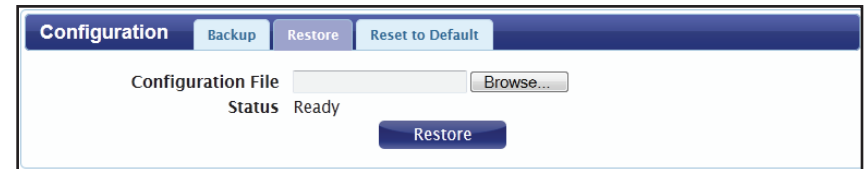

RESET TO DEFAULT

Click **Reset** to restore the router's settings to the factory defaults.


Warning: All settings stored on the router will be lost following a factory reset.

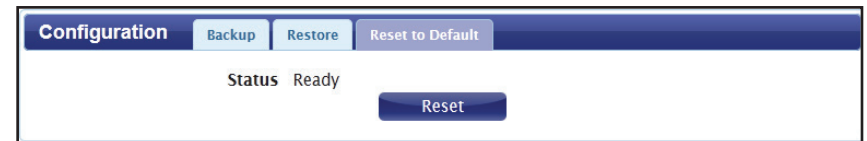

Firmware Upgrade

You can upgrade the firmware of the router here. Make sure the firmware file you want to use is on the local hard drive of the computer. Please check your local D-Link support site or <http://support.dlink.com> for firmware updates and language packs.

Click **Choose File** to locate a previously downloaded firmware file on your computer. Once the file has been located, click **Upgrade** to carry out the firmware upgrade process.

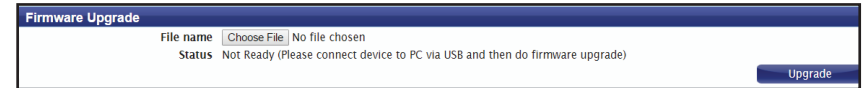

The screenshot shows a web interface for firmware upgrade. It has a blue header bar with the text "Firmware Upgrade". Below the header, there are two lines of text: "File name | Choose File | No file chosen" and "Status | Not Ready (Please connect device to PC via USB and then do firmware upgrade)". On the right side of the interface, there is a blue button labeled "Upgrade".

Important: All current settings will be restored to their factory defaults following a firmware upgrade.

Standby Mode

This section allows you to configure the router's automatic power-saving modes.

Enable Auto Power Saving: Check the box to enable the automatic power saving features.

Enter Standby Mode: Enter the number of minutes after which the router will enter standby mode if no activity is detected.

Enter Hibernate Mode: Enter the number of minutes after which the router will enter hibernate mode if no activity is detected.

Auto Power Off: Enter the number of minutes after which the router will shut down if no activity is detected.

Click **Apply** to save the current configuration.

Standby Mode	
Enable Auto Power Saving	<input checked="" type="checkbox"/>
Enter Standby Mode (minutes)	5
Enter Hibernate Mode (minutes)	5
Auto Power Off (minutes)	120

Apply

Remote Control

This section is for advanced users who wish to remotely configure the DWR-720.


HTTP

HTTP Server Enable: By default the HTTP Server is enabled. Check the box to disable this function. Please note, if you disable the HTTP Server function you will no longer be able to configure the router using this web configuration utility.

HTTP Server Port: The HTTP Server port number.

Accept Request From WAN: Check this box to allow access to the web server from WAN.

Click **Apply** to save the current configuration.

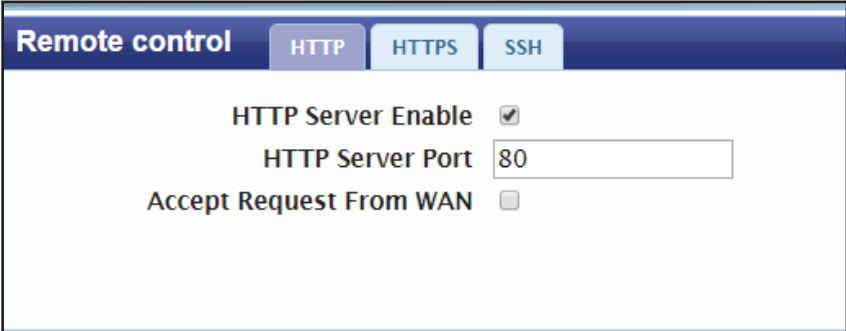

The screenshot shows the 'Remote control' configuration page with three tabs: 'HTTP', 'HTTPS', and 'SSH'. The 'HTTP' tab is selected. The configuration options are: 'HTTP Server Enable' with a checked checkbox, 'HTTP Server Port' with a text box containing '80', and 'Accept Request From WAN' with an unchecked checkbox.


HTTPS

HTTPS Server Enable: By default the HTTPS Server is enabled. Check the box to disable this function. Please note, if you disable the HTTPS Server function you will no longer be able to configure the router using this web configuration utility.

HTTPS Server Port: The HTTPS Server port number.

Accept Request From WAN: Check this box to allow access to the web server from WAN.

Click **Apply** to save the current configuration.

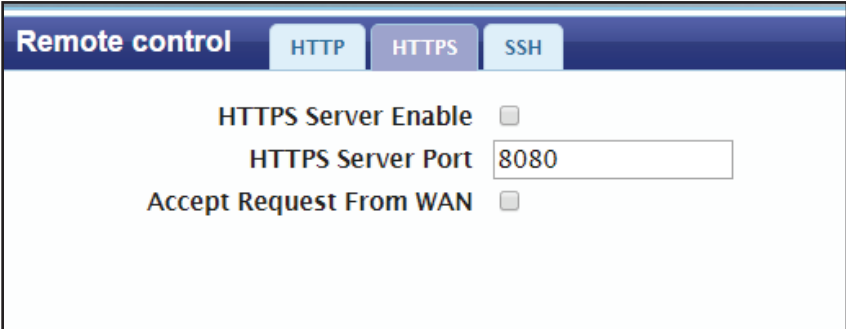

The screenshot shows the 'Remote control' configuration page with three tabs: 'HTTP', 'HTTPS', and 'SSH'. The 'HTTPS' tab is selected. The configuration options are: 'HTTPS Server Enable' with an unchecked checkbox, 'HTTPS Server Port' with a text box containing '8080', and 'Accept Request From WAN' with an unchecked checkbox.


SSH

SSH Server Enable By default the SSH Server is disabled. Check the box to enable this function.

SSH Server Port: The SSH Server port number.

Accept Request From WAN: Check this box to allow access to the web server from WAN.

Accept Request From LAN: Check this box to allow access to the web server from LAN.

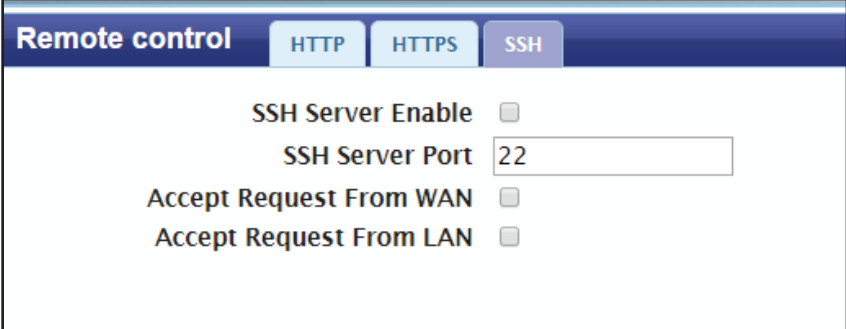

The screenshot shows a web interface for configuring remote control services. At the top, there is a dark blue header with the text "Remote control" and three tabs: "HTTP", "HTTPS", and "SSH". The "SSH" tab is currently selected. Below the header, there are four configuration options, each with a label and a checkbox or input field:

- SSH Server Enable**: A checkbox that is currently unchecked.
- SSH Server Port**: A text input field containing the number "22".
- Accept Request From WAN**: A checkbox that is currently unchecked.
- Accept Request From LAN**: A checkbox that is currently unchecked.

Click **Apply** to save the current configuration.

Password

This page lets you change the configuration interface passwords for the Administrator (Admin) and User accounts.


Select the user to change password: Select whether you wish to change the password for the admin or user account from the drop down menu.

Old Password: Enter the existing password for this account.

New Password: Enter the new password for this account.

Retype New Password: Type the new password again to confirm.

Click **Apply** to save the current configuration.

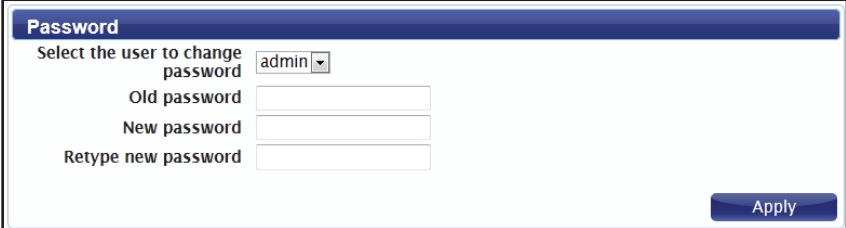

The screenshot shows a web interface titled "Password" with a blue header. Below the header, there are four input fields and one button. The first field is a dropdown menu labeled "Select the user to change password" with "admin" selected. The second field is labeled "Old password". The third field is labeled "New password". The fourth field is labeled "Retype new password". A blue "Apply" button is located in the bottom right corner of the form area.

Date and Time

This page lets you set the time and date for your router, and also configure automatic time synchronization and daylight savings time.

DATE

Current System Time: Displays the current time and date according to the router's system clock.

Mode: Select **Manual** to manually set the time and date, or select **Get from Time Server** to have the router automatically synchronize the time with a Network Time Protocol (NTP) server.

New Time: If you selected Manual mode, enter the current time.

New Date: If you selected Manual mode, enter the current date.

Time Protocol: If you selected Get time From Server, select the desired time protocol from the drop-down menu.

Time Server Address 1-4: Enter up to four NTP server addresses which will be used to synchronize the router's system time and date.

Click **Apply** to save the current settings.

The screenshot shows the 'Date and Time' configuration page. The 'Date' tab is active. The 'Current System Time' is 'Mon Jun 10 15:45:41 2013'. The 'Mode' is set to 'Manual'. The 'New Time (hh:mm:ss)' is '15 : 45 : 41'. The 'New Date (mm-dd-yyyy)' is '6 / 10 / 2013'. There is a calendar icon next to the date field. An 'Apply' button is at the bottom right.

The screenshot shows the 'Date and Time' configuration page. The 'Date' tab is active. The 'Current System Time' is 'Mon Jun 10 15:45:41 2013'. The 'Mode' is set to 'Get from Time Server'. The 'Time Protocol' is 'NTP (RFC-1305)'. There are four 'Time Server Address' fields, all containing '1.my.pool.ntp.org', '2.my.pool.ntp.org', '3.my.pool.ntp.org', and '4.my.pool.ntp.org' respectively. An 'Apply' button is at the bottom right.

TIME ZONE

Time Zone: Select your time zone from the drop-down menu.

Enable Daylight Saving: Check the box to enable automatic adjustment for daylight saving.

Start Date: Enter the details of the starting date and time for daylight saving time in your region.

End Date: Enter the details of the ending date and time for daylight saving time in your region.

Click **Apply** to save the current settings.

The screenshot shows a configuration window titled "Date and Time" with two tabs: "Date" and "Time Zone". The "Time Zone" tab is active. The settings are as follows:

- Time Zone:** (GMT+08:00) Kuala Lumpur, Singapore
- Enable Daylight Saving:**
- Start Date:** First, Sunday, April, 2 o'clock
- End Date:** Last, Sunday, October, 2 o'clock

An "Apply" button is located at the bottom right of the configuration area.

Language

Language: Select your preferred language from the drop-down menu.

Click **Apply** to save the current configuration.



The screenshot shows a configuration window titled "Language". Inside the window, there is a label "Language" followed by a dropdown menu currently displaying "English". To the right of the dropdown menu is a blue button labeled "Apply".


System Log

The system log displays a record of all events which occur while the router is running.

LOG SETTING

Enable Log: Check the box to enable the router's log-keeping function.

Click **Apply** to save the current configuration.

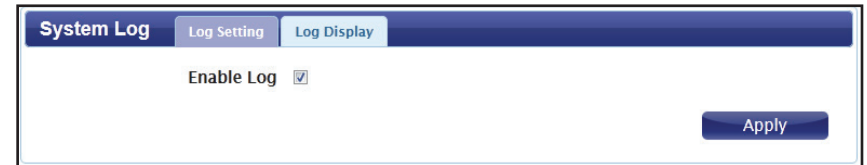


LOG DISPLAY

Refresh: Click to update the log display.

Clear Log: Click to clear all log entries.

Display Log Level: Select the level of log event which you wish to view from the drop-down menu.

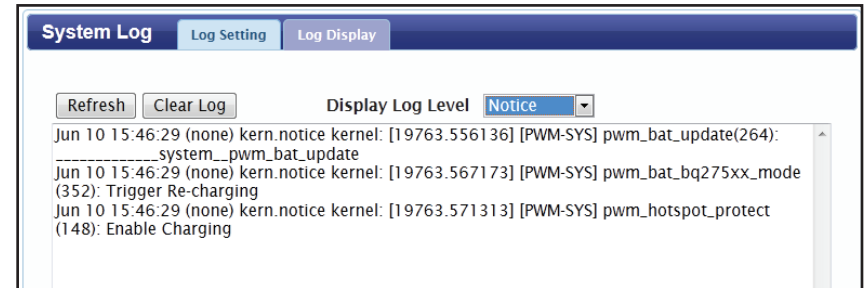


Connecting to a Wireless Network Using Windows 8.1/8.0

It is recommended to enable wireless security (WPA/WPA2) on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key (Wi-Fi password) being used.

To join an existing network, locate the wireless network icon in the taskbar, next to the time display.




Clicking on this icon will display a list of wireless networks which are within connecting proximity of your computer. Select the desired network by clicking on the network name.

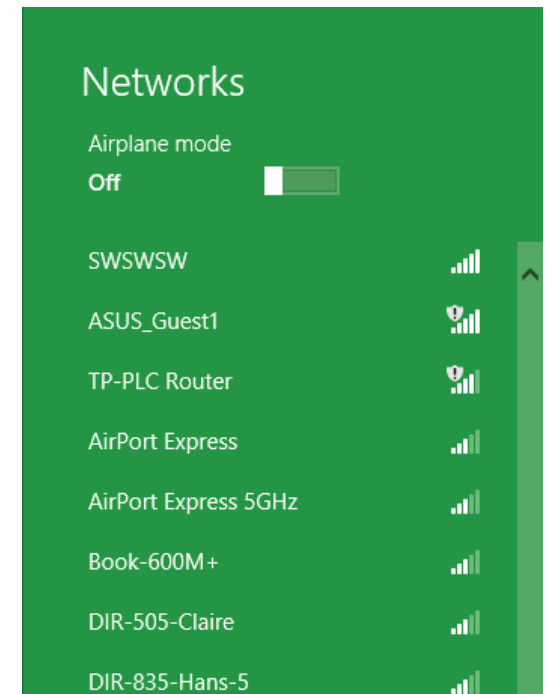


You will then be prompted to enter the network security key (Wi-Fi password) for the wireless network. Enter the password into the box and click Next.

If you wish to use Wi-Fi Protected Setup (WPS) to connect to the router, you can also press the WPS button on your router at this point to enable the WPS function.

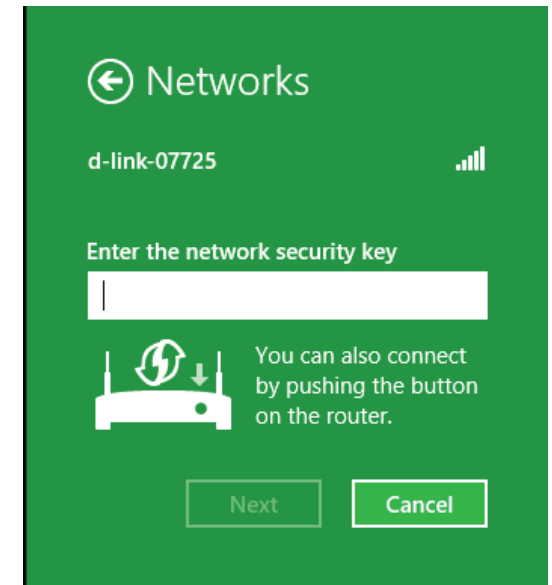


When you have established a successful connection to a wireless network, the word **Connected** will appear next to the name of the network to which you are connected.

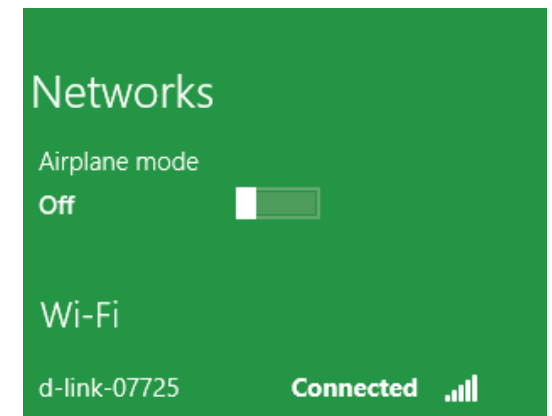

Using Windows 7

Windows 7 users may use the built-in wireless utility to connect to a wireless network. If you are using another company's utility or Windows 2000, please refer to the user manual of your wireless adapter for help with connecting to a wireless network. Most utilities will have a "site survey" option similar to the Windows 7 utility as seen below.

If you receive the Wireless Networks Detected bubble, click on the center of the bubble to access the utility. You can also click on the wireless icon in your system tray (lower-right corner).

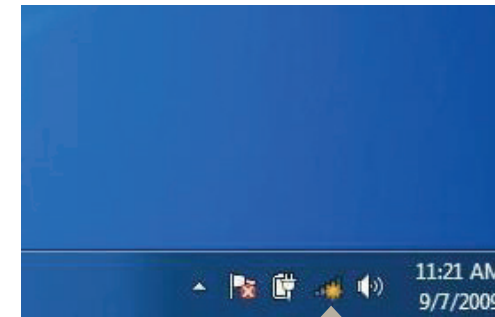

Wireless

The utility will display any available wireless networks in your area.



Highlight the wireless network (SSID) you would like to connect to and click the **Connect** button.


If you get a good signal but cannot access the Internet, check your TCP/IP settings for your wireless adapter. Refer to **Networking Basics** on page 72 for more information.




Configuring Wireless Security

It is recommended to enable wireless security (WPA/WPA2) on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key or pass phrase being used.

1. Click on the wireless icon in your system tray (lower-right corner).

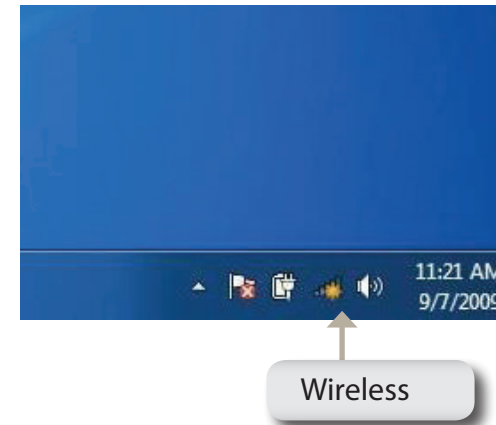


2. The utility will display any available wireless networks in your area.

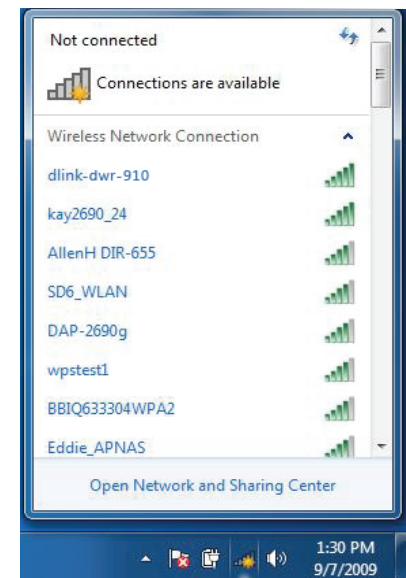

3. Highlight the wireless network (SSID) you would like to connect to and click the **Connect** button.



4. The following window appears while your computer tries to connect to the router.

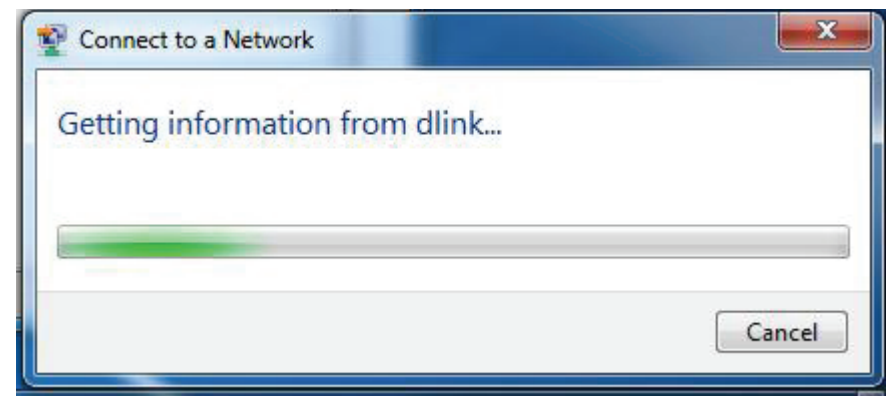

5. Enter the same security key or passphrase that is on your router and click **Connect**.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the security settings are correct. The key or passphrase must be exactly the same as on the wireless router.




Using Windows Vista™

Windows® Vista™ users may use the built-in wireless utility. If you are using another company's utility or Windows® 2000, please refer to the user manual of your wireless adapter for help with connecting to a wireless network. Most utilities will have a "site survey" option similar to the Windows® Vista™ utility as seen below.

If you receive the **Wireless Networks Detected** bubble, click on the center of the bubble to access the utility.


or

Right-click on the wireless computer icon in your system tray (lower-right corner next to the time). Select **Connect to a network**.

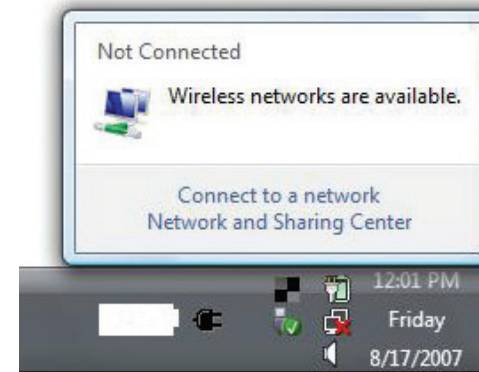

The utility will display any available wireless networks in your area. Click on a network (displayed using the SSID) and click the **Connect** button.


If you get a good signal but cannot access the Internet, check the TCP/IP settings for your wireless adapter. Refer to **Networking Basics** on page 72 for more information.

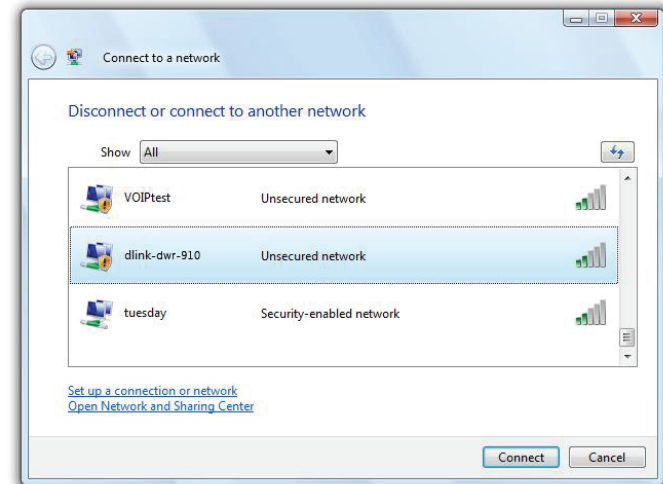


Configuring Wireless Security

It is recommended to enable wireless security (WEP/WPA/WPA2) on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key or passphrase being used.

1. Open the Windows® Vista™ Wireless Utility by right-clicking on the wireless computer icon in your system tray (lower right corner of screen). Select **Connect to a network**.

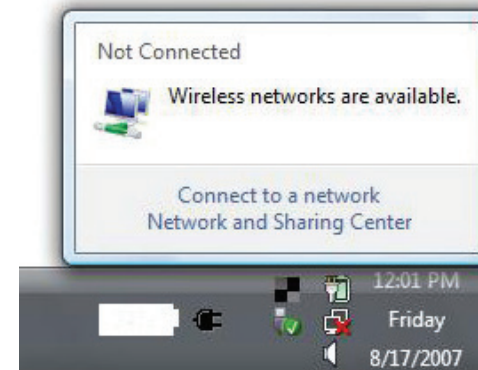


2. Highlight the wireless network (SSID) you would like to connect to and click **Connect**.

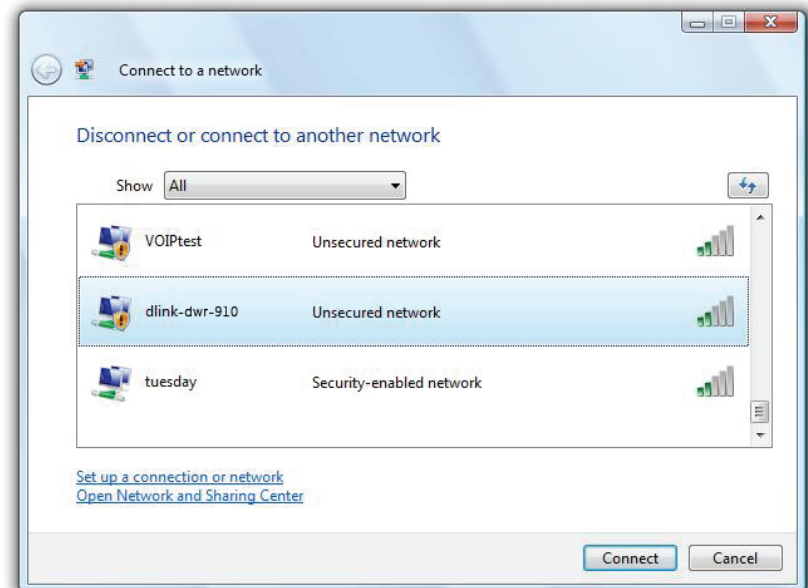

3. Enter the same security key or passphrase that is on your router and click **Connect**.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the security settings are correct. The key or passphrase must be exactly the same as on the wireless router.

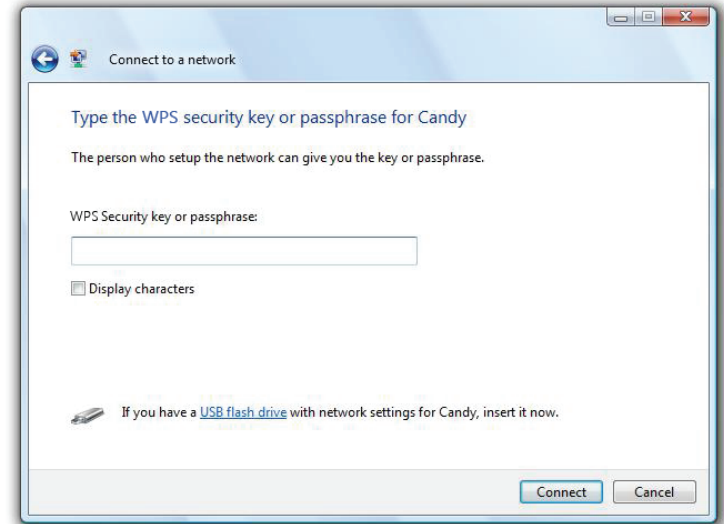

Connect to a Wireless Network Using Windows® XP

Windows® XP users may use the built-in wireless utility (Zero Configuration Utility). The following instructions are for Service Pack 2 users. If you are using another company's utility or Windows® 2000, please refer to the user manual of your wireless adapter for help with connecting to a wireless network. Most utilities will have a "site survey" option similar to the Windows® XP utility as seen below.




If you receive the **Wireless Networks Detected** bubble, click on the center of the bubble to access the utility.

or

Right-click on the wireless computer icon in your system tray (lower-right corner next to the time). Select **View Available Wireless Networks**.

The utility will display any available wireless networks in your area. Click on a network (displayed using the SSID) and click the **Connect** button.


If you get a good signal but cannot access the Internet, check the TCP/IP settings for your wireless adapter. Refer to **Networking Basics** on page 72 for more information.

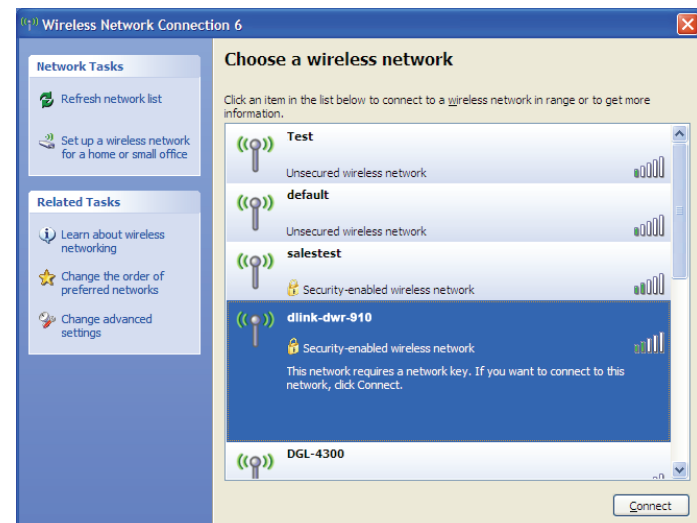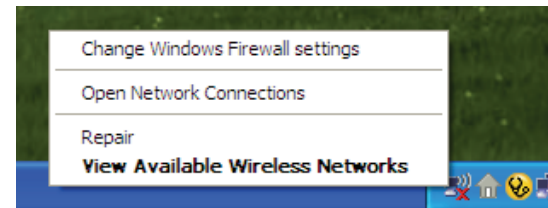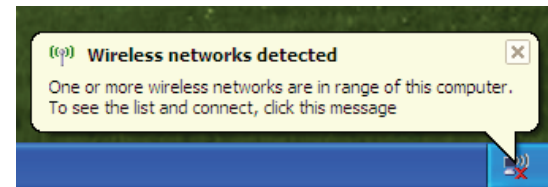


Configure WEP

It is recommended to enable WEP on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the WEP key being used.

1. Open the Windows® XP Wireless Utility by right-clicking on the wireless computer icon in your system tray (lower-right corner of screen). Select **View Available Wireless Networks**.

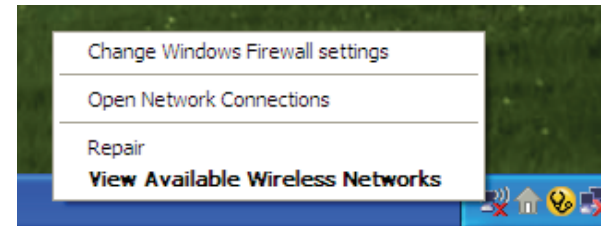


2. Highlight the wireless network (SSID) you would like to connect to and click **Connect**.

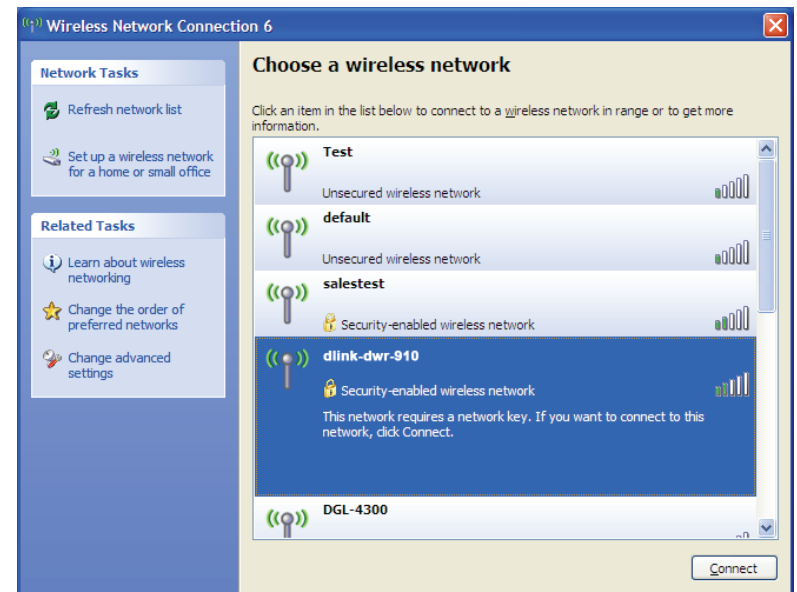

3. The **Wireless Network Connection** box will appear. Enter the same WEP key that is on your router and click **Connect**.


It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the WEP settings are correct. The WEP key must be exactly the same as on the wireless router.

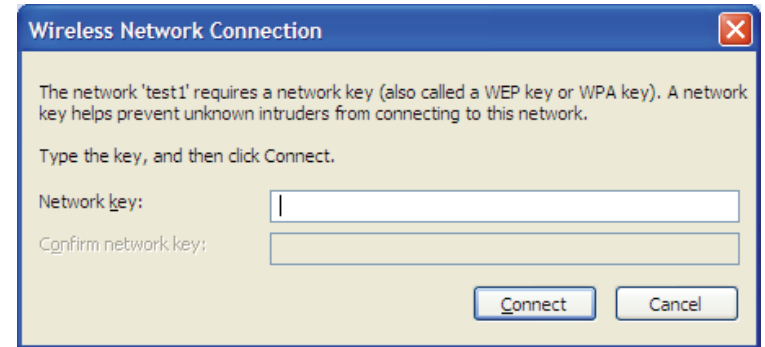


Configure WPA-PSK

It is recommended to enable WPA on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the WPA key being used.

1. Open the Windows® XP Wireless Utility by right-clicking on the wireless computer icon in your system tray (lower-right corner of screen). Select **View Available Wireless Networks**.

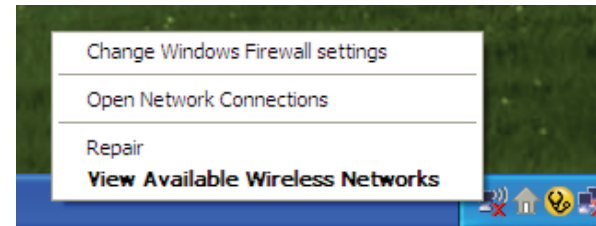


2. Highlight the wireless network (SSID) you would like to connect to and click **Connect**.

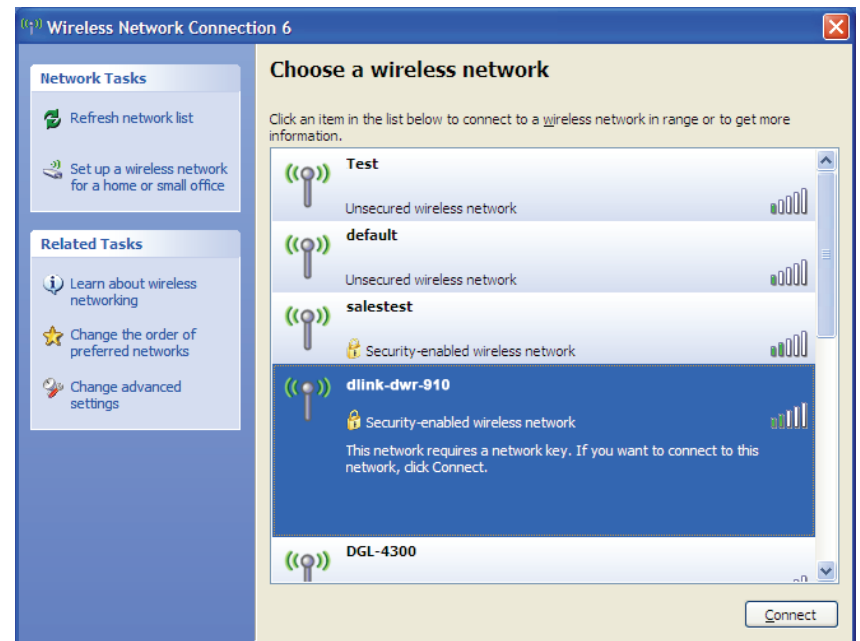

3. The **Wireless Network Connection** box will appear. Enter the WPA-PSK passphrase and click **Connect**.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the WPA-PSK settings are correct. The WPA-PSK passphrase must be exactly the same as on the wireless router.

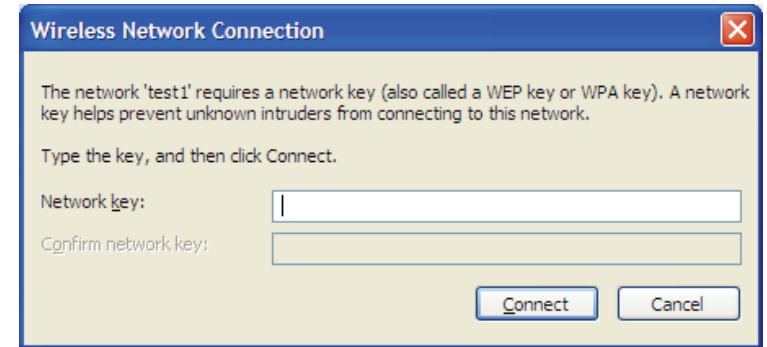

Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the DWR-720. Read the following descriptions if you are having problems.

1. Why can't I access the web-based configuration utility?

When entering the IP address of your router (192.168.0.1 for example), you are not connecting to a website on the Internet or have to be connected to the Internet. The device has the utility built-in to a ROM chip in the device itself. Your computer must be on the same IP subnet to connect to the web-based utility.


- Make sure you have an updated Java-enabled web browser. We recommend the following:
 - Internet Explorer 8 or higher, Chrome 19.0, Firefox 12.0, or Safari 4.0.
- If attempting to connect wirelessly, ensure that the wireless LED icon is showing. Also, ensure that you are connected to the correct network name (SSID) for your mobile router.
- Make sure that the computer you are using is not connected to any other devices (such as routers or switches) which might have the same IP address as the DWR-720, as this may cause an IP address conflict. If you have a conflict, temporarily unplug any other devices from your computer while you configure the DWR-720. You can also change the IP address of the DWR-720 in the Network section of the configuration utility. Please refer to **Wi-Fi** on page 25 for further information on changing the IP address. You may also need to renew your computer's IP address configuration. To do this, start the Command utility: Click on **Start > Run**. In the run box type **cmd** and click **OK**. (Windows Vista users type **cmd** in the **Start Search** box.) This will bring up a black screen with white text. At the command prompt, type **ipconfig /release** and wait for the process to be completed. Next, type **ipconfig /renew** which will renew your computer's IP address configuration.
- Disable any Internet security software running on the computer. Software firewalls such as ZoneAlarm, BlackICE, Sygate, Norton Personal Firewall, and Windows® XP firewall may block access to the configuration pages. Check the help files included with your firewall software for more information on disabling or configuring it.

- Configure your Internet settings:
 - Go to **Start > Settings > Control Panel**. Double-click the **Internet Options** Icon. From the **Security** tab, click the **Default Level** button to restore the settings to their defaults.
 - Click the **Connection** tab and set the dial-up option to Never Dial a Connection. Click the LAN Settings button. Make sure nothing is checked. Click **OK**.
 - Go to the **Advanced** tab and click the button to restore these settings to their defaults. Click **OK** three times.
 - Close your web browser (if open) and re-open it.

2. What can I do if I forgot my password?

If you forgot your password, you must reset your router. Please note that this process will change all your settings back to the factory defaults.

To reset the router, first remove the back cover of the router to expose the battery. Using a paperclip or similar object, press and hold the reset button, which is located inside the hole to the upper-left of the SIM card slot (see diagram). The DWR-720 will restore the factory default settings. Wait about 30 seconds for the router to restart before you attempt to reconnect to it. The default IP address is 192.168.0.1, and the default username is **admin** and the password should be left blank.

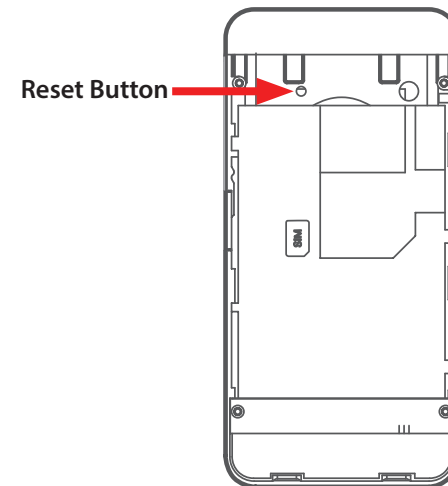

Networking Basics


Check your IP address

After you install your new D-Link adapter, by default, the TCP/IP settings should be set to obtain an IP address from a DHCP server (i.e. wireless router) automatically. To verify your IP address, please follow the steps below.

Click on **Start > Run**. In the run box type *cmd* and click **OK**. (Windows® Vista™ users type *cmd* in the **Start Search** box.)

At the prompt, type *ipconfig* and press **Enter**.

This will display the IP address, subnet mask, and the default gateway of your adapter.

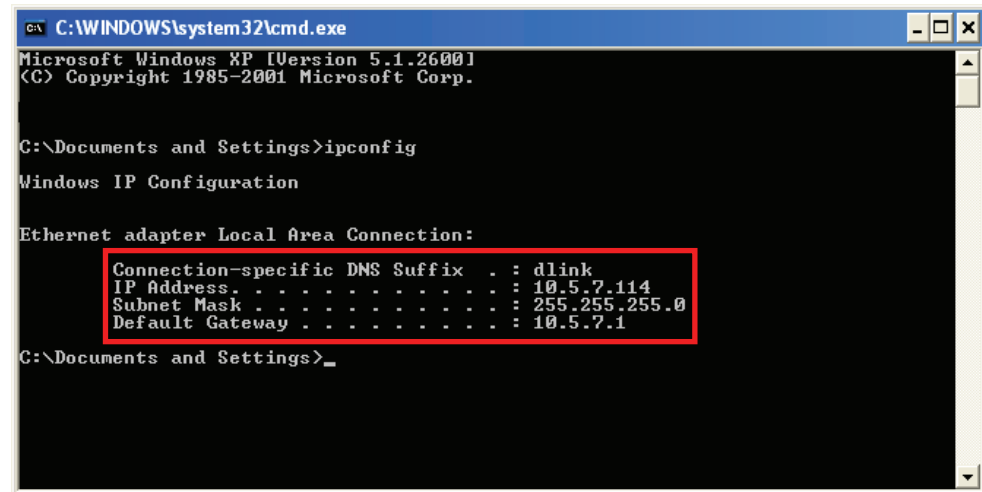

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix . : dlink
    IP Address . . . . . : 10.5.7.114
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 10.5.7.1

C:\Documents and Settings>_
```

If the address is 0.0.0.0, check your adapter installation, security settings, and the settings on your router. Some firewall software programs may block a DHCP request on newly installed adapters.

Statically Assign an IP address

If you are not using a DHCP capable gateway/router, or you need to assign a static IP address, please follow the steps below:

Step 1

- Windows® 8 Click on **Start > Control Panel > Network and Internet Connections > Network Connections > Configure your Internet Protocol (IP) settings.**
- Windows® 7 Click on **Start > Control Panel > Network and Internet > Network and Sharing Center > Manage Network Connections.**
- Windows® Vista™ Click on **Start > Control Panel > Network and Internet > Network and Sharing Center > Manage Network Connections.**
- Windows® XP Click on **Start > Control Panel > Network Connections.**

Step 2

Right-click on the **Local Area Connection** which represents your network adapter and select **Properties.**

Step 3

Highlight **Internet Protocol (TCP/IP)** and click **Properties.**

Step 4


Click **Use the following IP address** and enter an IP address that is on the same subnet as your network or the LAN IP address on your router.

Example: If the router's LAN IP address is 192.168.0.1, make your IP address 192.168.0.X where X is a number between 2 and 99. Make sure that the number you choose is not in use on the network. Set Default Gateway the same as the LAN IP address of your router (192.168.0.1).

Set Primary DNS the same as the LAN IP address of your router (192.168.0.1). The Secondary DNS is not needed or you may enter a DNS server from your ISP.

Step 5

Click **OK** twice to save your settings.

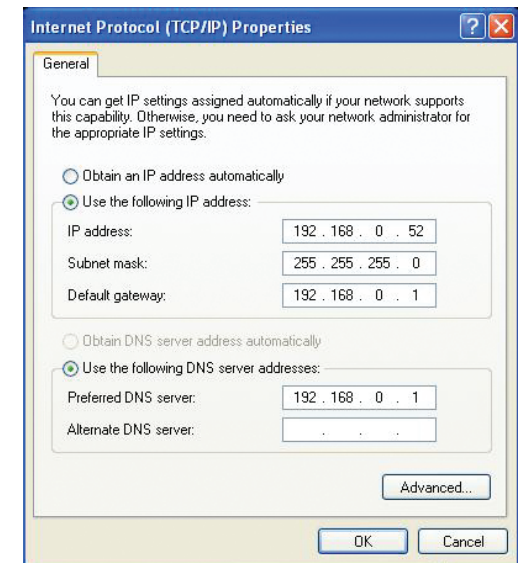

Technical Specifications

Radio Frequency Bands

- HSPA+/UMTS: 900/2100 MHz
- WCDMA B1/B8
- GSM: 850/900/1800/1900 MHz
-

Cellular Access

- HSPA+
 - Downlink: 21 Mbps
 - Uplink: 11 Mbps

Wi-Fi Access Point

- 802.11n (150 Mbps compatible)
- 802.11g (54 Mbps)
- 802.11b (11 Mbps)

Antenna

- One 3G main antenna
- One 3G internal diversity antenna
- Internal Wi-Fi antenna

USB Interface

- micro USB port

USIM Slot

- Standard 6-pin SIM card interface

Status Indicators

- 3 LED icons

Storage

- microSD card slot

Wireless Security

- 64/128-bit WEP (Wired Equivalent Privacy)
- WPA & WPA2 (Wi-Fi Protected Access)

Firewall

- Network Address Translation (NAT)
- IP/ Port Filter

Dimensions (L x W x H)

- 100.3 x 49.35 x 14.13 mm (3.95 x 1.94 x 0.56 inches)

Weight

- TBD

Operating Temperature

- -10 to 55 °C (14 to 131 °F)

Certifications

- FCC/CE

Regulatory Information

European Union:

This device complies with the essential requirements of the R&TTE Directive 1999/5/EC. For more information, please refer to the Declaration of Conformity.

Notice of Wireless Radio LAN Usage in The European Community:

- At the time of writing this addendum, some countries such as Italy, Greece, Portugal, and Spain have not allowed operation of radio devices in the 5 GHz bands, although operation of 2.4 GHz radio devices is allowed. Please check with your local authority to confirm.
- This device is restricted to indoor use when operated in the European Community using channels in the 5.15-5.35 GHz band to reduce the potential for interference.
- This device is a 2.4 GHz wideband transmission system (transceiver), intended for use in all EU member states and EFTA countries, except in France where restrictive use applies. This device may not be used for setting up outdoor radio links in France and in some areas the RF output power may be limited to 10 mW EIR P in the frequency range of 2454 –2483.5 MHz. For detailed information the end-user should contact the national spectrum authority in France.

This equipment may be operated in AL, AD, BE , BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT , MK, MD, MC, NL, NO, AT, OL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Usage Notes:

- To remain in conformance with European National spectrum usage regulations, frequency and channel limitations will be applied on the products according to the country where the equipment will be deployed.
- This device is restricted from functioning in Ad-hoc mode while operating in 5 GHz. Ad-hoc mode is direct peer-to-peer communication between two client devices without an Access Point.
- Access points will support DFS (Dynamic Frequency Selection) and TPC (Transmit Power Control) functionality as required when operating in 5 GHz within the EU.

2.4 GHz Wireless Frequency and Channel Operation in EEC Countries:

Region	Frequency Band	Max output power (EIRP)
Metropolitan	2400 - 2454 MHz	100 mW
Guadeloupe, Martinique, St Pierre et Miquelon, Mayotte	2454 - 2483.5 MHz	100 mW indoor, 10 mW outdoor
Reunion et Guyane	2400 - 2483.5 MHz	100 mW
Rest of EU community	2420 - 2483.5 MHz	100 mW

R&TTE 1999/5/EC			
WLAN 2.4 - 2.4835 GHz			
IEEE 802.11b/g/n			
Spectrum Regulation	MHz, Europa (ETSI)	max. EIRP Innenbereich	max. EIRP Außenbereich
Europa	2400 - 2483.5 MHz	100 mW	100 mW
Frankreich	2400 - 2454 MHz	100 mW	100 mW
	2454 - 2483.5 MHz	100 mW	10 mW



Disposing of and Recycling Your Product



ENGLISH

EN



This symbol on the product or packaging means that according to local laws and regulations this product should be not be disposed of in household waste but sent for recycling. Please take it to a collection point designated by your local authorities once it has reached the end of its life, some will accept products for free. By recycling the product and its packaging in this manner you help to conserve the environment and protect human health.

D-Link and the Environment

At D-Link, we understand and are committed to reducing any impact our operations and products may have on the environment. To minimise this impact D-Link designs and builds its products to be as environmentally friendly as possible, by using recyclable, low toxic materials in both products and packaging.

D-Link recommends that you always switch off or unplug your D-Link products when they are not in use. By doing so you will help to save energy and reduce CO2 emissions.

To learn more about our environmentally responsible products and packaging please visit www.dlinkgreen.com.

DEUTSCH

DE



Dieses Symbol auf dem Produkt oder der Verpackung weist darauf hin, dass dieses Produkt gemäß bestehender örtlicher Gesetze und Vorschriften nicht über den normalen Hausmüll entsorgt werden sollte, sondern einer Wiederverwertung zuzuführen ist. Bringen Sie es bitte zu einer von Ihrer Kommunalbehörde entsprechend amtlich ausgewiesenen Sammelstelle, sobald das Produkt das Ende seiner Nutzungsdauer erreicht hat. Für die Annahme solcher Produkte erheben einige dieser Stellen keine Gebühren. Durch ein auf diese Weise durchgeführtes Recycling des Produkts und seiner Verpackung helfen Sie, die Umwelt zu schonen und die menschliche Gesundheit zu schützen.

D-Link und die Umwelt

D-Link ist sich den möglichen Auswirkungen seiner Geschäftstätigkeiten und seiner Produkte auf die Umwelt bewusst und fühlt sich verpflichtet, diese entsprechend zu mindern. Zu diesem Zweck entwickelt und stellt D-Link seine Produkte mit dem Ziel größtmöglicher Umweltfreundlichkeit her und verwendet wiederverwertbare, schadstoffarme Materialien bei Produktherstellung und Verpackung.

D-Link empfiehlt, Ihre Produkte von D-Link, wenn nicht in Gebrauch, immer auszuschalten oder vom Netz zu nehmen. Auf diese Weise helfen Sie, Energie zu sparen und CO₂-Emissionen zu reduzieren.

Wenn Sie mehr über unsere umweltgerechten Produkte und Verpackungen wissen möchten, finden Sie entsprechende Informationen im Internet unter www.dlinkgreen.com.

FRANÇAIS

FR



Ce symbole apposé sur le produit ou son emballage signifie que, conformément aux lois et réglementations locales, ce produit ne doit pas être éliminé avec les déchets domestiques mais recyclé. Veuillez le rapporter à un point de collecte prévu à cet effet par les autorités locales; certains accepteront vos produits gratuitement. En recyclant le produit et son emballage de cette manière, vous aidez à préserver l'environnement et à protéger la santé de l'homme.

D-Link et l'environnement

Chez D-Link, nous sommes conscients de l'impact de nos opérations et produits sur l'environnement et nous engageons à le réduire. Pour limiter cet impact, D-Link conçoit et fabrique ses produits de manière aussi écologique que possible, en utilisant des matériaux recyclables et faiblement toxiques, tant dans ses produits que ses emballages.

D-Link recommande de toujours éteindre ou débrancher vos produits D-Link lorsque vous ne les utilisez pas. Vous réaliserez ainsi des économies d'énergie et réduirez vos émissions de CO₂.

Pour en savoir plus sur les produits et emballages respectueux de l'environnement, veuillez consulter le www.dlinkgreen.com.

ESPAÑOL

ES



Este símbolo en el producto o el embalaje significa que, de acuerdo con la legislación y la normativa local, este producto no se debe desechar en la basura doméstica sino que se debe reciclar. Llévelo a un punto de recogida designado por las autoridades locales una vez que ha llegado al fin de su vida útil; algunos de ellos aceptan recogerlos de forma gratuita. Al reciclar el producto y su embalaje de esta forma, contribuye a preservar el medio ambiente y a proteger la salud de los seres humanos.

D-Link y el medio ambiente

En D-Link, comprendemos y estamos comprometidos con la reducción del impacto que puedan tener nuestras actividades y nuestros productos en el medio ambiente. Para reducir este impacto, D-Link diseña y fabrica sus productos para que sean lo más ecológicos posible, utilizando materiales reciclables y de baja toxicidad tanto en los productos como en el embalaje.

D-Link recomienda apagar o desenchufar los productos D-Link cuando no se estén utilizando. Al hacerlo, contribuirá a ahorrar energía y a reducir las emisiones de CO2.

Para obtener más información acerca de nuestros productos y embalajes ecológicos, visite el sitio www.dlinkgreen.com.

ITALIANO

IT



La presenza di questo simbolo sul prodotto o sulla confezione del prodotto indica che, in conformità alle leggi e alle normative locali, questo prodotto non deve essere smaltito nei rifiuti domestici, ma avviato al riciclo. Una volta terminato il ciclo di vita utile, portare il prodotto presso un punto di raccolta indicato dalle autorità locali. Alcuni questi punti di raccolta accettano gratuitamente i prodotti da riciclare. Scegliendo di riciclare il prodotto e il relativo imballaggio, si contribuirà a preservare l'ambiente e a salvaguardare la salute umana.

D-Link e l'ambiente


D-Link cerca da sempre di ridurre l'impatto ambientale dei propri stabilimenti e dei propri prodotti. Allo scopo di ridurre al minimo tale impatto, D-Link progetta e realizza i propri prodotti in modo che rispettino il più possibile l'ambiente, utilizzando materiali riciclabili a basso tasso di tossicità sia per i prodotti che per gli imballaggi.

D-Link raccomanda di spegnere sempre i prodotti D-Link o di scollegarne la spina quando non vengono utilizzati. In questo modo si contribuirà a risparmiare energia e a ridurre le emissioni di anidride carbonica.

Per ulteriori informazioni sui prodotti e sugli imballaggi D-Link a ridotto impatto ambientale, visitate il sito all'indirizzo www.dlinkgreen.com.

NEDERLANDS

NL

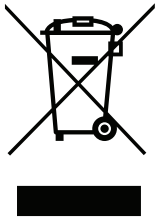

Dit symbool op het product of de verpakking betekent dat dit product volgens de plaatselijke wetgeving niet mag worden weggegooid met het huishoudelijk afval, maar voor recyclage moeten worden ingeleverd. Zodra het product het einde van de levensduur heeft bereikt, dient u het naar een inzamelpunt te brengen dat hiertoe werd aangeduid door uw plaatselijke autoriteiten, sommige autoriteiten accepteren producten zonder dat u hiervoor dient te betalen. Door het product en de verpakking op deze manier te recyclen helpt u het milieu en de gezondheid van de mens te beschermen.

D-Link en het milieu

Bij D-Link spannen we ons in om de impact van onze handelingen en producten op het milieu te beperken. Om deze impact te beperken, ontwerpt en bouwt D-Link zijn producten zo milieuvriendelijk mogelijk, door het gebruik van recycleerbare producten met lage toxiciteit in product en verpakking.

D-Link raadt aan om steeds uw D-Link producten uit te schakelen of uit de stekker te halen wanneer u ze niet gebruikt. Door dit te doen bespaart u energie en beperkt u de CO₂-emissies.

Breng een bezoek aan www.dlinkgreen.com voor meer informatie over onze milieuverantwoorde producten en verpakkingen.

POLSKI**PL**

Ten symbol umieszczony na produkcie lub opakowaniu oznacza, że zgodnie z miejscowym prawem i lokalnymi przepisami niniejszego produktu nie wolno wyrzucać jak odpady czy śmieci z gospodarstwa domowego, lecz należy go poddać procesowi recyklingu. Po zakończeniu użytkowania produktu, niektóre odpowiednie do tego celu podmioty przyjmą takie produkty nieodpłatnie, dlatego prosimy dostarczyć go do punktu zbiórki wskazanego przez lokalne władze. Poprzez proces recyklingu i dzięki takiemu postępowaniu z produktem oraz jego opakowaniem, pomogą Państwo chronić środowisko naturalne i dbać o ludzkie zdrowie.

D-Link i środowisko

D-Link podchodzimy w sposób świadomy do ochrony otoczenia oraz jesteśmy zaangażowani w zmniejszanie wpływu naszych działań i produktów na środowisko naturalne. W celu zminimalizowania takiego wpływu firma D-Link konstruuje i wytwarza swoje produkty w taki sposób, aby były one jak najbardziej przyjazne środowisku, stosując do tych celów materiały nadające się do powtórnego wykorzystania, charakteryzujące się małą toksycznością zarówno w przypadku samych produktów jak i opakowań.

Firma D-Link zaleca, aby Państwo zawsze prawidłowo wyłączali z użytku swoje produkty D-Link, gdy nie są one wykorzystywane. Postępując w ten sposób pozwalają Państwo oszczędzać energię i zmniejszać emisję CO₂.

Aby dowiedzieć się więcej na temat produktów i opakowań mających wpływ na środowisko prosimy zapoznać się ze stroną internetową www.dlinkgreen.com.

ČESKY**CZ**

Tento symbol na výrobku nebo jeho obalu znamená, že podle místně platných předpisů se výrobek nesmí vyhazovat do komunálního odpadu, ale odeslat k recyklaci. Až výrobek doslouží, odnese jej prosím na sběrné místo určené místními úřady k tomuto účelu. Některá sběrná místa přijímají výrobky zdarma. Recyklací výrobku i obalu pomáháte chránit životní prostředí i lidské zdraví.

D-Link a životní prostředí

Ve společnosti D-Link jsme si vědomi vlivu našich provozů a výrobků na životní prostředí a snažíme se o minimalizaci těchto vlivů. Proto své výrobky navrhujeme a vyrábíme tak, aby byly co nejekologičtější, a ve výrobcích i obalech používáme recyklovatelné a nízkotoxické materiály.

Společnost D-Link doporučuje, abyste své výrobky značky D-Link vypnuli nebo vytáhli ze zásuvky vždy, když je nepoužíváte. Pomůžete tak šetřit energii a snížit emise CO₂.

Více informací o našich ekologických výrobcích a obalech najdete na adrese www.dlinkgreen.com.

MAGYAR

HU



Ez a szimbólum a terméken vagy a csomagoláson azt jelenti, hogy a helyi törvényeknek és szabályoknak megfelelően ez a termék nem semmisíthető meg a háztartási hulladékkal együtt, hanem újrahasznosításra kell küldeni. Kérjük, hogy a termék élettartamának elteltét követően vigye azt a helyi hatóság által kijelölt gyűjtőhelyre. A termékek egyes helyeken ingyen elhelyezhetők. A termék és a csomagolás újrahasznosításával segíti védeni a környezetet és az emberek egészségét.

A D-Link és a környezet

A D-Linknél megértjük és elköteleztük magunkat a műveleteink és termékeink környezetre gyakorolt hatásainak csökkentésére. Az ezen hatás csökkentése érdekében a D-Link a lehető leginkább környezetbarát termékeket tervez és gyárt azért, hogy újrahasznosítható, alacsony károsanyag-tartalmú termékeket gyárt és csomagolásokat alkalmaz.

A D-Link azt javasolja, hogy mindig kapcsolja ki vagy húzza ki a D-Link termékeket a tápforrásból, ha nem használja azokat. Ezzel segít az energia megtakarításában és a széndioxid kibocsátásának csökkentésében.

Környezetbarát termékeinkről és csomagolásainkról további információkat a www.dlinkgreen.com weboldalon tudhat meg.

NORSK

NO



Dette symbolet på produktet eller forpakningen betyr at dette produktet ifølge lokale lover og forskrifter ikke skal kastes sammen med husholdningsavfall, men leveres inn til gjenvinning. Vennligst ta det til et innsamlingssted anvist av lokale myndigheter når det er kommet til slutten av levetiden. Noen steder aksepteres produkter uten avgift. Ved på denne måten å gjenvinne produktet og forpakningen hjelper du å verne miljøet og beskytte folks helse.

D-Link og miljøet

Hos D-Link forstår vi oss på og er forpliktet til å minske innvirkningen som vår drift og våre produkter kan ha på miljøet. For å minimalisere denne innvirkningen designer og lager D-Link produkter som er så miljøvennlig som mulig, ved å bruke resirkulerbare, lav-toksiske materialer både i produktene og forpakningen.

D-Link anbefaler at du alltid slår av eller frakobler D-Link-produkter når de ikke er i bruk. Ved å gjøre dette hjelper du å spare energi og å redusere CO2-utslipp.

For mer informasjon angående våre miljøansvarlige produkter og forpakninger kan du gå til www.dlinkgreen.com.

DANSK

DK




Dette symbol på produktet eller emballagen betyder, at dette produkt i henhold til lokale love og regler ikke må bortskaffes som husholdningsaffald, mens skal sendes til genbrug. Indlever produktet til et indsamlingssted som angivet af de lokale myndigheder, når det er nået til slutningen af dets levetid. I nogle tilfælde vil produktet blive modtaget gratis. Ved at indlevere produktet og dets emballage til genbrug på denne måde bidrager du til at beskytte miljøet og den menneskelige sundhed.

D-Link og miljøet

Hos D-Link forstår vi og bestræber os på at reducere enhver indvirkning, som vores aktiviteter og produkter kan have på miljøet. For at minimere denne indvirkning designer og producerer D-Link sine produkter, så de er så miljøvenlige som muligt, ved at bruge genanvendelige materialer med lavt giftighedsniveau i både produkter og emballage.

D-Link anbefaler, at du altid slukker eller frakobler dine D-Link-produkter, når de ikke er i brug. Ved at gøre det bidrager du til at spare energi og reducere CO2-udledningerne.

Du kan finde flere oplysninger om vores miljømæssigt ansvarlige produkter og emballage på www.dlinkgreen.com.

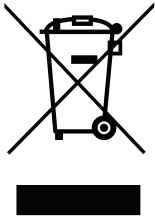SUOMI**FI**


Tämä symboli tuotteen pakkauksessa tarkoittaa, että paikallisten lakien ja säännösten mukaisesti tätä tuotetta ei pidä hävittää yleisen kotitalousjätteen seassa vaan se tulee toimittaa kierrätettäväksi. Kun tuote on elinkaarensa päässä, toimita se lähimpään viranomaisten hyväksymään kierrätyspisteeseen. Kierrättämällä käytetyn tuotteen ja sen pakkauksen autat tukemaan sekä ympäristön että ihmisten terveyttä ja hyvinvointia.

D-Link ja ympäristö

D-Link ymmärtää ympäristönsuojelun tärkeyden ja on sitoutunut vähentämään tuotteistaan ja niiden valmistuksesta ympäristölle mahdollisesti aiheutuvia haittavaikutuksia. Nämä negatiiviset vaikutukset minimoidakseen D-Link suunnittelee ja valmistaa tuotteensa mahdollisimman ympäristöystävällisiksi käyttämällä kierrätettäviä, alhaisia pitoisuuksia haitallisia aineita sisältäviä materiaaleja sekä tuotteissaan että niiden pakkauksissa.

Suosittellemme, että irrotat D-Link-tuotteesi virtalähteestä tai sammutat ne aina, kun ne eivät ole käytössä. Toimimalla näin autat säästämään energiaa ja vähentämään hiilidioksiidipäästöjä.

Lue lisää ympäristöystävällisistä D-Link-tuotteista ja pakkauksistamme osoitteesta www.dlinkgreen.com.

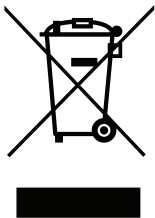SVENSKA**SE**

Den här symbolen på produkten eller förpackningen betyder att produkten enligt lokala lagar och föreskrifter inte skall kastas i hushållssoporna utan i stället återvinnas. Ta den vid slutet av dess livslängd till en av din lokala myndighet utsedd uppsamlingsplats, vissa accepterar produkter utan kostnad. Genom att på detta sätt återvinna produkten och förpackningen hjälper du till att bevara miljön och skydda människors hälsa.

D-Link och miljön

På D-Link förstår vi och är fast beslutna att minska den påverkan våra verksamheter och produkter kan ha på miljön. För att minska denna påverkan utformar och bygger D-Link sina produkter för att de ska vara så miljövänliga som möjligt, genom att använda återvinningsbara material med låg gifthalt i både produkter och förpackningar.

D-Link rekommenderar att du alltid stänger av eller kopplar ur dina D-Link produkter när du inte använder dem. Genom att göra detta hjälper du till att spara energi och minska utsläpp av koldioxid.

För mer information om våra miljöansvariga produkter och förpackningar www.dlinkgreen.com.

PORTUGUÊS

PT



Este símbolo no produto ou embalagem significa que, de acordo com as leis e regulamentações locais, este produto não deverá ser eliminado juntamente com o lixo doméstico mas enviado para a reciclagem. Transporte-o para um ponto de recolha designado pelas suas autoridades locais quando este tiver atingido o fim da sua vida útil, alguns destes pontos aceitam produtos gratuitamente. Ao reciclar o produto e respectiva embalagem desta forma, ajuda a preservar o ambiente e protege a saúde humana.

A D-Link e o ambiente

Na D-Link compreendemos e comprometemo-nos com a redução do impacto que as nossas operações e produtos possam ter no ambiente. Para minimizar este impacto a D-Link concebe e constrói os seus produtos para que estes sejam o mais inofensivos para o ambiente possível, utilizando materiais recicláveis e não tóxicos tanto nos produtos como nas embalagens.

A D-Link recomenda que desligue os seus produtos D-Link quando estes não se encontrarem em utilização. Com esta acção ajudará a poupar energia e reduzir as emissões de CO₂.

Para saber mais sobre os nossos produtos e embalagens responsáveis a nível ambiental visite www.dlinkgreen.com.